Cell Based Design & Combinational Circuit

Lecturer: Lin-Hung, Lai

System Integration and Silicon Implementation (Si2) Lab Institute of Electronics National Yang Ming Chiao Tung University, Hsinchu, Taiwan





Outline

- ✓ Section 1 Introduction to design flow
- ✓ Section 2 Basic Description of Verilog
- ✓ Section 3 Behavior Models of Combinational circuit
- ✓ Section 4 Simulations



Outline


- ✓ Section 1 Introduction to design flow
- ✓ Section 2 Basic Description of Verilog
- ✓ Section 3 Behavior Models of Combinational circuit
- ✓ Section 4 Simulations



How Does Hardware Accelerate System

Profiling

- Profiling is a form of dynamic program analysis that measures the space/time complexity of a program to aid program optimization.
- By doing profiling we can find the most time-consuming part of the system
- Designers can implement this part in hardware instead of software

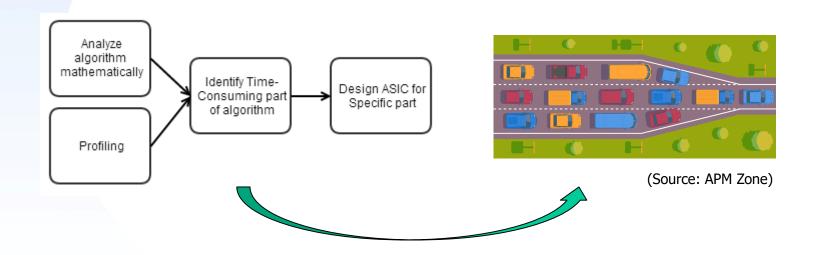



How Does Hardware Accelerate System - Example

An algorithm contains steps:

$$-(1) \rightarrow (2) \rightarrow (3) \rightarrow (4)$$

✓ Mathematical Analysis: ✓ Profiling

- (1) : O(C)
- (2) : O(n)
- (3) : O(n^2)
- (4): O(n)


- Running 1000 times takes 100sec
- -(1):5s
- -(2):10s
- -(3):70s
- (4): 15s



Make ASIC for (3), easily accelerated by 100x

Profiling with ASIC: Running 1000 times

- (1): 5s
- -(2):10s
- (3): 0.7s + 0.3s (communication time)

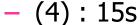



takes 31s



How Does Hardware Accelerate System

✓ Application Specific IC (ASIC)

- Specially designed IC are much faster than general purpose CPU.
- we can design dedicated datapath and controller for the timeconsuming part which requires less time

✓ Field-Programmable Gate Array(FPGA)

- As implied by the name itself, the FPGA is field programmable.
- FPGA working as a microprocessor can be reprogrammed to function as the graphics card in the field, as opposed to in the semiconductor foundries.



(Source: sigenics)




(Source: Xilinx)



FPGA Example

✓ FPGA

- No fabrication is needed
- Limited routing resources

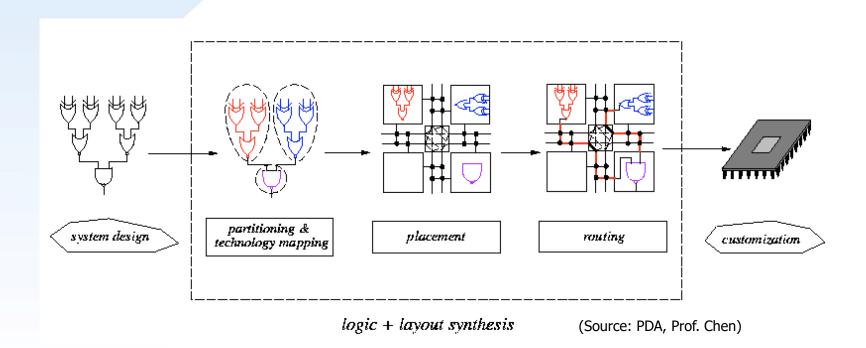

ASIC Example


✓ Cell-based Design Flow

- use pre-designed logic cells (known as standard cells) and micro cells (e.g. microcontroller)
- designers save time, money, and reduce risk

✓ Full-Custom Design Flow

- Design every thing by yourself
- Not our focus


	Cell-based	Full-Custom
Pro.	Design speed is fast	Large design freedom
Con.	Less design freedom	Design speed is slow

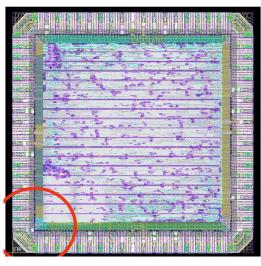

(Source: TSRI)




Standard Cell Example

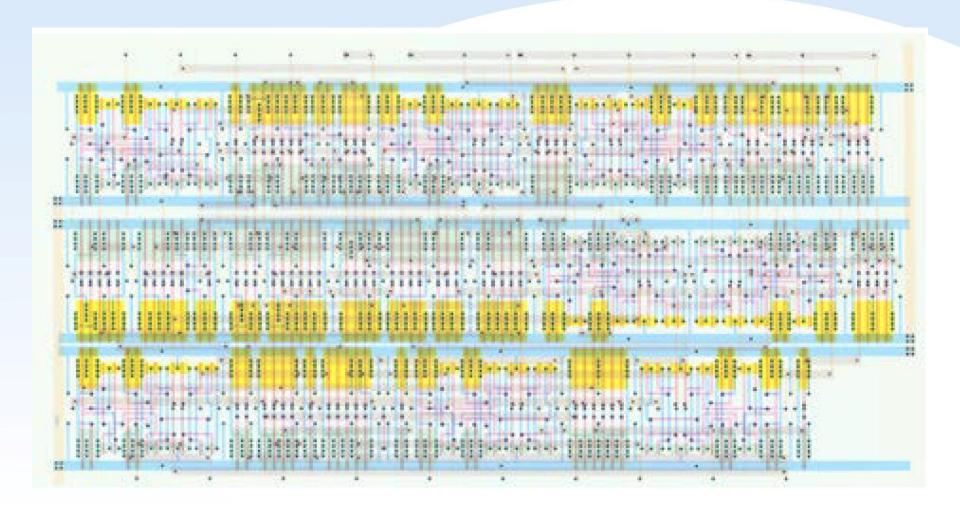




Full-Custom Example


4-bit Carry Ripple Adder

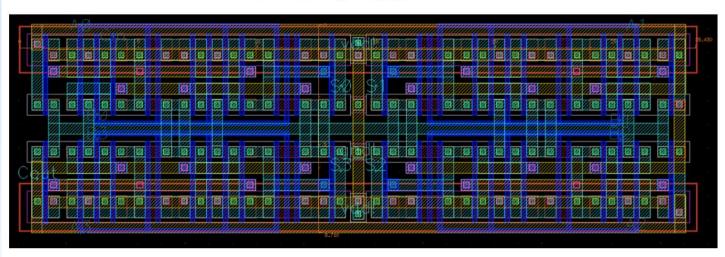



4-bit Carry Skip Adder

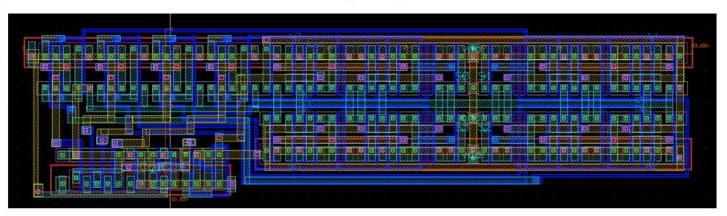

Cell-based Design Flow

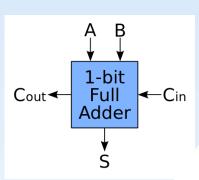

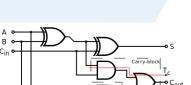

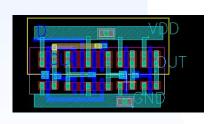

Specification Development System models

RTL code development Functional Verification

Synthesis
Timing Verification

Physical Synthesis/Place and Route Physical Verification

Prototype Build and Test

System Architecture

RTL 1


Synthesis 2

Physical Design 3

System Integration and Software Test



Cell-based Design Flow - RTL to GATE

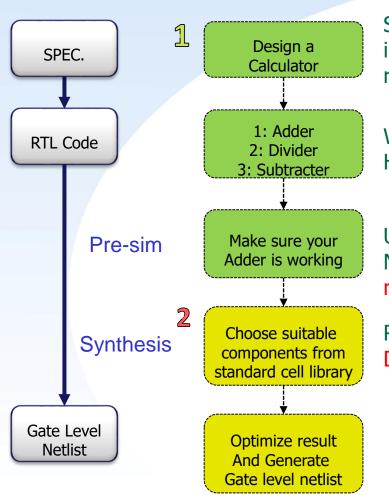


Specify input/output relationship


Write Verilog HDL Code


Use Cadence Tool Noverilog, irun nWaye

Run synthesis by Design Compiler

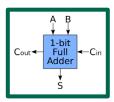

```
module adder(input a,input b,output c);
wire [31:0] a,b;
wire [31:0] c;
assign c = a + b;
endmodule
```

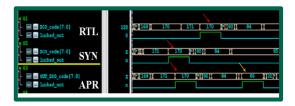


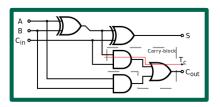

NOR2X1 U148 (.A(n494), .B(n492), .Y(n349));
A0122X1 U149 (.A0(n272), .A1(opt[2]), .B0(n271),
AND2X1 U150 (.A(n235), .B(n223), .Y(n104));
INVX2 U151 (.A(opt[0]), .Y(n295));




Cell-based Design Flow – GATE to LAYOUT

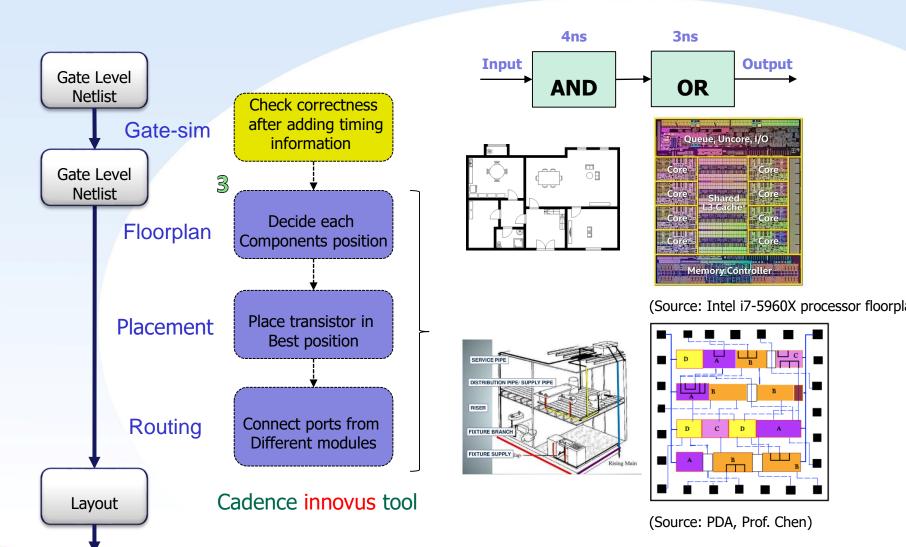




Layout

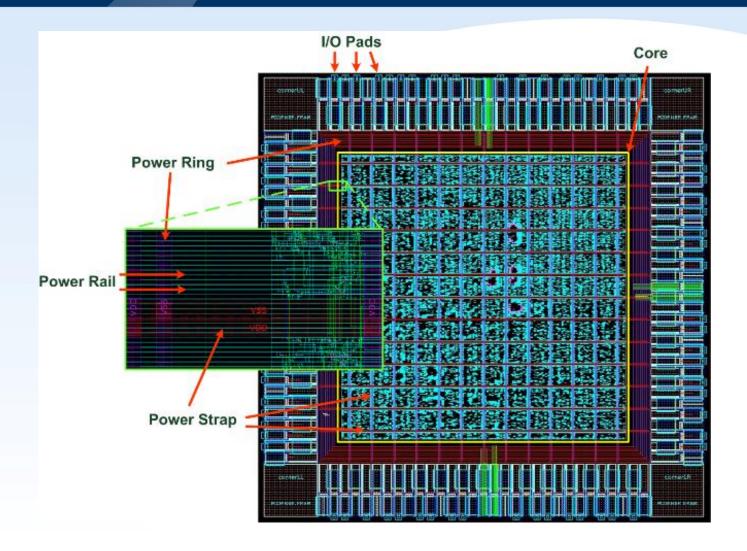



Cell-based Design Flow – LAYOUT to CHIP

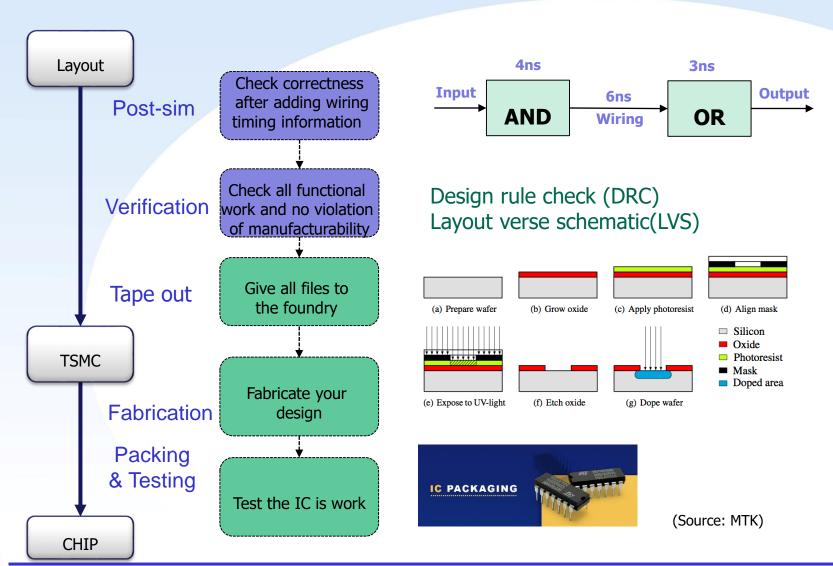



Cell-based Design Flow Summary

RTL Design

Plan the furniture You want to own in your room

Synthesis

Choose the suitable Furniture based on **Datasheet**



P&R


Produce Floorplan And layout of your room



Fabrication

Construction And Get your new room



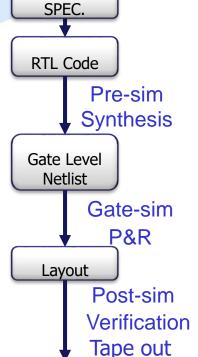



TSMC


CHIP

Fabrication

Packing & Testing

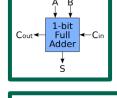

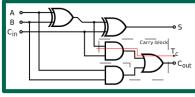

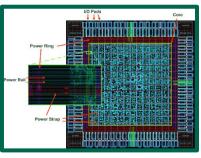



(Source: MTK)





Cell-based Design Tools

- System and behavioral description (math. or building module)
 - C/C++ / python
 - Matlab
 - ...
- Hardware based description language
 - System C
 - SystemVerilog
 - Verilog
 - ...
- RTL simulation and debug
 - NC-Verilog, irun
 - nLint, Verdi
 - _ ...

Synthesis and Verification

- Synopsys
 - RTL Compiler, Design Compiler
 - PrimeTime, SI and StarRC™.
- Cadence
 - BuildGates Extreme
 - Verplex (Formal Verification)
- ...
- Physical Design and post-layout simulation
 - Innovus (SoC Encounter)
 - IC compiler
 - Calibre
 - Nanosim, HSIM, UltraSim: a highperformance transistor-level
 FastSPICE circuit simulator ...



Outline

- ✓ Section 1 Introduction to design flow
- ✓ Section 2 Basic Description of Verilog
- ✓ Section 3 Behavior Models of Combinational circuit
- ✓ Section 4 Simulations



What is Verilog?

✓ Hardware Description Language

✓ Hardware Description Language

✓ Hardware Description Language

Hardware Description Language

✓ Hardware Description Language


- HDL is a kind of language that can "describe" the hardware module we plan to design
- Verilog and VHDL are both widely using in the IC company
- The difference between HDL and other programming language is that we must put the "hardware circuit" in our brain during designing the modules

Verilog

- ✓ Basic Language Rules
- ✓ Data type
- ✓ Port Declare and Connect
- ✓ Number Representation
- Operators
- Conditional Description
- Concatenation

Module

✓ All modules run concurrently

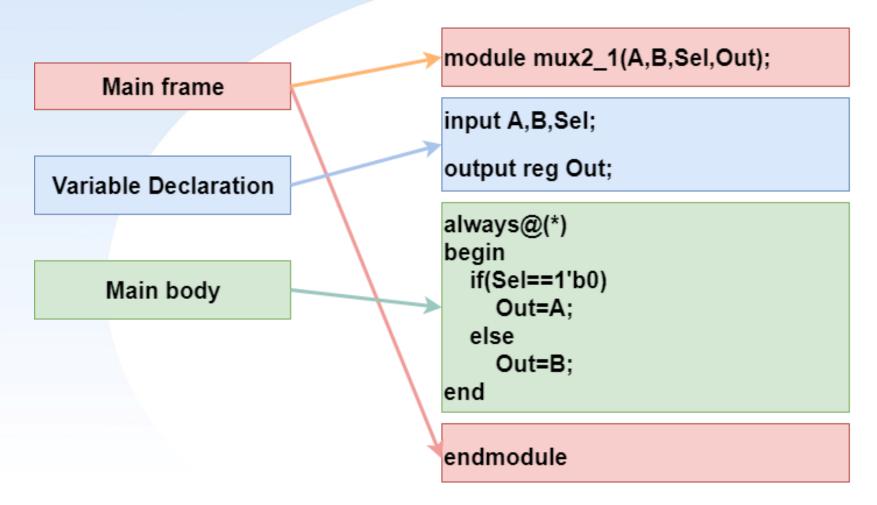




Combinational Circuits

- ✓ The output of combinational circuit depends on the present input only.
- Combinational circuit can be used to do mathematical computation and circuit control.

Combinational circuit

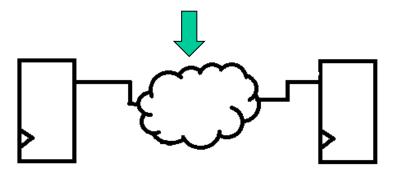


Behavioral Modeling (1/3)

✓ Data Assignment


✓ Continuous Assignment → for wire assignment

 Imply that whenever any change on the RHS of the assignment occurs, it is evaluated and assigned to the LHS. => assign

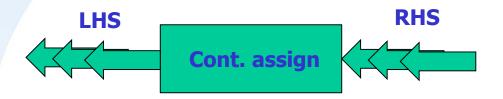

✓ Procedural Assignment → for reg assignment

 assignment to "register" data types may occur within always, initial, task and function. These expressions are controlled by triggers which cause the assignment to evaluate.

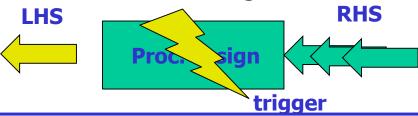




Behavioral Modeling (2/3)

✓ Using always construct (Proc. assignment)

- assignment should be applied in topological order
- Simulation from top to down
- always@(a,b)
 x = a & b;
 y = x | c | d; d) begin

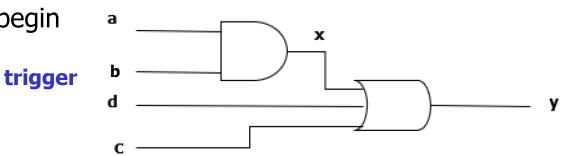

Using assign construct (Cont. assignments)

- assign $y = x \mid c \mid d$;
- assign x = a & b;





Behavioral Modeling: Example (3/3)

- Using blocking assignments in always construct
 - ✓ The "always" block runs once whenever a signal in the
 - ✓ Sensitivity list changes value (trigger)

```
⊟always@(a or b or c) begin
     x = a \& b;
     y = x \mid c \mid d;
end
 // simulation-synthesis mismatch
∃always@(a or b or c or d) begin
     y = x \mid c \mid d;
     x = a \& b:
end // not in topological
 // simulation-synthesis mismatch
 always@(a or b or c or d or e)
Begin
     x = a & b;
     y = x \mid c \mid d;
end
 //performance loss
```

```
always@(a or b or c or d)
-begin
     x = a \& b;
      v = x \mid c \mid d;
end
 // best final
 always@(a or b or c or d or x)
-begin
 x = a \& b;
 v = x \mid c \mid d;
end
 // correct
 always@*
begin
 x = a \& b;
 v = x \mid c \mid d;
```



end

Basic Language Rules

✓ Terminate lines with semicolon;

✓ Identifiers

- Verilog is a case sensitive language
 - C_out_bar and C_OUT_BAR: two different identifiers
- Starts only with a letter or an _(underline), can be any sequence of letters, digits, \$, _ .
 - e.g. 12_reg → illegal !!!!

✓ Comments

- single line : //
- multiple line : /* ... */



Naming Conventions

✓ Common

- Lowercase letters for signal names
- Uppercase letters for constants

Abbreviation

- clk sub-string for clocks
- rst sub-string for resets

✓ Suffix

- _ n for active-low, _z for tri-state, _a for async , ...
- Ex: rst_n => reset circuit at active-low


✓ State Machine

- [name]_cs for current state, [name]_ns for next state
- ✓ Identical(similar) names for connected signals and ports

Data Type (1/5)

✓ 4-value logic system in Verilog: 0, 1, X, or Z

- 0,1: means low or high signal
- X: unknown signal, means that we don't know whether the signal is 0 or 1
- Z: high-impedance, the signal is neither 0 nor 1.
- Avoid X and Z !!!

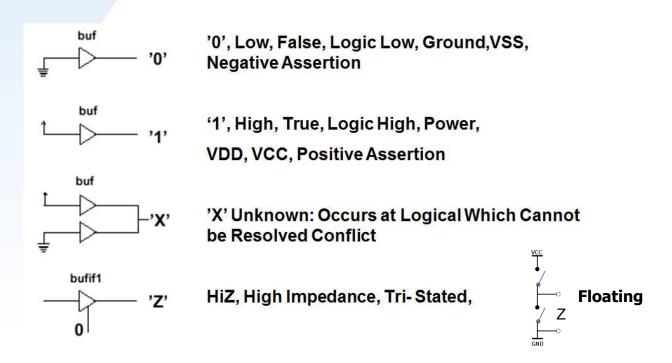



Data Type (2/5)

✓ Wire (default = Z (high impedance, floating net))

A wire cannot store value, often use in combination circuit

1. Represent port connection between devices

```
wire clk,A,B;
BBQ bbq1(.clk(clk),.meat(A),.vegetable(B))
BBQ bbq2(.clk(clk),.meat(A),.vegetable(B))
```

2. Can not be use in procedure assignment: 'initial' or 'always'

```
wire C;
always@(*) begin
   C = a+b; // wrong, C should be reg data type (X)
end
```

3. Only use in continuous assignment: 'assign'

```
wire C;
assign C = a+b; // correct (O)
```



Data Type (3/5)

✓ Registers (default = X (unknown, should be initialized))

A reg is a simple Verilog, variable-type register represent abstract data storage element Hold their value until explicitly assigned in an initial or always block

- Only use in procedure assignment: 'initial' or 'always'
- 2. Does not imply a physical register



Data Type (4/5)

Wire

- Port connection(in/out)
- 2. Assign (cont. assignment)
- 3. Can declared as vector
- 4. Often use in Comb. circuit

Reg


- Port output(register out)
- 2. Always block (Proc. assignment)
- 3. Can declared as vector
- 4. Often use in Sequ. circuit

Data Type (5/5)

- ✓ Vectors and Arrays: the wire and reg can be represented as a vector
 - Vectors: single-element with multiple-bit
 - wire [7:0] vec;

- → 8-bit
- Arrays: multiple-element with multiple-bit
 - It isn't well for the backend verifications
 - reg [7:0] mem [0:1023]
 → Memories (1k 1byte)

introduced later

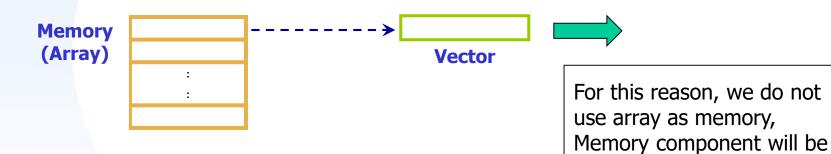




Port Declare and Connect (1/3)

✓ Interface is defined by ports

- Port inside module declaration
 - input: input port, only wire can be assigned
 - output : output port, wire/reg can be assigned
 - inout : bidirectional port, only wire can be assigned

Port connection outside module

- input : wire or reg can be assigned to connect into the module
- output: only wire can be assigned to connect out of the module
- inout : register assignment is forbidden neither in module nor out of module [Tri-state]

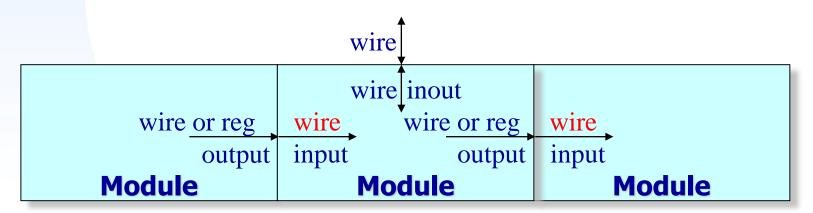



Port Declare and Connect (2/3)


✓ Modules connected by port order (implicit)

 Order must match correctly. Normally, it not a good idea to connect ports implicitly. It could cause problem in debugging when any new port is added or deleted.

e.g.: FA U01(A, B, CIN, SUM, COUT);


Order is vital!

✓ Modules connect by name (explicit)

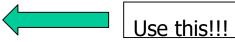

- Use named mapping instead of positional mapping
- name shall match correctly.
- e.g. : FA U01 (.a(A), .b(B), .cin(CIN), .sum(SUM), .cout(COUT));

Name Mapping

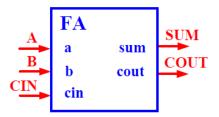



Port Declare and Connect: Example (3/3)

```
module MUX2_1(out,a,b,sel,clk,rst);
           sel,clk,rst;
input
          a,b;
input
output
           out;
                        Wire for input
wire
           C;
                      //incorrect define
           a,b; <
reg
           out;
reg
//Continuous assignment
assign c = (sel = 1'b0)?a:b;
//Procedural assignment,
//only reg data type can be assigned value
always@(posedge rst or posedge clk)
begin
           if(reset==1'b1) out <= 0;
           else out \leq c;
end
endmodule
                          sub module
```

```
Wire for port
'include "mux.v"
                          connection
module test;
           out;
                      //incorrect define
reg
          a,b;
req
          clk,sel,rst;
reg
// 1. connect port by ordering
MUX2_1 mux(out,a,b,sel,clk,rst);
// 2. connect port by name
MUX2_1 mux(.clk(clk), .reset(rst),
.sel(sel), .a(a), .b(b), .out(out));
initial begin
end
endmodule
                          (test module)
```

Number Representation (1/2)

✓ Number Representation

- Format: <size>'<base><value>
 - Base format: b(binary), o(octal), d(decimal) or h(hexadecimal)
 ◆e.g. 4'd10 → 4-bit, 10, decimal
 - If <size> is smaller than <value>, left-most bits of <value>are truncated
 - \bullet e.g. 6'hca \rightarrow 6-bit, store as 6'b001010 (truncated, not 11001010!)
 - If <size> is larger than <value>, then left-most bits are filled based on the value of the left-most bit in <value>
 - ◆Left most '0' or '1' are filled with '0', 'Z' are filled with 'Z' and 'X' with 'X'
 - ♦e.g. 12'hz → zzzz zzzz zzzz; 6'bx → xx xxxx; 8'b0 → 0000 0000; 8'b1 → 0000 0001;
 - ◆e.g. 6'ha → 6-bit, store as 6'b001010 (filled with 2-bit '0' on left!)
 - Default size is 32-bits decimal number
 - ◆e.g. 11 => 32'd11 (integer type)



Number Representation(2/2)

✓ Number Representation

- Signed Value (Verilog-2001)
 - By default the signal is unsigned → Declare with keyword "signed"
 - ◆ e.g. wire signed [7:0] a;
 - Negative : -<size>'<base><value>
 - ◆ e.g. -8'd3 → legal, 8'd-3 → illegal
 - ◆ A 3-bit signed value would be declared as wire signed [2:0] A

Decimal Value	Signed Representation (2's complement)
3	3'b011
2	3'b010
1	3'b001
0	3'b000
-1	3'b111
-2	3'b110
-3	3'b101
-4	3'b100



Operators (1/4)

Operators

- Arithmetic Description
 - A = B + C;
 - A = B C;
 - A = B * C;
 - A = B / C;
 - A = B % C; (modulus)
- Shift Operator (**logical**)

 - A = B >> 2; \rightarrow shift right 'B' by 2-bit (if B = 4'b1000, A = 4'b0010)

 - A = B << 2; \Rightarrow shift left 'B' by 2-bit (if B = 4'b0001, A = 4'b0100)
- Shift Operator (arithmetic)
 - A = B >>> 2; ">>>", "<<<" are used only for 'signed' data type in Verilog 2001
 - A = B <<< 2;
 - e.g. wire signed [3:0] A,B; (A = 4'b1110), which is 1000 shifted to the right two B = 4'b1000;positions and sign-filled.) A = B >>> 2;



Operators (2/4)

Unsigned Operation

```
wire [7:0] a,b;
wire [3:0] c,
wire [8:0] sum1, sum2, sum3, sum4;

assign sum1 = a + b;
assign sum2 = a + c;
assign sum3 = a + {4{1'b0}}, c};

a and b are same width =>
can be applied to signed and unsigned =>
automatic 0 extension

manual 0 extension
```

✓ Signed Operation

```
wire signed [7:0] a,b;
wire signed [3:0] c_sign;
wire signed [8:0] sum1, sum4;

assign sum1 = a + b;
assign sum4 = a + c_sign;

a and b are same width =>
can be applied to signed and unsigned

c_sign is signed type =>
automatic signed extension

wire [7:0] a,b;
wire [3:0] c,
wire [7:0] sum1, sum4;

assign sum4 = a + {4{c[3]}, c};


manual signed extension
```



Operators (3/4)

Unsigned / Signed Mix Operation

- If there are one unsigned operator, the operation will be regard as unsigned
- Example:
 - Goal: Number need to be in 0~6

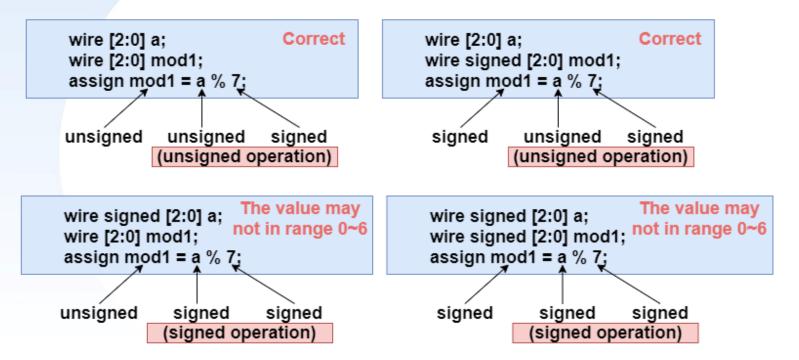



Operators (4/4)

- ✓ Bitwise operators: perform bit-sliced operations on vectors
 - ~(4'b0101) = {~0,~1,~0,~1} = 4'b1010
 - 4'b0101 & 4'b0011 = 4'b0001
- ✓ Logical operators: return one-bit (true/false) results
 - !(4'b0101) = ~1 = 1'b0 , EX: if(a == c && a == c || !(b !=c))
- ✓ Reduction operators: act on each bit of a single input vector
 - &(4'b0101) = 0 & 1 & 0 & 1 = 1'b0
- ✓ Comparison operators: perform a Boolean test on two arguments

Bitwise

~a	NOT
a & b	AND
a b	OR
a^b	XOR
a ~^ b	XNOR

Logical

!a	NOT
a && b	AND
a b	OR

Reduction

&a	AND
~&	NAND
I	OR
~	NOR
^	XOR

Comparison

a < b a <= b a >= b	Relational
a == b a != b	[in]equality returns x when x or z in bits. Else returns 0 or 1
a === b a !== b	case [in]equality returns 0 or 1 based on bit by bit comparison

Note distinction between ~a and !a



Conditional Description (1/2)

✓ If-then-else often infers a cascaded encoder

- inputs signals with different arrival time
- Priority inferred
- used in proc. assignment

✓ case infers a single-level mux

- case is better if priority encoding is not required
- case is generally simulated faster than if-then-else
- used in proc. assignment

✓ conditional assignment (?:)

- -?: \rightarrow c = sel? a : b;
- used in cont. assignment
- same as if-else statement



Conditional Description: Example (2/2)


Conditional Assignment (?:)

```
assign data=(Sel==2'b00) ? a:

((Sel==2'b01) ? b:

((Sel==2'b10) ? c:

((Sel==2'b11) ? d )));
```

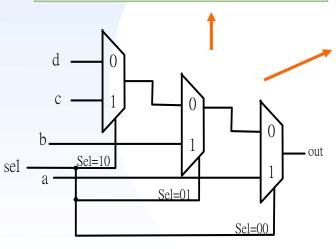

If-then-else

```
always@ (*)
begin
 if(Sel == 2'b00)
   data=a:
 else if(Sel== 2'b01)
   data=b;
 else if(Sel==2'b10)
   data=c:
 else
   data=d:
end
```

case

```
always@(*)
begin
 case(Sel)
 2'b00: data = a;
 2'b01: data = b;
 2'b10: data = c;
 default: data = d;
 endcase
end
```




Concatenation

Concatenation

•
$$\{\} \rightarrow \text{assign a} = \{b, c\};$$

•
$$\{\{\}\} \rightarrow \text{assign a} = \{2\{c\}\};$$

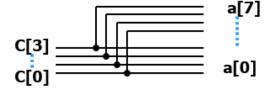

• Ex. $a[4:0] = \{b[3:0], 1'b0\}; \Leftrightarrow a = b << 1;$

Gate-Level Modeling (1/3)


✓ Primitive logic gate









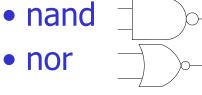

xnor




can use with multiple inputs i.e. xor(out, in1, in2, in3);

Gate-Level Modeling (2/3)

✓ Primitive logic gate


buf,

bufif0,

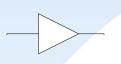





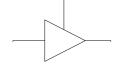


not,

notif0,





notif1

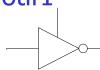

can use without instance name








can use with multiple outputs



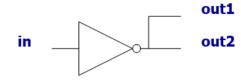


Behavioral Model v.s. Gate Level Model

✓ Gate Level Model

```
input A,B,Sel;
output Out;
wire Sel_n,and_out1,and_out2;
```

```
not (Sel_n,Sel);
and (and_out1,A,Sel_n);
and (and_out2,B,Sel);
or (Out,and_out1,and_out2);
```

endmodule

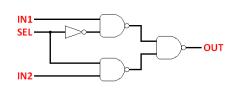


Behavioral Model

```
module mux2_1(A,B,Sel,Out);

input A,B,Sel;
output reg Out;

always@(*)
begin
if(Sel==1'b0)
Out=A;
else
Out=B;
end


endmodule
```

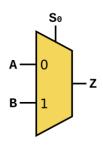




Coding style


- ✓ Data has to be described in one always block
 - Muti-driver (not synthesizable)

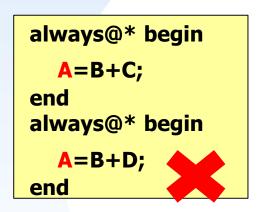

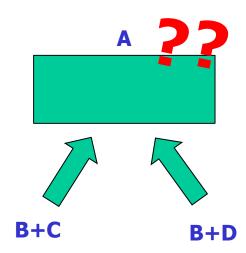

Coding style

✓ Don't use initial block in your design for synthesis

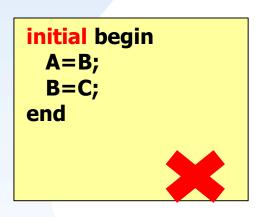

Initial use for PATTERN only!!

Coding style

Avoid combinational loop

 May synthesis a Latch in your circuit !! (Latch is non-edge triggered, avoid)

```
always@* begin
A=B;
B=A;
end
```

```
always@* begin
case(Q)
2'd0: A=B;
2'd1: A=C;
endcase
end
```

```
always@* begin
if(Q==2'd1)
A=B;
else if(Q==2'd2)
A=C;
end
```

```
always@* begin
case(Q)
2'd0: A=B;
2'd1: A=C;
default: A=D;
endcase
end
```

```
always@* begin
if(Q==2'd1)
    A=B;
else if(Q==2'd2)
    A=C;
else A=D;
end
```

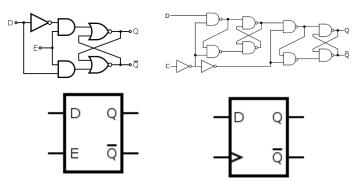


Figure. (a) D-latch (b) D flip-flop




Outline

- ✓ Section 1 Introduction to design flow
- ✓ Section 2 Basic Description of Verilog
- ✓ Section 3 Behavior Models of Combinational circuit
- ✓ Section 4 Simulations




Simulation Environment

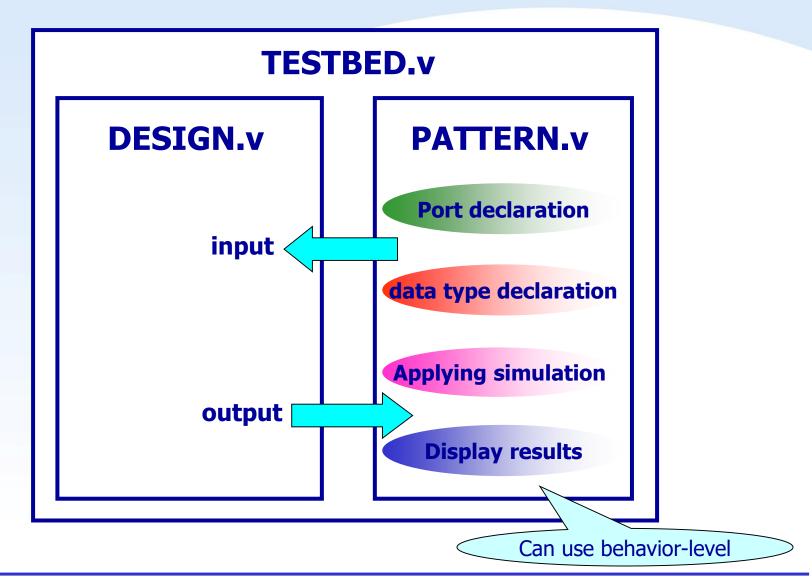



Simulation Environment (cont.)

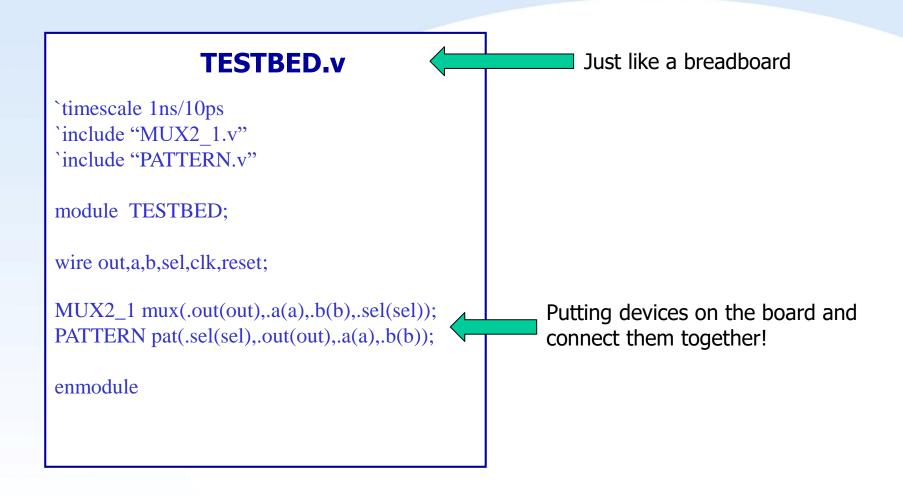



Simulation Environment (cont.)

PATTERN.v

```
module PATTERN(sel,out,a,b);
input out;
output a,b,sel;
reg a,b,sel,clk,reset;
integer i;
parameter CYCLE=10;
always \#(CYCLE/2) clk = \simclk;
initial begin
a=0;b=0;sel=0;reset=0;clk=0;
#3 \text{ reset} = 1;
#10 \text{ reset} = 0:
```


```
# CYCLE sel=1;
for(i=0;i<=3;i=i+1) begin
#CYCLE {a,b}=i;
#CYCLE $display( "sel=%b, a=%b, b=%b,
           out=%b", sel, a, b, out);
end
# CYCLE sel=0;
for(i=0;i \le 3;i=i+1) begin
\# CYCLE \{a,b\}=i;
# CYCLE $display( "sel=%b, a=%b, b=%b,
          out=%b", sel, a, b, out);
end
# CYCLE $finish;
end
endmodule
```




Simulation Environment (cont.)

Simulation command

- Verilog compile
 - irun TESTBED.v -define RTL –debug
- Invoke nWave
 - nWave &
- Stop the simulation and continue the simulation
 - Ctrl+z → Suspend the simulation at anytime you want.(not terminate yet!)
 - jobs → Here you can see the jobs which are processing with a index on the left [JOB_INDEX]
 - kill → Use the command "kill %JOB_INDEX to terminate the job

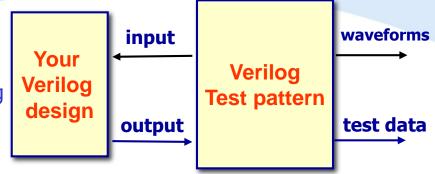


nWave

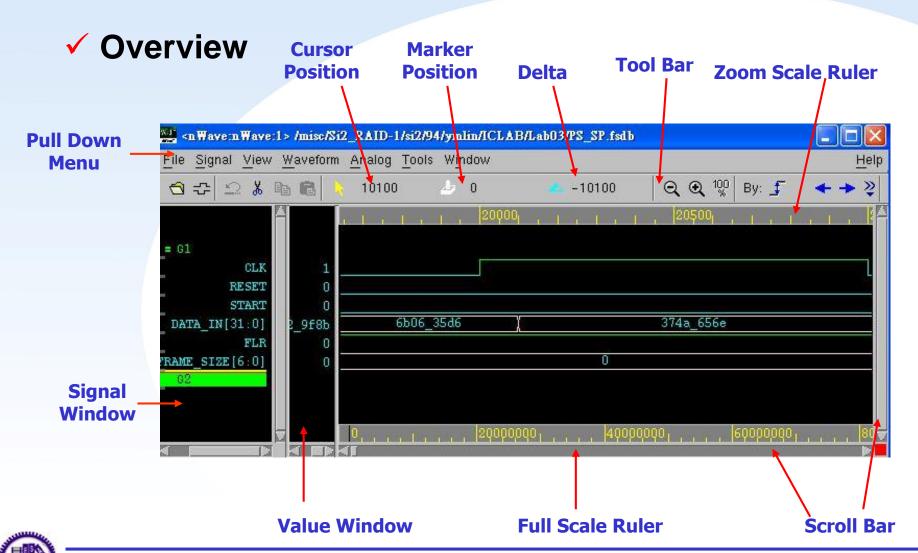

✓ Open fsdb file


Use File → Open... command

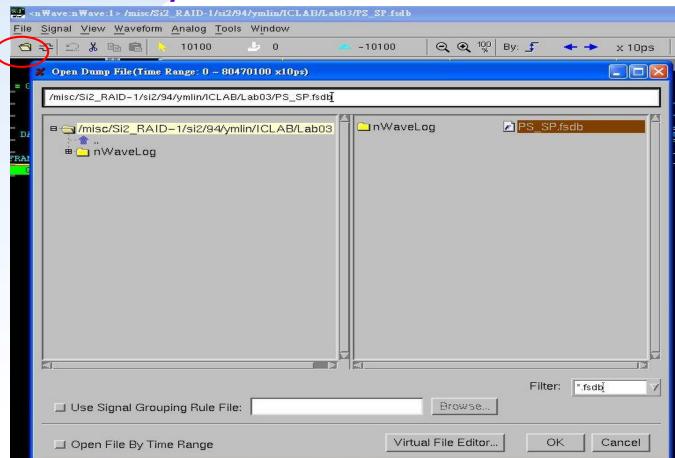



✓ Get signal

Use Signal → Get Signals... command

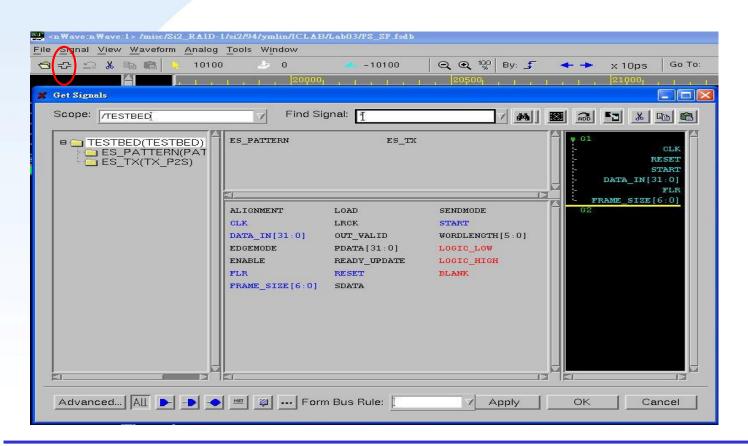




✓ Choose value format

On the value window click Left Button




Default: Hexadecimal

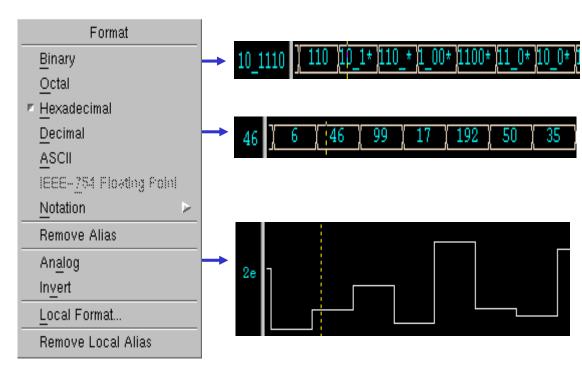

✓ Reload nWave

- Update fsdb file in Debussy database
 - File → Reload
 - Hot key → L (shift + I)

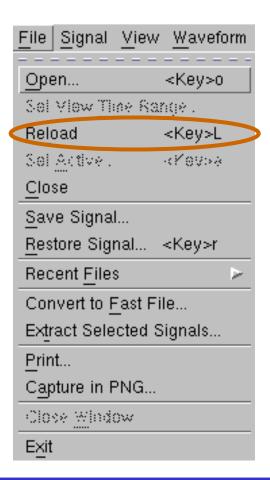

Q & A

✓ Any question ?



Authors


```
2004 Chia-Hao Lee (matchbox@si2lab.org)
2006revised Yi-Min Lin (ymlin@si2lab.org)
2008revised Chien-Ying Yu (cyyu@si2lab.org)
2008revised Chi-Heng Yang (kevin@oasis.ee.nctu.edu.tw)
2009revised Yung-Chih Chen (ycchen@oasis.ee.nctu.edu.tw)
2010revised Liang-Chi Chiu (oboe. ee98g@nctu. edu. tw)
2012revised Shyh-Jye Jou
2014revised Sung-Shine Lee (sungshil@si2lab.org)
2018revised Po-Yu Huang
2019revised Wei Chiang
2020revised Ya-Yun Hou / Lien-Feng Hsu
2021revised Lin-Hung Lai (h123572119@gmail.com)
```



Appendix - Gate-Level Modeling with delay

✓ Gate Delays

Rise Delays, Fall Delays, and Turn-off Delays

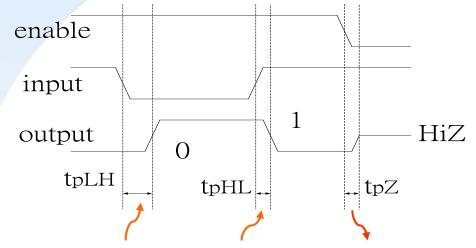

```
gate #( rise_delay, fall_delay, turnoff_delay ) a3( out, in, enable );
gate #( rise_delay, fall_delay ) a2( out, i1, i2 );
Only bufif0, bufif1, notif0, notif1 have turn-off delays
i.e. bufif1 #(3,4,5) ( out, in, enable ); //rise=3,fall=4,turnoff=5
```



Appendix - Gate-Level Modeling with delay

✓ Gate Delays

- Min/Typ/Max delay time
 - gate #(mindelay:typdelay:maxdelay) b(out, i1, i2);
 - i.e. nand #(1:2:3) (out , in1 , in2);
- Combine min/typ/max and rise/fall/turn-off delays

```
    i.e. notif1 #(3:4:5,6:7:8,1:2:3) ( out, in, enable );
minimum rise=3,fall=6,turn-off=1,
typical rise=4,fall=7,turn-off=2,
maximum rise=5,fall=8,turn-off=3
```

Appendix-Simulation Command

✓ Dump a FSDB file for debug

- General debussy waveform generator
 - \$fsdbDumpfile("file_name.fsdb");
 - \$fsdbDumpvars;
- Other debussy waveform generator
 - \$fsdbSwitchDumpfile("file_name.fsdb");
 - close the previous fsdb file and create a new one and open it
 - \$fsdbDumpflush ("file_name.fsdb");
 - → not wait the end of simulation and Dump an fsdb file
 - \$fsdbDumpMem(memory_name, begin_cell, size);
 - → the memory array is stored in an fsdb file
 - \$fsdbDumpon;\$fsdbDumpoff;
 - → just Dump and not Dump
- ✓ Put the above command in an initial block

fsdb is a file format that contains information of the waveform during the simulation

- → Dump an fsdb file
- → Dump all values

