# **Stainless Steel Mesh Grille Installation Instructions**


For 1999 & 2000 Miatas


#### 1. Remove the tow hooks:

If you have not already done so, remove the two tow hooks on either side of the mouth opening. These hooks were used for chaining down the Miata to a transport vehicle for delivery to the dealership and no longer serve any purpose. Removal requires a 14mm open end wrench and a 14mm socket with extension. There are three bolts per side. Remove the front two using the open-end wrench. Remove the rear bolt by using the socket on a long extension from underneath the car. Removal takes about 45 minutes for both sides. (Note that jacking up the Miata is not necessary; just reach under the front end with one hand and reach into the mouth with the other hand).

## 2. Install tapered spacers:

Remove the two 10mm bolts found on the top edge of the Miata's mouth. Position the tapered spacers over the holes with tape (see illustration). Note the spacers are positioned at an angle with their bottoms biased toward the center of the grill.

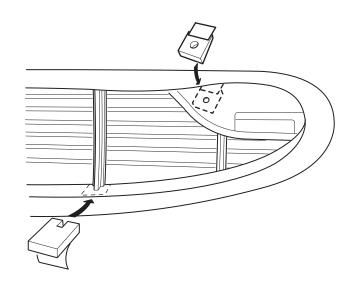

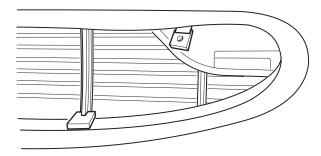

## 3. Install rectangular spacers:

Clean the plastic at the base of the vertical ribs and install the plastic spacer blocks by peeling the backing from the adhesive pad (see illustration).

### 4. Install the Grille:

Offer the upper part of the grille up to the tapered spacers and press the lower part of the grill inward until it touches the rectangular spacer blocks.

Now fit the supplied bolts and washers (see illustration) and tighten.

