
¥MG Crested Carburetor Caps¥ One Pair. For 1929-1974 MG's Part #P1094

Installation Instructions for MG Crested Carburetor Caps

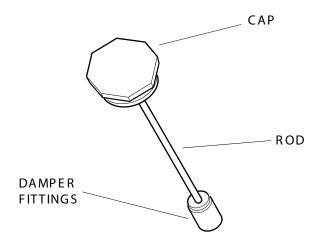

CAP & DAMPER ASSEMBLY

- 1. Remove one carburetor cap & damper assembly from your car.
- 2. The cap must now be separated from its rod. Be very careful not to bend the rod! Instructions below show how to pull it out straight.
 - A. If your present cap is plastic, you may be able to pull it off by hand. If you cannot, then follow instructions for brass caps, below.
 - B. If your present cap is brass, clamp it in a vise (use a leather scrap to prevent marks on original), apply locking pliars firmly and flush with the damper fittings, then lift the rod free with a claw hammer (see illustration).

(Now see page 2...)

