
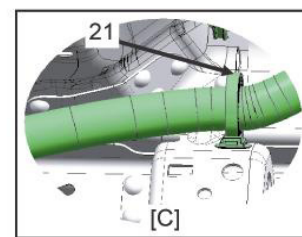
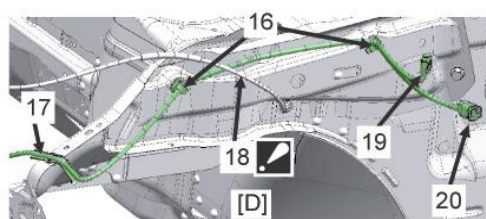
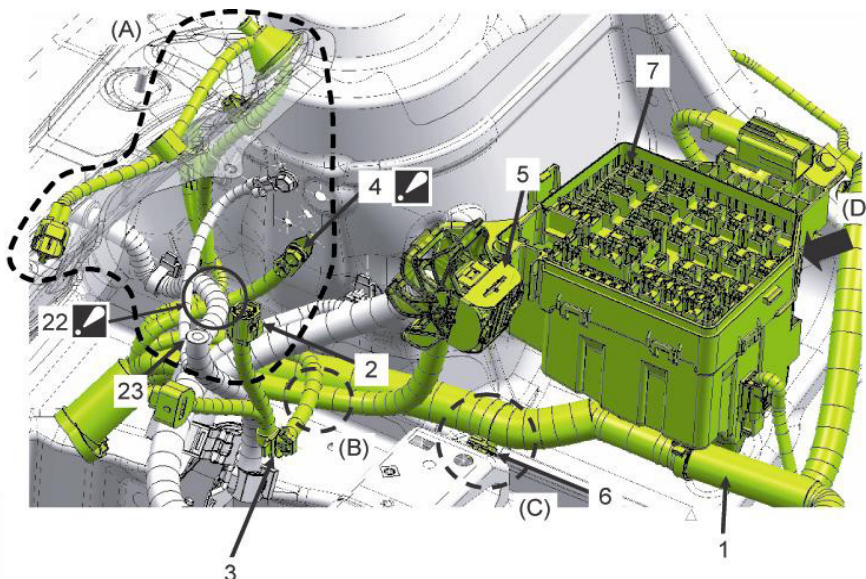
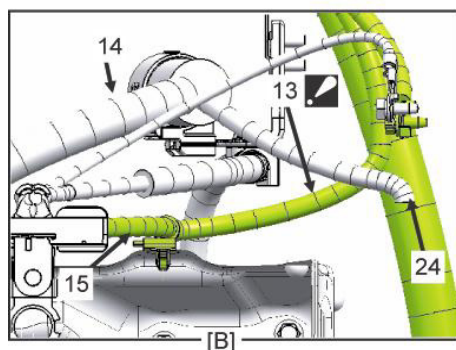


Reassembling Note for Wiring Harness

1/1

Around Strut

Left side

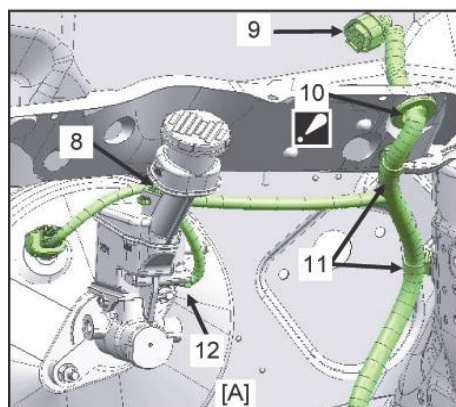

[A]: Detail (A) (LHD model)	11. Clamp
[B]: Detail (B)	12. Brake fluid switch
[C]: Detail (C) (Petrol model)	13. Pass the wire under the engine harness.
[D]: View (D) (Without Additional heater)	14. Engine harness
1. Main harness	15. To current sensor (Except K14B engine model)
2. Current sensor (Except K14B engine model)	16. Clamp
3. Clamp	17. Clamp
4. Ground bolt Set the terminal to the hole, and tighten the bolt. Confirm that the earth terminals do not move after tightening bolts.	18. Hood release cable Pass the harness inside of the hood release cable.
5. ECU	19. KLS buzzer
6. Clamp	20. Side turn signal (L)
7. Relay box	21. Clamp
8. Clamp	22. Pass the main ground wire to the body side of the engine harness.
9. Wiper motor	23. To battery (-)
10. Grommet Set the grommet firmly.	24. To main harness