


Reassembling Note for Wiring Harness

1/3

Around Instrument Panel
LHD model (Inside dash panel)

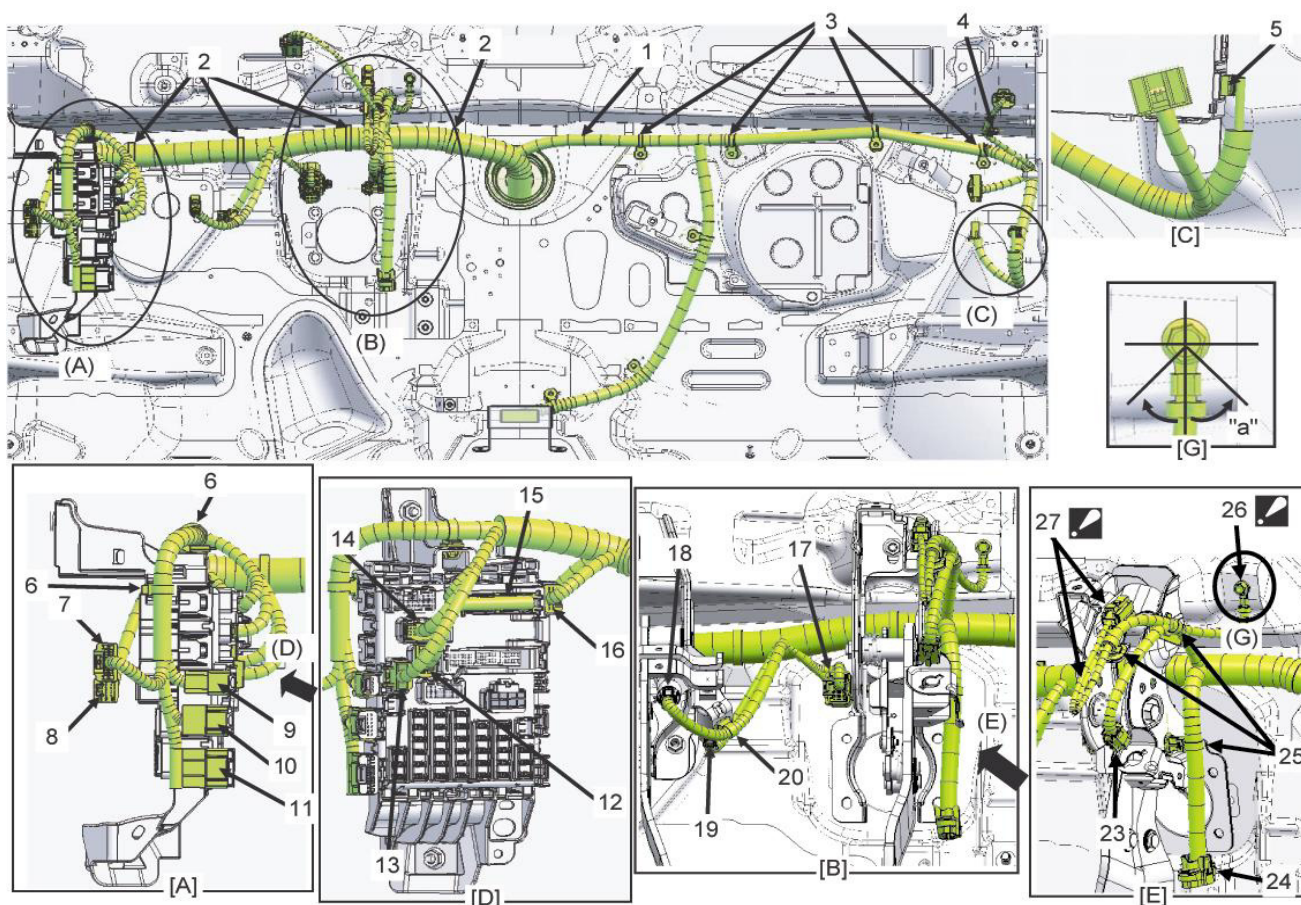


[A]: Detail (A)	11. Instrument panel harness (Gray)
[B]: Detail (B)	12. J/B main No.1 (Natural)
[C]: Detail (C)	13. J/B main No.2 (Natural)
[D]: View (D)	14. J/B main No.3 (Blue)
[E]: View (E)	15. J/B main No.4 (Natural) J/B main No.5 (Natural)
[G]: Detail (G)	16. Floor harness (Natural)
1. Main harness	17. J/C
2. Clamp	18. Clutch switch
3. Clamp	19. Clutch start switch
4. Clamp	20. Clamp
5. BCM No.2 (With push start system)	23. Stop lamp switch
6. Clamp	24. Accelerator sensor
7. BCM (Without push start system) (Gray)	25. Clamp

Reassembling Note for Wiring Harness

2/3

Around Instrument Panel
LHD model (Inside dash panel)

8. BCM No.1 (With push start system) (Gray)	26. Confirm that the earth terminals do not move after tightening bolts.
9. Instrument panel harness (Yellow)	"a". $\pm 45^\circ$
10. Instrument panel harness (Natural)	27. Push the wires downward fully to avoid pinching the EPS wire when instrument panel installation.

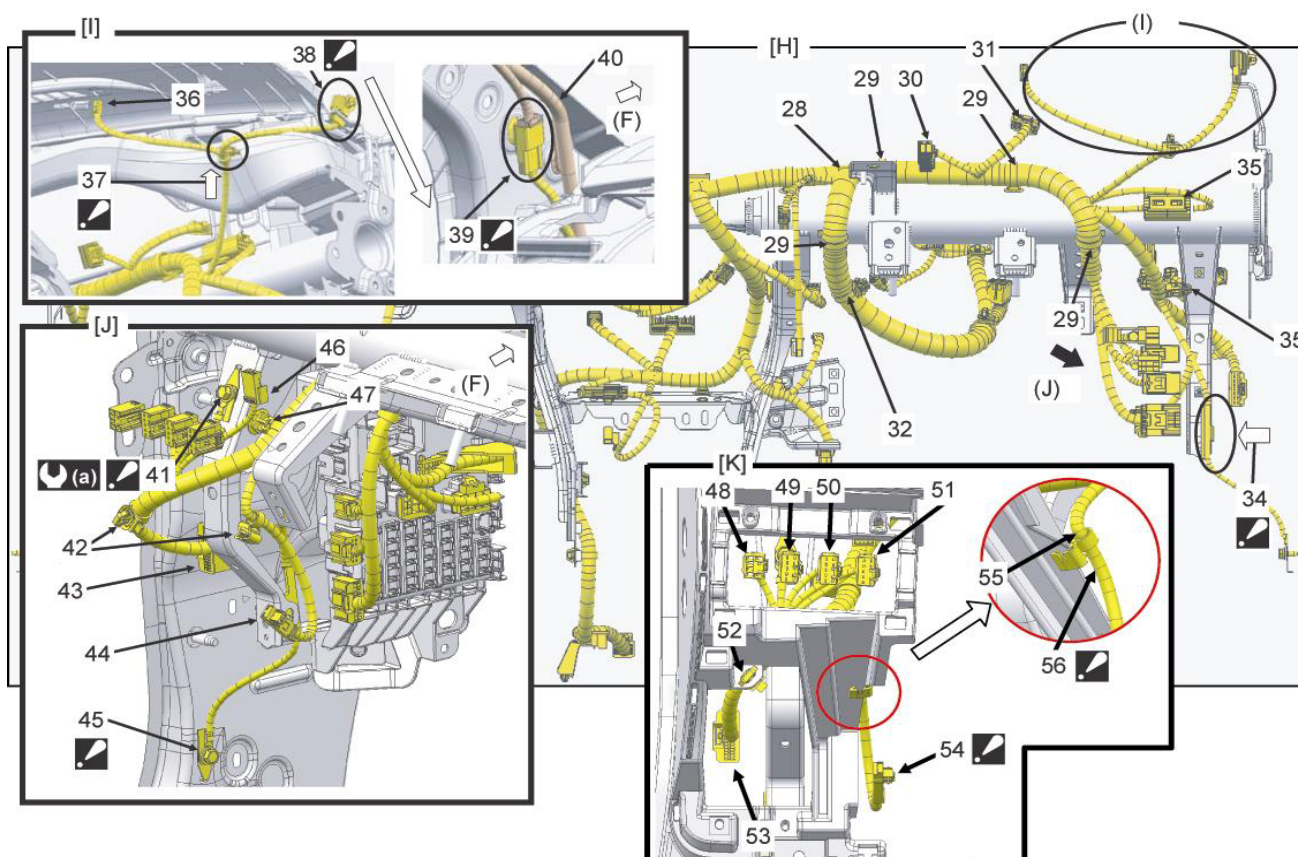

[H]: Front view	41. Instrument panel member ground bolt Set the terminal to the hole, and tighten the bolt. Confirm that the earth terminals do not move after tightening bolts.
[I]: Detail (I) Front view	(a) : 7.0 to 10.5 N·m (0.71kgf-m to 1.1kgf-m, 5.5lbt-ft to 8.0lbt-ft)
[J]: View (J)	42. Clamp
[K]: Around option switch (LHD) Back view	43. BCM (Gray)
(F): Front	44. Driver knee inflator
28. Instrument panel harness	45. Ground bolt Set the terminal to the hole, and tighten the bolt. Confirm that the earth terminals do not move after tightening bolts.
29. Clamp	46. Keyless receiver (Only keyless model)
30. EPS controller	47. Clamp

Reassembling Note for Wiring Harness

3/3

Around Instrument Panel

LHD model (Inside dash panel)

31. Speedmeter	48. Headlight leveling switch (Black)
32. Clamp	49. Front fog light switch (Green)
 34. Clamp Clamp the harness from the outboard side.	50. ENG A-STOP OFF switch (White)
35. Clamp	51. TCSS off switch / Sonar and ESP off switch (Brown)
36. Sunlight sensor (Only auto A/C)	52. Clamp
 37. Clamp Clamp the harness from the bottom side.	53. BCM (Gray)
 38. To roof wire Set the connector to the instrument panel main body.	 54. Driver knee inflator Joint the connector and set the connector after assembling the instrument panel.
 39. To roof wire Joint the connector and set the connector after assembling the instrument panel. Clamp the connector even if the opposite connector is not available.	55. Rib
40. Dome lamp wire	 56. Clamp Fit the clamp to the rib.