


Reassembling Note for Wiring Harness

1/1

Around Instrument Panel

Front-passenger side

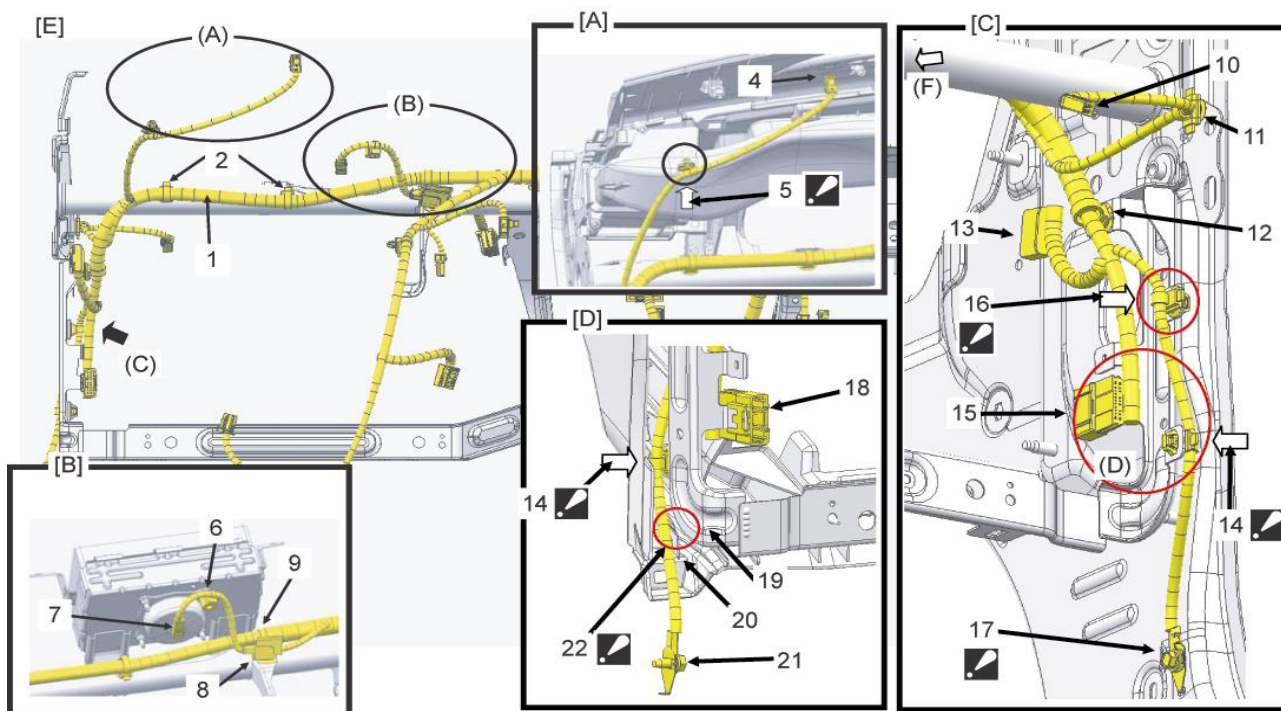

[A]: Detail (A) (With auto light) Front view	10. Front-passenger-A/B cutoff switch
[B]: Detail (B) Front view	11. Clamp
[C]: View (C)	12. Clamp
[D]: Detail (D) Front view	13. BCM No.2 (Only push start system)
[E]: Front view	14. Clamp Clamp the harness from the outboard side.
(F): Front	15. To floor harness
1. Instrument panel harness	16. Clamp Clamp from the inboard side.
2. Clamp	17. Ground bolt Set the terminal to the hole, and tighten the bolt. Confirm that the earth terminals do not move after tightening bolts.
4. Auto light sensor (With auto light)	18. To floor harness
5. Clamp Set the clamp from the bottom side.	19. Side bracket
6. Clamp	20. Instrument panel main body
7. Front-passenger inflator	21. Instrument panel harness ground (Front-passenger side)
8. Clamp connector	22. Do not pinch the wire between the instrument panel main body and side bracket.
9. Clamp	