


Reassembling Note for Wiring Harness

1/3

Around Instrument Panel
RHD model (Inside dash panel)

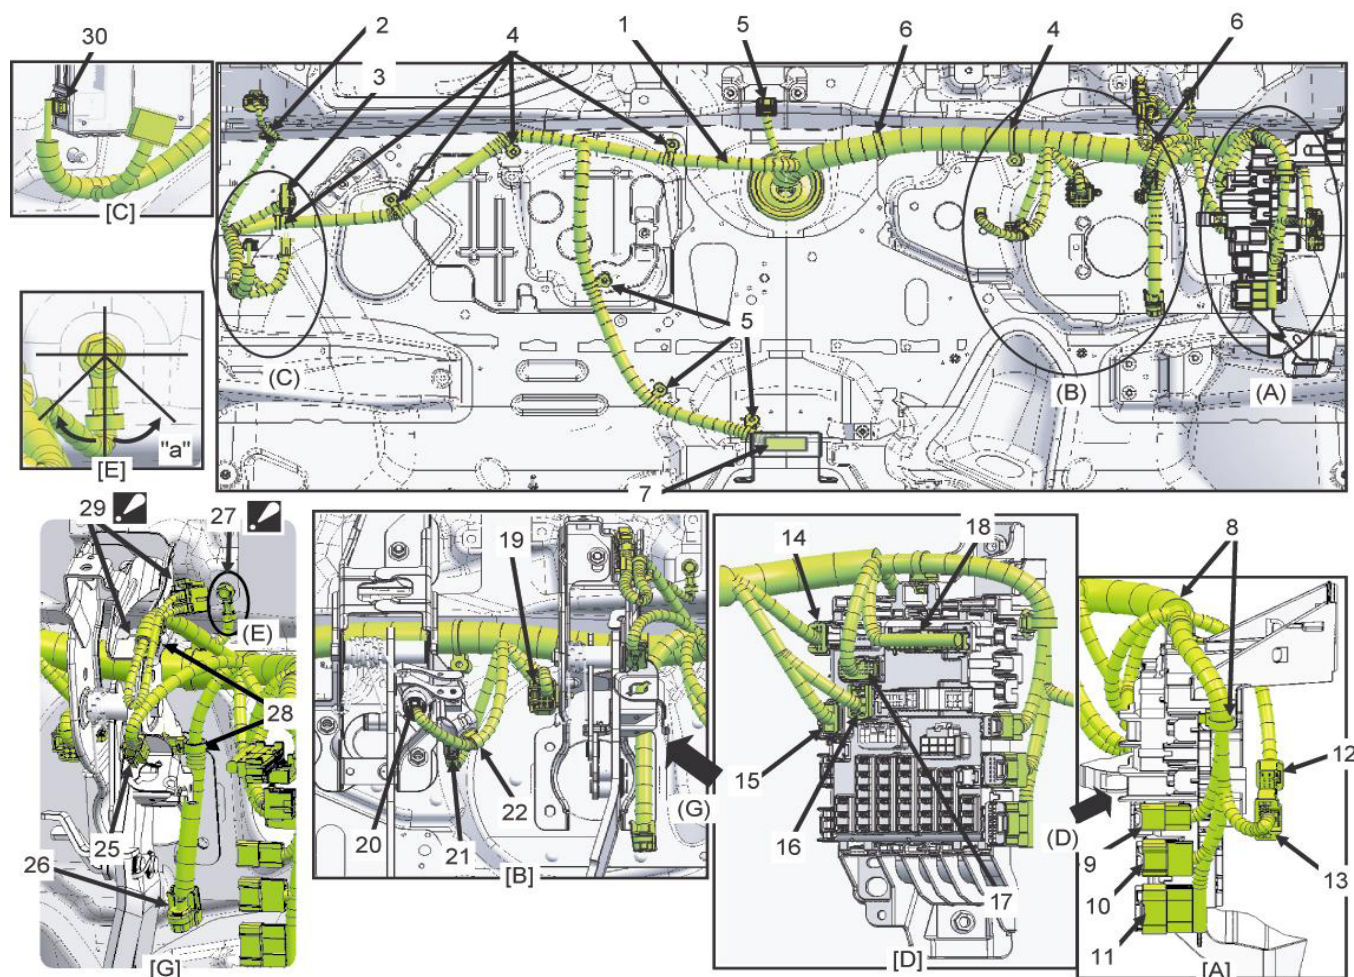


[A]: Detail (A)	13. BCM No.1 (With push start system)
[B]: Detail (B)	14. Floor harness
[C]: Detail (C)	15. J/B main No.1
[D]: View (D)	16. J/B main No.2
[E]: Detail (E)	17. J/B main No.3
[G]: View (G)	18. J/B main No.4 J/B main No.5
1. Main harness	19. J/C
2. Clamp	20. Clutch switch
3. DCDC converter (ENG A-STOP model)	21. Clutch start switch
4. Clamp	22. Clamp
5. Security ID controller	25. Stop lamp switch
6. Clamp	26. Accelerator sensor
7. Idling stop ECU (ENG A-STOP model)	27. Ground bolt Confirm that the earth terminals do not move after tightening bolts.
8. Clamp	"a". ±45°
9. Instrument panel harness (Yellow)	28. Clamp

Reassembling Note for Wiring Harness

2/3

Around Instrument Panel
RHD model (Inside dash panel)

10. Instrument panel harness (Natural)	29. Push the wires downward fully to avoid pinching the EPS wire when instrument panel installation.
11. Instrument panel harness (Gray)	30. BCM No.2 (With push start system)
12. BCM (Without push start system)	

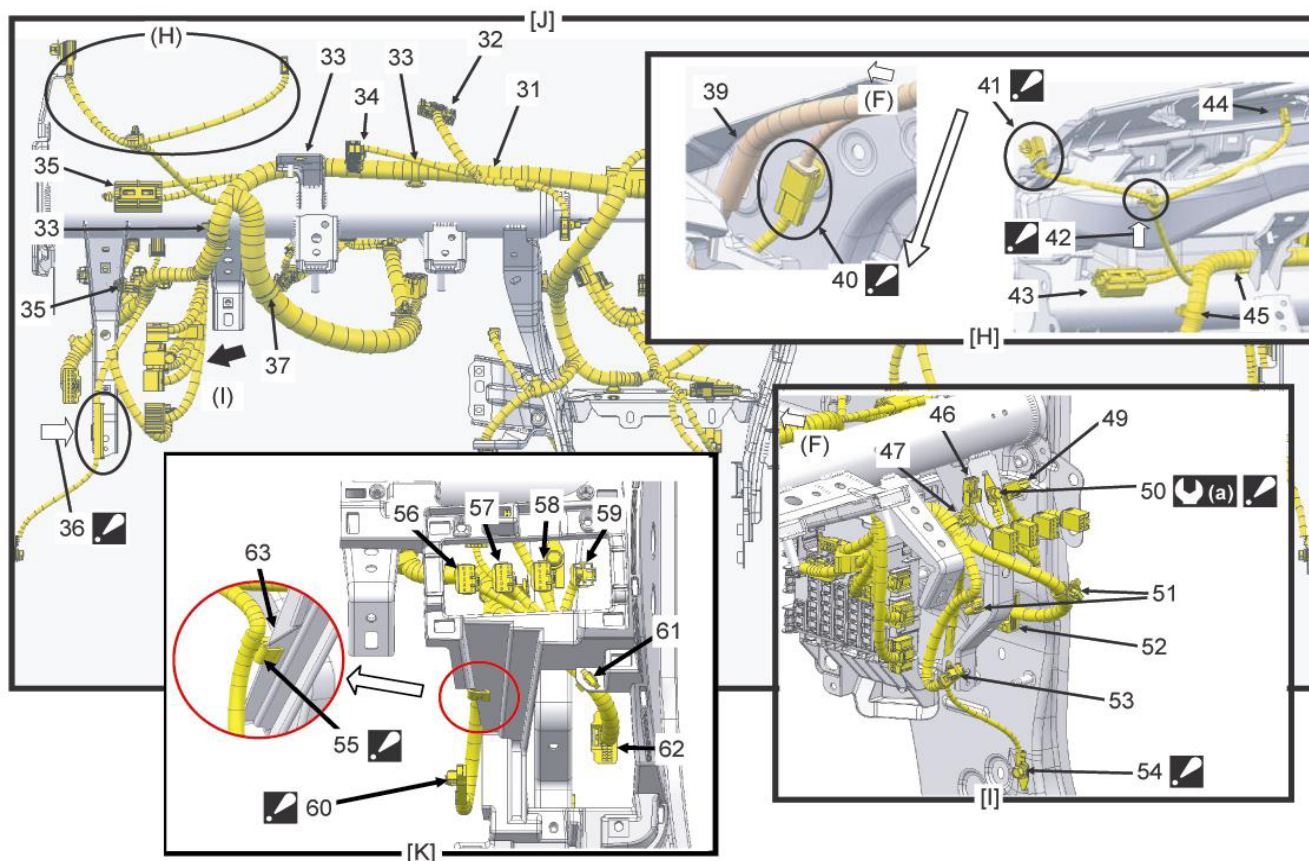

[H]: Detail (H) Front view	46. Keyless receiver (Only keyless model)
[I]: View (I)	47. Clamp
[J]: Front view	49. Push start switch (White) (Only push start system)
[K]: Around option switch (RHD) Back view	50. Instrument panel member ground bolt Confirm that the earth terminals do not move after tightening bolts.
(F): Front	(a) : 7.0 to 10.5 N·m (0.71kgf-m to 1.1kgf-m, 5.5lbt-ft to 8.0lbt-ft)
31. Instrument panel harness	51. Clamp
32. Speedmeter	52. BCM (Gray)
33. Clamp	53. Driver knee inflator
34. EPS controller	54. Ground bolt Set the terminal to the hole, and tighten the bolt. Confirm that the earth terminals do not move after tightening bolts.

Reassembling Note for Wiring Harness

3/3

Around Instrument Panel

RHD model (Inside dash panel)

35. Clamp	 55. Clamp Fit the clamp to the rib.
 36. Clamp Clamp the harness from the outboard side.	56. TCSS off switch / Sonar and ESP off switch (Brown)
37. Clamp	57. ENG A-STOP OFF switch (White)
39. Dome lamp wire	58. Front fog light switch (Green)
 40. To roof wire Joint the connector and set the connector after assembling the instrument panel. Clamp the connector even if the opposite connector is not available.	59. Headlight leveling switch (Black)
 41. To roof wire Set the connector to the instrument panel main body.	 60. Driver knee inflator Joint the connector and set the connector after assembling the instrument panel.
 42. Clamp Set the clamp from the bottom side.	61. Clamp
43. Clamp	62. BCM (Gray)
44. Sunlight sensor (Only auto A/C)	63. Rib
45. Clamp	