


Reassembling Note for Wiring Harness

1/3

Around Instrument Panel

LHD model (Inside dash panel)

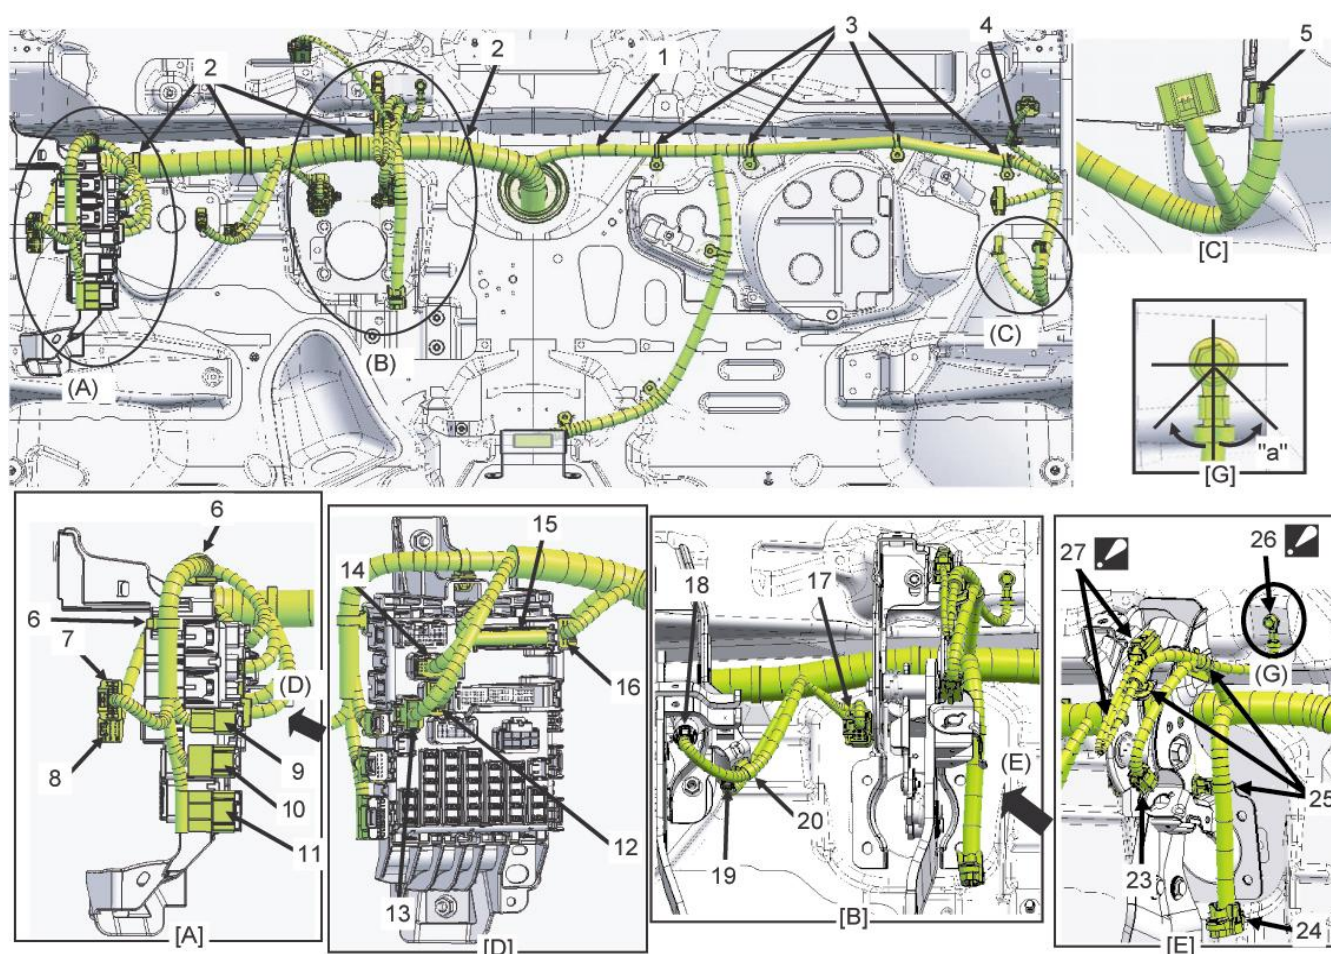


[A]: Detail (A)	11. Instrument panel harness (Gray)
[B]: Detail (B)	12. J/B main #1
[C]: Detail (C)	13. J/B main #2
[D]: View (D)	14. J/B main #3
[E]: View (E)	15. J/B main #4, 5
[G]: Detail (G)	16. Floor harness
1. Main harness	17. J/C
2. Clamp	18. Clutch switch
3. Clamp	19. Clutch start switch
4. Clamp	20. Clamp
5. BCM No.2 (With push start system)	23. Stop lamp switch
6. Clamp	24. Accelerator sensor
7. BCM (Without push start system)	25. Clamp
8. BCM No.1 (With push start system)	26. Confirm that the earth terminals do not move after tightening bolts.
9. Instrument panel harness (Yellow)	"a". $\pm 45^\circ$
10. Instrument panel harness (Natural)	27. Push the wires downward fully to avoid pinching the EPS wire when instrument panel installation.

Reassembling Note for Wiring Harness

2/3

Around Instrument Panel

LHD model (Inside dash panel)

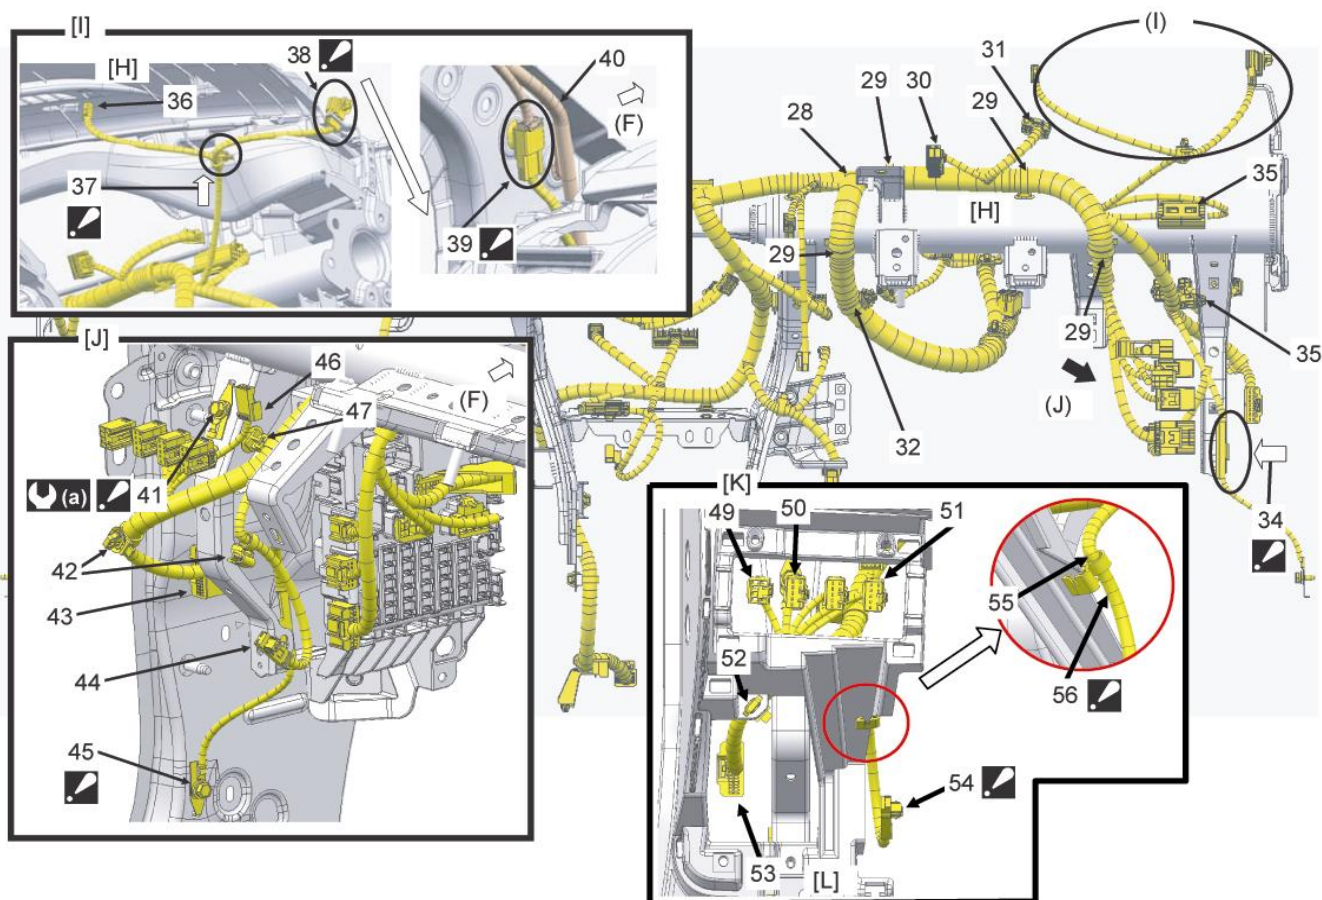

[H]: Front view	41. Instrument panel member ground bolt Set the terminal to the hole, and tighten the bolt. Confirm that the earth terminals do not move after tightening bolts.
[I]: Detail (I)	(a) : 7.0 to 10.5 N·m (0.71kgf-m to 1.1kgf-m, 5.5lbt-ft to 8.0lbt-ft)
[J]: View (J)	42. Clamp
[K]: Around option switch	43. BCM
[L]: Back view	44. Driver knee inflator
28. Instrument panel harness	45. Ground bolt Set the terminal to the hole, and tighten the bolt. Confirm that the earth terminals do not move after tightening bolts.
29. Clamp	46. Keyless receiver (Only keyless model)
30. EPS controller	47. Clamp
31. Speedmeter	49. Headlight leveling switch
32. Clamp	50. Front fog light switch
34. Clamp Clamp the harness from the outboard side.	51. TCSS off switch / Sonar and ESP off switch
35. Clamp	52. Clamp
36. Sunlight sensor (Only automatic A/C)	53. BCM
37. Clamp Clamp the harness from the bottom side.	54. Driver knee inflator Joint the connector after clamping the harness to the instrument panel main body.

Reassembling Note for Wiring Harness

3/3

Around Instrument Panel

LHD model (Inside dash panel)

 38. To roof wire Set the connector to the instrument panel main body.	55. Rib
 39. To roof wire Joint the connector and set the connector after assembling the instrument panel. Clamp the connector even if the opposite connector is not available.	 56. Clamp Fit the clamp to the rib.
40. Dome lamp wire	(F): Front