


ES32C14 14CH ESP32 Multi-function Expansion Board

Note: Vo1/Io1, Vo2/Io2 are multiplexed output ports, only one of them can be enabled (selected by SW1 dip switch)

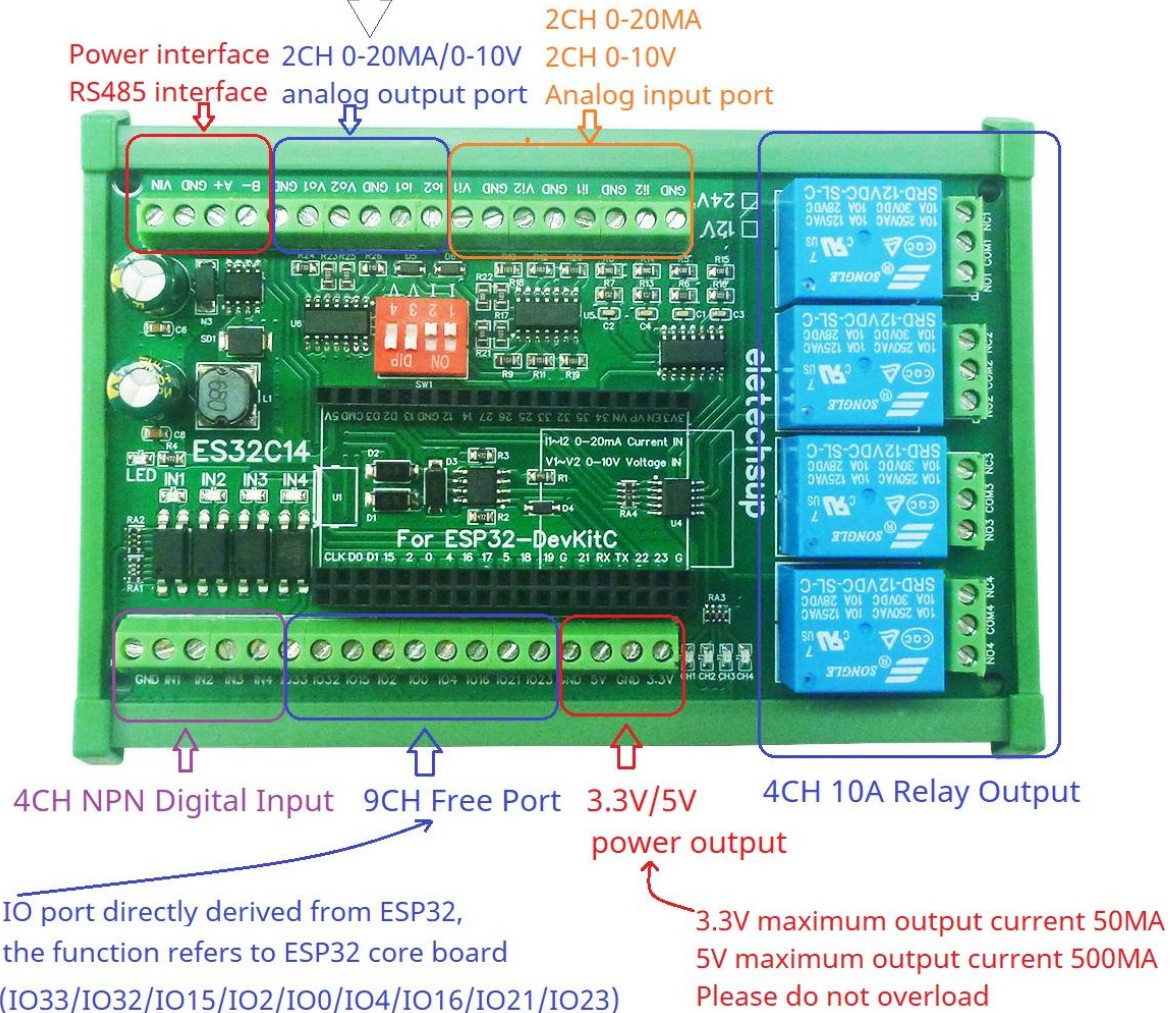

Product Features:

1 Operating voltage: DC 12V/DC 24V

2 Operating Current : Standby current (Digital tube OFF) 14MA, Standby current 51MA (Digital tube ON), 1 relay open 76MA, 2 relays open 107MA, 3 relays open 133MA, 4 relays open 166MA

3 On-board resources: 1x RS485 Interface 4x opto-isolated inputs (low level trigger, NPN type), 2x 0/4-20MA Current Input, 2x 0-5V/10V Voltage Input, 2x 0-5V/10V Voltage Output (OR 2x 0/4-20MA Current Output), 1x ESP32 slots, 4x relay outputs

4 size 121*72*19mm(Only Board)

5 Weight : 94g(Only Board), 185g(with shell)

As long as you write ESP32 code, You can use it to achieve a variety of delay timer function, such as:

WIFI remote control switch

WIFI Current and voltage collection

RS485 Master-Slave Device(PLC MCU),

2x 0-5V/10V Voltage Output(OR 2x 0/4-20MA Current Output)

2x 0/4-20MA Current Collection,

2x 0-5V/10V Voltage Collection,

Motor forward and reverse,

Timing on,

Timing off,

Power-up delay,

Trigger delay,

Infinite loop delay,

A finite number of cyclic delays,

Power sequencer,


And so on.

This is an expansion board based on 38PIN ESP32. We only provide some codes for testing the hardware. More codes and functions need to be developed by yourself.


If you need more functionality, write your own code. We do not provide additional code and technical support



Note: ES32C14 can not work independently, must be under the control of the 38PIN ESP32 board to work, If you do not have a 38PIN ESP32 board, purchase it separately or purchase a kit with 38PIN ESP32

ES32C14 Board Port	Expansion	ESP32 Core Board Pin
Vo1-Vo2(0-10V AO)		I025-I026
Io1-Io2(0-20MA AO)		I025-I026
Vi1-Vi2(0-10V AI)		I036/I039
Ii1-Ii2(0-20MA AI)		I034/I035
IN1-IN4(NPN DI)		I019/I018/I05/I017
CH1-CH4(Relay DO)		I027/I014/I012/I013
Free Port		I033/I032/I015/I02/I00/I04/I016/I021/I023
RS485 Port		I01/I03/I022

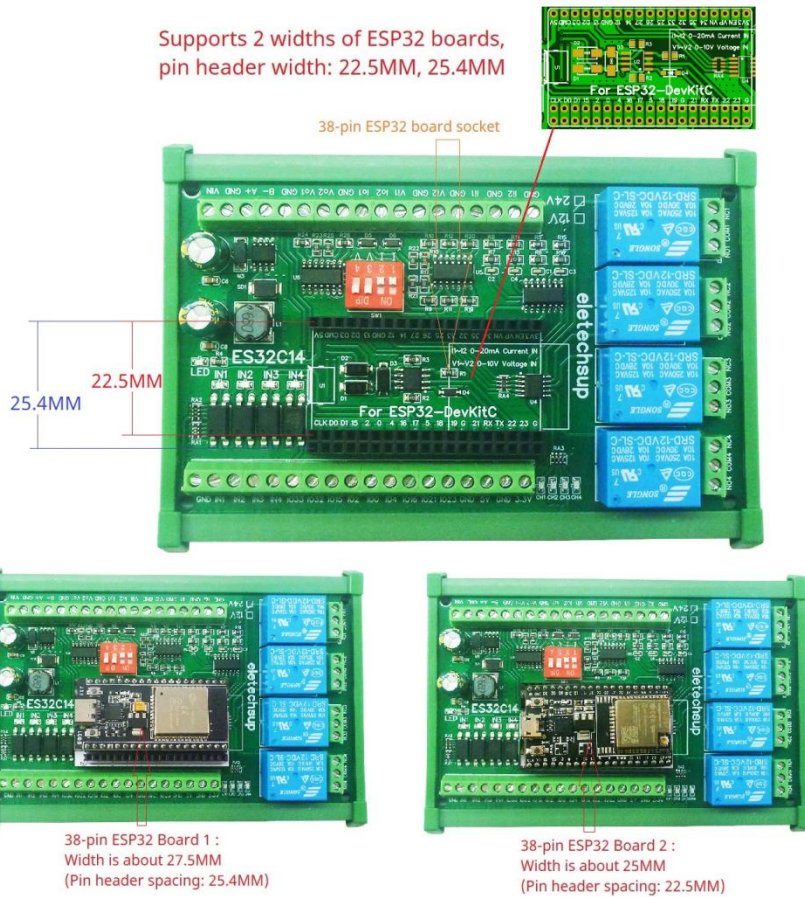

Wiring Diagram

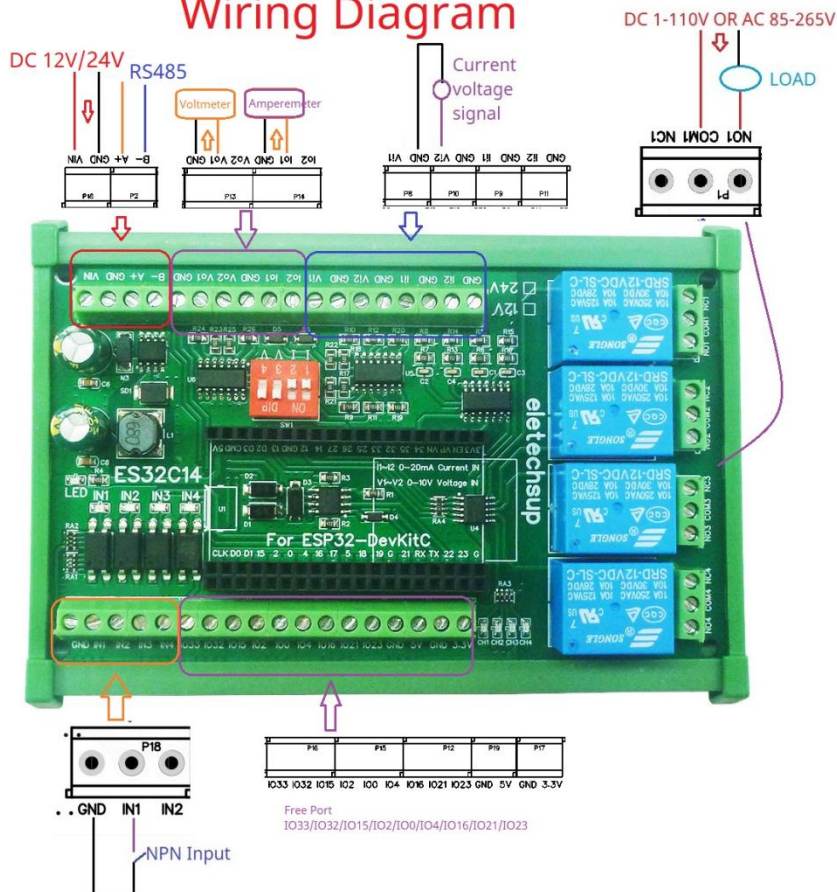


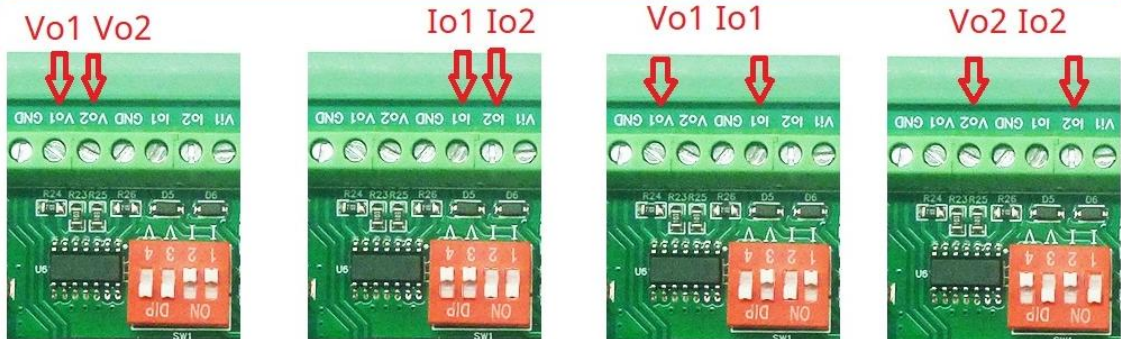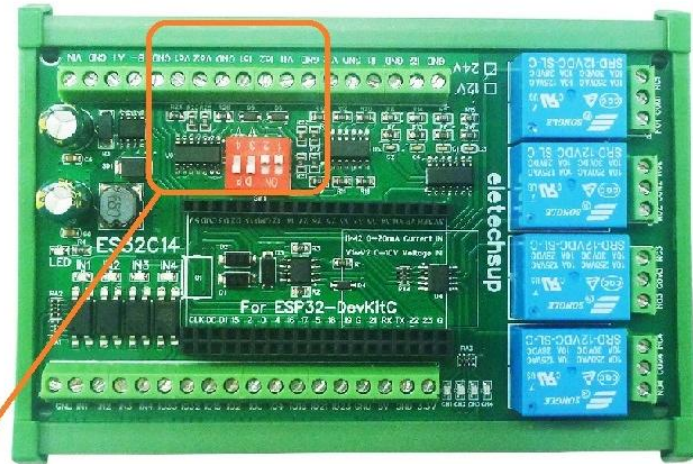

Vo1/Io1, Vo2/Io2 are multiplexed output ports,
only one of them can be enabled (selected by SW1 dip switch)

Note: Vo1/Io1, Vo2/Io2 are multiplexed output ports, only one of them can be enabled (selected by SW1 dip switch)


Effect of inserting ESP32 core board

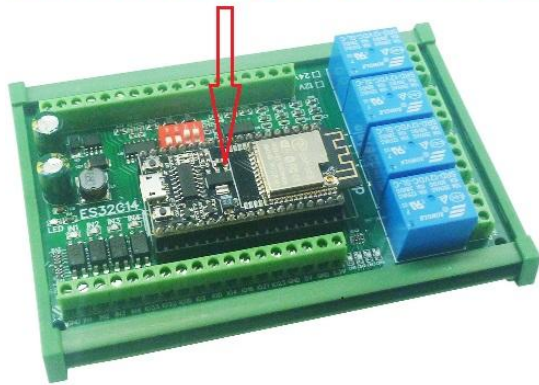

With DIN Box version



Only board version

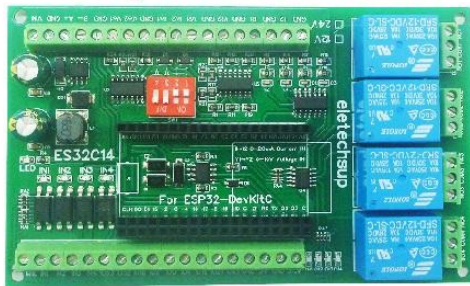

DIN Rail Box

