


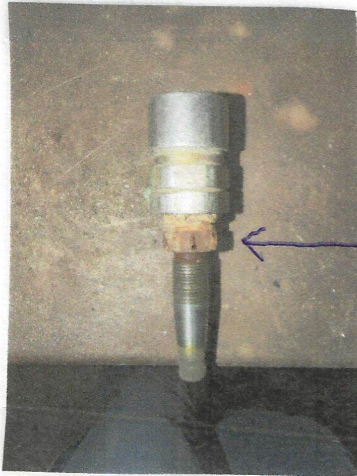

Male Fitting

Wrench goes here
Typically 11/16
Sometimes 5/8 or 3/4



Female Fitting

Wrench goes here
Typically 11/16
Sometimes 5/8 or 3/4



Double check O-ring
installed correctly



"Shoulder" fitting

Wrench goes here
(7/8 in)

High Pressure (Prep) Line Maintenance

Identifying damage:

Always place blue tape over the hole or bad fitting to allow for efficient repair/replacement of the lines.

If you are unsure if a hose is damaged or if there might be more, unmarked damage; test the hose.

What is worth repairing?

If a hose will be shorter than 6ft once repaired; the hose section should be thrown away after the removal of all fittings.

If a hose will be over 6ft once repaired it is of serviceable length and shall be repaired.

Tools involved:

ALWAYS wear safety goggles when operating the angle grinder!

The angle grinder is used to cut long, damaged hose into undamaged shorter sections.

The male and female HP fittings typically require a 11/16th wrench. The occasional 3/4 or 5/8 wrench will be required.

The shoulder fittings always require a 7/8th wrench.

The metal pick with a painted green handle in Shane's personal tools will help get old hose sections out of shoulder fittings.

General guidelines:

The fittings taken off of bad hoses should be inspected for any bad/loose/missing o-rings and any old hose stuck in the shoulder should be removed.

Hoses should have one male and one female fitting on either end.

The shoulder is threaded onto the fresh cut end of the line with a "lefty tighty"/counterclockwise rotation. It is on tight when the cut end of the hose visibly reaches the interior neck of the shoulder.

Repair/replace process:

Decide if the hose will be over/under 6ft after any repairs.

If the hose will be too short, start by placing one shoulder in the vice, taking a wrench and "lefty loosey" take the male/female fittings off. Once the fitting is off, pinch the hose in the vice and "righty loosey" take the shoulder fitting off with a wrench. Clean any rubber hose residue out of the shoulder fitting. Repeat on the other side of the hose. Throw away the short section of hose and place all fittings into the fitting box.

If the hose can be cut into a 6ft+ section(s), start by placing the section of hose with the hole into the vice. Cut 3+ inches above the hole using the angle grinder (wear safety glasses!). Once the bad sections of hose are cut away; grab a shoulder fitting & thread it onto the fresh cut end of the line with a "lefty tighty"/counterclockwise rotation. It is on tight when the cut end of the hose visibly reaches the interior neck of the shoulder. After the shoulder fitting is secured to the fresh cut end of a line, select the appropriate male/female fitting and apply a single drop of oil to the threads of the fitting. Secure the shouldered end into the vice. Using a wrench of appropriate size, tighten "righty tighty"/clockwise/normal, until flush with the shoulder.

Test all hoses after repairs to ensure quality and address any issues discovered.

Reference Sheet on back! (Flipover!!)