



University of British Columbia  
Electrical and Computer Engineering  
ELEC291/ELEC292

## Project 1 – Reflow Oven Controller

Dr. Jesús Calviño-Fraga P.Eng.

Department of Electrical and Computer Engineering, UBC

Office: KAIS 3024

E-mail: jesusc@ece.ubc.ca

Phone: (604)-827-5387

January 26, 2018

Project 1 - Oven Controller

1

© Jesús Calviño-Fraga, 2009-2018. Not to be copied, used, or revised without explicit written permission from the copyright owner.

## Objectives

- Learn about reflow soldering thermal profiles.
- Understand the steps used in the assembling of PCBs with SMT components.
- Understand the components of a reflow oven controller.
- Measure temperature using a thermocouple.
- Control and AC load using a Solid State Relay.


Project 1 - Oven Controller

2

© Jesús Calviño-Fraga, 2009-2018. Not to be copied, used, or revised without explicit written permission from the copyright owner.

# Reflow Soldering Profile

[http://en.wikipedia.org/wiki/Reflow\\_soldering](http://en.wikipedia.org/wiki/Reflow_soldering)

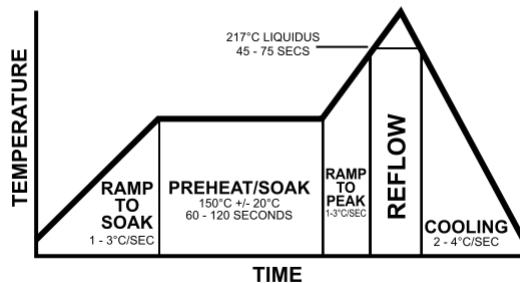


Project 1 - Oven Controller

3

© Jesús Calvino-Fraga, 2009-2018. Not to be copied, used, or revised without explicit written permission from the copyright owner.

# Solder Paste Profile (SAC305)

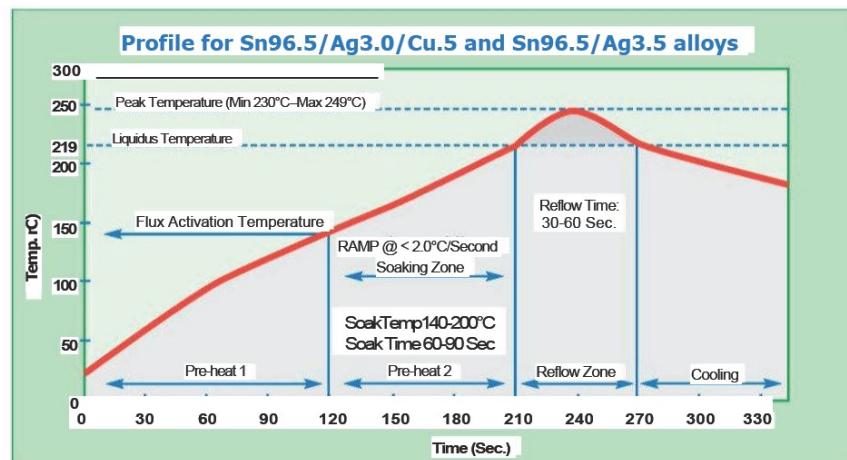


Project 1 - Oven Controller

4

© Jesús Calvino-Fraga, 2009-2018. Not to be copied, used, or revised without explicit written permission from the copyright owner.

## SMT Component Thermal Profile

Figure is from LTC6655 datasheet

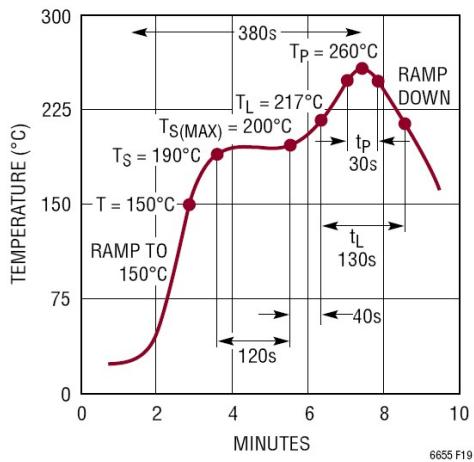


Project 1 - Oven Controller

5

© Jesús Calvino-Fraga, 2009-2018. Not to be copied, used, or revised without explicit written permission from the copyright owner.

## My tests thermal profile

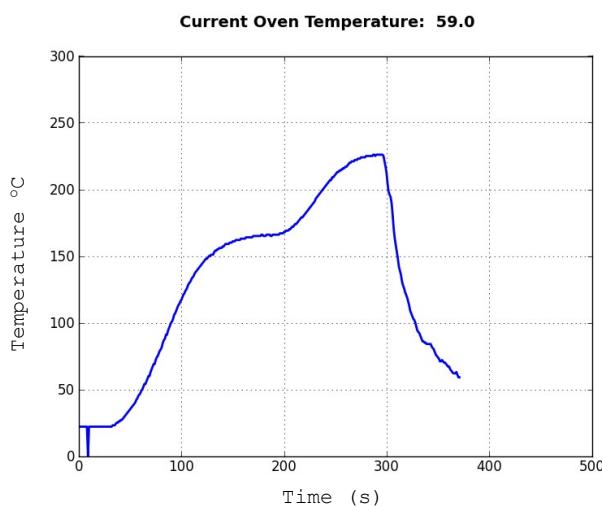

Project 1 - Oven Controller

6

© Jesús Calvino-Fraga, 2009-2018. Not to be copied, used, or revised without explicit written permission from the copyright owner.

## Warnings:

- Don't let your reflow time be more than 45s or the silk screen may darken.
- Don't let your reflow max temperature climb over 235 °C or your PCB may burn: lots of smelly smoke!

Project 1 - Oven Controller

7

© Jesús Calvino-Fraga, 2009-2018. Not to be copied, used, or revised without explicit written permission from the copyright owner.

## PCB Burnt in Reflow Oven



Project 1 - Oven Controller

8

© Jesús Calvino-Fraga, 2009-2018. Not to be copied, used, or revised without explicit written permission from the copyright owner.

## Steps Assembling a PCB with SMT components.

- Step 1: Apply solder paste to the PCB. You will use a Mylar stencil. (I personally believe this is the most critical step in the whole process!)
- Step 2: Place the SMT components into the PCB.
- Step 3: Reflow soldering. You will be using a toaster oven with a controller of your own design.
- Step 4: Hand soldering of TH (thru hole) components.

Project 1 - Oven Controller

9

© Jesús Calvino-Fraga, 2009-2018. Not to be copied, used, or revised without explicit written permission from the copyright owner.

## Steps Assembling a PCB with SMT components.

- Video 1 shows how I applied solder paste and placed the components by hand using tweezers.  
[http://courses.ece.ubc.ca/281/2017/Paste\\_and\\_Components\\_Slow.mp4](http://courses.ece.ubc.ca/281/2017/Paste_and_Components_Slow.mp4)  
[http://courses.ece.ubc.ca/281/2017/Paste\\_and\\_Components\\_Fast.mp4](http://courses.ece.ubc.ca/281/2017/Paste_and_Components_Fast.mp4)
- Video 2 Shows how I cleaned the stencil  
<http://courses.ece.ubc.ca/281/2017/Cleaning.mp4>
- Video 3 shows how I reflow soldered the SMT components using a toaster oven.  
<http://courses.ece.ubc.ca/281/2017/Reflow.mp4>
- Video 4 shows how to remove a solder bridge  
[http://courses.ece.ubc.ca/281/2017/Bridge\\_removal\\_horizontal.mp4](http://courses.ece.ubc.ca/281/2017/Bridge_removal_horizontal.mp4)
- Video 5 shows how I soldered the TH components.  
[http://courses.ece.ubc.ca/281/2017/Thru\\_hole.mp4](http://courses.ece.ubc.ca/281/2017/Thru_hole.mp4)

Project 1 - Oven Controller

10

© Jesús Calvino-Fraga, 2009-2018. Not to be copied, used, or revised without explicit written permission from the copyright owner.

## Mastering the Tweezers and Loupe, Step 1: find tools and materials




Project 1 - Oven Controller

© Jesús Calvino-Fraga, 2009-2018. Not to be copied, used, or revised without explicit written permission from the copyright owner.

11

## Mastering the Tweezers and Loupe, Step 2: remove seeds!

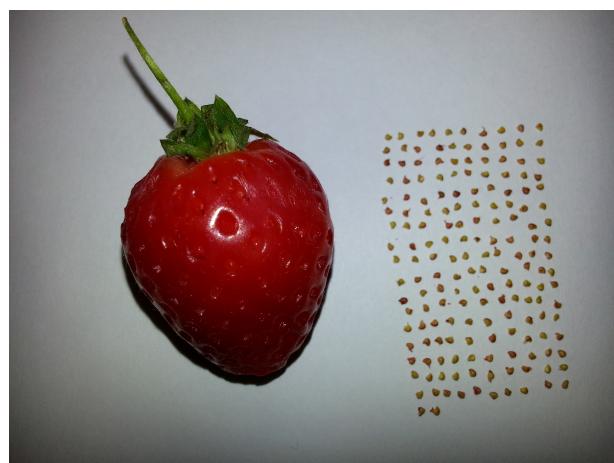

Project 1 - Oven Controller

© Jesús Calvino-Fraga, 2009-2018. Not to be copied, used, or revised without explicit written permission from the copyright owner.

12

## Tweezers Wizard level: Put the seeds back!




Project 1 - Oven Controller

© Jesús Calvino-Fraga, 2009-2018. Not to be copied, used, or revised without explicit written permission from the copyright owner.

13

## Oven Controller Typical Block Diagram

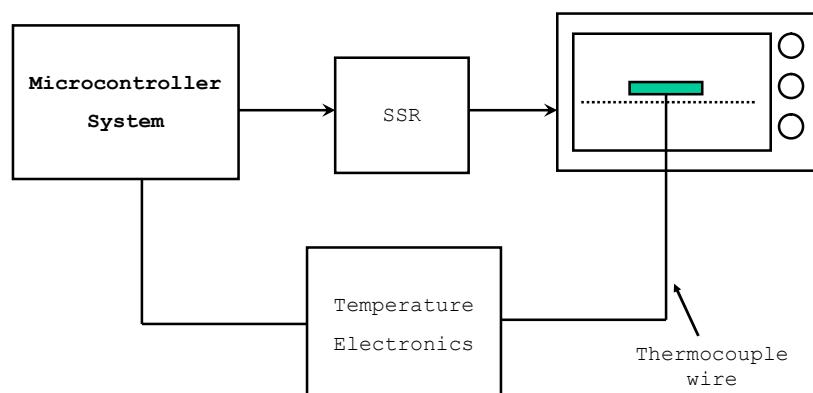

Project 1 - Oven Controller

© Jesús Calvino-Fraga, 2009-2018. Not to be copied, used, or revised without explicit written permission from the copyright owner.

14

## K-Type Thermocouple

- Has two wires: Yellow (+) and Red (-).
- About  $41 \mu\text{V}/^\circ\text{C}$ . You'll need an amplifier!
- Very accurate conversion table provided by the National Institute of Standards and Technology (USA):


[http://srdata.nist.gov/its90/download/type\\_k.tab](http://srdata.nist.gov/its90/download/type_k.tab)

Project 1 - Oven Controller

© Jesús Calvino-Fraga, 2009-2018. Not to be copied, used, or revised without explicit written permission from the copyright owner.

15

## Using a K-type Thermocouple

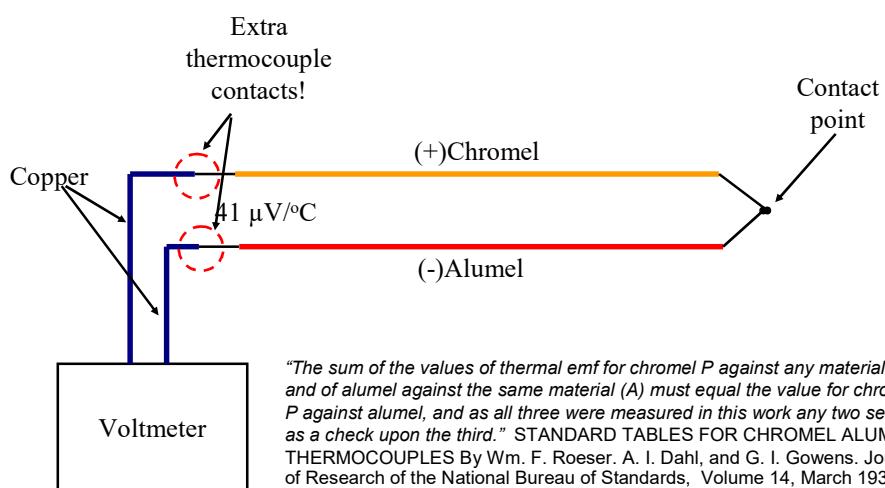

Project 1 - Oven Controller

© Jesús Calvino-Fraga, 2009-2018. Not to be copied, used, or revised without explicit written permission from the copyright owner.

16

# Using a K-type Thermocouple

Temp (C)	Chromel-Platinum (mv)	Alumel-Platinum (mv)	Difference	Chromel-Alumel (mv) Table
0.00	0.00	0.00	0.00	0.00
50.00	1.35	-0.67	2.02	2.02
100.00	2.81	-1.29	4.10	4.10
150.00	4.35	-1.78	6.13	6.13
200.00	5.96	-2.17	8.13	8.13
250.00	7.62	-2.53	10.15	10.15
300.00	9.32	-2.89	12.21	12.21
350.00	11.03	-3.26	14.29	14.29
400.00	12.75	-3.64	16.39	16.39
450.00	14.47	-4.03	18.50	18.50
500.00	16.21	-4.43	20.64	20.64

Tables 3 and 5 of: [http://nvlpubs.nist.gov/nistpubs/ires/14/iresv14n3p239\\_A1b.pdf](http://nvlpubs.nist.gov/nistpubs/ires/14/iresv14n3p239_A1b.pdf)  
STANDARD TABLES FOR CHROMEL ALUMEL THERMOCOUPLES By Wm. F. Roeser.  
A. I. Dahl, and G. I. Gowens. Journal of Research of the National Bureau of Standards,  
Volume 14, March 1935


Project 1 - Oven Controller

17

© Jesús Calvino-Fraga, 2009-2018. Not to be copied, used, or revised without explicit written permission from the copyright owner.

# Using a K-type Thermocouple

Same material contacts  
cancel each other at  
the same temperature

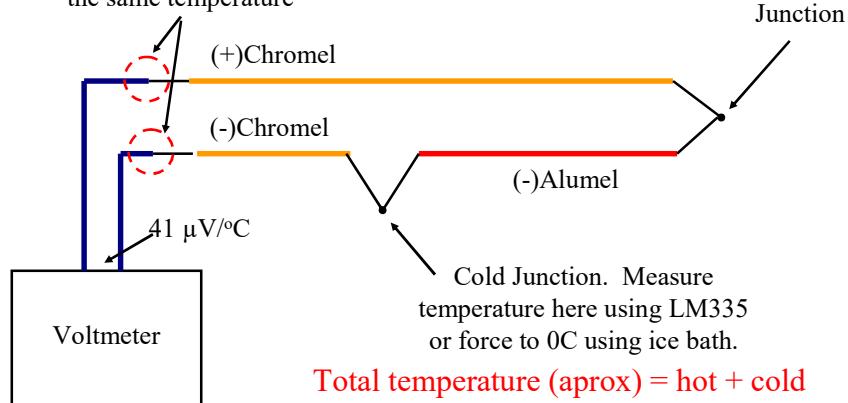

Project 1 - Oven Controller

18

© Jesús Calvino-Fraga, 2009-2018. Not to be copied, used, or revised without explicit written permission from the copyright owner.

## Testing a K-Type Thermocouple in the Laboratory. You'll need:


- Thermocouple wire: included in project kit.
- Voltmeter with micro-volt resolution: Fluke 45 or Tektronix DM4020.
- Ambient temperature in the lab. Most of the time between 20C and 24C. If not measured, use 22C. Or use your LM335!
- USB to serial adapter attached to the multimeter to connect a computer.
- Python 3.x.x and ‘kconvert.py’ and ‘Multimeter\_Temp.pyw’ (you need both files!)

Project 1 - Oven Controller

19

© Jesús Calvino-Fraga, 2009-2018. Not to be copied, used, or revised without explicit written permission from the copyright owner.

## Testing a K-Type Thermocouple in the Laboratory: Setup

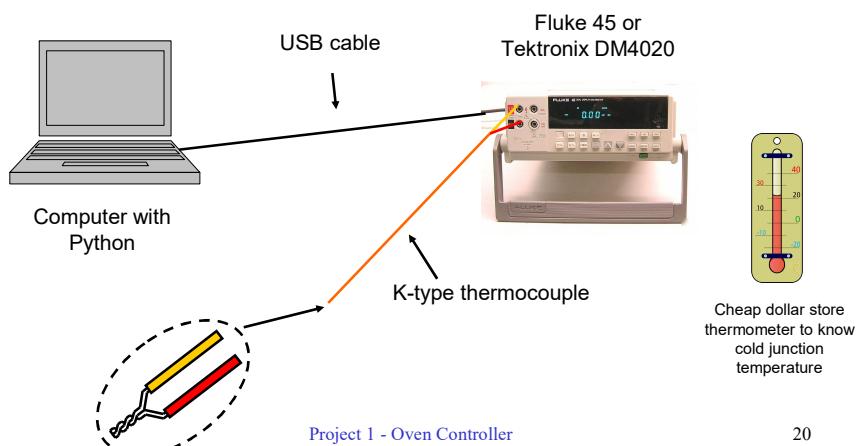

Project 1 - Oven Controller

20

© Jesús Calvino-Fraga, 2009-2018. Not to be copied, used, or revised without explicit written permission from the copyright owner.

## Run ‘Multimeter\_Temp.pyw’



Project 1 - Oven Controller

21

© Jesús Calvino-Fraga, 2009-2018. Not to be copied, used, or revised without explicit written permission from the copyright owner.

## Run ‘Multimeter\_Temp.pyw’




Project 1 - Oven Controller

22

© Jesús Calvino-Fraga, 2009-2018. Not to be copied, used, or revised without explicit written permission from the copyright owner.

## Amplifying the Thermocouple Voltage

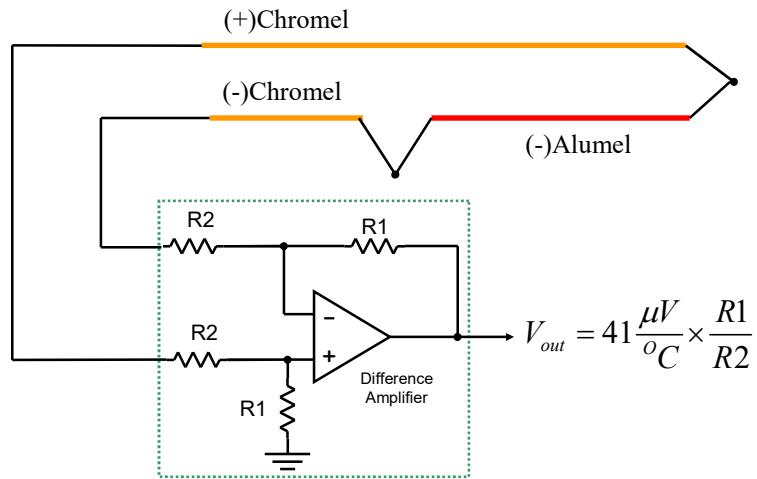


Project 1 - Oven Controller

23

© Jesús Calvino-Fraga, 2009-2018. Not to be copied, used, or revised without explicit written permission from the copyright owner.

## Making the Junctions

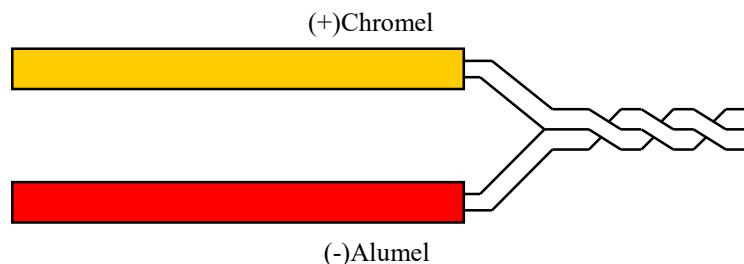


Project 1 - Oven Controller

24

© Jesús Calvino-Fraga, 2009-2018. Not to be copied, used, or revised without explicit written permission from the copyright owner.

## Good Reference: Microchip AN844

FIGURE 4: HOT OR COLD ONLY MEASUREMENT

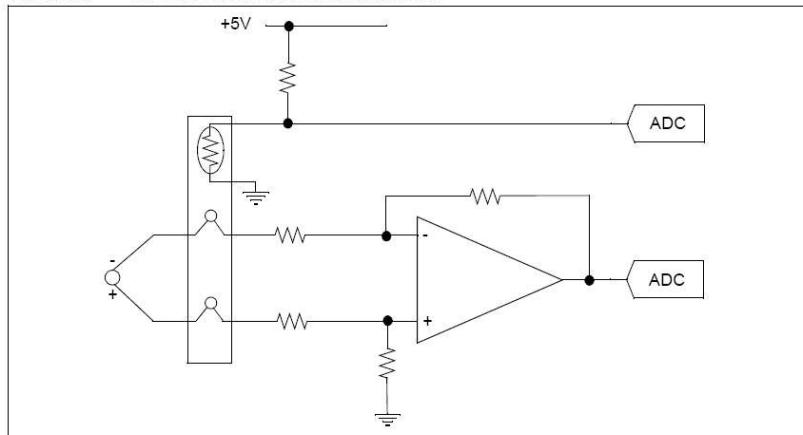

Project 1 - Oven Controller

25

© Jesús Calvino-Fraga, 2009-2018. Not to be copied, used, or revised without explicit written permission from the copyright owner.

## Opamp

- Must have very small input offset voltage, or offset null circuit.
- The OP07 provided in the microcontroller kit has a typical offset voltage of  $50\mu V$ . Sometimes is  $200\mu V$ ! The offset can be null using a potentiometer.
- The OP07 needs dual power supplies, for example +5V and -5V. LMC7660 (or equivalent, included in the microcontroller kit) can be used to produce -5V from +5V.
- Choose the gain carefully! The OP07 will saturate at a voltage below +V.

Project 1 - Oven Controller

26

© Jesús Calvino-Fraga, 2009-2018. Not to be copied, used, or revised without explicit written permission from the copyright owner.

## Temperature Validation Data

- Use the lab multimeter to validate your controller temperature measurements.
- Max acceptable error  $\pm 3^\circ\text{C}$  for the range  $25^\circ\text{C}$  to  $235^\circ\text{C}$ .
- You must include the procedure and the data in the project report. Have it handy for the project demonstration!

## Example of controller temperature differences (compared to Fluke 45)

20C **????, ????, ????**, +0.7, +0.8, +1.1, +1.4, +1.4, +1.2, +1.3  
30C +1.3, +1.6, +1.0, +0.0, +0.2, +0.0, +0.3, +0.4, +0.9, +0.4  
40C +0.2, +0.2, +0.2, **????**, +0.3, +0.0, +0.1, +0.1, +0.2, +0.1  
50C +0.0, +0.1, +0.0, -0.3, +0.2, +0.5, +0.5, +0.4, +0.6, +0.7  
60C +0.6, +0.9, +0.7, +0.7, +0.7, +0.7, +0.3, +0.7, +0.2, +0.4  
70C +0.3, +0.1, +0.4, +0.2, +0.8, +0.4, +0.6, +0.5, +0.2, +0.4  
80C +0.0, +0.1, +0.1, +0.3, +0.1, +0.2, +0.0, -0.1, -0.2, +0.6  
90C +0.8, +0.3, -0.7, +0.0, +0.4, +0.1, -0.2, +0.0, +0.0, -0.9  
100C -0.5, -0.2, -0.1, -0.3, -0.5, +0.1, +0.4, +0.1, +0.6, +0.3  
110C **????**, +0.4, -0.4, +0.2, +0.9, +0.8, -0.3, -0.2, +0.4, -0.6  
120C +0.5, -0.2, +1.7, +0.5, +0.1, +0.3, -0.2, -0.1, -0.1, +0.3  
130C +0.2, +0.9, +0.6, +0.3, -0.6, +0.2, +0.6, +0.5, +0.6, +1.3  
140C +1.0, +0.6, +1.2, +1.3, +0.5, +0.4, +0.9, +0.3, +0.5, +0.6  
150C +0.0, +0.8, +0.4, +0.4, +1.1, +1.2, +1.0, +1.3, +1.2, +1.1  
160C +1.0, +1.7, +1.0, +1.2, +0.3, +0.4, +0.4, +0.3, +1.1, +0.6  
170C +0.6, +1.1, +1.0, +0.9, +0.8, +0.6, +0.6, +0.8, +0.9, +0.9  
180C +0.7, +0.6, **????**, +0.3, +0.8, +1.5, +1.5, +1.5, +1.2  
190C +1.0, +0.5, +1.1, +0.6, +0.5, +0.5, +0.7, +0.6, +0.3, +0.4  
200C +0.9, +0.8, +1.4, +0.6, +0.9, +0.8, +0.3, +0.4, +0.3, +0.9  
210C +0.4, +1.3, +0.3, +0.7, +0.7, +0.4, +0.5, +0.8, +0.9, +0.5  
220C +0.9, +0.6, +0.8, +0.9, **????**, +0.4, +0.5, +0.7, +0.5, +0.4  
230C +0.7, +0.8, +0.2, +0.4, +0.4, +0.9, +0.9, +0.8, +0.8, **????**

# Sources of Error

- The amplifier has too much offset. Solution 1: null the offset using a potentiometer. Solution 2: use an ultra low offset op-amp (for example OP177; expensive!)
- Amplifier resistors mismatch resulting in incorrect gain. Solution 1: use the lab multimeter to select resistor that match. Solution 2: buy 1% or 0.1% tolerance resistors (may be expensive!)
- Incorrect cold junction temperature. Solution 1: adjust the output of the LM335 using a potentiometer. You may need an external thermometer or an ice bath to perform a “one point” calibration of the LM335. Solution 2: buy a low error temperature sensor (may be expensive!)
- Conversion from ADC to voltage gives inaccurate values. Solution 1: measure the “Vref” pin of the ADC using the lab multimeter and use that value in your firmware calculations. Solution 2: buy and use a voltage reference IC (expensive!). Solution 3: use LED voltage to calculate VREF.
- The conversion from voltage to temperature introduces unacceptable errors. Solution 1: tune up your calculations. Solution 2: use a look-up table.

Project 1 - Oven Controller

29

© Jesús Calvino-Fraga, 2009-2018. Not to be copied, used, or revised without explicit written permission from the copyright owner.

# Testing Your Controller with Paper!



Paper measures  
7cm x 2cm


Paper shows reflow  
temperature and  
time

Project 1 - Oven Controller

30

© Jesús Calvino-Fraga, 2009-2018. Not to be copied, used, or revised without explicit written permission from the copyright owner.

## Checking Oven Hot/Cold Spots

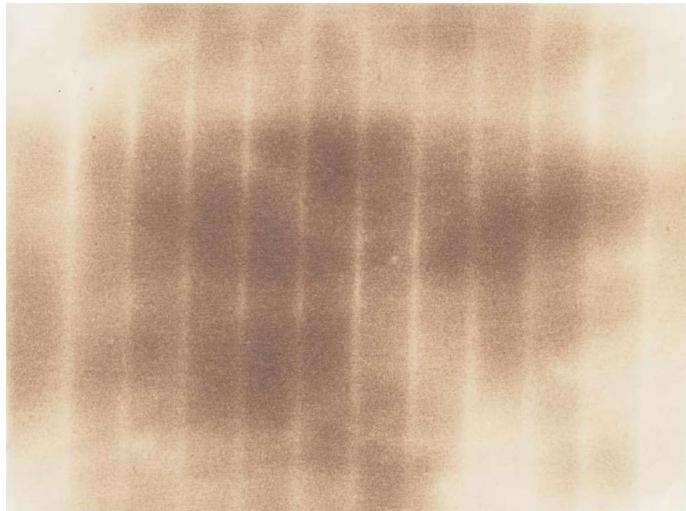

Project 1 - Oven Controller

31

© Jesús Calvino-Fraga, 2009-2018. Not to be copied, used, or revised without explicit written permission from the copyright owner.

## Professionalism

- The first tenant of the code of ethics of professional engineers reads<sup>1</sup>: “*Hold paramount the safety, health and welfare of the public, the protection of the environment and promote health and safety within the workplace*”.
- In the spirit of the above tenant, your reflow oven controller must be designed, built, and tested accordingly.
- Please include in your report any features, designs, procedures, as well as other activities you used to accomplish this requirement.


<sup>1</sup> <https://www.apeg.bc.ca/getmedia/e8d858f5-e175-4536-8834-34a383671c13/APEGBC-Code-of-Ethics.pdf.aspx>

Project 1 - Oven Controller

32

© Jesús Calvino-Fraga, 2009-2018. Not to be copied, used, or revised without explicit written permission from the copyright owner.

## SSR box block diagram

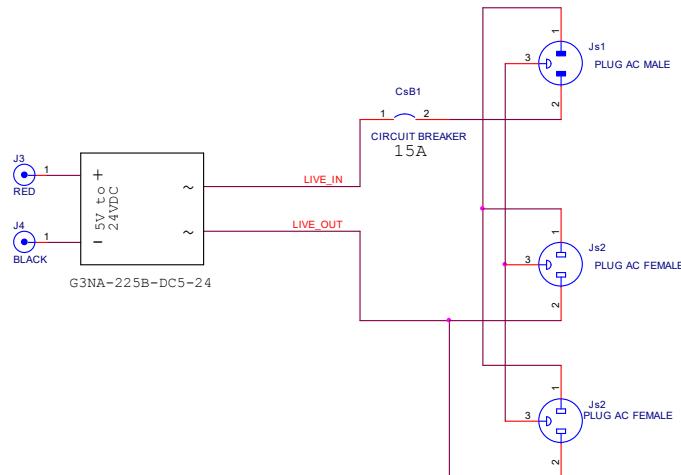


Project 1 - Oven Controller

© Jesús Calvino-Fraga, 2009-2018. Not to be copied, used, or revised without explicit written permission from the copyright owner.

33

## Using a I/O pin to Control SSR Box

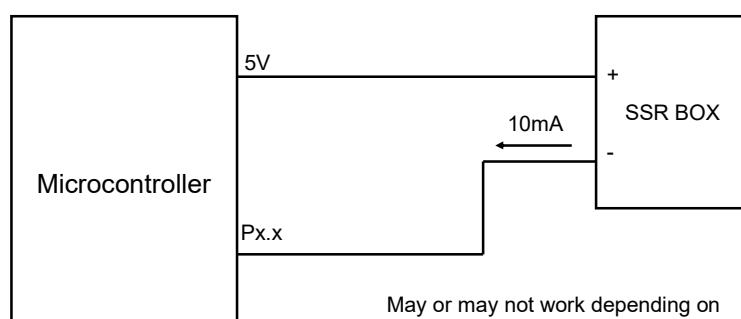


Project 1 - Oven Controller

© Jesús Calvino-Fraga, 2009-2018. Not to be copied, used, or revised without explicit written permission from the copyright owner.

34

## Using a Transistor (more reliable)

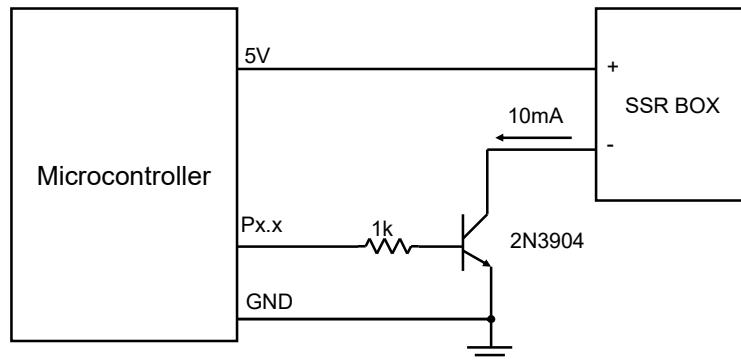

Project 1 - Oven Controller

35

© Jesús Calvino-Fraga, 2009-2018. Not to be copied, used, or revised without explicit written permission from the copyright owner.

## Using the SSR box

- Connect a power cord cable to the male AC connector. The power cord cable must be rated for the type of load to be connected. If the SSR box would be used to power a 1500W toaster oven, the power cord cable must be rated for at least 13A.
- Connect the AC load to one of the available AC plugs.
- Apply a DC voltage from 5V to 24V to the control banana plugs.
- We got the SSR box CSA approved!

Project 1 - Oven Controller

36

© Jesús Calvino-Fraga, 2009-2018. Not to be copied, used, or revised without explicit written permission from the copyright owner.

## Using the SSR box

- Do not operate the SSR box for more than 30 minutes at the maximum rated current of 15A.
- The SSR box is designed for resistive loads only. Do not plug inductive loads (such as motors) to the SSR box.
- Do not operate the SSR box if the ambient temperature is above 40°C.
- The SSR box may become warm to the touch after using it for several minutes at maximum rated capacity. If you suspect that the case temperature is over 40°C discontinue using the SSR box immediately.
- Only apply a DC voltage from 5V to 24V to the control pins. Do not apply negative DC voltages of ANY magnitude.
- Do not disassemble the SSR box.
- If the protection breaker is tripped, find and correct the cause of the fault before resetting the breaker to normal operating mode.