

DRG. No. X3119326

DIMENSIONS IN INCHES/MILLIMETRES UNLESS OTHERWISE STATED

INCOMING SUPPLY
3300V 3 PHASE 50 HZ

NOTES

1. CONNECTIONS 'A' TO BE 12G/0.40 BS.6195/43 BLACK CABLE (56411/128)
2. ALL OTHER CONNECTIONS TO BE 32/0.20 BS.6231/B BLACK CABLE (56410/220)
3. THE WIRING ON ALL DEVICES MUST BE SUCH THAT THE CABLE HAVING THE LOWEST CONTROL NO. MUST BE WIRED TO THE TOP OR L.H. TERMINAL LOOKING AT THE FRONT OF THE DEVICE
4. STROKE NOS. E.G. / 2 SHOW SEQUENCE OF WIRING AND DON'T APPEAR ON EQUIPMENT
5. LETTERS IN BRACKETS E.G. (A1) DENOTE PLUG NOS. TO BE WIRED TO
6. FOR WIRING FROM SOCKET TERMINALS SEE DRG. X3052470
7. FOR HMC 400 'TEST LINK' SEE DRG. X3054250


BUSBAR RATING: 1200 AMPS

TITLE
CONNECTION DIAGRAM FOR HMC400
3300 V 50 HZ STARTER
CONTROL BOARDS MCC4A4B

DRG. No. X3119326

REVISIONS

DATE	REV.	DATE	REV.
15-8-72	8	24-11-70	1
ADD FUSE STUB		ADD APP'D	
ADD ECON. RESISTOR		MOD. PER CUSTOMER	
FOR L.S. CONTR.		WATER 12-11-70	
G.T.YE			
		DATE 21-12-70	REV. 2
		WIRING STROKE NOS	
		AND POSITION 2 TERM	
		ARRG. ADDED	
		DATE 6-1-71	REV. 3
		APP'D	
		TERMINAL INSCRIPTION	
		ON STALLING RELAYS	
		WILL BE CHANGED	
		DATE 31-3-71	REV. 4
		APP'D	
		CT & CT'S TAPS GO	
		HERE SHOWN - USE	
		BOA - AMMETER SCALE	
		IS NOW 0-80/480	

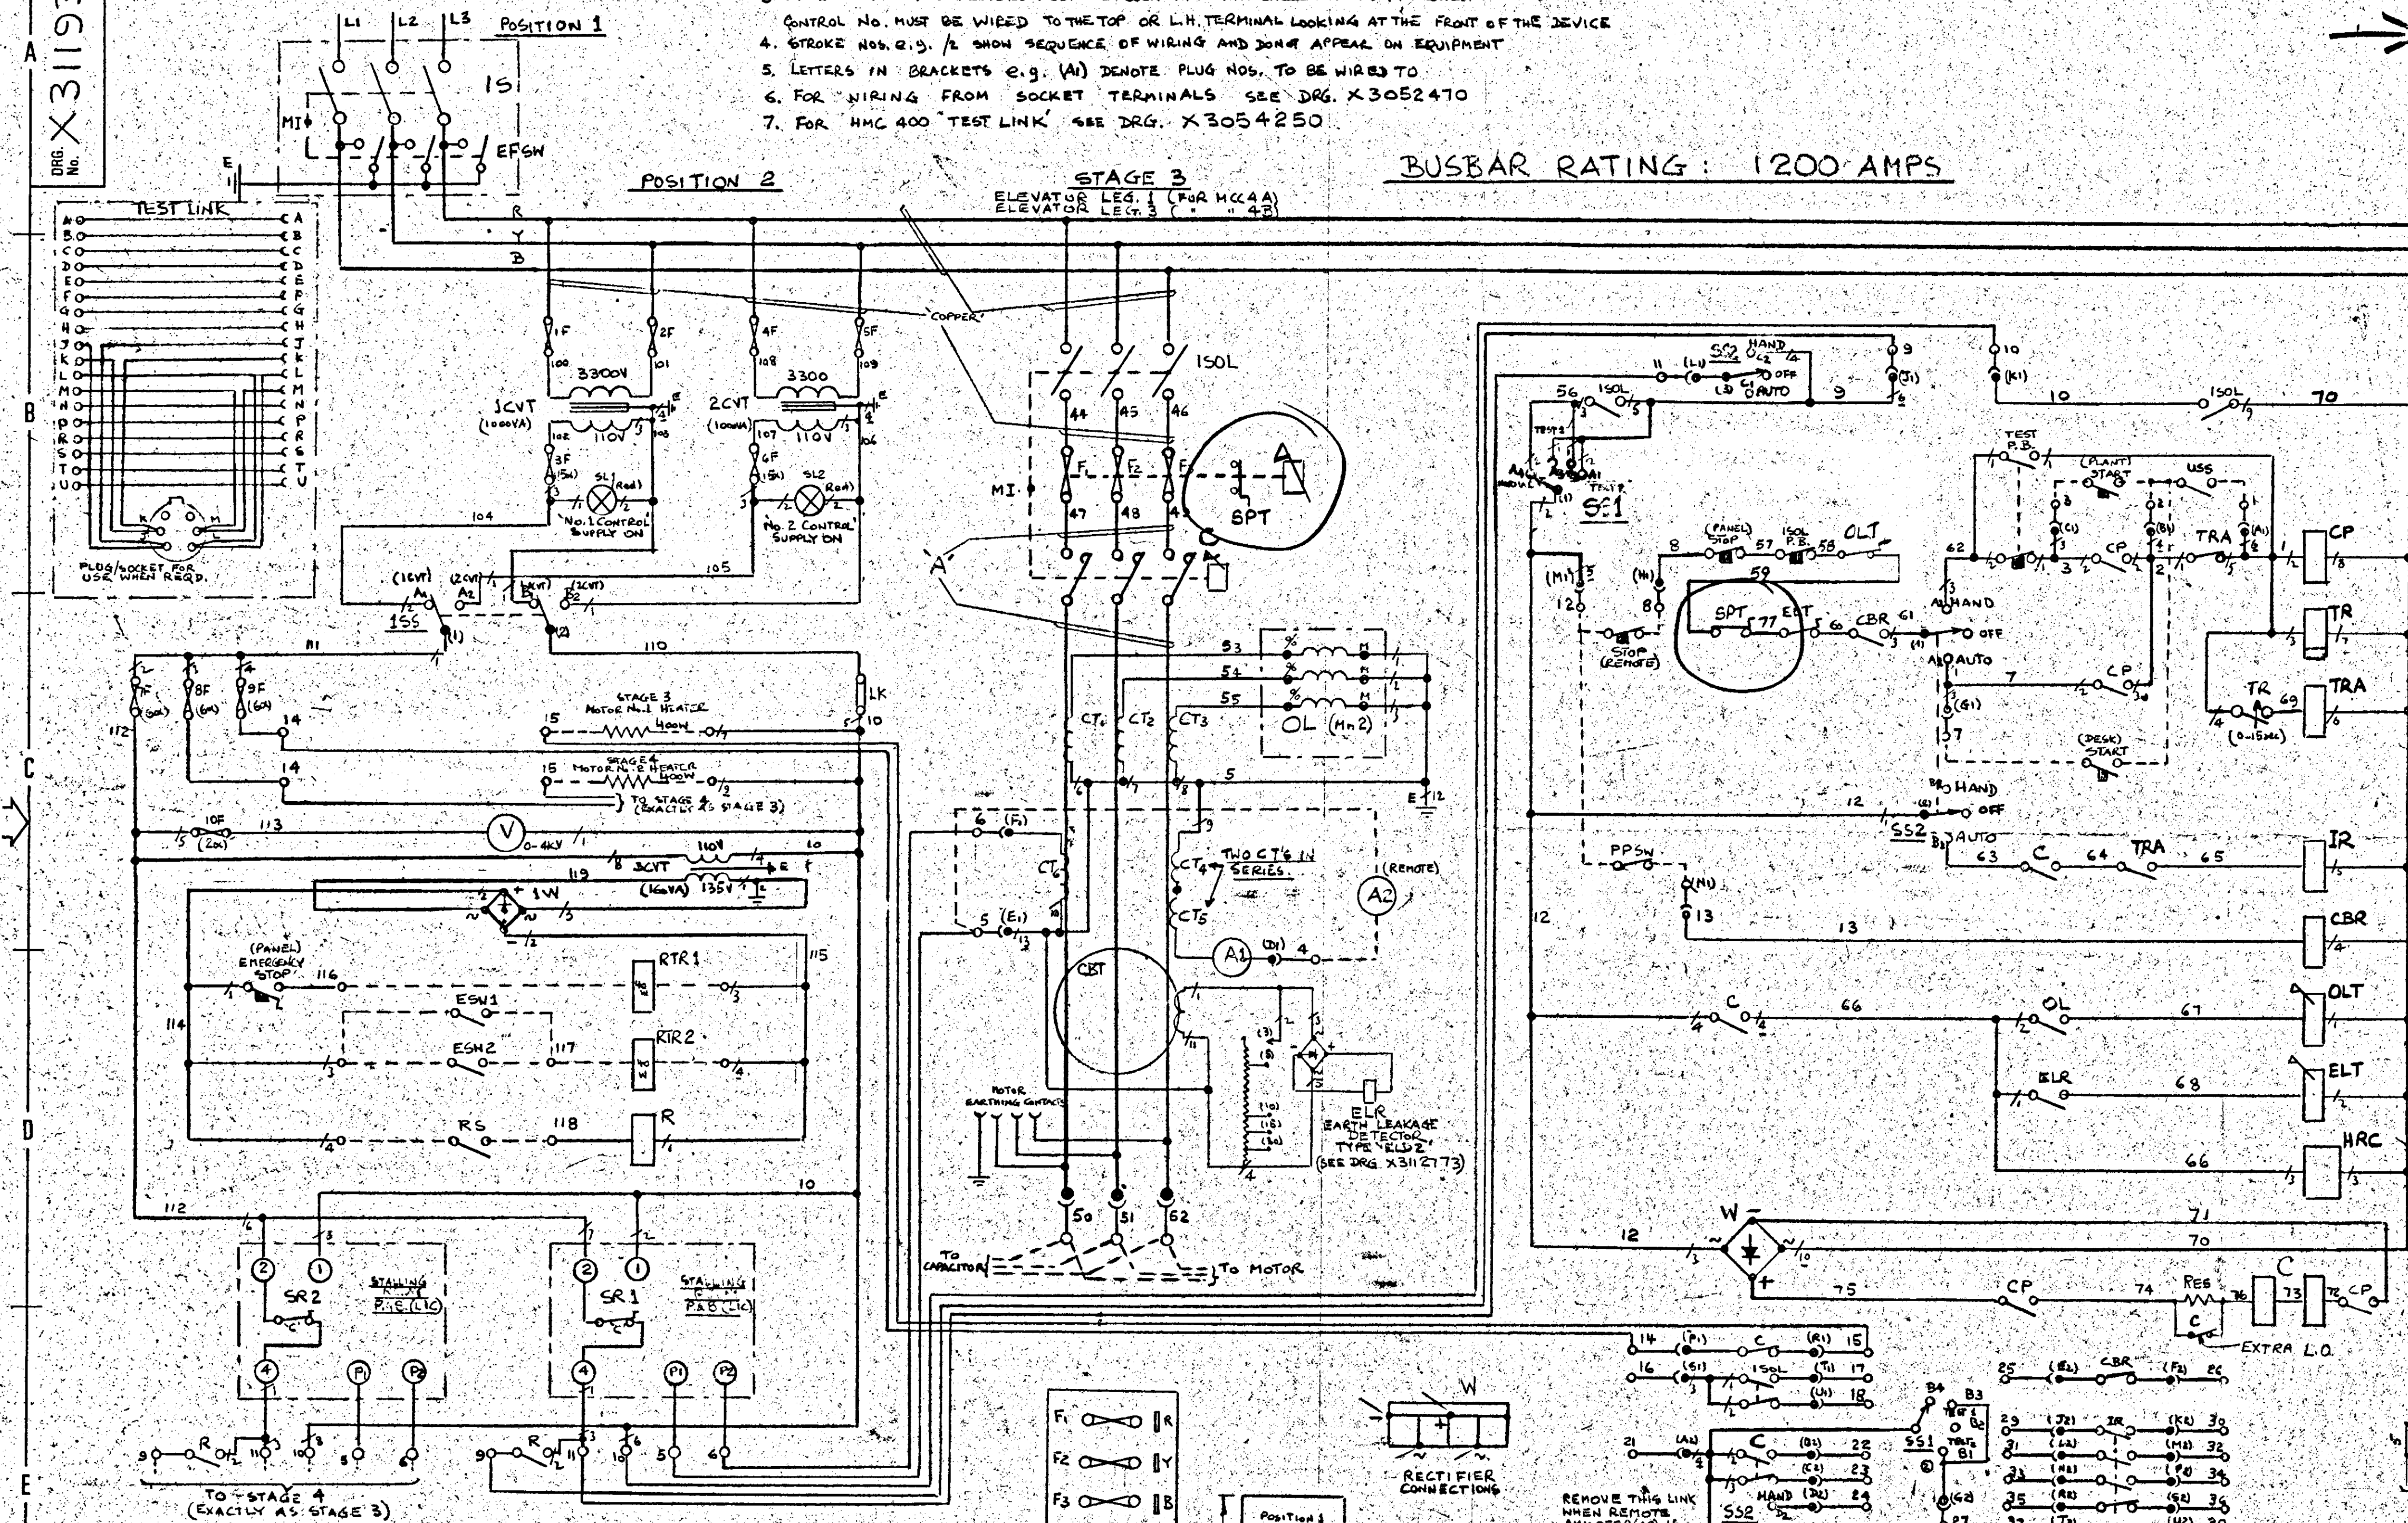


SYMBOL	DESCRIPTION
A	AMMETER
C	CONTACTOR (VDSAD 300)
CBT	CHUTE BLOCK RELAY
CT	CONTROL TRANSFORMER
CT	CURRENT TRANSFORMER
CT	CONTROL VOLTAGE TRANSFORMER
E	EARTH
ESW	EARTHING SWITCH
ELR	EARTH LEAKAGE RELAY
ELT	EARTH LEAKAGE TRIP RELAY (LATCHED)
F	FUSE
HRC	HOURS RUN COUNTER
IS	MAIN ISOLATOR (600A LOAD BREAK)
ISOL	ISOLATOR (400 AMPS 'OFF' LOAD)
IR	INTERLOCK RELAY
LK	LINK
MI	MECHANICAL INTERLOCK
OL	OVERLOAD RELAY
OLT	OVERLOAD TRIP RELAY (LATCHED)
PPSW	PUSH BUTTON PRESSURE PAD SWITCH
RTR	REMOTE TRIP RELAY
RS	RELAY
SL	SIGNAL LAMP
SS	SELECTOR SWITCH (STAGE 3)
SR	STALLING RELAY (FOR STAGE 4)
TRA	TIMING RELAY
W	WOLMETER
USS	UNDER SPEED SWITCH
RES	ECONOMY RESISTOR

(SEE ARV FOR REV. 8)

DATE	REV.	DATE	REV.
15-6-71	7	3-5-71	5
APP'D		APP'D	
REMOVE WIRE 9		SS1 TEST/STALLING	
BETWEEN ISOL &		WIRING TO REMOTE	
SS2 SWITCH		TERMINAL (27)	
		PER CUSTOMER	

— TERMINAL ARRANGEMENT FOR POSITION 2 —

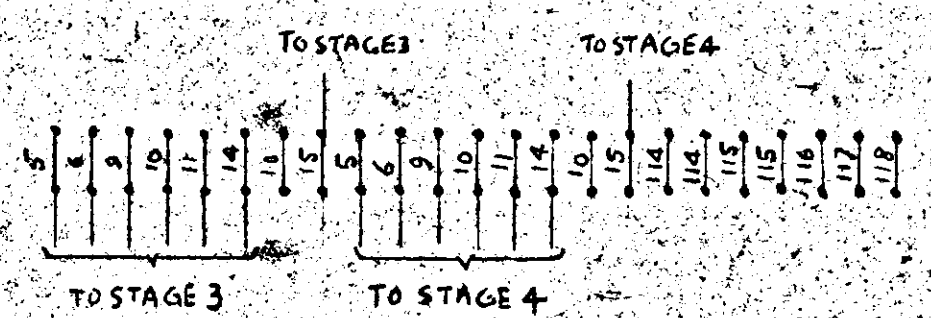


COPYRIGHT AND CONFIDENTIAL

STAGE	RATING	FLC	R.F.S.	AMMETER	CT	CT	OL	CT	CT
(POINTS)	HP	AMPS	MAIN	SCALE	RATIO	FINAL	% TAP	RATIO	FINAL
1	600A	600	SIZE	(AMPS)					
2	METERING								
3	350	58	150	0-80/48	100/1	60/1	100	80/1	60/1
4	350	58	150	0-80/48	100/1	60/1	100	80/1	60/1

3	15-8-71	JMT
4	26-6-71	JMT
4	3-5-71	JMT
4	31-3-71	JMT
4	23-9-70	JMT

SEE OUTLINE DRG. X3119325

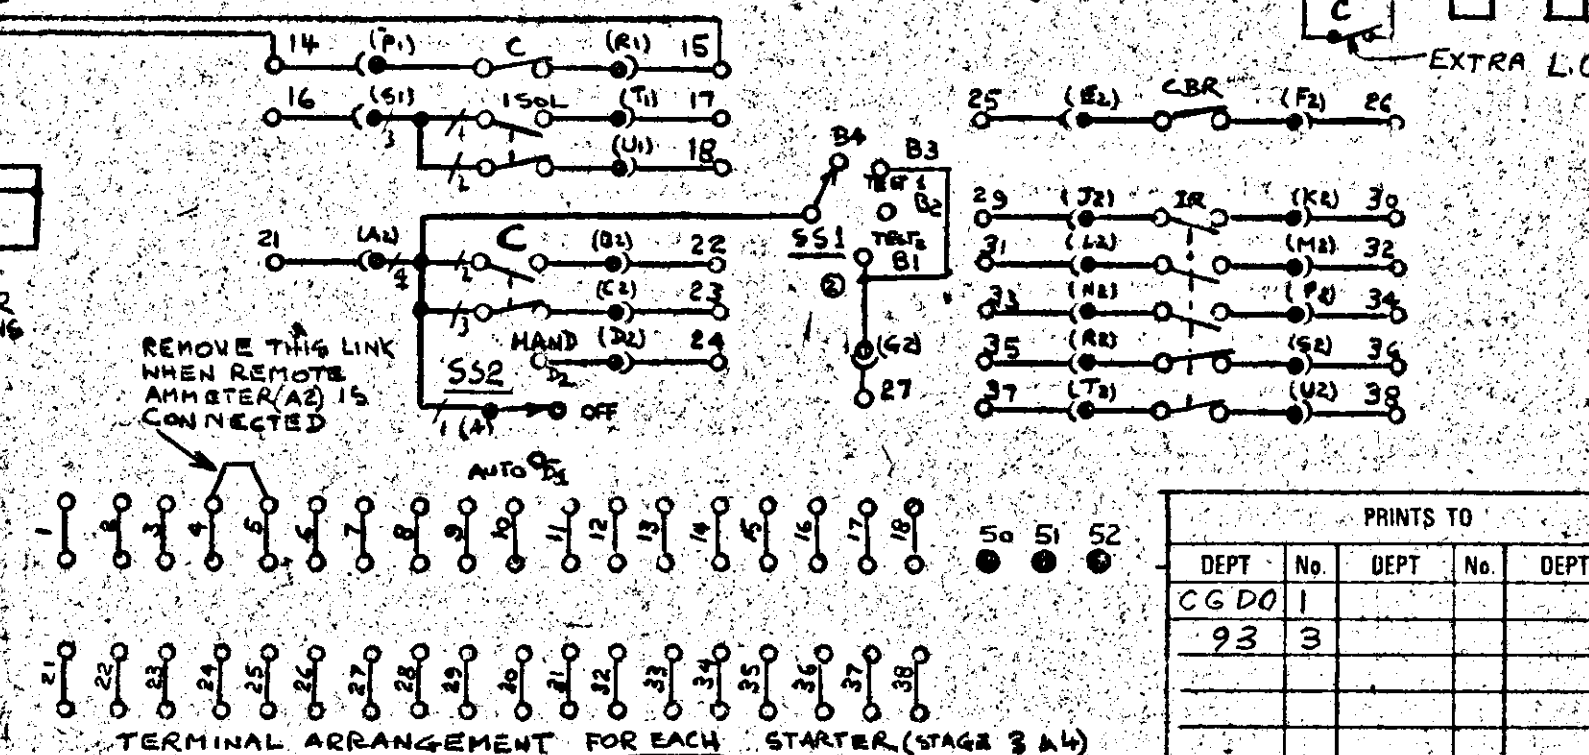

TERMINAL ARRANGEMENT FOR EACH STARTER (STAGE 3 & 4)