

Accessory

SPORT PEDALS

Application

2017 CIVIC 5-DOOR Publications No. VERSION 2

Issue Date MAR 2017

PARTS LIST

Sport Pedal Kit (CVT models) P/N 08U74-TEA-100

Accelerator pedal cover



Brake pedal pad cover



Brake pedal pad



4 Rivets A (without groove)



4 Rivets B (with groove)



Sport Pedal Kit (M/T models) P/N 08U74-TEA-100A

Accelerator pedal cover



2 Pedal pad covers



2 Pedal pads



4 Rivets A (without groove)



6 Rivets B (with groove)



TOOLS AND SUPPLIES REQUIRED

Drill

3.5 mm Drill bit

Eye protection (face shield, safety goggles, etc.)

File

Pushpin

3.5 mm Hand riveter

Masking tape

Tape


Ruler

INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."


Installing the Sport Pedals

 Apply masking tape to the accelerator pedal cover as shown.

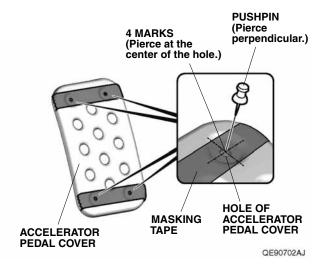


2. Using a pushpin, pierce masking tape as shown.

 Using masking tape, loosely install the accelerator pedal cover onto the accelerator pedal as shown.
NOTE: Be sure to install the accelerator pedal cover in the correct orientation.

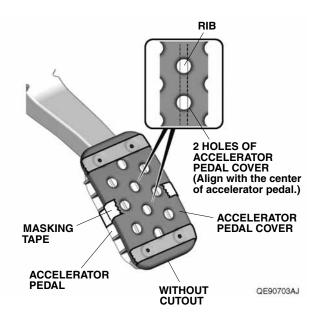

- 4. While wearing eye protection, drill the accelerator pedal at the four pierced marks with a 3.5mm drill bit. NOTE:
 - Wrap the tape around the drill bit 7 mm (0.28 in.) from the tip of the drill.
 - Hold the accelerator pedal firmly with your hand while drilling the hole.
 - Make sure to drill perpendicular to the accelerator pedal. Remove any burrs.

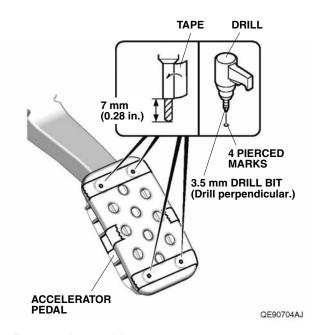


5. Remove the masking tape.

6. Using the hand riveter, secure the accelerator pedal cover to the accelerator pedal with four rivets A in the order shown.

NOTE:


- Make sure that you use the correct rivet before proceeding with the installation.
- Make sure that the rivets are attached.

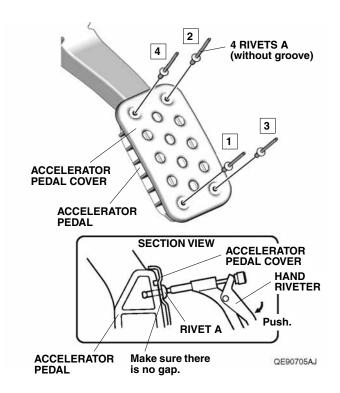


If the vehicle is equipped a CVT, continue with step 7. If the vehicle is equipped with an M/T, go to step 11.

CVT models


7. Remove the brake pedal pad from the brake pedal.

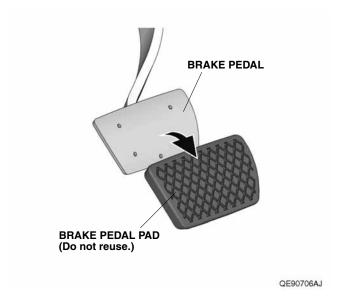

8. Install the new brake pedal pad onto the brake pedal. NOTE: Make sure the brake pedal pad is properly installed on the brake pedal.

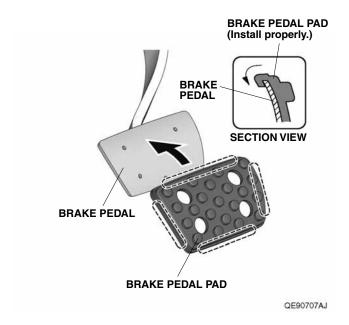


9. Loosely install the brake pedal pad cover on the brake pedal pad.

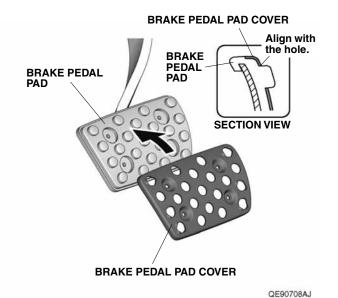

10. Using the hand riveter, install the brake pedal pad cover on the brake pedal with four rivets B in the order shown.


NOTE:

- Make sure you use the correct rivet before proceeding with the installation.
- When holding down the brake pedal, be careful not to injure your fingers.
- Make sure the rivets are attached.

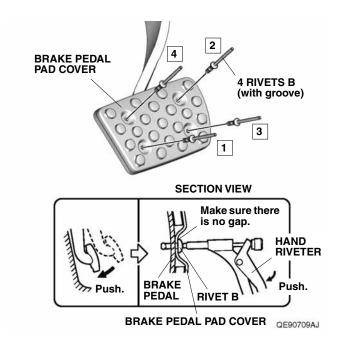


M/T models


11. Remove the brake pedal pad from the brake pedal.

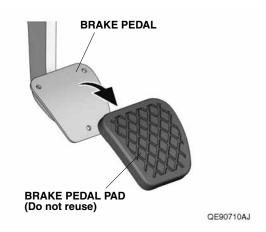

12. Install the pedal pad on the brake pedal.

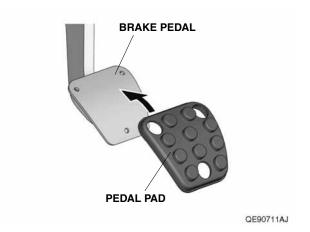


13. Loosely install the pedal pad cover to the pedal pad.

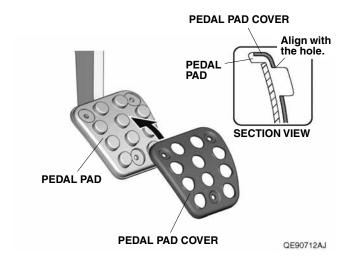

14. Using the hand riveter, install the pedal pad cover on the brake pedal with three rivets B in the order shown.

NOTE:

- Make sure you use the correct rivet before proceeding with the installation.
- When holding down the brake pedal, be careful not to injure your fingers.
- Make sure the rivets are attached.

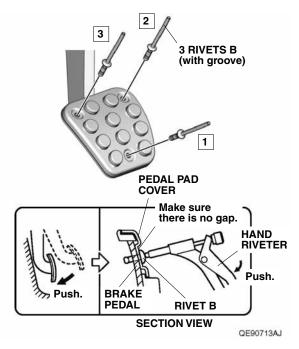

15. Repeat steps 11 through 14 to install the pedal pad and pedal pad cover on the clutch pedal.