Andúril 2
Simple UI

Andúril 2 Release 2023-12-03
Diagram Release 01

Diagram Repository:
https://tinyurl.com/anduril2diagrams

ToyKeeper's Andúril User Manual:
http://tinyurl.com/anduril2manual

NOTE: Some features are hardware-specific, or may be disabled by manufacturers.

Extended Simple UI

Some lights have additional features enabled in Simple UI, at the manufacturer's request.
This typically includes:
- On → 6C/3C: Toggle smooth or stepped ramp style
- On → 5H: Sunset timer
- Off → 3H: Access strobe / mood modes
- Off → 7C/7H: Change the aux LED settings
- Lockout → 7C/7H: Change the aux LED settings

These features are part of the Advanced UI diagram.

Actions

1C: Click
1H: Hold
2C: Click, Click
2H: Click, Hold
1H in a config menu = 10 Clicks

Version Check

MODEL-YYYY-MM-DD-SINCE-DIRTY
- MODEL = 4-digit Model Number
- YYYY = Year • MM = Month
- DD = Day • SINCE = Commits since last official release (optional)
- DIRTY = 1 if modified (optional)

Factory Reset

Simple UI is enabled after each factory reset.
Physical Reset: Loosen tailcap, Hold button, Tighten tailcap, Keep holding until light goes out

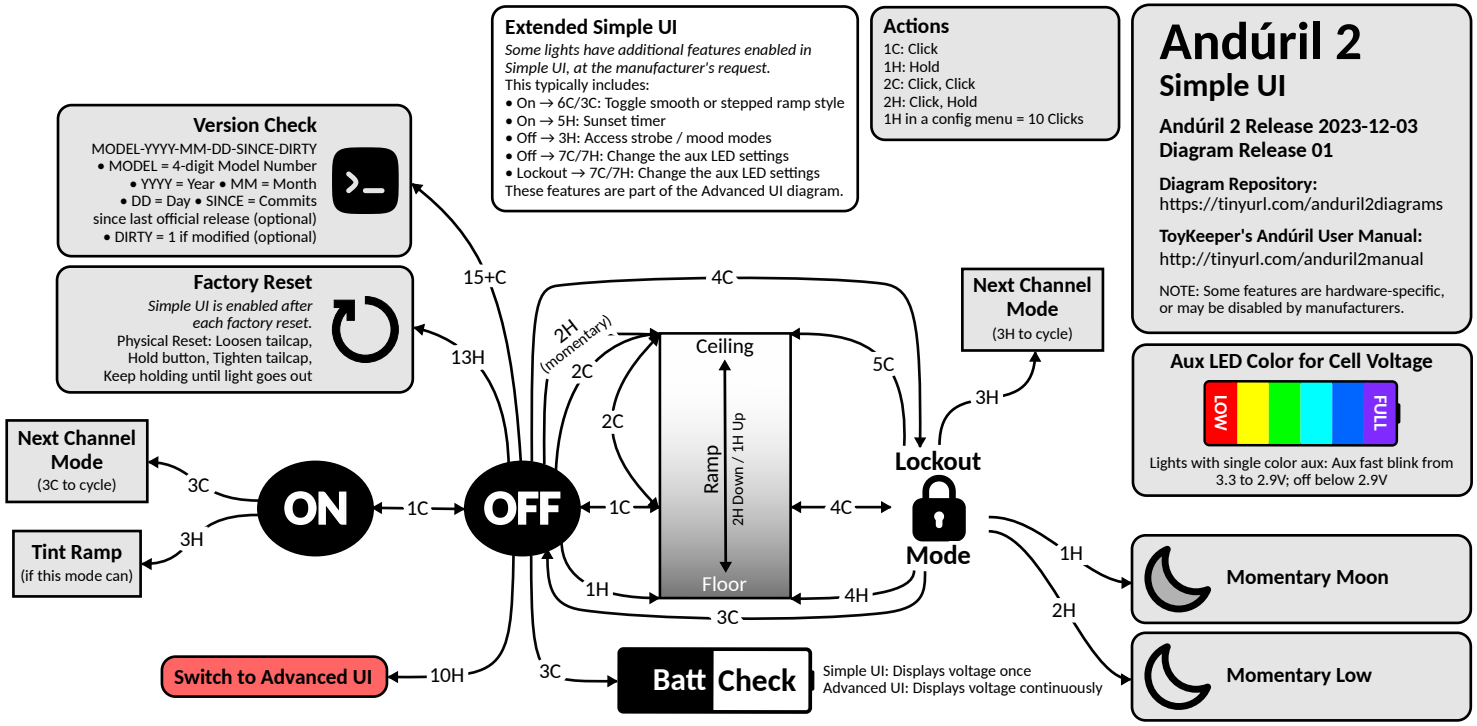

Aux LED Color for Cell Voltage

Lights with single color aux: Aux fast blink from 3.3 to 2.9V; off below 2.9V