
LWP heat set insert build instructions

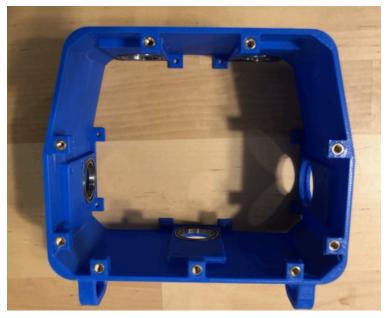


M3 heat set inserts for chest.




M2 heat sets for the legs.




M2 heat sets for the arms.

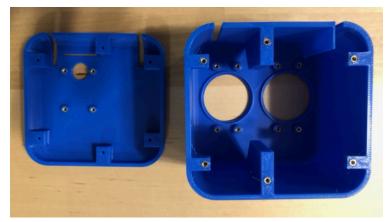

M2 heat sets for the head.

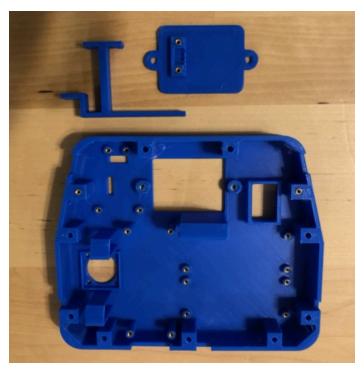

M2 heat sets for the back plat internals. M3 heat set to be inserted from the back side for the battery cover.

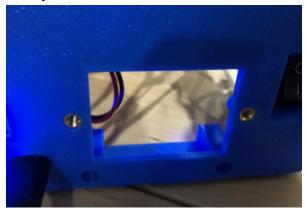

M3 heat set inserts for the back of the back plate.



M2 heat sets for the chest pieces.

Not pictured: shoulders and neck. All require four M2 heat set inserts