# Micromechanics

Lars Pastewka, Viacheslav Slesarenko

December 13, 2021

© 2010-2016 Keith Kobry, Peter Woias; 2017-2021 Richard Leute, Wolfram G. Nöhring, Lars Pastewka; 2021 Viacheslav Slesarenko Institut für Mikrosystemtechnik Albert-Ludwigs-Universität Freiburg

# Contents

1	Force and moment equilibria 1							
	1.1	Statics, rigid bodies and force systems	1					
	1.2	Force couples and moments	3					
<b>2</b>	Bearings 5							
	2.1	Bearings and degrees of freedom	5					
	2.2	Free body diagrams	7					
3	Internal forces 10							
	3.1	Internal force variables	10					
	3.2		11					
4	Elastostatic equilibrium 14							
	4.1	Stress and static equilibrium	15					
	4.2		16					
	4.3		19					
5	Stress 20							
	5.1	Rotating the stress tensor	23					
		<u> </u>	23					
		e e e e e e e e e e e e e e e e e e e	25					
	5.2		26					
	5.3		27					
	5.4		29					
6	Strain and displacement 31							
	6.1	<del>-</del>	31					
	6.2		31					
7	Hooke's law 33							
	7.1	General form	33					
	7.2		34					

	7.3	Example: Auxetic materials							
8	Plar	Plane problems 36							
	8.1	Plane strain							
	8.2	Plane stress conditions							
	8.3	Compatibility condition							
9	Bear	ms 39							
	9.1	Stresses							
	9.2	Displacements							
	9.3	Buckling							
10	Plat	es 44							
	10.1	Stress							
		Displacements							
11	Plas	etic failure 48							
12	Brit	tle failure 49							
	12.1	Stress near a crack tip							
		12.1.1 Airy stress function							
		12.1.2 Westergaard stress function 51							
		12.1.3 Stress field							
	12.2	Fracture toughness							
		12.2.1 Displacement field at the crack tip							
		12.2.2 Strain energy release rate							
	12.3	Griffith's fracture criterion							

# Chapter 1

## Force and moment equilibria

### 1.1 Statics, rigid bodies and force systems

Statics is the subdivision of mechanics concerned with the **forces** that act on **solid bodies** at rest under **equilibrium conditions**. The solid body can be thought of as a collection of matter within an identifiable boundary, and it is important to distinguish notions of *rigid* and *deformable* bodies.

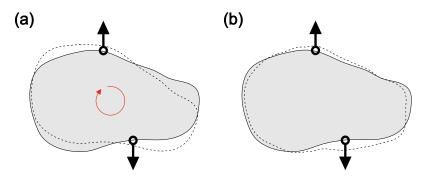


Figure 1.1: The rigid body (a) can translate and rotate, while the deformable body (b) can also change its shape.


#### Rigid body (Chapters 1-3)

Do not change its shape under internal or external forces Forces and moments can be plotted as a function of a position "Nothing" happens within material

#### **Deformable body** (Chapters 4-12)

Can change its shape under internal or external forces Inherent material properties must be accounted to find deformation Mechanics heavily relies on the notion of *force*. We all intuitively understand this concept, and in physics, force usually represents internal or external action on the body. From a practical point of view, any force can be represented as a vector  $\vec{F}$ , and it is fully determined by its magnitude |F|, line of action, direction and contact point (Fig. 1.2).

Fig. 1.3a shows a rigid body subjected to multiple forces. In engineering mechanics, every combination of forces acting on the rigid body is called a *force system*. Graphical representation of force vectors enables the replacement of multiple forces acting on the body by a single equivalent force called the *resultant of the system*. Besides one important exception that will be discussed later, every force system can be reduced to resultant via a simple step-by-step procedure:



- 2. Shift both forces along their corresponding acting line to the point of intersection;
- 3. Replace these forces by their resultant (vector sum of the initial forces);
- 4. Start all-over, until only one force is left;
- 5. The remaining force is the resultant of the initial force system.

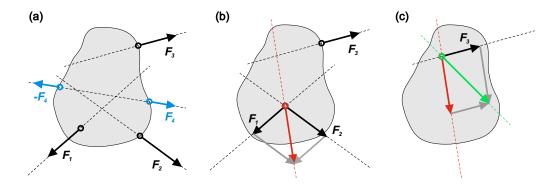


Figure 1.3: Reduction of the force system to the single resultant.

Fig. 1.3 illustrates this procedure for arbitrarily selected force system. First, blue forces  $F_4$  cancel each other since they share the line of action, have



Figure 1.2: The force F is fully determined by magnitude |F|, line of action (dashed line), direction and contact point A.

the same magnitude and opposite directions (Fig. 1.3a). Then, by sliding the forces  $F_1$  and  $F_2$  to the intersection point of their corresponding action lines, we can get the resultant of  $F_1$  and  $F_2$  (red vector in Fig. 1.3b). Then, the same procedure for this new resultant and initial force  $F_3$  gives us the resultant of the whole system (green vector in Fig. 1.3c).

### 1.2 Force couples and moments

Two forces (Fig. 1.4a) cannot be reduced to a single resultant if they have

- Same magnitude
- Parallel lines of action
- Opposite directions

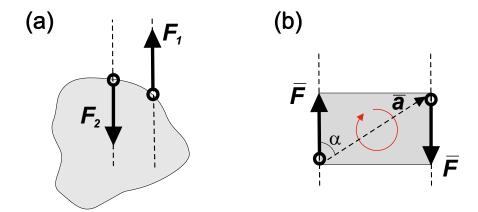


Figure 1.4: (a) Two forces forming force couple. (b) Moment of the force couple.

Such a force system is called a *force couple* or *pure moment*. If a resultant represents the translation movement of the rigid body, a pure moment corresponds to rotation. The moment of force couple is defined by direction of rotation, magnitude and distance between corresponding lines of action (Fig. 1.4b). Note that force moment is not fixed at any certain contact point and can be moved freely over the whole body as long as the direction of rotation and magnitude of the moment are conserved. In a general 3D system, we can define the moment as cross product of two vectors

$$\vec{M} = \vec{a} \times \vec{F_1},\tag{1.1}$$

where  $\vec{a}$  is a vector connecting the contact points of two vectors in force couple, and  $\vec{F}_1$  is one of these vectors as shown in Fig. 1.4b. The vector representation of moment enables us to define *moment area*  $|\vec{M}|$  as

$$|\vec{M}| = |\vec{a} \times \vec{F_1}| = |\vec{a}||\vec{F_1}|\sin\alpha,$$
 (1.2)

where  $\alpha$  is the angle enclosed by  $\vec{a}$  and  $\vec{F_1}$ . Note that by definition, the moment area is always positive, however a specific sign can be assigned to the moment depending on its direction.

A single force will exert a moment at a certain point B **outside from its line of action** (Fig. 1.5). This moment of single force is defined as a product of the force magnitude |F| and the perpendicular distance a between point B and the line of action (M = a|F|). Note that the contact point of F and action point B cannot coincide. The moment of a single force is sometimes called a torque. It is important not to mix up moments generated by force couple and by a single force.




Figure 1.5: Force F exerts moment at a point B.

#### The force couple

May induce a pure rotation of a body Does not have a reference point

#### The single force

May induce a translation of the body

Exert a moment in a reference point outside its line of action

Now we understand how to work with forces and moments, and it is time to define the last word in the definition given at the beginning of this chapter – equilibrium.

A 2D force system is in equilibrium if the sum of all forces  $F_i$  and the sum of all moments  $M_i$  equal zero.

$$\sum_{i} F_i = 0 \quad \text{and} \quad \sum_{i} M_i = 0 \tag{1.3}$$

### Chapter 2

### **Bearings**

### 2.1 Bearings and degrees of freedom

The condition of static equilibrium that we discussed earlier does not mean that the body is immovable. The body still can translate and rotate; in a two-dimensional case an object can have three kinematics degrees of freedom (DoFs): two orthogonal translational displacements along x- and y- axes, and one rotation around z-axis. The motion of the body can be restricted by eliminating some DoFs with the help of bearings (Fig. 2.1). Depending on the type of bearing, one, two, or all three DoFs can be removed. The kinematic constraints imposed by bearings trigger so-called bearing reactions, or simply reactions. Note that if exactly all degrees of freedom are removed, the system is called statically determinate or isostatic.

As you can see, the sum of the number of reactions a and DoFs f is always equal to 3 (for 2D case). This is a necessary (but not a sufficient!) condition for a *statically determinate* system with one body. Namely,

$$\sum_{i} a - 3 = 0 \tag{2.1}$$

For more general 2D system with n connected bodies

$$\sum_{i}^{n} a_i + \sum_{i} z - 3n = 0, \tag{2.2}$$

where z is a number of intermediate reaction between movable bodies.

By knowing a number of bodies n, a number of bearing reactions a and intermediate reactions z, we can distinguish three different cases for 2D force

Bearing	Symbol	Constraints	No. of reactions	DOF f
Hinge		Two forces	2	1
Roller hinge	<b>←</b>	One force	1	2
Linear	₹ T	One force One moment	2	1
Fixed	<b>→</b>	Two forces One moment	3	0

Figure 2.1: The most common types of bearings and corresponding number of reactions a and degrees of freedom f.

systems defined by the value of D, where

$$D = \sum_{i=1}^{n} a_i + \sum_{i=1}^{n} z - 3n \tag{2.3}$$

We know that a determinate (or isostatic) system must have D = 0 (Fig. 2.2b). If D < 0, then the system is movable since it has unrestricted DoF (Fig. 2.2a). If D > 0, then the system is called indeterminate or hyperstatic - the system is immovable and contains extra reactions that can be removed (Fig. 2.2c).

Again, we need to emphasize that above-mentioned mathematical precondition is a necessary, but not sufficient, requirement. One exception from this rule is the system with two and one reactions in the left and right bearings respectively shown in Fig. 2.3. Here, we have D=0, which usually corresponds to determinate system. However, it is clear that the beam can move freely in a horizontal direction, therefore it has 1 DoF! In this specific case, force vectors  $Y_1$  and  $Y_2$  are parallel, and they both can compensate only vertical direction of action, while the horizontal movement is not restricted.

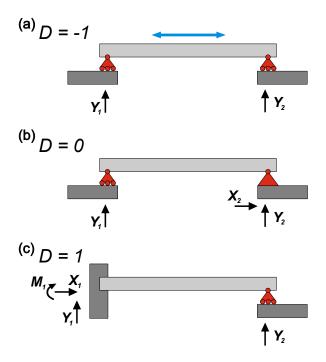


Figure 2.2: Movable (a), determinate (b) and indeterminate (c) force systems.



Figure 2.3: Example of movable force system with D=0. Parallel vertical forces  $Y_1$  and  $Y_2$  cannot restrict horizontal movement of the beam.

### 2.2 Free body diagrams

Free body diagrams provide a way to compute forces acting inside the body (internal force variables). By definition, an internal force variable is the resultant of all internal forces in a solid body at a hypothetical cut through the body (Fig. 2.4). If we imagine cutting the body in equilibrium along some line, we technically create two fragments that are no longer in equilibrium. Therefore we need to introduce additional forces on the cut to restore the equilibrium and balance the forces. For a 2D system we can distinguish three resultants on the cut: longitudinal force L (perpendicular to cut), transverse/shear force Q (in plane of cut) and bending moment M (perpendicular

to the 2D area of force system). Together with reactions, internal force variables can be determined using a **free body diagram**.

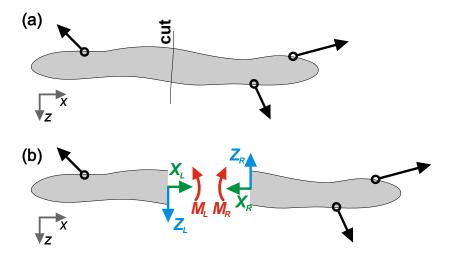


Figure 2.4: Internal forces at a hypothetical cut through the body. Note that forces and moment on left and right sides of the cut compensate each other to maintain equilibrium.

By hypothetically splitting the beam into two fragments, we add six internal force variables on the cut (three for left and three for right) that balance both fragments. To keep the whole body in equilibrium after "gluing" these two fragments back, the internal force variables on the left and right should have the same amplitude and opposite directions. Therefore, by cutting the beam, we increase the number of bodies to n = 2, however, we also add three intermediate reactions z, therefore keeping D constant (Eq. 2.3)

**Note:** To correctly operate with internal force variables, we need to agree on non-ambiguous sign conventions. We will obey the following rules

- An intersection area is called **positive** if normal vector is in the direction of coordinate vector, and **negative** otherwise;
- Internal force variable (force or moment) is **positive** if it is located at a positive intersection area AND if it is in direction with a coordinate vector;
- The moment is regarded as a vector according to the right-hand rule;

• Note that **the reactional internal force variable** at the corresponding negative intersection is also considered as positive.

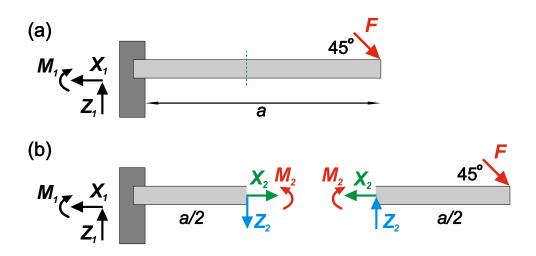


Figure 2.5: Reaction forces and moments in the beam fixed on the left side and subjected to inclined point load on the right.

For illustration, we consider an example of a beam with length a, that is fixed on the left end and subjected to an inclined point load F on the right end (Fig. 2.5). We search for the bearing reactions as well as internal forces in the middle point of the beam. Simply balancing forces and moments we get

$$X_1 = F/\sqrt{2}$$

$$Y_1 = F/\sqrt{2}$$

$$M_1 = -Fa/\sqrt{2}$$
(2.4)

To find the internal forces and moments at the middle of the beam, we need to cut the beam into two fragments, introduce two reaction forces  $X_2$  and  $Z_2$  and one reaction moment  $M_2$  to preserve equilibrium. Finally, by balancing the forces for both fragments we get

$$X_2 = F/\sqrt{2}$$

$$Y_2 = F/\sqrt{2}$$

$$M_2 = \frac{Fa}{2\sqrt{2}}$$
(2.5)

## Chapter 3

### Internal forces

#### 3.1 Internal force variables

In the previous chapter, we considered internal forces appearing on the hypothetical cuts. Here we continue discussing internal force variables but with a focus on describing them as a continuous function of the position along the body. From the previous example (Fig. 2.5), we know how to find the internal forces in the middle of the beam (Eq. 2.5). However, we can also perform the same procedure for any other section of the beam. Therefore, it makes sense to consider the reaction forces and moments as functions of the coordinate along the beam length (Fig. 3.1).

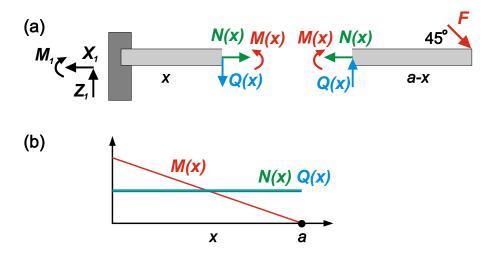


Figure 3.1: (a) Free body diagram for a beam with intermediate cut. (b) Reaction forces and moments as functions of coordinate x.

Let us consider a cut located at the distance x from the left hinge/wall

(Fig. 3.1). By balancing forces and moments acting on the left and right fragments, it is easy to show that

$$N(x) = F/\sqrt{2}$$

$$Q(x) = F/\sqrt{2}$$

$$M(x) = \frac{F(a-x)}{\sqrt{2}}$$
(3.1)

Therefore, both longitudinal and shear forces are constant functions of the coordinate x, while moment linearly decreases with an increase in x.

#### 3.2 Distributed loads

Prior to this moment, we have considered only idealized point forces. Now we will consider loads distributed along the region of the body (line loads). We will learn how to search for internal forces without exact knowledge of the reaction forces and move towards governing equation of continuum mechanics in the next Chapter.

Note: In our next derivations, we will heavily rely on a very useful mathematical concept of Taylor expansion of the function. If we have arbitrary function f(x), then we can try to approximate it in the vicinity of point  $x_0$  using a polynomial function. So we can find the approximate value of  $f(x + \Delta x)$  just knowing the properties of the function in the point  $x_0$ . We will skip the strict mathematical discussion of the necessary conditions and restrictions on function f and value of  $\Delta x$ , and just claim that for a small enough  $\Delta x$  and well-behaved function f, the Taylor expansion provides a good approximation of f. For example, the second order approximation of  $f(x + \Delta x)$  can be expressed as

$$f(x_0 + \Delta x) = f(x_0) + \Delta x f'(x_0) + \frac{1}{2} \Delta x^2 f''(x_0) + O(\Delta x^3)$$
 (3.2)

In shorter form the general Taylor expansion can be written as

$$f(x_0 + \Delta x) = \sum_{i=0}^{\infty} \frac{1}{n!} f^{(i)}(x_0) \Delta x^i$$
 (3.3)

Note, that  $f^{(i)}$  means i-th derivative of the function, while  $\Delta x^i$  is a regular power.

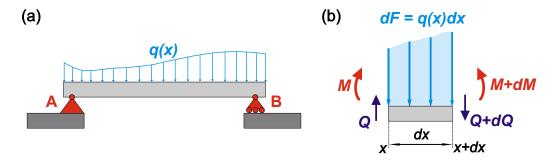


Figure 3.2: (a) A beam subjected to distributed load. (b) Infinitesimal fragment of beam and corresponding forces.

Let us consider a straight beam subjected to line load that can be expressed as a function of the coordinate q(x) (Fig. 3.2). We select a very small (infinitesimal) beam element of length dx stretching from coordinate x to x+dx. Note that here we use dx instead of  $\Delta x$  to emphasize the infinitesimal length of this piece. Due to that  $dx << (dx)^2$ , and we can use the first order Taylor expansion to find the change in total applied force between left and right ends of the selected beam as dF = q(x)dx. Let us now write equilibrium equation for the small piece, taking into account that we can express the shear force and moment on the right side as Q(x+dx) = Q+dQ and M(x+dx) = M+dM respectively.

$$Q(x) + dQ = Q(x) - q(x)dx (3.4)$$

We also can write Taylor expansion of Q(x) at x as

$$Q(x) + dQ = Q(x) + \frac{dQ}{dx}dx + \dots$$
(3.5)

By comparing coefficients in these two equations, we conclude that

$$q(x) = -\frac{dQ}{dx} \tag{3.6}$$

This equation establishes the relation between line load and internal shear force in the body. To balance moments, we write

$$M(x) + dM = M(x) + Q(x)dx \tag{3.7}$$

Similar to force, we can obtain the first order Taylor expansion and get

$$q(x) = -\frac{d^2M}{dx^2} \tag{3.8}$$

Therefore, we can express Q(x) and M(x) via integration as

$$Q(x) = -\int q(x)dx + C_1$$

$$M(x) = \int Q(x)dx + C_2$$
(3.9)

Integration constants  $C_1$  and  $C_2$  have to be found from boundary conditions at bearings and intermediate conditions at connections between body parts. Boundary conditions depend on the bearing type. For example, simple hinge implies M=0, and free end provides two boundary conditions M=0 and Q=0 simultaneously. Note that by computing shear force and moment via integration (Eq. 3.9), we do not need to calculate bearing reactions at all. If we recall Fig. 2.1 describing the different types of hinges, we can notice that each degree of freedom corresponds to additional equality boundary conditions that can be used to find integration constants (Eq. 3.9).

# Chapter 4

# Elastostatic equilibrium

<u>Note:</u> We will make extensive use of vector and tensor calculus in this and the following chapters, and it is important to clearly lay out the mathematical notation used here.

Given a function f(x, y), we write the partial derivative of this function with respect to x as

$$\frac{\partial f}{\partial x} = \partial_x f = f_{,x}.\tag{4.1}$$

All variables following a comma in a subscript are derivatives. The second derivative with respect to x is then

$$\frac{\partial^2 f}{\partial x^2} = \partial_x^2 f = f_{,xx}.\tag{4.2}$$

Mixed derivatives are written as

$$\frac{\partial^2 f}{\partial x \partial y} = \partial_x \partial_y f = f_{,xy}. \tag{4.3}$$

The total derivative is indicated with the letter d. e.g.

$$\frac{\mathrm{d}f}{\mathrm{d}t} = \frac{\partial f}{\partial x}\frac{\partial x}{\partial t} + \frac{\partial f}{\partial y}\frac{\partial y}{\partial t} = f_{,x}x_{,t} + f_{,y}y_{,t} \tag{4.4}$$

for f = f(x, y), x = x(t) and y = y(t).

Sometimes the prime is used to indicate a derivative, e.g. f'(x) = df/dx is the derivative of f. It is also common to indicate the derivative with respect to time by a dot, i.e. given f(t) the derivative  $\dot{f}(t) = df/dt$ . Higher order derivatives are sometime indicated by the order in parentheses, e.g.  $f^{(n)}(x) = d^n f/dx^n$  – for n = 2 giving  $f''(x) = f^{(2)}(x) = d^2 f/dx^2$ .

We will use these notations occasionally for brevity but point out that writing the differential operator explicitly is less ambiguous. In particular, for functions of more than one variable the differential operator allows us to distinguish clearly between total and partial derivatives.

We will also make use of Einstein summation. Einstein summation is an *implicit* summation over repeated indices (i.e. a summation where the  $\Sigma$ -sign is omitted). As a simple example, consider the total derivative of a function  $f(\vec{r})$  with  $\vec{r} = (x, y)$  equivalent to Eq. (4.4). We can write this as

$$\frac{\mathrm{d}f}{\mathrm{d}t} = f_{,x}r_{x,t} + f_{,y}r_{y,t} = \sum_{i=x,y} f_{,i}r_{i,t} = f_{,i}r_{i,t}$$
(4.5)

where in the right hand side the sum is implicit because the index i is repeated. We will come back to this notation when discussing explicit examples below.

We use explicit arrows,  $\vec{v}$  to indicate first-order tensors (vectors) and underline second-order tensors (matrices),  $\underline{M}$ . A fourth-order tensor is underlined twice,  $\underline{\underline{C}}$ . Unit vectors (vector of length one) are denoted by a hat,  $\hat{n}$ . Note that we chose this notation over using, e.g., bold font to indicate vectors because it is blackboard friendly. It can be used on blackboards and typeset notes alike.

### 4.1 Stress and static equilibrium

We will treat elasticity exclusively in the limit of small or infinitesimal strains where all equations are linear. The generalization of this "small strain" theory is "finite strain" elasticity which we will not treat in this class. Note that linear elasticity is a classical *field theory*, this means all quantities typically depend continuously on positions  $\vec{r}$ . Those quantities are called *fields*.

The central quantities of small strain elasticity are the (Cauchy) stress field  $\underline{\sigma}(\vec{r})$  and the displacement field  $\vec{u}(\vec{r})$ . Given a material point has moved from position  $\vec{r}$  to  $\vec{r}'$ , the displacement field is  $\vec{u}(\vec{r}) = \vec{r}' - \vec{r}$ . It therefore describes by how much a volume element in our deformed material has moved (or displaced) because of the deformation. The stress  $\underline{\sigma}$  is a tensor that transforms an area (vector)  $\vec{A}$  into a force vector  $\vec{F}$ ,

$$\vec{F} = \underline{\sigma} \cdot \vec{A} \tag{4.6}$$

Note that the area here is a vectorial quantity; the direction of this area vector points outwards on that area, i.e.  $\vec{A} = A\hat{n}$  where  $\hat{n}$  is the normal vector on the respective area.

In three-dimensions, the stress tensor is represented by a  $3 \times 3$  matrix. A tensor describes a linear relationship between two quantities; the stress tensor describes the relationship between area of a virtual plane in our solid and the force acting on it, Eq. (4.6). The fact that both force and normal vector of the area are represented in a certain coordinate system implies certain properties of the tensors, in particular for the transformation of the elements of the tensor under rotation of this coordinate system. We will discuss those in detail in the next chapter. For the remainder of this chapter, we only need property Eq. (4.6) of the stress tensor.

#### 4.2 Force equilibrium

We will now consider the equilibrium of forces inside a solid body. Specifically, we regard a small volume element inside this body. Figure 4.1a shows a sketch of some body with a volume element highlighted in red. If side lengths of the element  $\Delta x$ ,  $\Delta y$  and  $\Delta z$  are small enough, then the forces on opposite sites of the element must balance. We here denote the forces on the faces perpendicular to the x-direction by  $\vec{X}$ , the forces on the y-faces by  $\vec{Y}$  and the forces on the z-faces by  $\vec{Z}$  (see Fig. 4.1b, z-direction not shown). If we know the areas, we can get the forces from the stress tensor  $\underline{\sigma}$  (that converts areas into forces, see Eq. (4.6)), specifically

$$\vec{X} = \begin{pmatrix} \sigma_{xx} \Delta y \Delta z \\ \sigma_{yx} \Delta y \Delta z \\ \sigma_{zx} \Delta y \Delta z \end{pmatrix}$$

$$\tag{4.7}$$

$$\vec{X} = \begin{pmatrix} \sigma_{xx} \Delta y \Delta z \\ \sigma_{yx} \Delta y \Delta z \\ \sigma_{zx} \Delta y \Delta z \end{pmatrix} \tag{4.7}$$

$$\vec{Y} = \begin{pmatrix} \sigma_{xy} \Delta x \Delta z \\ \sigma_{yy} \Delta x \Delta z \\ \sigma_{zy} \Delta x \Delta z \end{pmatrix} \tag{4.8}$$

$$\vec{Z} = \begin{pmatrix} \sigma_{xz} \Delta x \Delta y \\ \sigma_{yz} \Delta x \Delta y \\ \sigma_{yz} \Delta x \Delta y \\ \sigma_{zz} \Delta x \Delta y \end{pmatrix} \tag{4.9}$$

$$\vec{Z} = \begin{pmatrix} \sigma_{xz} \Delta x \Delta y \\ \sigma_{yz} \Delta x \Delta y \\ \sigma_{zz} \Delta x \Delta y \end{pmatrix}. \tag{4.9}$$

Note that  $\vec{X}$ ,  $\vec{Y}$ ,  $\vec{Z}$  and  $\underline{\sigma}$  are fields; they explicitly depend on position  $\vec{r}$ within the body.

For a volume element located at position  $\vec{r} = (x, y, z)$ , force equilibrium

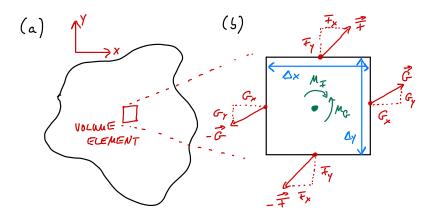


Figure 4.1: Force equilibrium in a small volume element inside a solid body.

inside the element can be expressed as

$$\vec{X}(x + \Delta x, y, z) - \vec{X}(x, y, z) + \vec{Y}(x, y + \Delta y, z) - \vec{Y}(x, y, z) + \vec{Z}(x, y, z + \Delta z) - \vec{Z}(x, y, z) = \vec{F}(x, y, z)$$
(4.10)

where  $\vec{F}(x, y, z)$  is an external force, often called the *body force*, acting on the volume element. We can insert Eqs. (4.7), (4.8) and (4.9) and divide by the volume of the element  $\Delta x \Delta y \Delta z$  to obtain

$$\frac{\sigma_{xx}(x + \Delta x, y, z) - \sigma_{xx}(x, y, z)}{\Delta x} + \frac{\sigma_{xy}(x, y + \Delta y, z) - \sigma_{xy}(x, y, z)}{\Delta y} + \frac{\sigma_{xz}(x, y, z + \Delta z) - \sigma_{xz}(x, y, z)}{\Delta z} = f_x(x, y, z)$$
(4.11)

for the x-component of Eq. (4.10). Here  $f_x = F_x/\Delta x \Delta y \Delta z$  is a volume force. In the limit  $\Delta x \to 0$  and  $\Delta y \to 0$  this becomes

$$\frac{\partial \sigma_{xx}}{\partial x} + \frac{\partial \sigma_{xy}}{\partial y} + \frac{\partial \sigma_{xz}}{\partial z} = f_x. \tag{4.12}$$

From the y and z-component of Eq. (4.10) we get two more differential

equations,

$$\frac{\partial \sigma_{yx}}{\partial x} + \frac{\partial \sigma_{yy}}{\partial y} + \frac{\partial \sigma_{yz}}{\partial z} = f_y \tag{4.13}$$

$$\frac{\partial \sigma_{zx}}{\partial x} + \frac{\partial \sigma_{zy}}{\partial y} + \frac{\partial \sigma_{zz}}{\partial z} = f_z. \tag{4.14}$$

These can be summarized to the compact notation

$$\nabla \cdot \sigma \equiv \operatorname{div} \sigma = \vec{f},\tag{4.15}$$

or in word: The divergence of the stress tensor equals the body force. Equation (4.15) is the central expression of elastostatics that describes force balance within a solid body.

<u>Note:</u> The differential operators in tensor calculus are defined by means of the *nabla operator*  $\nabla$ . In an *n*-dimensional Euclidean space equipped with Cartesian coordinates it reads

$$\nabla = \left(\frac{\partial}{\partial x_1}, \frac{\partial}{\partial x_2}, \dots, \frac{\partial}{\partial x_n}\right) = \sum_{i=1}^n \hat{e}_i \frac{\partial}{\partial x_i}, \tag{4.16}$$

where  $\hat{e}_i$  is the unit vector pointing in the *i*-th cartesian direction.

An alternative derivation of force balance invokes the divergence theorem. We can integrate Eq. (4.15) over a volume element inside this body of volume V and surface area S(V). Using the divergence theorem (sometimes also called Gauss' theorem), we obtain

$$\int_{V} d^{3} r \nabla \cdot \underline{\sigma} = \int_{S(V)} d^{2} r \underline{\sigma} \cdot \vec{e}_{S} = \int_{S(V)} d^{2} r d\vec{F} = \int_{V} d^{3} r \vec{f}$$
(4.17)

where  $\vec{e}_S$  is the normal vector pointing outwards on S(V). The infinitesimal area vector  $\vec{e}_S$  d r is hence transformed into an (infinitesimal) force vector  $d\vec{F} = \underline{\sigma} \cdot \vec{e}_S$  d r and integrated over. Eq. (4.17) hence contains a sum over all forces acting on the surface of the volume element V, and these forces must sum to the body force. It is nothing else than a statement of force balance for any volume element within the solid body.

<u>Note:</u> The divergence theorem is an important result of vector analysis. It converts an integral over a volume V into an integral over the surface S of this volume. For a vector field  $\vec{f}(\vec{r})$ , the divergence theorem states that

$$\int_{V} d^{3}r \,\nabla \cdot \vec{f}(\vec{r}) = \int_{S} d^{2}r \,\vec{f}(\vec{r}) \cdot \hat{n}(\vec{r}) \tag{4.18}$$

Here,  $\hat{n}(\vec{r})$  is the normal vector pointing outward on the surface S of the volume V.

<u>Note:</u> Note that  $\nabla \cdot \underline{\sigma} \equiv \operatorname{div} \underline{\sigma}$ . Sometimes it is useful to make use of Einstein summation, i.e. implicit summation over repeated indices within the same quantity of in products. Examples are:  $\nabla \cdot \underline{\sigma} = \partial_i \sigma_{ij} = \sum_i \partial_i \sigma_{ij}$ ,  $3 \sigma_h = \sigma_{kk} = \sum_k \sigma_{kk} = tr \underline{\sigma}$ , where  $\sigma_h$  is the hydrostatic stress. In the solid mechanics literature, derivatives are often expressed as indices following a comma. For example, the derivative of the function f(x, y, z) with respect to x would be written as  $f_{,x}$ . In this notation, Eq. (4.15) becomes  $\nabla \cdot \underline{\sigma} = \partial_i \sigma_{ij} = \sigma_{ij,i} = 0$ . By virtue of the Einstein summation convention we need to sum over the repeated index i in the right hand side expression. Vector/tensor and component notation with Einstein summation will be used intermixed throughout these notes.

### 4.3 Moment equilibrium

Besides equilibrium of forces, we also need to fulfill the equilibrium of moments acting on the volume element. The moment around the z-axis is given by

$$Y_x \Delta y + X_y \Delta x = 0 \tag{4.19}$$

which immediately implies  $\sigma_{yx} = \sigma_{xy}$ . The moment equilibrium around the x- and y-axes leads to conditions on the other off-diagonal components of  $\underline{\sigma}$ ,  $\sigma_{zx} = \sigma_{xz}$  and  $\sigma_{zy} = \sigma_{yz}$ . By virtue of moment balance, the stress tensor is a symmetric tensor,  $\sigma_{ij} = \sigma_{ji}$  or  $\underline{\sigma} = \underline{\sigma}^T$ .

### Chapter 5

### Stress

**Note:** We have encountered vectors in the first chapters on statics of rigid bodies and have intuitively worked with them. To recap, a vector is an object that represents a direction and a magnitude. Geometrically, they are often represented as arrows. In a Cartesian coordinate system (or basis), a vector can be represented by a set of numbers. For example in two dimensions, we denote the components of the vector  $\vec{v}$  as the x and y components and typically write the vector in the column-form

$$\vec{v} = v_x \hat{x} + v_y \hat{y} \equiv \begin{pmatrix} v_x \\ v_y \end{pmatrix} \tag{5.1}$$

where  $v_x$  and  $v_y$  are real numbers that are called the *components* of the vector  $\vec{v}$ .  $\hat{x}$  and  $\hat{y}$  are vectors of unit length that point along the x- and y-directions of the coordinates. The length of the vector is given by the 2-norm  $|\vec{v}| \equiv ||\vec{v}||_2 = (v_x^2 + v_y^2)^{1/2}$ .

It is important to emphasize that this is a representation of the vector and the components  $v_i \in \mathbb{R}$  depend on the specific basis  $\hat{x}$  and  $\hat{y}$ . This representation is called a tensor of order 1. The order of a tensor is sometimes also called degree or rank. Any component-wise representation, such as the one on the right hand side of Eq. (5.1), implies a basis. The basis is written explicitly as  $\hat{x}$  and  $\hat{y}$  in the middle expression of Eq. (5.1). Note that in component notation, the basis vectors are

$$\hat{x} = \begin{pmatrix} 1 \\ 0 \end{pmatrix}$$
 and  $\hat{y} = \begin{pmatrix} 0 \\ 1 \end{pmatrix}$ . (5.2)

We will restrict the discussion here to orthogonal bases where  $\hat{x} \cdot \hat{y} = 0$ . The

discussion here will use two-dimensional examples, but a generalization to more that two dimensions is straightforward

Formally, a vector is an element of a vector space. A vector space V (often also called a linear space) is a set of objects (for example the set containing our basis vectors  $\hat{x}$  and  $\hat{y}$  and linear combinations thereof) along with two operations: Addition (of two vectors) and multiplication (of a vector) with a scalar. These operations again yield a vector, i.e. an element of V. This can be expressed as

- $\vec{u}$ ,  $\vec{v} \in V$ , then  $\vec{u} + \vec{v} \in V$
- $a \in \mathbb{R}$  and  $\vec{u} \in V$ , then  $a \cdot \vec{u} \in V$

and hence Eq. (5.1) yields a vector. In general, we may multiply the vectors by an element of a algebraic number field  $\mathbb{F}$  rather than  $\mathbb{R}$ . Then we say V is a vector space over the field  $\mathbb{F}$ . In these notes (and our lectures) we will always deal with either real ( $\mathbb{F} = \mathbb{R}$ ) or complex ( $\mathbb{F} = \mathbb{C}$ ) numbers.

Recall the concept of an algebraic number field in mathematics. A field is an algebraic structure that is a set along with two operations "+" and "·" associating an element with two elements of the set. The operations are required to satisfy the field axioms:

- Associativity of addition and multiplication: a + (b + c) = (a + b) + c and  $a \cdot (b \cdot c) = (a \cdot b) \cdot c$ .
- Commutativity of addition and multiplication: a + b = b + a and  $a \cdot b = b \cdot a$ .
- Additive and multiplicative identity:  $0 \in \mathbb{F}$  with a + 0 = a and  $1 \in \mathbb{F}$  with  $1 \cdot a = a$ .
- Additive inverses:  $\forall a \in \mathbb{F}$  we have an inverse element i = -a with a + i = a + (-a) = 0
- Multiplicative inverses:  $\forall a \neq 0$  we have an element  $a^{-1}$  with  $a \cdot a^{-1} = 1$ .
- Distributivity of multiplication over addition:  $a \cdot (b+c) = a \cdot b + a \cdot c$

Note that in physics a *field* is typically a quantity that depends on position and not an algebraic number field. A scalar field  $\phi(\vec{r})$  would be scalar quantity  $\phi \in \mathbb{R}$  that depends on a vector (the position)  $\vec{r} \in V$ . While

these two meanings of the term *field* exist, we will always refer to this latter physical meaning in the following. Additionally, we have here used the dot  $\cdot$  to indicate a scalar multiplication, but we will reserve this dot in the rest of these notes for contractions, i.e. operations that implicitly include a sum.

The simplest (and also most important) operation on a vector is a linear transformation. The simplest linear transformation is the multiplication with a scalar  $a \in \mathbb{R}$ . In terms of the geometric interpretation of a vector, this multiplication would change the length of the vector by a but not its direction.

A general linear transformation can in addition change the direction of the vector and therefore represent for example rotations. Given a vector  $\vec{u}$  and a scalar  $\alpha$ , a linear transformation  $\mathcal{L}$  to a vector  $\vec{u}' = \mathcal{L}\vec{u}$  has the properties:

$$\mathcal{L}(\alpha \vec{u}) = \alpha \mathcal{L} \vec{u} \tag{5.3}$$

$$\mathcal{L}(\vec{u} + \vec{v}) = \mathcal{L}\vec{u} + \mathcal{L}\vec{v} \tag{5.4}$$

We will only deal with linear operations that map between the same vector space  $V, \mathcal{L}: V \mapsto V$ . (It may map between quantities with different physical units.) Given a component-wise (Cartesian) representation of a vector, Eq. (5.1), a linear transformation can be expressed as a multiplication by a matrix. This is easily by applying Eqs. (5.3) and (5.4) to

$$\vec{w} = \mathcal{L}\vec{v} = \mathcal{L}(v_x\hat{x} + v_y\hat{y}) = v_x\mathcal{L}\hat{x} + v_y\mathcal{L}\hat{y}. \tag{5.5}$$

We can express any element of our vector space as a linear combination of the basis vectors, hence also

$$\mathcal{L}\hat{x} = L_{xx}\hat{x} + L_{yx}\hat{y} \tag{5.6}$$

$$\mathcal{L}\hat{y} = L_{xy}\hat{x} + L_{yy}\hat{y}. \tag{5.7}$$

Application of the linear operation to an arbitrary vector, Eq. (5.5), can therefore be expressed as

$$\vec{w} = \mathcal{L}\vec{v} = (L_{xx}v_x + L_{xy}v_y)\hat{x} + (L_{yx}v_x + L_{yy}v_y)\hat{y} \equiv \underline{L} \cdot \vec{v}$$
 (5.8)

where  $\underline{L} \cdot \vec{v}$  is the multiplication of the matrix  $\underline{L}$  with the vector  $\vec{v}$ . A matrix is therefore a representation of a linear operation. Note that from Eq. (5.6) it is straightforward to see that formally we obtain the components of the matrix from

$$L_{ij} = \hat{i} \cdot \mathcal{L}\hat{j}. \tag{5.9}$$

Here the  $\cdot$  indicates the inner product or contraction of two vectors. In component-wise notation we can express Eq. (5.8) as

$$w_i = \sum_{j=x,y} L_{ij} v_j \equiv L_{ij} v_j \tag{5.10}$$

where the last term on the right-hand side uses the *Einstein summation* convention. In this convention, a summation over repeated indices within the same quantity or in products is implicit. This summation is also often called a *contraction* and in dyadic notation it is indicated by a centered dot, e.g.  $\vec{w} = \underline{L} \cdot \vec{v}$ .

It is straighforward to "convert" from dyadic notation to componentwise or *index notation*. Imagine the i, j component of the resultant matrix of the product

$$[\underline{A} \cdot \underline{B} \cdot \underline{C}]_{ij} = A_{ik} B_{kl} C_{lj}. \tag{5.11}$$

Converting from the dyadic notation to index notation involves identifying the indices of the resultant (first index of the first matrix in the product i and last index of the last matrix in the product j) and introducing repeated indices for the summation. These indices, k and l in the example, always sit next to each other and are the indices that are contracted. The advantage of the index notation is that it is unambiguous, but it may hide the physical structure of the underlying operations. In these notes, we will therefore intermix "dyadic" notation as in Eq. (5.8) and index notation as appropriate.

Note that there is also a double contraction, for example

$$\sigma_{ij} = C_{ijkl} \varepsilon_{kl}, \tag{5.12}$$

that in dyadic notation we would indicate with two dots:  $\underline{\sigma} = \underline{\underline{C}} : \underline{\varepsilon}$ . Each dot therefore represents a sum over some (hidden) index.

### 5.1 Rotating the stress tensor

#### 5.1.1 Rotating vectors

A rotation  $\mathcal{R}$  is a linear operation that does not affect the length (or norm) of the vector,  $|\mathcal{R}\vec{x}| = |\vec{x}|$ . Note that if  $\mathcal{R}$  is represented by a matrix  $\underline{R}$ , then

$$|\underline{R} \cdot \vec{x}| = (R_{ij}x_jR_{ik}x_k)^{1/2} = (x_jR_{ji}^TR_{ik}x_k)^{1/2} = \left(\vec{x} \cdot \underline{R}^T \cdot \underline{R} \cdot \vec{x}\right)^{1/2}$$
 (5.13)

which is is equal to  $|\vec{x}|$  only if  $\underline{R}^T \cdot \underline{R} = \underline{1}$ , i.e. if  $\underline{R}$  is an orthogonal matrix. Here the superscript T indicates the transpose operation,  $R_{ij}^T = R_{ji}$ , and  $\underline{1}$  is the unit matrix. Note that this relationship implies  $\underline{R}^{-1} = \underline{R}^T$ , i.e. the inverse of an orthogonal matrix is simply its transpose.

Let us assume we want to rotate from a coordinate system (basis vectors)  $\hat{x}$  and  $\hat{y}$  to the primed coordinate system  $\hat{x}'$  and  $\hat{y}'$ . Then the rotation should transform the basis vectors of the unprimed into the primed system,

$$\mathcal{R}\hat{x} = \hat{x}'$$
 and  $\mathcal{R}\hat{y} = \hat{y}'$ . (5.14)

From Eq. (5.9) we obtain the components of the rotation matrix as

$$\underline{R} = \begin{pmatrix} R_{xx} & R_{xy} \\ R_{yx} & R_{yy} \end{pmatrix} = \begin{pmatrix} \hat{x} \cdot \mathcal{R}\hat{x} & \hat{x} \cdot \mathcal{R}\hat{y} \\ \hat{y} \cdot \mathcal{R}\hat{x} & \hat{y} \cdot \mathcal{R}\hat{y} \end{pmatrix} = \begin{pmatrix} \hat{x} \cdot \hat{x}' & \hat{x} \cdot \hat{y}' \\ \hat{y} \cdot \hat{x}' & \hat{y} \cdot \hat{y}' \end{pmatrix}.$$
(5.15)

If all vectors are expressed in the coordinate system  $\hat{x}$  and  $\hat{y}$ , then those vectors have the simple representation given by Eq. (5.1) and the rotation matrix can be written as

$$\underline{R} = (\hat{x}', \hat{y}'), \tag{5.16}$$

i.e. we just stack the basis vectors as columns together to obtain  $\underline{R}$ . This is a simple prescription to construct the rotation matrix given the basis vectors of the rotated coordinate system (in terms of the original coordinate system). It is straightforward to see that  $\underline{R}$  is an orthogonal matrix,

$$\underline{R}^{T} \cdot \underline{R} = \begin{pmatrix} \hat{x}' \cdot \hat{x}' & \hat{x}' \cdot \hat{y}' \\ \hat{y}' \cdot \hat{x}' & \hat{y}' \cdot \hat{y}' \end{pmatrix} = \underline{1}, \tag{5.17}$$

if  $\hat{x}'$  and  $\hat{y}'$  are orthogonal vectors of unit length.

The basis vectors of a coordinate system rotated counterclockwise by an angle  $\theta$  are given by

$$\hat{x}' = \begin{pmatrix} \cos \theta \\ \sin \theta \end{pmatrix}$$
 and  $\hat{y}' = \begin{pmatrix} -\sin \theta \\ \cos \theta \end{pmatrix}$  (5.18)

and hence the rotation matrix is

$$\underline{R} = \begin{pmatrix} \cos \theta & -\sin \theta \\ \sin \theta & \cos \theta \end{pmatrix}. \tag{5.19}$$

It is straightforward to verify that indeed  $\underline{R}^T \cdot \underline{R} = \underline{1}$ .

#### 5.1.2 Rotating tensors

A tensor is a representation of a linear transformation: A tensor of order 2 (a matrix) transforms a tensor of order 1 (a vector) into another tensor of order 1. We have already encountered the Cauchy stress tensor  $\underline{\sigma}$  of solid mechanics. It transforms an area vector  $\vec{A}$  into a force vector  $\vec{F}$ ,

$$\vec{F} = \underline{\sigma} \cdot \vec{A}$$
 or in index notation  $F_i = \sigma_{ij} A_j$ . (5.20)

We describe  $\vec{F}$ ,  $\vec{A}$  and  $\underline{\sigma}$  in terms of their components, i.e. we describe a realization of the linear transformation (and the area and force vectors).

A rotation does not affect the effect of the linear transformation. Hence, if we change the coordinate system from  $\hat{x}$ ,  $\hat{y}$  to  $\hat{x}'$ ,  $\hat{y}'$ , then the component of our vector  $\vec{F}$  change to

$$F_x' = \vec{F} \cdot \hat{x}' = F_x \hat{x} \cdot \hat{x}' + F_y \hat{y} \cdot \hat{x}' \tag{5.21}$$

$$F_y' = \vec{F} \cdot \hat{y}' = F_y \hat{x} \cdot \hat{y}' + F_y \hat{y} \cdot \hat{y}'. \tag{5.22}$$

Comparing with Eq. (5.19) yields the compact notation

$$\vec{F}' = \underline{R}^T \cdot \vec{F}$$
 or in index notation  $F_i' = F_j R_{ji}$ . (5.23)

Note that the transpose shows up because  $\underline{R}$  describes the rotation of the basis and we are here rotating a vector expressed within this basis, which is the inverse operation.

Since we now understand how to rotate vectors, we can ask the question of how to rotate a tensor of order 2. Starting from Eq. (5.20) and using the inverse of Eq. (5.23), we write

$$\underline{R} \cdot \vec{F}' = \underline{\sigma} \cdot \left(\underline{R} \cdot \vec{A}'\right), \tag{5.24}$$

and multiply by  $\underline{R}^T$  from the left to yield

$$\vec{F}' = \left(\underline{R}^T \cdot \underline{\sigma} \cdot \underline{R}\right) \cdot \vec{A}'. \tag{5.25}$$

In the rotated coordinate system, the tensor attains the representation

$$\underline{\sigma}' = \underline{R}^T \cdot \underline{\sigma} \cdot \underline{R}$$
 or in index notation  $\sigma'_{ij} = \sigma_{kl} R_{ki} R_{lj}$  (5.26)

since this leave the expression for the linear transformation

$$\vec{F}' = \underline{\sigma}' \cdot \vec{A}'. \tag{5.27}$$

invariant. The trace and determinant of the rotated tensor are

$$\operatorname{tr}\underline{\sigma}' = \operatorname{tr}\left(\underline{R}^T \cdot \underline{\sigma} \cdot \underline{R}\right) = \operatorname{tr}\left(\underline{R} \cdot \underline{R}^T \cdot \underline{\sigma}\right) = \operatorname{tr}\underline{\sigma}$$
 (5.28)

$$\det \underline{\sigma}' = \det \left( \underline{R}^T \cdot \underline{\sigma} \cdot \underline{R} \right) = \det \left( \underline{R} \cdot \underline{R}^T \cdot \underline{\sigma} \right) = \det \underline{\sigma} \tag{5.29}$$

and hence invariant under rotation. Note that in general for an  $n \times n$  tensor, there are n invariants; more on this will be discussed below when talking about eigenvalues.

Since we now understand how to rotate tensors of order 2, we can ask the question how to rotate a tensor of order 4. As an example, we use the stiffness tensor  $\underline{\underline{C}}$ , that we will encounter in the next chapter. This tensor transforms a strain tensor  $\underline{\underline{c}}$  into a stress tensor  $\underline{\underline{\sigma}}$ ,

$$\underline{\sigma} = \underline{C} : \underline{\varepsilon}$$
 or in index notation  $\sigma_{ij} = C_{ijkl} \varepsilon_{kl}$ . (5.30)

We can rewrite this using the inverse of Eq. (5.26) as

$$\underline{R} \cdot \underline{\sigma}' \cdot \underline{R}^T = \underline{\underline{C}} : \left(\underline{R} \cdot \underline{\varepsilon}' \cdot \underline{R}^T\right) \quad \text{or} \quad R_{ik} R_{jl} \sigma'_{kl} = C_{ijkl} R_{km} R_{ln} \varepsilon'_{mn}, \quad (5.31)$$

which we now multiply from the left with  $\underline{R}^T$  and from the right with  $\underline{R}$ . This gives

$$\sigma'_{ij} = C_{mnop} R_{mi} R_{nj} R_{ok} R_{pl} \varepsilon'_{kl}, \tag{5.32}$$

and hence the transformation rule

$$C'_{ijkl} = C_{mnop} R_{mi} R_{nj} R_{ok} R_{pl}. (5.33)$$

Quantities that transform as Eqs. (5.23), (5.26) and (5.33) are called *tensors*.

### 5.2 Principal stresses

Let us discuss in more detail what happens if we rotate a symmetric tensor of order 2, i.e. a tensor that fulfills  $\underline{\sigma}^T = \underline{\sigma}$ . From Eq. (5.26) it is straightforward to see, that  $\underline{\sigma}'^T = \underline{\sigma}'$ , i.e. the transformed tensor is also symmetric.

We now explicitly write the rotation for the tensor

$$\underline{\sigma} = \begin{pmatrix} \sigma_{xx} & \sigma_{xy} \\ \sigma_{xy} & \sigma_{yy} \end{pmatrix}, \tag{5.34}$$

using the rotation matrix Eq. (5.19). This gives symmetric  $\underline{\sigma}' = \underline{R}^T \cdot \underline{\sigma} \cdot \underline{R}$  with the components

$$\sigma'_{xx} = \frac{1}{2}(\sigma_{xx} + \sigma_{yy}) + \frac{1}{2}(\sigma_{xx} - \sigma_{yy})\cos 2\theta + \sigma_{xy}\sin 2\theta \qquad (5.35)$$

$$\sigma'_{yy} = \frac{1}{2}(\sigma_{xx} + \sigma_{yy}) - \frac{1}{2}(\sigma_{xx} - \sigma_{yy})\cos 2\theta - \sigma_{xy}\sin 2\theta \qquad (5.36)$$

$$\sigma'_{xy} = -\frac{1}{2}(\sigma_{xx} - \sigma_{yy})\sin 2\theta + \sigma_{xy}\cos 2\theta. \tag{5.37}$$

There is a specific rotation angle  $\theta_0$  where the diagonal elements  $\sigma'_{xx}$  and  $\sigma'_{yy}$  become extremal. It is determined from  $\sigma'_{xx,\theta} = \sigma'_{yy,\theta} = 0$ ,

$$\tan 2\theta_0 = \frac{2\sigma_{xy}}{\sigma_{xx} - \sigma_{yy}}. (5.38)$$

At this rotation angle we find that the off-diagonal components vanish,  $\sigma'_{xy}(\theta_0) = 0$ , and the rotated matrix is diagonal,

$$\underline{\sigma} = \begin{pmatrix} \sigma_1 & 0 \\ 0 & \sigma_2 \end{pmatrix}, \tag{5.39}$$

with diagonal elements

$$\sigma_1 = \frac{\sigma_{xx} + \sigma_{yy}}{2} + \left[ \left( \frac{\sigma_{xx} - \sigma_{yy}}{2} \right)^2 + \sigma_{xy}^2 \right]^{1/2}$$
 (5.40)

$$\sigma_2 = \frac{\sigma_{xx} + \sigma_{yy}}{2} - \left[ \left( \frac{\sigma_{xx} - \sigma_{yy}}{2} \right)^2 + \sigma_{xy}^2 \right]^{1/2}. \tag{5.41}$$

This is the simplest example of the diagonalization of a matrix. The elements of the diagonalized Cauchy stress tensor,  $\sigma_1$  and  $\sigma_2$ , are called the *principal stresses*.

The diagonalization of a symmetric matrix always corresponds to the rotation into a new coordinate system. We have explictly shown this for the two-dimensional case here and will now show it in more generality for the three-dimensional case. In this process, we will encounter the concept of a stress invariant.

#### 5.3 Stress invariants

Equation (5.39) fulfills the eigenvalue equations  $\underline{\sigma} \cdot \hat{x} = \sigma_1 \hat{x}$  and  $\underline{\sigma} \cdot \hat{y} = \sigma_2 \hat{y}$ . Rather than explicitly computing a rotation, we can ask the question whether

we can find a scalar  $\lambda$  and a vector  $\vec{v}$  that fulfills the eigenvalue equation

$$\sigma \cdot \vec{v} = \lambda \vec{v}. \tag{5.42}$$

This equation of course has the trivial solution  $\vec{v} = 0$ . It can only have a nontrivial solution if

$$\det\left(\sigma - \lambda 1\right) = 0. \tag{5.43}$$

For a  $n \times n$  matrix, Eq. (5.43) leads to a polynomial of order n in  $\lambda$  with n (possibly complex valued) solutions.

For the case of a symmetric  $3 \times 3$  matrix, we can write this down explicitly as

$$\det \begin{pmatrix} \sigma_{xx} - \lambda & \sigma_{xy} & \sigma_{xz} \\ \sigma_{xy} & \sigma_{yy} - \lambda & \sigma_{yz} \\ \sigma_{xz} & \sigma_{yz} & \sigma_{zz} - \lambda \end{pmatrix} = -\lambda^3 + I_1 \lambda^2 - I_2 \lambda + I_3 = 0 \quad (5.44)$$

with

$$I_1 = \operatorname{tr} \underline{\sigma} = \sigma_{xx} + \sigma_{yy} + \sigma_{zz} \tag{5.45}$$

$$I_1 = \sigma_{yy} = \sigma_{xx} + \sigma_{yy} + \sigma_{zz}$$

$$I_2 = \sigma_{yy} \sigma_{zz} + \sigma_{xx} \sigma_{zz} + \sigma_{xx} \sigma_{yy} - \sigma_{yz}^2 - \sigma_{xz}^2 - \sigma_{xy}^2$$

$$(5.46)$$

$$I_3 = \det \underline{\sigma} \tag{5.47}$$

The quantities  $I_1$  to  $I_3$  are called *invariants*. We have shown above explicitly that the trace and the determinant are invariant under rotation. The same holds true for all coefficients of the characteristic polynomial (two of which are actually trace and determinant). This is because

$$\det\left(\underline{R}^T \cdot \underline{\sigma} \cdot \underline{R} - \lambda \underline{1}\right) = \det\left[\underline{R}^T \cdot (\underline{\sigma} - \lambda \underline{1}) \cdot \underline{R}\right] = \det\left(\underline{\sigma} - \lambda \underline{1}\right). \quad (5.48)$$

The 3-dimensional tensor therefore has three invariants. These invariants have important physical interpretations. For the stress tensor,  $I_1$  is related to the hydrostatic stress and  $I_2$  to the shear stress.

Note that for a diagonal matrix,

$$\underline{\sigma}' = \begin{pmatrix} \sigma_1 & 0 & 0 \\ 0 & \sigma_2 & 0 \\ 0 & 0 & \sigma_3 \end{pmatrix}, \tag{5.49}$$

the invariants are

$$I_1 = \sigma_1 + \sigma_2 + \sigma_3 \tag{5.50}$$

$$I_2 = \sigma_1 \sigma_2 + \sigma_1 \sigma_3 + \sigma_2 \sigma_3 \tag{5.51}$$

$$I_3 = \sigma_1 \sigma_2 \sigma_3. \tag{5.52}$$

By equating Eqs. (5.45) to (5.47) with Eqs. (5.50) to (5.52) we can calculate the eigenvalues  $\sigma_1$ ,  $\sigma_2$  and  $\sigma_3$ .

Once we have computed the eigenvalues, we can obtain the corresponding eigenvectors by solving

$$\underline{\sigma}\vec{v}_1 = \sigma_1\vec{v}_1, \quad \underline{\sigma}\vec{v}_2 = \sigma_2\vec{v}_2, \quad \text{and} \quad \underline{\sigma}\vec{v}_3 = \sigma_3\vec{v}_3.$$
 (5.53)

Note that the expressions only determine the direction of  $\vec{v}_i$ , not its length, and we are free to require  $|\vec{v}_i| = 1$ . Furthermore, let us regard scalar products  $\vec{v}_1 \cdot \vec{v}_2$ , then

$$\sigma_1 \vec{v}_1 \cdot \vec{v}_2 = (\underline{\sigma} \cdot \vec{v}_1) \cdot \vec{v}_2 = \vec{v}_1 \cdot (\underline{\sigma}^T \cdot \vec{v}_2) = \vec{v}_1 \cdot (\underline{\sigma} \cdot \vec{v}_2) = \sigma_2 \vec{v}_1 \cdot \vec{v}_2$$
 (5.54)

and if  $\sigma_1 \neq \sigma_2$  we must have  $\vec{v}_1 \cdot \vec{v}_2 = 0$ . Hence the eigenvectors of a symmetric matrix are orthonormal, or in other words, they form the basis of a coordinate system.

We can write Eq. (5.53) in the more compact notation

$$\underline{\sigma} \cdot \underline{R} = \begin{pmatrix} \sigma_1 & 0 & 0 \\ 0 & \sigma_2 & 0 \\ 0 & 0 & \sigma_3 \end{pmatrix} \cdot \underline{R} \tag{5.55}$$

with  $\underline{R} = (\vec{v}_1, \vec{v}_2, \vec{v}_3)$ . Multiplying from the left with  $\underline{R}^{-1} = \underline{R}^T$  (this holds because the eigenvectors are orthonormal) we get

$$\underline{R}^T \cdot \underline{\sigma} \cdot \underline{R} = \begin{pmatrix} \sigma_1 & 0 & 0 \\ 0 & \sigma_2 & 0 \\ 0 & 0 & \sigma_3 \end{pmatrix}. \tag{5.56}$$

This is nothing else than a coordinate transformation (rotation) of the tensor  $\underline{\sigma}$ . Since the diagonalization of a symmetric matrix leads to orthonormal eigenvectors, the diagonalization is a rotation of the coordinate system.

### 5.4 Hydrostatic and deviatoric stress

We call  $\sigma_h = \text{tr} \, \underline{\sigma}/3 = I_1/3$  the hydrostatic stress. It is the stress measure that tells us about volume expansion and contraction. The pressure is the negative of the hydrostatic stress,  $p = -\sigma_h$ . Our sign convention is such that positive stresses (negative pressures) mean tension and negative stresses (positive pressures) compression.

Using the hydrostatic stress, we can construct yet another stress tensor that quantifies the *deviation* from a pure hydrostatic condition with stress  $\sigma_h \underline{1}$ . We define

$$\underline{s} = \underline{\sigma} - \sigma_h \underline{1},\tag{5.57}$$

the deviatoric stress. Note that this tensor is constructed such that  $\operatorname{tr} \underline{s} = 0$ . The invariants of the deviatoric stress are commonly denoted by the symbol J. We already know that  $J_1 = 0$  by construction. The second invariant is given by

$$J_{2} = \frac{1}{6} \left[ (\sigma_{1} - \sigma_{2})^{2} + (\sigma_{2} - \sigma_{3})^{2} + (\sigma_{1} - \sigma_{3})^{2} \right]$$

$$= \frac{1}{6} \left[ (\sigma_{xx} - \sigma_{yy})^{2} + (\sigma_{yy} - \sigma_{zz})^{2} + (\sigma_{xx} - \sigma_{zz})^{2} + 6(\sigma_{xy}^{2} + \sigma_{yz}^{2} + \sigma_{xz}^{2}) \right].$$
(5.58)

From this invariant we can derive the *von-Mises stress*  $\sigma_{vM} = \sqrt{3J_2}$ . The von-Mises stress characterizes the pure shear contribution to the stress. The second invariant of the deviatoric stress plays an important role in plasticity models, where it is often assumed that a material flows when the von-Moses stress exceeds a certain threshold.

### Chapter 6

# Strain and displacement

### 6.1 Displacement

The displacement field  $\vec{u}(\vec{r})$  describes how a point on our solid body moves during deformation. For a rigid body  $\vec{u} \equiv 0$ , but for a deformable body we obtain finite displacements during deformation. The point  $\vec{r}$  then moves to the point  $\vec{r}'(\vec{r}) = \vec{r} + \vec{u}(\vec{r})$ . The displacement field  $\vec{u}(\vec{r}) = \vec{r} - \vec{r}'(\vec{r})$  is hence the difference of the deformed ("displaced") point to its reference position  $\vec{r}$ . Note that the displacement field itself is defined as a function of this reference position  $\vec{r}$ .

#### 6.2 Strain

The strain field in the small strain approximation is given by the symmetrized gradient of  $\vec{u}(\vec{r})$ ,

$$\underline{\varepsilon}(\vec{r}) = \frac{1}{2} \left( \nabla \vec{u} + (\nabla \vec{u})^T \right). \tag{6.1}$$

The left hand side of Eq. (6.1) contains the gradient of a vector field,  $\nabla \vec{u}$ , which is a second rank tensor,

$$\nabla \vec{u} = \begin{pmatrix} \frac{\partial u_x}{\partial x} & \frac{\partial u_x}{\partial y} & \frac{\partial u_x}{\partial z} \\ \frac{\partial u_y}{\partial x} & \frac{\partial u_y}{\partial y} & \frac{\partial u_y}{\partial z} \\ \frac{\partial u_z}{\partial x} & \frac{\partial u_z}{\partial y} & \frac{\partial u_z}{\partial z} \end{pmatrix}, \tag{6.2}$$

whose components are given by  $[\nabla \vec{u}]_{ij} = \partial u_i/\partial r_j = u_{i,j}$ . It is *not* the divergence,  $\nabla \cdot \vec{u}$  which would give a scalar. This potential source of confusion can be avoided by writing the equation in the component-wise notation,

$$\varepsilon_{ij} = \frac{1}{2}(\partial_i u_j + \partial_j u_i) = \frac{1}{2}(u_{j,i} + u_{i,j}). \tag{6.3}$$

(Note that these expression do not contain a sum since there is no repeated index.)

The geometric interpretation of the strain is that is converts a vector  $\vec{r}$  that has a direction and length into the change this vector undergoes under deformation:  $\vec{u} = \underline{\varepsilon} \cdot \vec{r}$  with the new (transformed) vector  $\vec{r}' = \vec{r} + \vec{u} = (1 + \underline{\varepsilon}) \cdot \vec{r}$ . In terms of thinking about tensors as a representation of a linear transformation, the strain tensor transforms a position into a displacement. The strain tensor is dimensionless.

## Chapter 7

## Hooke's law

#### 7.1 General form

In order to compute the deformation of an elastic body, we need a constitutive relation (material law) to close the equations of elastostatic equilibrium,

$$\nabla \cdot \underline{\sigma} = 0 \quad \text{and} \quad \underline{\varepsilon}(\vec{r}) = \frac{1}{2} \left( \nabla \vec{u} + (\nabla \vec{u})^T \right).$$
 (7.1)

Since we will be working in linear elasticity, the constitutive equation is a linear relationship between  $\underline{\sigma}$  and  $\underline{\varepsilon}$ . The most general form of this linear relationship is

$$\underline{\underline{\sigma}} = \underline{\underline{C}} : \underline{\varepsilon}$$
, or using Einstein summation  $\sigma_{ij} = C_{ijkl} \varepsilon_{kl}$ . (7.2)

It is called Hooke's law. The quantity  $\underline{\underline{C}}$  is a fourth order symmetric tensor of elastic constants that contains at most 21 independent elastic moduli. To see that there are only 21 independent coefficients, it is useful to remove the symmetric entries from  $\underline{\sigma}$  and  $\underline{\varepsilon}$  and express them as 6-vectors in what is called  $Voigt\ notation$ ,

$$\vec{\sigma} = (\sigma_{xx}, \sigma_{yy}, \sigma_{zz}, \sigma_{yz}, \sigma_{xz}, \sigma_{xy}) \tag{7.3}$$

and

$$\vec{\varepsilon} = (\varepsilon_{xx}, \varepsilon_{yy}, \varepsilon_{zz}, 2\varepsilon_{yz}, 2\varepsilon_{xz}, 2\varepsilon_{xy}). \tag{7.4}$$

Then  $\sigma = \underline{C} \cdot \vec{\varepsilon}$  where  $\underline{C}$  is a  $6 \times 6$  symmetric matrix called the *stiffness matrix* containing the above-mentioned 21 independent elastic constants. (There are  $6 \cdot 6 = 36$  components, but the matrix is symmetric.)

Note that the off-diagonal components of  $\underline{\sigma}$  are often denoted by  $\tau_{xy} \equiv \sigma_{xy}, \tau_{xz} \equiv \sigma_{xz}$  and  $\tau_{yz} \equiv \sigma_{yz}$ . The off-diagonal components of  $\underline{\varepsilon}$  are often

denoted by  $\gamma_{xy} \equiv 2\varepsilon_{xy}$ ,  $\gamma_{xz} \equiv 2\varepsilon_{xz}$  and  $\gamma_{yz} \equiv 2\varepsilon_{yz}$  and absorb the factor of 2 that occurs in Eq. (7.4). Voigt notation then becomes

$$\vec{\sigma} = (\sigma_{xx}, \sigma_{yy}, \sigma_{zz}, \tau_{yz}, \tau_{xz}, \tau_{xy}) \tag{7.5}$$

and

$$\vec{\varepsilon} = (\varepsilon_{xx}, \varepsilon_{yy}, \varepsilon_{zz}, \gamma_{yz}, \gamma_{xz}, \gamma_{xy}). \tag{7.6}$$

<u>Note:</u> It is important to keep in mind that the  $\gamma$ 's contain a factor 2 but the  $\tau$ 's do not. The factor of 2 ensures that  $\vec{\sigma} = \underline{C} \cdot \vec{\varepsilon}$  and  $\underline{\sigma} = \underline{\underline{C}} : \underline{\varepsilon}$  are the same constitutive law.

### 7.2 Isotropic solids

For isotropic elasticity, the total 21 independent elastic constants reduce to two. The constitutive equation for isotropic elasticity is

$$\sigma_{ij} = \lambda \delta_{ij} \varepsilon_{kk} + 2\mu \varepsilon_{ij} \tag{7.7}$$

or its inverse

$$\varepsilon_{ij} = \frac{1}{2G}\sigma_{ij} - \frac{\nu}{E}\delta_{ij}\delta_{kk} = \frac{1}{E}[(1+\nu)\sigma_{ij} - \nu\delta_{ij}\sigma_{kk}], \tag{7.8}$$

where  $\delta_{ij}$  is the Kronecker-Delta. These expressions have been conveniently written in their most simple form. The constants that show up in Eqs. (7.7) and (7.8) are the shear modulus  $\mu$ , Lamé's first constant  $\lambda$ , Young's modulus E and Poisson number  $\nu$ . Both  $\lambda$  and  $\nu$  are often called Lamé's constants. Note that  $\sigma_{kk} = 3\sigma_h$  (Einstein summation!) where  $\sigma_h$  is the hydrostatic stress.

The four moduli are not independent (only two are), and the following expressions relate the pairs  $\lambda$ ,  $\mu$  and E,  $\nu$  to each other:

$$\lambda = \frac{E\nu}{(1+\nu)(1-2\nu)}\tag{7.9}$$

$$\mu = \frac{E}{2(1+\nu)} \tag{7.10}$$

$$\lambda + \mu = \frac{E}{2(1+\nu)(1-2\nu)}$$
 (7.11)

$$E = \frac{\mu(3\lambda + 2\mu)}{\lambda + \mu} \tag{7.12}$$

$$\nu = \frac{\lambda}{2(\lambda + \mu)} \tag{7.13}$$

Note that another common symbol for the shear modulus  $\mu$  is the Latin letter G

The volumetric strain  $\varepsilon_h = \frac{1}{3} \operatorname{tr} \underline{\varepsilon} = \frac{1}{E}[(1+\nu)\sigma_h - 3\nu\sigma_h] = \frac{1}{E}(1-2\nu)\sigma_h$  vanishes at  $\nu = 1/2$ . In this case,  $\sigma_{ij} = 2\sigma_h\varepsilon_{ij}$  because the  $\varepsilon_h = \varepsilon_{kk}$  must vanish.

We can also write down a free energy functional (often also called a hyperelastic energy density), which is quadratic in the strain  $\underline{\varepsilon}$ ,

$$W = \frac{1}{2}\lambda\varepsilon_{ii}^2 + \mu\varepsilon_{ij}^2 \tag{7.14}$$

Using  $\sigma_{ij} = \partial W/\partial \varepsilon_{ij}$  recovers the above constitutive expression Eq. (7.7). From the free energy functional we see that any isotropic material must have  $\lambda > 0$  and  $\mu > 0$ , otherwise the energy could be made arbitrarily small by increasing the deformation of the solid. This limits the Poisson number to the range  $-1 < \nu < 1/2$ . Note that  $\nu < 0$  is typically only achieved for architectured materials such as foams or metamaterials.

### 7.3 Example: Auxetic materials

## Chapter 8

# Plane problems

Plane problems are problems where the system has a symmetry in a certain direction. We will here use the y-direction as the direction in which the plane conditions hold. This symmetry implies that the relevant quantities do not vary in y-direction. Note that throughout this text, we will switch this direction.

#### 8.1 Plane strain

For a plane strain situation, the system cannot elongate or shrink in that direction and hence  $\varepsilon_{yy} = 0$ . From Hooke's law for isotropic elasticity,

$$\varepsilon_{ij} = \frac{1}{E} [(1+\nu)\sigma_{ij} - \nu \delta_{ij}\sigma_{kk}], \qquad (8.1)$$

we see that

$$\varepsilon_{yy} = \frac{1+\nu}{E}\sigma_{yy} - \frac{\nu}{E}(\sigma_{xx} + \sigma_{yy} + \sigma_{zz}) = 0$$
 (8.2)

and hence

$$\sigma_{yy} = \nu(\sigma_{xx} + \sigma_{zz}). \tag{8.3}$$

With the two relations for  $\varepsilon_{yy}$  and  $\sigma_{yy}$  we can express Hooke's law as

$$\varepsilon_{xx} = \frac{1 - \nu^2}{E} \sigma_{xx} - \frac{\nu(1 + \nu)}{E} \sigma_{zz} \tag{8.4}$$

$$\varepsilon_{zz} = -\frac{\nu(1+\nu)}{E}\sigma_{xx} + \frac{1-\nu^2}{E}\sigma_{zz}$$
 (8.5)

and its inverse

$$\sigma_{xx} = (\lambda + 2\nu)\varepsilon_{xx} + \lambda\varepsilon_{zz} \tag{8.6}$$

$$\sigma_{zz} = \lambda \varepsilon_{xx} + (\lambda + 2\mu)\varepsilon_{zz} \tag{8.7}$$

Note that the condition for elastic equilibrium becomes (in Cartesian coordinates)

$$\frac{\partial \sigma_{xx}}{\partial x} + \frac{\partial \sigma_{xz}}{\partial z} = 0 \tag{8.8}$$

$$\frac{\partial \sigma_{zz}}{\partial z} + \frac{\partial \sigma_{xz}}{\partial x} = 0. \tag{8.9}$$

#### 8.2 Plane stress conditions

For plane stress we consider a situation with  $\sigma_{yy} = 0$ , i.e. there is no stress in the y-direction. This is a good approximation for example for a thin plate. In this limit, Hooke's law becomes

$$\varepsilon_{xx} = \frac{1}{E} (\sigma_{xx} - \nu \sigma_{zz}) \tag{8.10}$$

$$\varepsilon_{zz} = \frac{1}{E}(-\nu\sigma_{xx} + \sigma_{zz}) \tag{8.11}$$

and its inverse

$$\sigma_{xx} = \frac{E}{1 - \nu^2} (\varepsilon_{xx} + \nu \varepsilon_{zz}) \tag{8.12}$$

$$\sigma_{zz} = \frac{E}{1 - \nu^2} (\nu \varepsilon_{xx} + \varepsilon_{zz}). \tag{8.13}$$

Note that plane strain and plane stress are described by the same set of differential equations but with different elastic moduli. We can convert the plane stress Eqs. (8.10)-(8.13) to the corresponding plane strain equation by substituting the elastic constants,

$$E \to \frac{E}{1-\nu^2}$$
 and  $\nu \to \frac{\nu}{1-\nu}$ . (8.14)

Hence any plane stress solution can be converted into a plane strain solution using this substitution. In the following, we will continue to work with the plane stress expression (because they are simpler), but all results carry over to plane strain with this substitution.

### 8.3 Compatibility condition

Another condition to be fulfilled is the *compatibility condition*. For plane problems, the compatibility conditions is the single equation:

$$\frac{\partial^2 \varepsilon_{xx}}{\partial z^2} + \frac{\partial^2 \varepsilon_{zz}}{\partial x^2} = 2 \frac{\partial^2 \varepsilon_{xz}}{\partial x \partial z}$$
 (8.15)

That it must hold is easily seen by expressing the strain in terms of the displacements  $\vec{u}$ . It is therefore a consequence of the fact that the strain field is the gradient of the displacement field. It is similar to the well-known condition that the curl of a gradient has to disappear.

The compatibility condition has a simple geometric explanation. Imaging a jigsaw puzzle that you deform in its assembled state. Even in the deformed state, all pieces still have to fit together. They deformation of neighboring pieces can therefore not be independent of each other.

## Chapter 9

## Beams

#### 9.1 Stresses

Assume a rectangular beam in plane stress or plane strain subject to bending. (The "plane" direction is the y-direction.) The surface normal of the beam is oriented in z-direction and z=0 is in the middle of the beam. Bending will give rise to internal stresses inside of the beam. We will require that these stresses comply with the external shear force Q(x) and bending moment M(x) in the weak or integral sense,

$$Q(x) = \int_{A} dy dz \, \tau_{xz}(x, z) \tag{9.1}$$

$$M(x) = \int_{A} dy dz z \sigma_{xx}(x, z). \tag{9.2}$$

Because of the plane state, integration in y-direction will only yield a constant factor, the width t of the beam.

We can derive a condition equivalent to static equilibrium,  $\sigma_{ij,j} = 0$ , for the weak quantities defined in Eqs. (9.1) and (9.2). Taking the derivative of Q(x) yields

$$Q_{,x} = \int_{A} dy dz \, \tau_{xz,x} = -\int_{A} dy dz \, \sigma_{zz,z} = -t \left[ \sigma_{zz}(x, h/2) - \sigma_{zz}(x, -h/2) \right].$$
(9.3)

We call the quantity  $q(x) \equiv t \left[ \sigma_{zz}(x, h/2) - \sigma_{zz}(x, -h/2) \right]$  the line load of the beam. Next, we take the derivative of M(x),

$$M_{,x} = \int_{A} dy dz z \sigma_{xx,x} = -\int_{A} dy dz z \tau_{xz,z} = -t \left[ z \tau_{xz} \right]_{-h/2}^{h/2} + \int_{A} dy dz z \tau_{xz}.$$
(9.4)

The first term on the right hand side vanishes because the surfaces are traction free,  $\tau_{xz} = 0$  at z = h/2 and z = -h/2. This yields

$$Q_{,x} = -q(x) \tag{9.5}$$

$$M_{,x} = Q(x) \tag{9.6}$$

for the weak form of the equilibrium conditions.

**Note:** We have not yet talked about free surfaces, but of course every physical object will be bounded by surfaces. The surface can be loaded, i.e. there can a force acting on it. This force, normalized by area, is called a tractions. (We have already encountered a type of traction in form of the line load in the first chapters.) The traction is a vector field (defined over the surface of our object) with components  $t_x$ ,  $t_y$  and  $t_z$ . Note that in the literature these are often denoted by P for the normal component, and  $Q_x$ ,  $Q_y$  for the components perpendicular to the surface. (Attention: Do not confuse this with the Q that we call the shear force here!)

These traction enter our equations as boundary condition. They fix three components of the stress tensor at the surface. For a surface with a normal in z-direction,

$$\sigma_{zz} = -t_z, \quad \sigma_{xz} = t_x \quad \text{and} \quad \sigma_{yz} = t_y.$$
 (9.7)

For a traction-free surface,

$$\sigma_{zz} = \sigma_{xz} = \sigma_{yz} = 0 \tag{9.8}$$

at the surface. Since the stress-tensor is a tensor field that varies throughout the body, these components will of course deviate from the surface tractions when we regard points in the interior of our (deformed) body.

We now assume that the stress is a linear function of the position z perpendicular to the beam axis,

$$\sigma_{xx}(x,z) = C(x)z. \tag{9.9}$$

In what follow we show that this is a good assumption, i.e. we can fulfill force and moment equilibrium and the resulting strains fulfill the compatibility conditions. Note: The theory derived in this chapter is commonly referred to as the Euler-Bernoulli beam theory. The starting point of this theory is typically not Eq. (9.9), but the assumption that each cross section will remain plane and undergo small rotations during deformation. These are sometimes called the Bernoulli assumptions. They imply that the strain  $\varepsilon_{xx} \propto z$  rather than the stress. It is often argued that  $\sigma_{xx} = E\varepsilon_{xx}$  but this of course ignores the other components of the strain tensor. As will be seen below, the Bernoulli assumptions are actually wrong but assuming a linear stress profile leads to the correct small strain expression for the deformation of a beam.

It is straightforward to compute the bending moment,

$$M(x) = \int_{A} dy \, dz \, \sigma_{xx}(x, z) z = C(x) \int_{A} dy \, dz \, z^{2} = C(x) I_{y}, \qquad (9.10)$$

where A is the cross-section of the beam and

$$I_y = \int_A \mathrm{d}y \,\mathrm{d}z \,z^2 \tag{9.11}$$

is the axial moment of inertia. For a rectangular beam of height h and width t,  $I_y = h^3 t/12$ . The moment of inertia is a geometric factor and depends on the shape of the cross-section of the beam.

We can rewrite Eq. (9.9) as

$$\sigma_{xx}(x,z) = \frac{M(x)}{I_y}z. \tag{9.12}$$

Note that an additional longitudinal force L will simple be an additive contribution to Eq. (9.12),  $\sigma_{xx}(x,z) = M(x)/I_yz + L/A$ .

We can now use the condition for static equilibrium to compute the full stress tensor  $\underline{\sigma}$ . From  $\sigma_{xx,x} + \tau_{xz,z} = 0$  we obtain

$$\tau_{xz,z} = -\frac{z}{I_y} M_{,x} = -\frac{z}{I_y} Q(x). \tag{9.13}$$

We can integrate this across the height h of the beam, keeping in mind that  $\tau_{xz} = 0$  at a traction-free surface, to yield

$$\tau_{xz}(x,z) = \frac{Q(x)}{2I_y} \left(\frac{h^2}{4} - z^2\right).$$
(9.14)

Next, we use  $\sigma_{zz,z} + \tau_{xz,x} = 0$  to obtain

$$\sigma_{zz,z} = -\frac{1}{2I_y}Q_{,x}\left(\frac{h^2}{4} - z^2\right) = \frac{q(x)}{2I_y}\left(\frac{h^2}{4} - z^2\right).$$
 (9.15)

We need to integrate this equation again, but now  $\sigma_{zz} \neq 0$  at the surface since the beam is subject to a line load q(x). Rather, we need the condition that the loads on top and bottom surface of the beam balance,  $\sigma_{zz}(x, h/2) = -\sigma_{zz}(x, -h/2)$ . This gives

$$\sigma_{zz}(x,z) = \frac{q(x)}{2I_y} \left(\frac{h^2}{4} - \frac{z^2}{3}\right) z$$
 (9.16)

with

$$\sigma_{zz}(x, h/2) = \frac{q(x)h^3}{24I_u} = \frac{q(x)}{2t}$$
(9.17)

where t is the width of the beam.

Note that in this derivation, we have required that the stress gives rise to a certain bending moment through Eq. (9.10). Since we do not prescribe the specific stress state  $\sigma_{xx}(x,z)$  but only its integral, this is a *weak* condition. Similarly, integration of Eq. (9.14) in accordance with Eq. (9.1) gives

$$\int_{-t/2}^{t/2} dy \int_{-h/2}^{h/2} dz \, \tau_{xz}(x, z) = Q(x), \tag{9.18}$$

i.e. the force acting on the cross-section at position x along the beam. Again, this condition is fulfilled in the integral, i.e. in the weak sense.

### 9.2 Displacements

Now that we know the stress inside the beam, we can compute the displacement and thereby the deformation of the beam from Hooke's law. Starting from Hooke's law (in plain stress, i.e. for  $\sigma_{yy} = 0$ ),

$$\varepsilon_{xx} \equiv u_{x,x} = \sigma_{xx}/E - \nu \sigma_{zz}/E$$
 (9.19)

$$2\varepsilon_{xz} \equiv u_{x,z} + u_{z,x} = 2(1+\nu)\tau_{xz}/E, \tag{9.20}$$

and taking the derivative of Eq. (9.20) with respect to x, we obtain

$$u_{x,xz} + u_{z,xx} = 2(1+\nu)\tau_{xz,x}/E \tag{9.21}$$

and

$$u_{x,xz} + u_{z,xx} = \partial_z(u_{x,x}) + u_{z,xx} = u_{z,xx} + (\sigma_{xx,z} - \nu \sigma_{zz,z})/E.$$
 (9.22)

Combining these two equations yields

$$u_{z,xx} = \left[ 2(1+\nu)\tau_{xz,x} - \sigma_{xx,z} + \nu\sigma_{zz,z} \right] / E, \tag{9.23}$$

where we now insert Eqs. (9.12), (9.14) and (9.16). This gives

$$u_{z,xx} = \frac{1}{EI_y} \left[ -\left(1 + \frac{\nu}{2}\right) \left(\frac{h^2}{4} - z^2\right) q(x) - M(x) \right],$$
 (9.24)

which at the surface of the beam  $w(x) = u_z(x, h/2)$  becomes

$$EI_y w_{,xx} = -M(x). (9.25)$$

This equation is called the Euler-Bernoulli beam equation. By using  $M_{xx} = -q(x)$  we can write this as

$$(EI_y w_{,xx})_{,xx} = q(x),$$
 (9.26)

in terms of the line load q(x), or

$$EI_{y}w_{,xxxx} = q(x), (9.27)$$

if  $EI_y$  does not depend on position x.

## 9.3 Buckling

## Chapter 10

## **Plates**

#### 10.1 Stress

Kirchhoff plate theory is the straightforward generalization of Euler-Bernoulli beam theory to plates. We abandon the plane situation in which all derivatives in y-direction vanish. The weak boundary conditions then become

$$Q_x(x,y) = \int_h dz \, \tau_{xz}(x,y,z)$$
 (10.1)

$$Q_y(x,y) = \int_b dz \, \tau_{yz}(x,y,z) \tag{10.2}$$

$$M_{xx}(x,y) = \int_h dz \, z \sigma_{xx}(x,y,z)$$
 (10.3)

$$M_{yy}(x,y) = \int_{b} dz \, z \sigma_{yy}(x,y,z) \tag{10.4}$$

$$M_{xy}(x,y) = \int_h dz \, z \tau_{xy}(x,y,z),$$
 (10.5)

where the integral is over the height h of the plate.  $Q_x$  and  $Q_y$  are called shear forces,  $M_{xx}$  and  $M_{yy}$  are bending moments and  $M_{xy}$  is the torsional moment.

Note that employing static equilibrium  $\sigma_{ij,j} = 0$  we obtain

$$Q_{x,x} + Q_{y,y} = \int_{-h/2}^{h/2} dz \left( \tau_{zx,x} + \tau_{zy,y} \right) = -\int_{-h/2}^{h/2} dz \, \tau_{zz,z}$$
 (10.6)

but

$$\int_{-h/2}^{h/2} dz \, \tau_{zz,z} = \tau_{zz}(x, y, h/2) - \tau_{zz}(x, y, -h/2) \equiv p(x, y)$$
 (10.7)

where p(x, y) is the pressure on the plate (cf. also the corresponding equation Eq. (9.17) for the beam). Similarly

$$M_{xx,x} + M_{xy,y} = \int_{-h/2}^{h/2} dz \, z \left( \tau_{xx,x} + \tau_{xy,y} \right) = -\int_{-h/2}^{h/2} dz \, z \tau_{xz,z}$$
 (10.8)

and

$$\int_{-h/2}^{h/2} dz \, z \tau_{xz,z} = \left[ z \tau_{xz} \right]_{-h/2}^{h/2} - \int_{-h/2}^{h/2} dz \, \tau_{xz} = -Q_x.$$
 (10.9)

where the last equality holds because  $\tau_{xz}(x, y, h/2) = -\tau_{xz}(x, y, -h/2)$ . The condition for static equilibrium  $\sigma_{ij,j} = 0$  therefore becomes

$$Q_{x,x} + Q_{y,y} = -p(x,y) (10.10)$$

$$M_{xx,x} + M_{xy,y} = Q_x(x,y)$$
 (10.11)

$$M_{xy,x} + M_{yy,y} = Q_y(x,y)$$
 (10.12)

in the weak form. Note that this can be written in the compact form  $Q_{i,i} = -p$  and  $M_{ij,j} = Q_i$ .

As in the Euler-Bernoulli case, we assume that the components  $\sigma_{xx}$ ,  $\sigma_{yy}$  and  $\tau_{xy}$  vary linearly with z. We can write

$$\sigma_{xx}(x,y,z) = \frac{M_{xx}(x,y)}{I}z \tag{10.13}$$

$$\sigma_{yy}(x,y,z) = \frac{M_{yy}(x,y)}{I}z\tag{10.14}$$

$$\tau_{xy}(x, y, z) = \frac{M_{xy}(x, y)}{I} z$$
(10.15)

with  $I = \int dz \, z^2 = h^3/12$ . The remaining components of the stress tensor are obtained from static equilibrium. Static equilibrium yields

$$\tau_{xz,z} = -\frac{z}{I}Q_x \quad \text{and} \quad \tau_{yz,z} = -\frac{z}{I}Q_y$$
(10.16)

which can be integrated under the condition  $\tau_{xz}(x,y,h/2) = \tau_{xz}(x,y,-h/2) = 0$  to

$$\tau_{xz}(x,y,z) = \frac{Q_x}{2I} \left(\frac{h^2}{4} - z^2\right) \quad \text{and} \quad \tau_{yz}(x,y,z) = \frac{Q_y}{2I} \left(\frac{h^2}{4} - z^2\right). (10.17)$$

This is analogous to Eq. (9.14) for the beam.

We are finally left with finding an expression for  $\sigma_{zz}$ . Again we use static equilibrium to obtain

$$\sigma_{zz,z} = -\tau_{xz,x} - \tau_{yz,y} = \frac{p(x,y)}{2I} \left(\frac{h^2}{4} - z^2\right).$$
 (10.18)

Integration under the condition that the loads on top and bottom surface of the plate balance,  $\sigma_{zz}(x, h/2) = -\sigma_{zz}(x, -h/2)$ , gives

$$\sigma_{zz}(x,y,z) = \frac{p(x,y)}{2I} \left(\frac{h^2}{4} - \frac{z^2}{3}\right) z.$$
 (10.19)

At the top and bottom of the plate we find  $\sigma_{zz}(x, h/2) = -\sigma_{zz}(x, -h/2) = p(x, y)/2$ .

### 10.2 Displacements

Now that we know the stress inside the plate, we can again compute the displacements from Hooke's law. In the full three-dimensional case, Hooke's law,

$$\varepsilon_{xx} \equiv u_{x,x} = (\sigma_{xx} - \nu \sigma_{yy} - \nu \sigma_{zz})/E \tag{10.20}$$

$$\varepsilon_{yy} \equiv u_{y,y} = (\sigma_{yy} - \nu \sigma_{xx} - \nu \sigma_{zz})/E$$
 (10.21)

$$2\varepsilon_{xz} \equiv u_{x,z} + u_{z,x} = 2(1+\nu)\tau_{xz}/E \tag{10.22}$$

$$2\varepsilon_{yz} \equiv u_{y,z} + u_{z,y} = 2(1+\nu)\tau_{yz}/E$$
 (10.23)

$$2\varepsilon_{xy} \equiv u_{x,y} + u_{y,x} = 2(1+\nu)\tau_{xy}/E,$$
 (10.24)

and taking the derivative of Eq. (10.22) with respect to x and of Eq. (10.23) with respect to y, we obtain

$$u_{x,xz} + u_{z,xx} = 2(1+\nu)\tau_{xz,x}/E \tag{10.25}$$

$$u_{y,yz} + u_{z,yy} = 2(1+\nu)\tau_{yz,y}/E \tag{10.26}$$

and

$$u_{x,xz} + u_{z,xx} = \partial_z(u_{x,x}) + u_{z,xx} = u_{z,xx} + (\sigma_{xx,z} - \nu\sigma_{yy,z} - \nu\sigma_{zz,z})/E$$
(10.27)

$$u_{y,yz} + u_{z,yy} = \partial_z(u_{y,y}) + u_{z,yy} = u_{z,yy} + (\sigma_{yy,z} - \nu \sigma_{xx,z} - \nu \sigma_{zz,z})/E.$$
(10.28)

Combining Eqs. (10.25), (10.27) and Eqs. (10.26), (10.28) and noting that  $\sigma_{zz,z} = -\tau_{xz,x} - \tau_{xz,y}$  yields

$$u_{z,xx} = [(2+\nu)\tau_{xz,x} - \nu\tau_{yz,y} - \sigma_{xx,z} + \nu\sigma_{yy,z}]/E$$
 (10.29)

$$u_{z,yy} = [(2+\nu)\tau_{yz,y} - \nu\tau_{xz,x} - \sigma_{yy,z} + \nu\sigma_{xx,z}]/E.$$
 (10.30)

We now create linear combination of these expressions such that  $\sigma_{xx,z} = M_{xx}/I$  or  $\sigma_{yy,z} = M_{yy}/I$  drop out,

$$u_{z,xx} + \nu u_{z,yy} = \left[ (2 + \nu - \nu^2) \tau_{xz,x} - \nu (1 + \nu) \tau_{yz,y} - (1 - \nu^2) M_{xx} / I \right] / E$$
(10.31)

$$u_{z,yy} + \nu u_{z,xx} = \left[ (2 + \nu - \nu^2) \tau_{yz,y} - \nu (1 + \nu) \tau_{xz,x} - (1 - \nu^2) M_{yy} / I \right] / E.$$
(10.32)

We now only consider the displacement at the surface,  $w(x, y) \equiv u_z(x, y, h/2)$ . Since the surfaces are traction free, all terms involving  $\tau_{xz}$  and  $\tau_{yz}$  vanish. Hence

$$M_{xx} = -K(w_{,xx} + \nu w_{,yy}) \tag{10.33}$$

$$M_{yy} = -K(w_{,yy} + \nu w_{,xx}) \tag{10.34}$$

with the flexural rigidity  $K = EI/(1 - \nu^2) = Eh^3/[12(1 - \nu^2)]$ .

Finally, we are looking for an expression for  $M_{xy} = I\tau_{xy,z}$ . We have from Eqs. (10.22)-(10.24)

$$\frac{2(1+\nu)}{EI}M_{xy} = u_{x,yz} + u_{y,xz} = \frac{2(1+\nu)}{E}(\tau_{xz,y} + \tau_{yz,x}) - 2u_{z,xy}, \quad (10.35)$$

which yields

$$M_{xy} = -K(1 - \nu)w_{xy},\tag{10.36}$$

the desired expression.

We now plug Eqs. (10.33), (10.34) and (10.36) into the equilibrium conditions Eqs. (10.11) and (10.12). This yields

$$-K(w_{,xxx} + w_{,xyy}) = Q_x(x,y)$$
 (10.37)

$$-K(w_{,yyy} + w_{,xxy}) = Q_y(x,y)$$
 (10.38)

$$-K(w_{,xxxx} + 2w_{,xxyy} + w_{,yyyy}) = -p(x,y).$$
 (10.39)

The last expression is Kirchhoff's equation,

$$w_{,xxxx} + 2w_{,xxyy} + w_{,yyyy} = \nabla^2 \nabla^2 w = \nabla^4 w = \frac{p}{K},$$
 (10.40)

that governs the deformation of plates.

Chapter 11
Plastic failure

## Chapter 12

## Brittle failure

### 12.1 Stress near a crack tip

We now look at brittle fracture. The theory for brittle fracture is developed in the framework of a plane problem, i.e. we assume that our crack is infinitely extended into one direction. We need to introduce a couple of mathematical tricks to be able to actually compute the stress field, namely the introduction of potential functions.

Note that while our previous applications of the theory of linear elasticity (for beams and plates) lead to solutions that were polynomials in the positions, we will here encounter a solution that is singular, i.e. it diverges as we approach the crack tip.

### 12.1.1 Airy stress function

First, we invoke Hooke's law (in plane strain/stress),

$$\varepsilon_{ij} = \frac{1}{E} [(1+\nu)\sigma_{ij} - \nu \delta_{ij}\sigma_{kk}]. \tag{12.1}$$

Using the additional plane condition,

$$\sigma_{yy} = \nu(\sigma_{xx} + \sigma_{zz}), \tag{12.2}$$

Hooke's law itself becomes

$$\varepsilon_{xx} = \frac{1+\nu}{E} [(1-\nu)\sigma_{xx} - \nu\sigma_{yy}]$$
 (12.3)

$$\varepsilon_{yy} = \frac{1+\nu}{E} [(1-\nu)\sigma_{yy} - \nu\sigma_{xx}]$$
 (12.4)

$$\varepsilon_{xy} = \frac{1}{2G}\sigma_{xy} = \frac{1+\nu}{E}\sigma_{xy} \tag{12.5}$$

under plane strain conditions. We have just eliminated reference to  $\sigma_{zz}$  and  $\varepsilon_{zz}$  from the equations. Inserting Hooke's law into the compatibility condition,

$$\frac{\partial^2 \varepsilon_{xx}}{\partial z^2} + \frac{\partial^2 \varepsilon_{zz}}{\partial x^2} = 2 \frac{\partial^2 \varepsilon_{xz}}{\partial x \partial z},\tag{12.6}$$

yields

$$(1 - \nu) \left[ \frac{\partial^2 \sigma_{xx}}{\partial y^2} + \frac{\partial^2 \sigma_{yy}}{\partial x^2} \right] - \nu \left[ \frac{\partial^2 \sigma_{xx}}{\partial x^2} + \frac{\partial^2 \sigma_{yy}}{\partial y^2} \right] = 2 \frac{\partial^2 \sigma_{xy}}{\partial x \partial y}, \tag{12.7}$$

the compatibility condition for the stresses.

We now use a mathematical trick to solve the equations of elastic equilibrium. We define the Airy stress function  $\phi(x, y)$ , that gives the stresses (in Cartesian coordinates) as

$$\sigma_{xx} = \frac{\partial^2 \phi}{\partial y^2} \equiv [\nabla(\nabla \phi)]_{yy}, \tag{12.8}$$

$$\sigma_{yy} = \frac{\partial^2 \phi}{\partial x^2} \equiv [\nabla(\nabla \phi)]_{xx}, \tag{12.9}$$

$$\sigma_{xy} = -\frac{\partial^2 \phi}{\partial x \partial y} \equiv [\nabla(\nabla \phi)]_{xy}$$
 (12.10)

(Note that the first  $\nabla$  is the gradient of the vector field  $\nabla \phi$ , not the divergence! Hence  $\nabla(\nabla \phi)$  is a second order tensor with components  $[\nabla(\nabla \phi)]_{ij} = \phi_{,ij}!$ ) Equation

$$\frac{\partial \sigma_{xx}}{\partial x} + \frac{\partial \sigma_{xz}}{\partial z} = 0 \tag{12.11}$$

becomes

$$\frac{\partial^3 \phi}{\partial x \partial y^2} - \frac{\partial^3 \phi}{\partial x \partial y^2} = 0 \tag{12.12}$$

and is automatically fulfilled! The same holds for the second equation of the elastostatic equilibrium condition. We can now insert Eqs. (12.8) to (12.10) into the compatibility condition Eq. (12.7) to give

$$(1 - \nu) \left[ \frac{\partial^2}{\partial y^2} \frac{\partial^2 \phi}{\partial y^2} + \frac{\partial^2}{\partial x^2} \frac{\partial^2 \phi}{\partial x^2} \right] - \nu \left[ \frac{\partial^2}{\partial x^2} \frac{\partial^2 \phi}{\partial y^2} + \frac{\partial^2}{\partial y^2} \frac{\partial^2 \phi}{\partial x^2} \right] + 2 \frac{\partial^2}{\partial x \partial y} \frac{\partial^2 \phi}{\partial x \partial y} = 0,$$
(12.13)

which can be rearranged to

$$\frac{\partial^4 \phi}{\partial x^4} + 2 \frac{\partial^4 \phi}{\partial x^2 \partial y^2} + \frac{\partial^4 \phi}{\partial y^4} = \left(\frac{\partial^2}{\partial x^2} + \frac{\partial^2}{\partial y^2}\right) \left[\left(\frac{\partial^2}{\partial x^2} + \frac{\partial^2}{\partial y^2}\right) \phi\right] = \nabla^4 \phi = 0$$
(12.14)

The conditions of elastostatic equilibrium and the compatibility condition are all simultaneously fulfilled if Eq. (12.14) is fulfilled! Equation (12.14) is the compatibility condition, but expressed for the Airy stress function.

The operator  $\nabla^4$  is called the *biharmonic* operator and any function  $\phi$  satisfying  $\nabla^4 \phi = 0$  is called a biharmonic function. (Functions  $\phi$  that fulfill the Laplace equation  $\nabla^2 \phi = 0$  are called harmonic functions.) The derivation above tells us, that for isotropic elasticity a biharmonic Airy stress  $\phi(x,y)$  automatically leads to a compatible strain field. This means for any biharmonic function  $\phi(x,y)$ , the stress field derived from Eqs. (12.8)-(12.10) will describe a system in static equilibrium. The only thing left to do is to find the function  $\phi(x,y)$  that fulfills a specific boundary condition.

#### 12.1.2 Westergaard stress function

Westergaard (1933) introduced a function Z(z) that is now known as the Westergaard stress function. The Westergaard stress function builds on top of the Airy function and eliminates the need to even satisfy the biharmonic equation  $\nabla^4 \phi = 0$ . This means that for any choice of the Westergaard stress function, the conditions for force and moment equilibrium and the compatibility condition are fulfilled automatically. The Westergaard stress function can then be chosen freely as to fulfill the boundary conditions of the problem.

Note that z is a complex variable that contains the x and y-position as its real and imaginary part, z = x + iy, and not the z-coordinate. Likewise, the function Z(z) is complex valued. Following common notation, we denote its integrals by

$$\bar{\bar{Z}}_z = \bar{Z}$$
 and  $\bar{Z}_z = Z$ . (12.15)

Westergaard defined the Airy stress function as

$$\phi(x,y) = \Re\left\{\bar{Z}(x+iy)\right\} + y\Im\left\{\bar{Z}(x+iy)\right\}$$
 (12.16)

where  $\Re$  and  $\Im$  denote the real and imaginary part of a complex number, respectively. This Airy stress function fulfills the biharmonic equation, Eq. (12.14), for any arbitrary function Z(z), as we will show below.

We will now derive the expressions for the stresses. We first note that since Z(z) is a function of a complex variable, it satisfies the Cauchy-Riemann conditions,

$$\Re Z_{,z} = (\Re Z)_{,x} = (\Im Z)_{,y} \tag{12.17}$$

$$\Im Z_{,z} = (\Im Z)_{,x} = -(\Re Z)_{,y}, \qquad (12.18)$$

which implies that

$$\nabla^2 (\Re Z) = (\Re Z)_{,xx} + (\Re Z)_{,yy} = 0 \tag{12.19}$$

$$\nabla^2 (\Im Z) = (\Im Z)_{.xx} + (\Im Z)_{.yy} = 0, \tag{12.20}$$

(12.21)

i.e. the real and imaginary parts of the complex function Z(z) fulfill the Laplace equation.

<u>Note:</u> Cauchy-Riemann equations – The Cauchy-Riemann equations are a cornerstone of complex analysis. They hold for any differential function of a complex variable. Such functions are also called *holomorphic*. Given f(z) = u(z) + iv(z) (hence  $u = \Re f$  and  $v = \Im f$ ) with z = x + iy, we can formally write the derivative as

$$f'(z_0) = \lim_{w \in \mathcal{C}, w \to 0} \frac{f(z_0 + w) - f(z_0)}{w}$$
 (12.22)

as the limit of the difference quotient. For real numbers, we can approach  $z_0$  from the left or the right and both limits must equal if the function is differentiable. In the complex plane, we can approach from any direction in two dimensions. For example, we can compute the derivative along the real (x-)axis, w=x:

$$f'(z_0) = \lim_{x \in \mathcal{R}, x \to 0} \frac{f(z_0 + x) - f(z_0)}{x} = \frac{\partial u}{\partial x} + i \frac{\partial v}{\partial x}$$
 (12.23)

We can equally well compute the derivative along the imaginary (y-)axis, w = iy, which gives

$$f'(z_0) = \lim_{y \in \mathcal{R}, y \to 0} \frac{f(z_0 + iy) - f(z_0)}{iy} = -i\frac{\partial u}{\partial y} + \frac{\partial v}{\partial y}.$$
 (12.24)

Since both expressions have to be equal, we find

$$\frac{\partial u}{\partial x} = \frac{\partial v}{\partial y}$$
 and  $\frac{\partial u}{\partial y} = -\frac{\partial v}{\partial x}$ , (12.25)

the Cauchy-Riemann equations.

Now we differentiate  $\phi$  with respect to x and y. This yields

$$\phi_{,x} = \left(\Re \bar{Z}\right)_{,x} + y\left(\Im \bar{Z}\right)_{,x} = \Re \bar{Z}_{,z} + y\Im \bar{Z}_{,z} = \Re \bar{Z} + y\Im Z \tag{12.26}$$

$$\phi_{,y} = \left(\Re \bar{\bar{Z}}\right)_{,y} + \left(y\Im \bar{Z}\right)_{,y} = -\Im \bar{\bar{Z}}_{,z} + \Im \bar{Z} + y\Re \bar{Z}_{,z} = y\Re Z \tag{12.27}$$

for the first derivatives and

$$\phi_{,xx} = (\Re \bar{Z})_x + y (\Im Z)_{,x} = \Re \bar{Z}_{,z} + y \Im Z_{,z} = \Re Z + y \Im Z_{,z}$$
(12.28)

$$\phi_{,yy} = (y\Re Z)_{,y} = \Re Z + y(\Re Z)_{,y} = \Re Z - y\Im Z_{,z}$$
(12.29)

$$\phi_{,xy} = (\Re \bar{Z})_{,y} + (y\Im Z)_{,y} = -\Im \bar{Z}_{,z} + \Im Z + y\Re Z_{,z} = y\Re Z_{,z}$$
(12.30)

for the second derivatives. In summary, we obtain

$$\sigma_{xx} = \phi_{,yy} = \Re Z - y \Im Z_{,z} \tag{12.31}$$

$$\sigma_{yy} = \phi_{,xx} = \Re Z + y \Im Z_{,z} \tag{12.32}$$

$$\sigma_{xy} = -\phi_{,xy} = -y\Re Z_{,z} \tag{12.33}$$

for the components of the stress tensor. Note that the Ansatz Eq. (12.16) fulfills the biharmonic equation. We know from summing Eqs. (12.31) and (12.32) that

$$\psi \equiv \left(\frac{\partial^2}{\partial x^2} + \frac{\partial^2}{\partial y^2}\right)\phi = 2\Re Z,\tag{12.34}$$

hence by virtue of Eq. (12.19),  $\nabla^4 \phi = \nabla^2 \psi = 0$  is fulfilled for any function Z(x+iy). The utility of the Westergaard function over the Airy stress function is hence that we have eliminated the need to explicitly fulfill the biharmonic equation.

#### 12.1.3 Stress field

We here discuss only mode I fracture, i.e. crack opening displacement. Consider a plane (strain or stress) situation in which we can derive the stress field from the Westergaard stress function Z(x+iy), Sec. 12.1.2. Westergaard (1933) made the Ansatz

$$Z(z) = \frac{\sigma_{\infty}}{\sqrt{1 - (a/z)^2}} \tag{12.35}$$

for the stress function of a central crack in a large sheet. Here 2a is the length of the crack and  $\sigma_{\infty}$  the stress at infinity. The derivative of the stress function is

$$Z_{,z} = \frac{\sigma_{\infty}}{\sqrt{z^2 - a^2}} \left[ 1 - \frac{1}{1 - (a/z)^2} \right]$$
 (12.36)

and its integral is

$$\bar{Z} = \sigma_{\infty} \sqrt{z^2 - a^2}.\tag{12.37}$$

Let us first look in the plane of the crack where y = 0, z = x and hence

$$Z(x) = \frac{\sigma_{\infty}}{\sqrt{1 - (a/x)^2}}.$$
 (12.38)

For |x| < a (inside the crack) the function is imaginary but for |x| > a (outside the crack) the function is real. The stresses in the plane of the crack are given by  $\sigma_{xx} = \Re Z$ ,  $\sigma_{yy} = \Re Z$  and  $\tau_{xy} = 0$ . Hence they vanish inside the crack. This is the condition for the crack faces which are free surfaces and therefore tractionless. Note that  $\sigma_{xx}$  does not need to vanish from this condition but does here.

Outside the crack (but in the plane of the crack, y = 0), the stress is given by

$$\sigma_{xx} = \sigma_{yy} = \frac{\sigma_{\infty}}{\sqrt{1 - (a/x)^2}}.$$
(12.39)

It diverges as  $x \to a$  from above and approaches the hydrostatic state  $\sigma_{xx} = \sigma_{yy} = \sigma_{\infty}$  as  $x \to \infty$ .

We will now focus on the crack line and switch to the variable  $z^* = z - a$ . The stress function becomes

$$Z(z^*) = \frac{\sigma_{\infty}(z^* + a)}{\sqrt{(z^* + a)^2 - a^2}} = \frac{\sigma_{\infty}(z^* + a)}{\sqrt{(z^*)^2 + 2az^*}} \approx \sigma_{\infty}\sqrt{\frac{a}{2z^*}}$$
(12.40)

where the  $\approx$  sign is valid for small  $z^*$ . We write this expression as

$$Z(z^*) = \frac{K_I}{\sqrt{2\pi z^*}} \quad \text{with} \quad K_I = \sigma_\infty \sqrt{\pi a}. \tag{12.41}$$

Note that we have absorbed both the stress at infinity  $\sigma_{\infty}$  and the crack length a into a single constant, the *stress intensity factor* (for mode I fracture),  $K_I$ . The stress field near the crack tip depends only on  $K_I$ , not on  $\sigma_{\infty}$  and a individually and hence the loading condition and geometry, independently.

To derive the component of the stress tensor, we switch to cylindrical coordinates and write  $z^* = re^{i\theta}$ , yielding

$$Z(r,\theta) = \frac{K_I}{\sqrt{2\pi r}} e^{-i\theta/2}.$$
 (12.42)

In order to obtain the full stress field, we also need the expression for the derivative of the Westergaard stress function near the crack tip. From

Eq. (12.36), we find

$$Z_{,z} \approx \frac{\sigma_{\infty}}{\sqrt{2az^*}} \left[ 1 - \frac{2az^* + a^2}{2az^*} \right] = -\frac{\sigma_{\infty}a^2}{(2az^*)^{3/2}} = -\frac{K_I\pi}{(2\pi z^*)^{3/2}} = -\frac{K_I}{\sqrt{8\pi r}} e^{-3i\theta/2}.$$
(12.43)

We now obtain the individual components of the stress tensor from Eq. (12.31)-(12.33):

$$\sigma_{xx} = \Re Z - y \Im Z_{,z} = \frac{K_I}{\sqrt{2\pi r}} \cos\frac{\theta}{2} \left( 1 - \sin\frac{\theta}{2} \sin\frac{3\theta}{2} \right) \tag{12.44}$$

$$\sigma_{yy} = \Re Z + y \Im Z_{,z} = \frac{K_I}{\sqrt{2\pi r}} \cos\frac{\theta}{2} \left( 1 + \sin\frac{\theta}{2} \sin\frac{3\theta}{2} \right)$$
 (12.45)

$$\sigma_{xy} = -y\Re Z_{,z} = \frac{K_I}{\sqrt{2\pi r}}\cos\frac{\theta}{2}\sin\frac{\theta}{2}\cos\frac{3\theta}{2}$$
 (12.46)

Hence the stress field *near* the crack tip is entirely described by the stress intensity factor  $K_I$ .  $K_I$  is measured in (weird) units of Pa $\sqrt{m}$ . The I indicates that this is the stress intensity factor for mode I fracture.  $K_{II}$  and  $K_{III}$  are related quatities for the two other fracture modes.

Note that the stress intensity factor is the amplitude of the square-root singularity of the stress field at the crack tip. It is often defined from the stress field itself as the limit

$$K_I = \lim_{r \to 0} \sqrt{2\pi r} \sigma_{yy}(r, 0)$$
 (12.47)

$$K_{II} = \lim_{r \to 0} \sqrt{2\pi r} \sigma_{xy}(r, 0)$$
 (12.48)

$$K_{III} = \lim_{r \to 0} \sqrt{2\pi r} \sigma_{yz}(r,0) \tag{12.49}$$

where the singularity has been removed by multiplying with  $\sqrt{2\pi r}$ . Note that the limit is taken at the angle  $\theta = 0$ , i.e. along y = 0 within the plane of the crack. From Eqs. (12.47) to (12.49) is also clear that only  $K_I$  is nonzero for the crack geometry that is discussed in this chapter.

### 12.2 Fracture toughness

#### 12.2.1 Displacement field at the crack tip

In order to compute the displacement field near the crack, we first need the strain field. As usual, we obtain this from Hooke's law (in plain stress):

$$\varepsilon_{xx} \equiv u_{x,x} = \frac{1}{E} \left( \sigma_{xx} - \nu \sigma_{yy} \right) = \frac{1}{E} \left[ (1 - \nu) \Re Z - (1 + \nu) y \Im Z_{,z} \right] \quad (12.50)$$

$$\varepsilon_{yy} \equiv u_{y,y} = \frac{1}{E} \left( \sigma_{yy} - \nu \sigma_{xx} \right) = \frac{1}{E} \left[ (1 - \nu) \Re Z + (1 + \nu) y \Im Z_{,z} \right] \quad (12.51)$$

$$2\varepsilon_{xy} \equiv u_{x,y} + u_{y,x} = 2\frac{1+\nu}{E}\sigma_{xy} = -2\frac{1+\nu}{E}y\Re Z_{,z}$$
 (12.52)

Now we use  $Z = \bar{Z}_{,z}$  to express  $\Re Z = \Re \bar{Z}_{,z} = (\Re \bar{Z})_{,x}$  and  $\Im Z_{,z} = (\Im Z)_{,x}$  in Eq. (12.50) to identify

$$u_x = \frac{1}{E} \left[ (1 - \nu) \Re \bar{Z} - (1 + \nu) y \Im Z \right] = \frac{1}{2\mu} \left[ \frac{1 - \nu}{1 + \nu} \Re \bar{Z} - y \Im Z \right]. \tag{12.53}$$

The expression for  $u_y$  is more complicated because of the explicit y that shows up in the expressions for the strains. It is given by

$$u_y = \frac{1}{2\mu} \left[ \frac{2}{1+\nu} \Im \bar{Z} - y \Re Z \right]. \tag{12.54}$$

It is straightforward to verify that from these two expressions we also recover the expression for  $\varepsilon_{xy}$ .

It is common to replace  $\nu$  with  $\kappa = (3 - \nu)/(1 + \nu)$ . The displacements can then be written as

$$u_x = \frac{1}{4\mu} \left[ (\kappa - 1) \Re \bar{Z} - 2y \Im Z \right]$$
 (12.55)

$$u_y = \frac{1}{4\mu} \left[ (\kappa + 1)\Im \bar{Z} - 2y\Re Z \right].$$
 (12.56)

Since the integral of the Westergaard function near the crack tip is

$$\bar{Z}(z^*) \approx \sigma_{\infty} \sqrt{2az^*} = K_I \sqrt{\frac{2z^*}{\pi}} = 2K_I \sqrt{\frac{r}{2\pi}} e^{i\theta/2},$$
 (12.57)

we can directly write the displacement field in cylindrical coordinates as

$$u_x = \frac{K_I}{2\mu} \sqrt{\frac{r}{2\pi}} \left[ 2\frac{1-\nu}{1+\nu} \cos\frac{\theta}{2} + \sin^2\frac{\theta}{2} \right]$$
 (12.58)

$$u_y = \frac{K_I}{2\mu} \sqrt{\frac{r}{2\pi}} \left[ 2\frac{1-\nu}{1+\nu} \cos\frac{\theta}{2} + \sin^2\frac{\theta}{2} \right].$$
 (12.59)

Note that in the plane of the crack  $(y = 0, z^* = x)$ , the displacement field is given by

$$u_{x} = \begin{cases} \frac{K_{I}}{2\mu} (\kappa - 1) \sqrt{\frac{x}{2\pi}} & \text{if } x > 0\\ 0 & \text{if } x \le 0 \end{cases}$$
 (12.60)

$$u_y^+ = \begin{cases} 0 & \text{if } x \ge 0\\ \frac{K_I}{2\mu} (\kappa + 1) \sqrt{-\frac{x}{2\pi}} & \text{if } x < 0 \end{cases}.$$
 (12.61)

The y-displacement here is denoted with a little +,  $u_y^+$ , to indicate that this is the displacement of the top crack face at a position  $y=0^+$ , i.e. slightly above y=0. The displacement  $u_y^-$  of the bottom crack face is the negative of this values,  $u_y^- = -u_y^+$ , for symmetry reasons. Mathematically, this property emerges because the square-root has a branch cut along the negative real axis.

#### 12.2.2 Strain energy release rate

In order to formulate a fracture criterion we will require an expression for the elastic *energy* released during propagation of the crack. This will lead to the concept of the *strain energy release rate*.

We have not yet talked about the concept of energy in these notes. Since elasticity is fully reversible (an elastic object returns to its origin shape when unloaded), the work carried out when deforming an elastic body is conservative. This means we can define an elastic energy that is recoverable by unloading the body. In order to define the energy release rate, we will here focus on the work W done by a moving crack.

We first note that the crack faces do not contribute to the work because the normal stress is zero by definition, since we are dealing with a free surface. We therefore have to focus on the crack tip. The tip opens by the distance given by Eq. (12.61) to both sides. This displacement works against the stress  $\sigma_{yy}$  right at the crack tip. We now assume that the crack moves by a distance  $\Delta a$  which we will later take to zero. We assume that the stress before the crack has moved is taken to zero quasistatically during the crack opening process. The crack faces have opened a distance

$$u_y^+ - u_y^- = 2\frac{K_I}{2\mu}(\kappa + 1)\sqrt{\frac{\Delta a - x^*}{2\pi}}$$
 (12.62)

after the crack has moved by  $\Delta a$ . The stress was

$$\sigma_{yy} = \frac{K_I}{\sqrt{2\pi x^*}} \tag{12.63}$$

before the movement of the crack. The work on the crack faces is then  $W = \int dx^* \sigma_{yy} (u_y^+ - u_y^-)/2$ . (The factor 1/2 enters because we are taking the stress to zero as the crack faces are displacing. Imagine a simple spring with force f = kx taken from  $x_0$  to x = 0. The work is  $kx_0^2/2$ , equal to the elastic energy of the string at extension  $x_0$ .) This gives

$$W(\Delta a) = \frac{K_I^2}{4\pi\mu} (\kappa + 1) \int_0^{\Delta a} dx^* \sqrt{\frac{\Delta a - x^*}{x^*}} = \frac{K_I^2}{\mu} \frac{\kappa + 1}{8} \Delta a = \frac{K_I^2}{E} \Delta a \quad (12.64)$$

where we have used  $\int_0^1 dx \sqrt{(1-x)/x} = \pi/2$ . The energy released per crack length is then

$$G = \frac{W}{\Delta a} = \frac{K_I^2}{E}. (12.65)$$

G is called the *strain energy release rate* and has units of energy per area. Note that Eq. (12.65) is valid for a state of plain strain, which has entered through Hooke's law in Eqs. (12.50) to (12.52).

#### 12.3 Griffith's fracture criterion

The value of  $K_I$  uniquely defines the stress field near the crack tip and therefore determines when the crack advances. We define a critical  $K_{Ic}$  beyond which the crack becomes unstable and a new crack opens when  $K_I > K_{Ic}$ .  $K_{Ic}$  is called the *fracture toughness*. Generally,  $K_I$  depends on crack geometry and loading condition. For the example worked above, a straight crack of length a in an infinite isotropic medium we get Eq. (12.41). We see that the stress intensity factor  $K_I$  growth with crack length a; hence there is a critical length  $a_c$  beyond which the crack becomes unstable.

As the crack advances it creates new surface area. An advance of the crack from length a to length  $a+\Delta a$  requires the additional energy  $\Delta E_{\rm surf}=2\gamma\Delta a$ . Here,  $\gamma$  is the surface energy of the pristine crack surface and the factor of 2 enters because a crack has two faces. Since we are looking at a plane situation,  $\Delta E_{\rm surf}$  is an energy per unit length.

Griffith's fracture criterion now states that the crack advances when the energy released from the elastic field (described by the strain energy release rate G) is larger than the energy needed to create a new surface,

$$G > G_c \tag{12.66}$$

where  $G_c$  is Griffith's critical energy release rate. For an ideal brittle crack,

$$G_c = 2\gamma, \tag{12.67}$$

because we only need to "pay" for the new surface with elastic energy. This allows us to define a fracture toughness,  $K_{Ic} = \sqrt{EG_c}$ , from Griffith's theory.

# Bibliography

H. M. Westergaard. Stresses at a crack, size of the crack, and the bending of reinforced concrete. *Journal Proceedings*, 30(11), 1933. doi: 10.14359/8300.