
KiBot variants example Not a real life board

O H2 MountingHole O H4 MountingHole

O FID1 O FID2 O FID3 O FID4 Fiducial

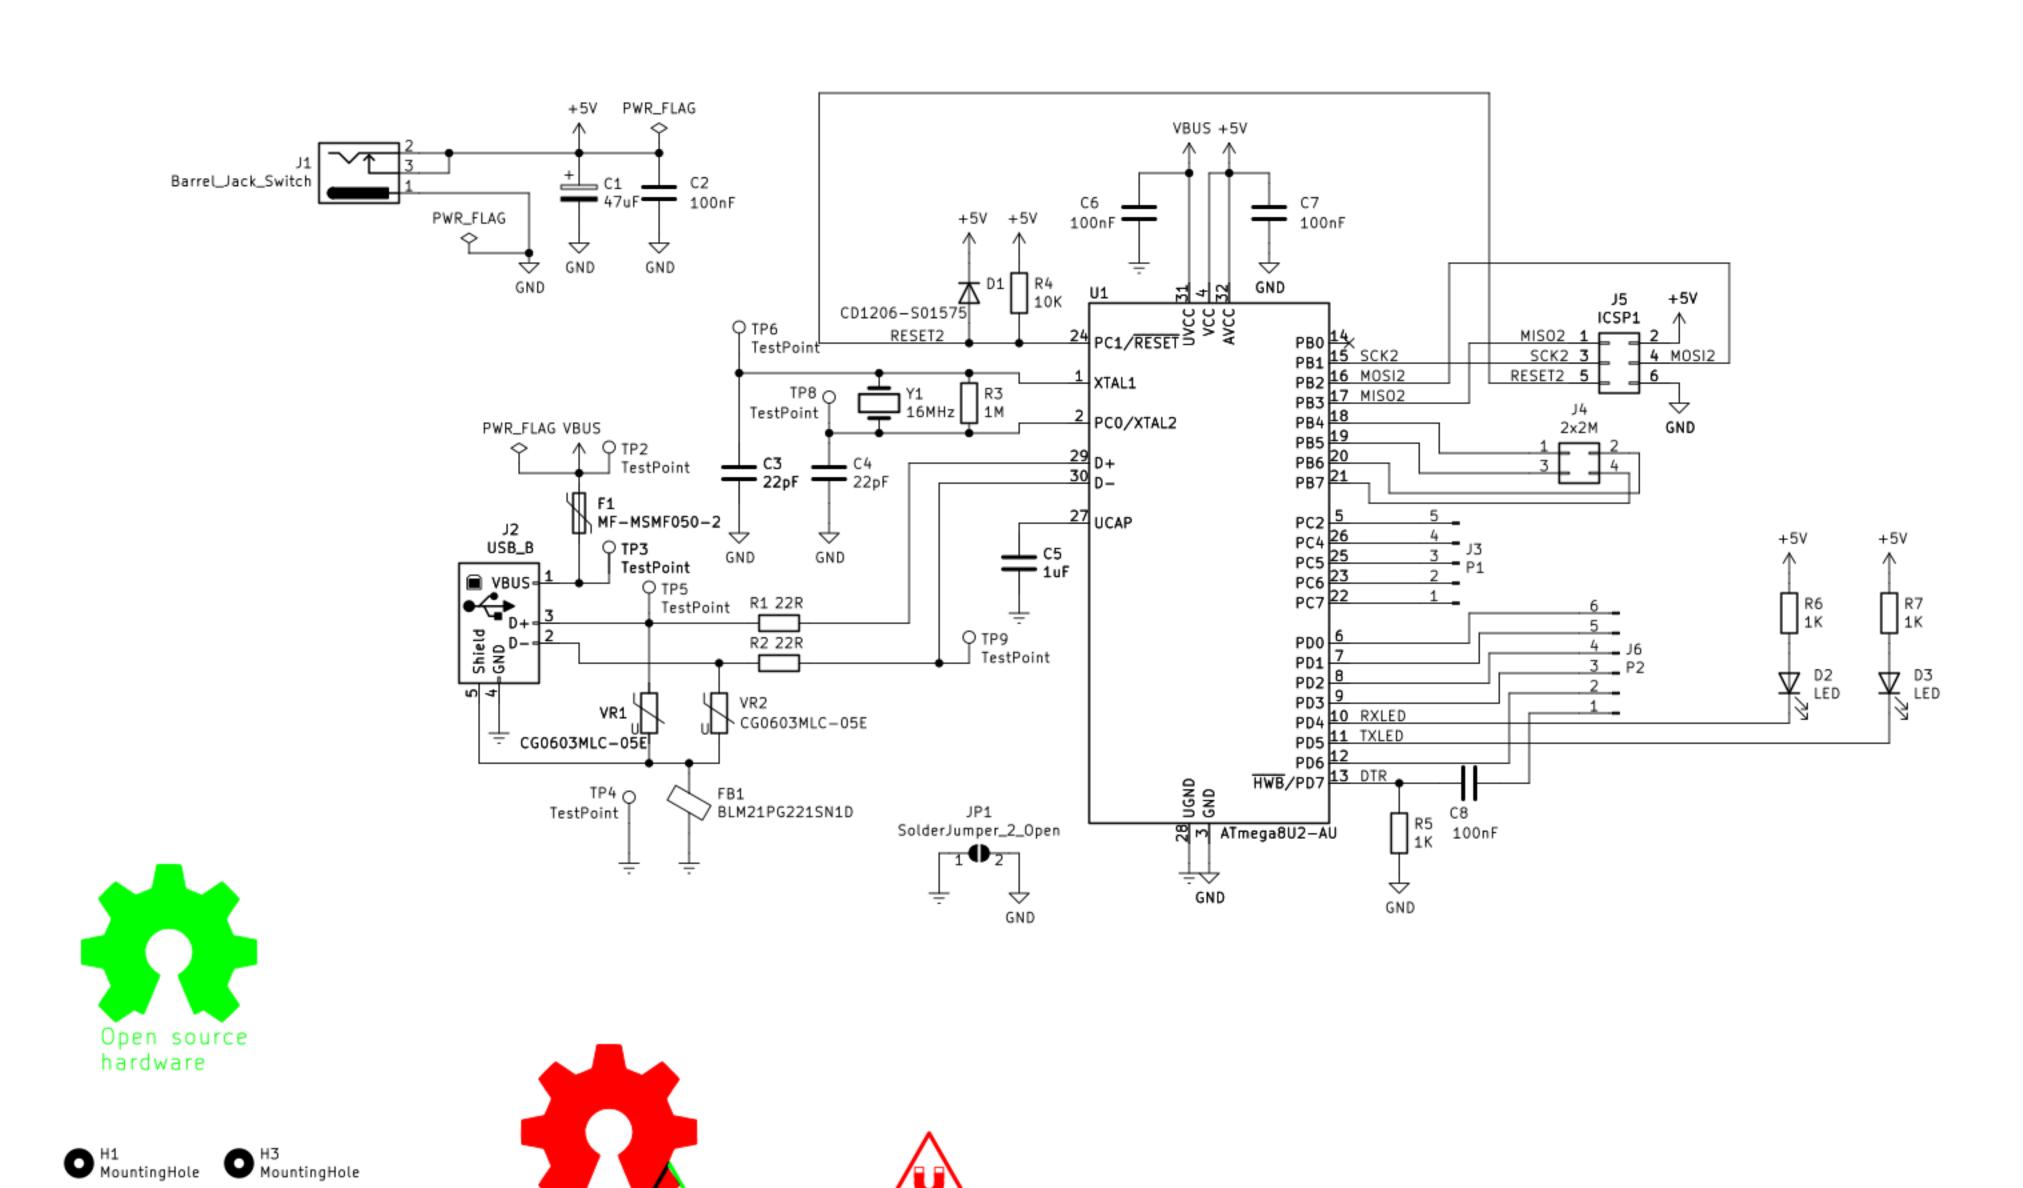

This logo has a REF starting with #

This logo has a REF Wenttngewpas#ed to the PCB Won't be passed to the PCB