



Ligation sequencing gDNA - Native Barcoding Kit 24 V14 (SQK-NBD114.24)

V NBE_9169_v114_revU_30Jan2025

Barcoding of native genomic DNA libraries

- Requires the Native Barcoding Kit 24 V14 (SQK-NBD114.24)
- · PCR-free protocol
- Using up to 24 barcodes
- · Allows analysis of native DNA
- Compatible with R10.4.1 flow cells

For Research Use Only

FOR RESEARCH USE ONLY

Contents

Introduction to the protocol

- 1. Overview of the protocol
- 2. Equipment and consumables
- 3. Computer requirements and software

Library preparation

- 4. DNA repair and end-prep
- 5. Native barcode ligation
- 6. Adapter ligation and clean-up
- 7. Priming and loading the SpotON flow cell

Sequencing and data analysis

- 8. Data acquisition and basecalling
- 9. Downstream analysis
- 10. Flow cell reuse and returns

Troubleshooting

- 11. Issues during DNA/RNA extraction and library preparation for Kit 14
- 12. Issues during the sequencing run for Kit 14

1. Overview of the protocol

Introduction to the Native Barcoding Kit 24 V14 protocol

This protocol describes how to carry out native barcoding of genomic DNA (gDNA) using the Native Barcoding Kit 24 V14 (SQK-NBD114.24). There are 24 unique barcodes available, allowing the user to pool up to 24 different samples in one sequencing experiment. It is highly recommended that a Lambda control experiment is completed first to become familiar with the technology.

Steps in the sequencing workflow:

Prepare for your experiment


You will need to:

- Extract your DNA, and check its length, quantity and purity. The quality checks performed during the protocol are essential in ensuring experimental success.
- Ensure you have your sequencing kit, the correct equipment and third-party reagents
- Download the software for acquiring and analysing your data
- Check your flow cell to ensure it has enough pores for a good sequencing run

Prepare your library

You will need to:

- Repair the DNA, and prepare the DNA ends for adapter attachment
- Ligate Native barcodes supplied in the kit to the DNA ends
- Ligate sequencing adapters supplied in the kit to the DNA ends
- Prime the flow cell, and load your DNA library into the flow cell

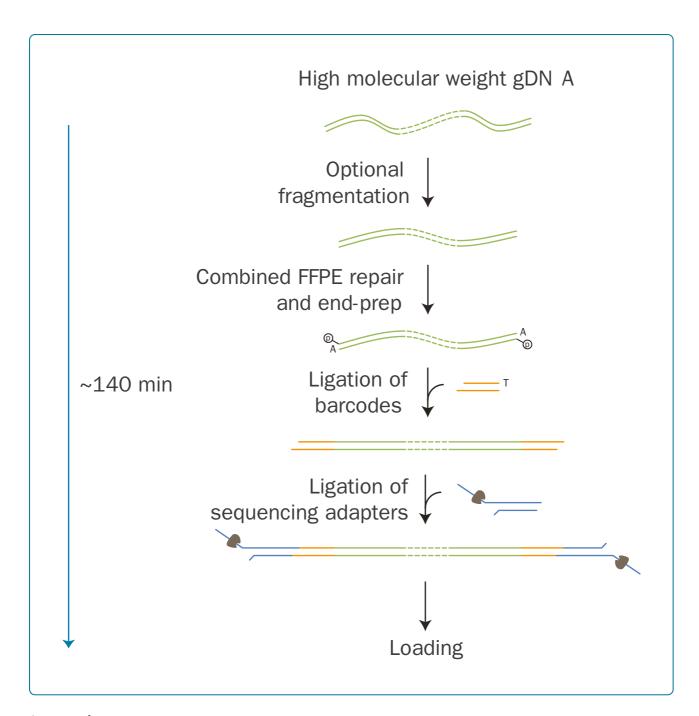

Sequencing

You will need to:

- Start a sequencing run using the MinKNOW software, which will collect raw data from the device and convert it into basecalled reads
- Demultiplex barcoded reads in MinKNOW or the Guppy basecalling, choosing the SQK-NBD114.24 kit option
- Start the EPI2ME software and select a workflow for further analysis (this step is optional)



IMPORTANT

We do not recommend mixing barcoded libraries with non-barcoded libraries prior to sequencing.



IMPORTANT

Optional fragmentation and size selection

By default, the protocol contains no DNA fragmentation step, however in some cases it may be advantageous to fragment your sample. For example, when working with lower amounts of input gDNA (100 ng – 500 ng), fragmentation will increase the number of DNA molecules and therefore increase throughput. Instructions are available in the <u>DNA Fragmentation section</u> of Extraction methods.

Additionally, we offer several options for size-selecting your DNA sample to enrich for long fragments - instructions are available in the <u>Size Selection section</u> of Extraction methods.



IMPORTANT

Compatibility of this protocol

This protocol should only be used in combination with:

- Native Barcoding Kit 24 V14 (SQK-NBD114.24)
- R10.4.1 flow cells (FLO-MIN114)
- Flow Cell Wash Kit (EXP-WSH004)
- Sequencing Auxiliary Vials V14 (EXP-AUX003)
- Native Barcoding Expansion V14 (EXP-NBA114)

2. Equipment and consumables

Materials

Native Barcoding Kit 24 V14 (SQK-NBD114.24) 400 ng gDNA per sample if using >4 barcodes OR 1000 ng gDNA per sample if using ≤4 barcodes

Consumables

NEB Blunt/TA Ligase Master Mix (NEB, M0367)

NEBNext FFPE Repair Mix (NEB, M6630)

NEBNext Ultra II End repair/dA-tailing Module (NEB, E7546)

NEBNext Quick Ligation Module (NEB, E6056)

Eppendorf twin.tec® PCR plate 96 LoBind, semi-skirted (Eppendorf™, cat #

0030129504) with heat seals

1.5 ml Eppendorf DNA LoBind tubes

2 ml Eppendorf DNA LoBind tubes

Nuclease-free water (e.g. ThermoFisher, AM9937)

Freshly prepared 80% ethanol in nuclease-free water

Qubit[™] Assay Tubes (Invitrogen, Q32856)

Qubit dsDNA HS Assay Kit (ThermoFisher, Q32851)

Bovine Serum Albumin (BSA) (50 mg/ml) (e.g Invitrogen™ UltraPure™ BSA 50 mg/ml, AM2616)

Equipment

Hula mixer (gentle rotator mixer)

Microplate centrifuge, e.g. Fisherbrand™ Mini Plate Spinner Centrifuge (Fisher

Scientific, 11766427)

Microfuge Magnetic rack

Vortex mixer Thermal cycler

Multichannel pipette and tips

P1000 pipette and tips P200 pipette and tips

P100 pipette and tips

P20 pipette and tips

P10 pipette and tips

P2 pipette and tips

Ice bucket with ice

Timer

Eppendorf 5424 centrifuge (or equivalent)

Qubit fluorometer (or equivalent for QC check)

Optional equipment

Nanodrop spectrophotometer

For this protocol, we recommend the following inputs:

- 400 ng per sample for >4 barcodes
- 1000 ng per sample for ≤4 barcodes

Input DNA

How to QC your input DNA

It is important that the input DNA meets the quantity and quality requirements. Using too little or too much DNA, or DNA of poor quality (e.g. highly fragmented or containing RNA or chemical contaminants) can affect your library preparation.

For instructions on how to perform quality control of your DNA sample, please read the <u>Input DNA/RNA QC protocol</u>.

Chemical contaminants

Depending on how the DNA is extracted from the raw sample, certain chemical contaminants may remain in the purified DNA, which can affect library preparation efficiency and sequencing

quality. Read more about contaminants on the **Contaminants page** of the Community.

Third-party reagents

We have validated and recommend the use of all the third-party reagents used in this protocol. Alternatives have not been tested by Oxford Nanopore Technologies.

For all third-party reagents, we recommend following the manufacturer's instructions to prepare the reagents for use.




IMPORTANT


The Native Adapter (NA) used in this kit and protocol is not interchangeable with other sequencing adapters.

Native Barcoding Kit 24 V14 (SQK-NBD114.24) contents

Note: We are in the process of reformatting the barcodes provided in this kit into a plate format. This will reduce plastic waste and will facilitate automated applications.

Plate format

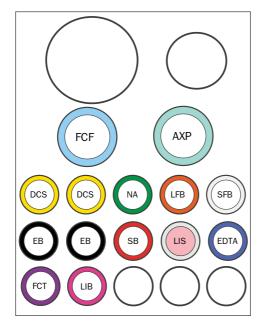

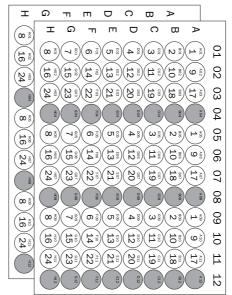

NA: Native Adapter

SB: Sequencing Buffer

LIB: Library Beads
LIS: Library Solution
EB: Elution Buffer

AXP : AMPure XP Beads LFB : Long Fragment Buffer

SFB : Short Fragment Buffer

FCF: Flow Cell Flush FCT: Flow Cell Tether

EDTA: EDTA


DCS: DNA Control Sample 1-24: Native Barcodes 01-24

Name	Acronym	Cap colour	No. of vials	Fill volume per vial (μl)
DNA Control Sample	DCS	Yellow	2	35
Native Adapter	NA	Green	1	40
Sequencing Buffer	SB	Red	1	700
Library Beads	LIB	Pink	1	600
Library Solution	LIS	White cap, pink label	1	600
Elution Buffer	EB	Black	2	500
AMPure XP Beads	AXP	Clear cap, light teal label	1	6,000
Long Fragment Buffer	LFB	Orange	1	1,800
Short Fragment Buffer	SFB	Clear	1	1,800
EDTA	EDTA	Blue	1	700
Flow Cell Flush	FCF	Clear cap, light blue label	1	8,000
Flow Cell Tether	FCT	Purple	1	200
Native Barcode plate	NB01-24	-	2 plates, 3 sets of barcodes per plate	5 µl per well

Note: This Product Contains AMPure XP Reagent Manufactured by Beckman Coulter, Inc. and can be stored at -20°C with the kit without detriment to reagent stability.

Note: The DNA Control Sample (DCS) is a 3.6 kb standard amplicon mapping the 3' end of the Lambda genome.

Vial format

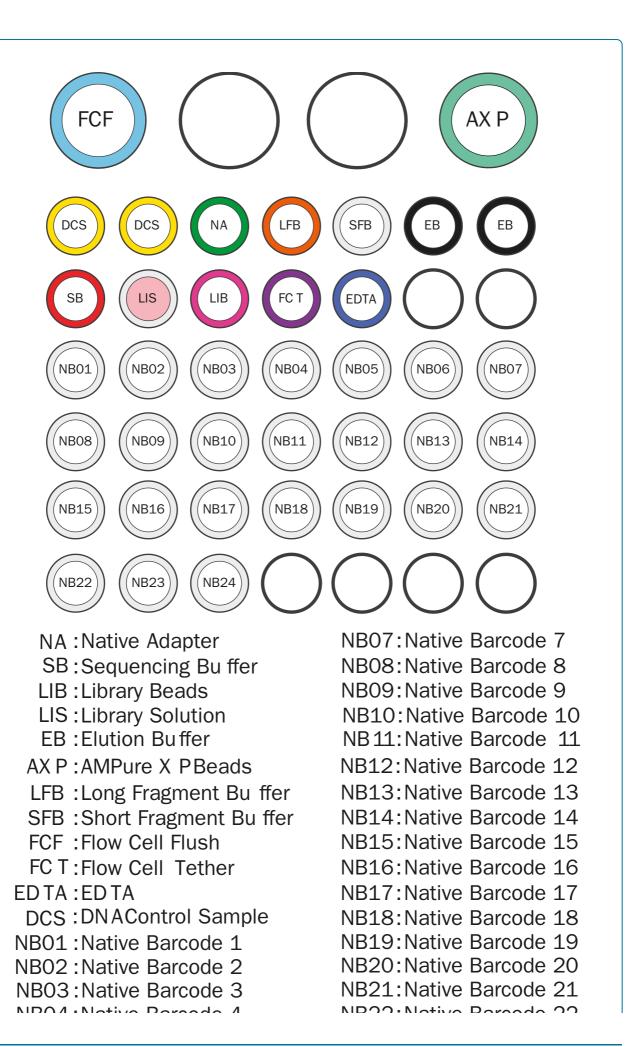

NB05: Native Barcode 5 NB06: Native Barcode 6 NB23:Native Barcode 23 NB24:Native Barcode 24

Name	Acronym	Cap colour	No. of vials	Fill volume per vial (µl)
Native Barcodes	NB01-24	Clear	24 (one per barcode)	20
DNA Control Sample	DCS	Yellow	2	35
Native Adapter	NA	Green	1	40
Sequencing Buffer	SB	Red	1	700
Library Beads	LIB	Pink	1	600
Library Solution	LIS	White cap, pink label	1	600
Elution Buffer	EB	Black	2	500
AMPure XP Beads	AXP	Clear cap, light teal label	1	6,000
Long Fragment Buffer	LFB	Orange	1	1,800
Short Fragment Buffer	SFB	Clear	1	1,800
EDTA	EDTA	Blue	1	700
Flow Cell Flush	FCF	Clear cap, light blue label	1	8,000
Flow Cell Tether	FCT	Purple	1	200

Note: This Product Contains AMPure XP Reagent Manufactured by Beckman Coulter, Inc. and can be stored at -20°C with the kit without detriment to reagent stability.


Note: The DNA Control Sample (DCS) is a 3.6 kb standard amplicon mapping the 3' end of the Lambda genome.

To maximise the use of the Native Barcoding Kits, the Native Barcode Auxiliary V14 (EXP-NBA114) and the Sequencing Auxiliary Vials V14 (EXP-AUX003) expansion packs are available.

These expansions provide extra library preparation and flow cell priming reagents to allow users to utilise any unused barcodes for those running in smaller subsets.


Both expansion packs used together will provide enough reagents for 12 reactions. For customers requiring extra EDTA to maximise the use of barcodes, we recommend using 0.25 M EDTA and adding 4 μ l for library preps using the SQK-NBD114.24 kit and 2 μ l for preps using the SQK-NBD114.96 kit.

Native Barcode Auxiliary V14 (EXP-NBA114) contents:

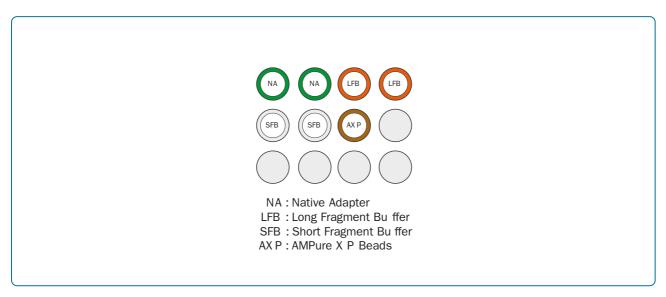

Note: This Product contains AMPure XP Reagent manufactured by Beckman Coulter, Inc. and can be stored at -20°C with the kit without detriment to reagent stability.

Sequencing Auxiliary Vials V14 (EXP-AUX003) contents:

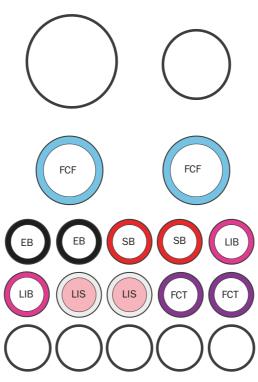

EB: Elution Buffer

SB: Sequencing Buffer

LIB: Library Beads LIS: Library Solution FCF: Flow Cell Flush FCT: Flow Cell Tether

Native barcode sequences

Component	Forward sequence	Reverse sequence
NB01	CACAAAGACACCGACAACTTTCTT	AAGAAAGTTGTCGGTGTCTTTGTG
NB02	ACAGACGACTACAAACGGAATCGA	TCGATTCCGTTTGTAGTCGTCTGT
NB03	CCTGGTAACTGGGACACAAGACTC	GAGTCTTGTGTCCCAGTTACCAGG
NB04	TAGGGAAACACGATAGAATCCGAA	TTCGGATTCTATCGTGTTTCCCTA
NB05	AAGGTTACACAAACCCTGGACAAG	CTTGTCCAGGGTTTGTGTAACCTT
NB06	GACTACTTTCTGCCTTTGCGAGAA	TTCTCGCAAAGGCAGAAAGTAGTC
NB07	AAGGATTCATTCCCACGGTAACAC	GTGTTACCGTGGGAATGAATCCTT
NB08	ACGTAACTTGGTTTGTTCCCTGAA	TTCAGGGAACAAACCAAGTTACGT
NB09	AACCAAGACTCGCTGTGCCTAGTT	AACTAGGCACAGCGAGTCTTGGTT
NB10	GAGAGGACAAAGGTTTCAACGCTT	AAGCGTTGAAACCTTTGTCCTCTC
NB11	TCCATTCCCTCCGATAGATGAAAC	GTTTCATCTATCGGAGGGAATGGA
NB12	TCCGATTCTGCTTCTTTCTACCTG	CAGGTAGAAAGAAGCAGAATCGGA
NB13	AGAACGACTTCCATACTCGTGTGA	TCACACGAGTATGGAAGTCGTTCT
NB14	AACGAGTCTCTTGGGACCCATAGA	TCTATGGGTCCCAAGAGACTCGTT
NB15	AGGTCTACCTCGCTAACACCACTG	CAGTGGTGTTAGCGAGGTAGACCT
NB16	CGTCAACTGACAGTGGTTCGTACT	AGTACGAACCACTGTCAGTTGACG
NB17	ACCCTCCAGGAAAGTACCTCTGAT	ATCAGAGGTACTTTCCTGGAGGGT
NB18	CCAAACCCAACAACCTAGATAGGC	GCCTATCTAGGTTGTTGGGTTTGG
NB19	GTTCCTCGTGCAGTGTCAAGAGAT	ATCTCTTGACACTGCACGAGGAAC

Component	Forward sequence	Reverse sequence
NB20	TTGCGTCCTGTTACGAGAACTCAT	ATGAGTTCTCGTAACAGGACGCAA
NB21	GAGCCTCTCATTGTCCGTTCTCTA	TAGAGAACGGACAATGAGAGGCTC
NB22	ACCACTGCCATGTATCAAAGTACG	CGTACTTTGATACATGGCAGTGGT
NB23	CTTACTACCCAGTGAACCTCCTCG	CGAGGAGGTTCACTGGGTAGTAAG
NB24	GCATAGTTCTGCATGATGGGTTAG	CTAACCCATCATGCAGAACTATGC

3. Computer requirements and software

MinION Mk1B IT requirements

Sequencing on a MinION Mk1B requires a high-spec computer or laptop to keep up with the rate of data acquisition. For more information, refer to the MinION Mk1B IT requirements document.

MinION Mk1C IT requirements

The MinION Mk1C contains fully-integrated compute and screen, removing the need for any accessories to generate and analyse nanopore data. For more information refer to the <u>MinION Mk1C IT requirements document</u>.

MinION Mk1D IT requirements

Sequencing on a MinION Mk1D requires a high-spec computer or laptop to keep up with the rate of data acquisition. For more information, refer to the <u>MinION Mk1D IT requirements document</u>.

Software for nanopore sequencing

MinKNOW

The MinKNOW software controls the nanopore sequencing device, collects sequencing data and basecalls in real time. You will be using MinKNOW for every sequencing experiment to sequence, basecall and demultiplex if your samples were barcoded.

For instructions on how to run the MinKNOW software, please refer to the MinKNOW protocol.

EPI2ME (optional)

The EPI2ME cloud-based platform performs further analysis of basecalled data, for example alignment to the Lambda genome, barcoding, or taxonomic classification. You will use the EPI2ME platform *only* if you would like further analysis of your data post-basecalling.

For instructions on how to create an EPI2ME account and install the EPI2ME Desktop Agent, please refer to this <u>link</u>.

Check your flow cell

We highly recommend that you check the number of pores in your flow cell prior to starting a sequencing experiment. This should be done within 12 weeks of purchasing for MinION/GridION/PromethION or within four weeks of purchasing Flongle Flow Cells. Oxford Nanopore Technologies will replace any flow cell with fewer than the number of pores in the table below, when the result is reported within two days of performing the flow cell check, and when the storage recommendations have been followed. To do the flow cell check, please follow the instructions in the Flow Cell Check document.

Flow cell	Minimum number of active pores covered by warranty
Flongle Flow Cell	50
MinION/GridION Flow Cell	800
PromethION Flow Cell	5000

4. DNA repair and end-prep

Materials 400 ng gDNA per barcode

OR 1000 ng gDNA per sample if using ≤4 barcodes

AMPure XP Beads (AXP)
DNA Control Sample (DCS)

Consumables NEBNext FFPE DNA Repair Mix (NEB, M6630)

NEBNext® Ultra II End Repair / dA-tailing Module (NEB, E7546)

Freshly prepared 80% ethanol in nuclease-free water

1.5 ml Eppendorf DNA LoBind tubes

Eppendorf twin.tec® PCR plate 96 LoBind, semi-skirted (Eppendorf™, cat #

0030129504) with heat seals
OR 0.2 ml thin-walled PCR tubes

Nuclease-free water (e.g. ThermoFisher, AM9937)

Qubit[™] Assay Tubes (Invitrogen, Q32856) Qubit dsDNA HS Assay Kit (Invitrogen, Q32851)

Equipment P1000 pipette and tips

P200 pipette and tips

P100 pipette and tips

P20 pipette and tips

P10 pipette and tips

P2 pipette and tips

Multichannel pipette and tips

Thermal cycler

Microplate centrifuge, e.g. Fisherbrand™ Mini Plate Spinner Centrifuge (Fisher Scientific, 11766427)

Microfuge

Ice bucket with ice

Magnetic rack

Vortex mixer

Hula mixer (rotator mixer)

Qubit fluorometer (or equivalent)



TIP

For samples containing long gDNA fragments, we recommend using wide-bore pipette tips for the mixing steps to preserve the DNA length.

- 1 Thaw the AMPure XP Beads (AXP) and DNA Control Sample (DCS) at room temperature and mix by vortexing. Keep the beads at room temperature and store the DNA Control Sample (DCS) on ice.
- Prepare the NEBNext FFPE DNA Repair Mix and NEBNext Ultra II End Repair / dA-tailing Module reagents in accordance with manufacturer's instructions, and place on ice.

For optimal performance, NEB recommend the following:

- 1. Thaw all reagents on ice.
- 2. Flick and/or invert the reagent tubes to ensure they are well mixed.

 Note: Do not vortex the FFPE DNA Repair Mix or Ultra II End Prep Enzyme Mix.
- 3. Always spin down tubes before opening for the first time each day.
- 4. The Ultra II End Prep Buffer and FFPE DNA Repair Buffer may have a little precipitate. Allow the mixture to come to room temperature and pipette the buffer up and down several times to break up the precipitate, followed by vortexing the tube for 30 seconds to solubilise any precipitate.

Note: It is important the buffers are mixed well by vortexing.

5. The FFPE DNA Repair Buffer may have a yellow tinge and is fine to use if yellow.



IMPORTANT

Do not vortex the NEBNext FFPE DNA Repair Mix or NEBNext Ultra II End Prep Enzyme Mix.



IMPORTANT

It is important that the NEBNext FFPE DNA Repair Buffer and NEBNext Ultra II End Prep Reaction Buffer are mixed well by vortexing.

Check for any visible precipitate; vortexing for at least 30 seconds may be required to solubilise any precipitate.

3 Dilute your DNA Control Sample (DCS) by adding 105 μl Elution Buffer (EB) directly to one DCS tube. Mix gently by pipetting and spin down.

One tube of diluted DNA Control Sample (DCS) is enough for 140 samples. Excess can be stored at -20°C in the freezer.



TIP

We recommend using the DNA Control Sample (DCS) in your library prep for troubleshooting purposes. However, you can omit this step and make up the extra 1 μ l with your sample DNA.

- In clean 0.2 ml thin-walled PCR tubes (or a clean 96-well plate), prepare your DNA samples:
 - For >4 barcodes, aliquot 400 ng per sample
 - For ≤4 barcodes, aliquot 1000 ng per sample
- 5 Make up each sample to 11 μl using nuclease-free water. Mix gently by pipetting and spin down.
- 6 Combine the following components per tube/well:

Between each addition, pipette mix 10 - 20 times.

Reagent	Volume
DNA sample	11 µl
Diluted DNA Control Sample (DCS)	1 µl
NEBNext FFPE DNA Repair Buffer	0.875 µl
Ultra II End-prep Reaction Buffer	0.875 µl
Ultra II End-prep Enzyme Mix	0.75 μΙ
NEBNext FFPE DNA Repair Mix	0.5 μΙ
Total	15 µl



TIF

We recommend making up a mastermix of the end-prep and DNA repair reagents for the total number of samples and adding 3 μ l to each well.

- Tensure the components are thoroughly mixed by pipetting and spin down in a centrifuge.
- 8 Using a thermal cycler, incubate at 20°C for 5 minutes and 65°C for 5 minutes.
- 9 Transfer each sample into a clean 1.5 ml Eppendorf DNA LoBind tube.
- 10 Resuspend the AMPure XP beads (AXP) by vortexing.
- Add 15 µl of resuspended AMPure XP Beads (AXP) to each end-prep reaction and mix by flicking the tube.

- 12 Incubate on a Hula mixer (rotator mixer) for 5 minutes at room temperature.
- Prepare sufficient fresh 80% ethanol in nuclease-free water for all of your samples. Allow enough for 400 µl per sample, with some excess.
- Spin down the samples and pellet the beads on a magnet until the eluate is clear and colourless. Keep the tubes on the magnet and pipette off the supernatant.
- 15 Keep the tube on the magnet and wash the beads with 200 μl of freshly prepared 80% ethanol without disturbing the pellet. Remove the ethanol using a pipette and discard.

If the pellet was disturbed, wait for beads to pellet again before removing the ethanol.

- 16 Repeat the previous step.
- Briefly spin down and place the tubes back on the magnet for the beads to pellet. Pipette off any residual ethanol. Allow to dry for 30 seconds, but do not dry the pellets to the point of cracking.
- Remove the tubes from the magnetic rack and resuspend the pellet in 10 μ l nuclease-free water. Spin down and incubate for 2 minutes at room temperature.
- Pellet the beads on a magnet until the eluate is clear and colourless.
- 20 Remove and retain 10 μ l of eluate into a clean 1.5 ml Eppendorf DNA LoBind tube.
 - Dispose of the pelleted beads



CHECKPOINT

Quantify 1 µl of each eluted sample using a Qubit fluorometer.



END OF STEP

Take forward an equimolar mass of each sample to be barcoded forward into the native barcode ligation step. However, you may store the samples at 4°C overnight.

5. Native barcode ligation

Materials Native Barcodes (NB01-24)

AMPure XP Beads (AXP)

EDTA (EDTA)

Consumables NEB Blunt/TA Ligase Master Mix (NEB, M0367)

Freshly prepared 80% ethanol in nuclease-free water Nuclease-free water (e.g. ThermoFisher, AM9937)

1.5 ml Eppendorf DNA LoBind tubes

Eppendorf twin.tec® PCR plate 96 LoBind, semi-skirted (Eppendorf™, cat #

0030129504) with heat seals
OR 0.2 ml thin-walled PCR tubes

Qubit[™] Assay Tubes (Invitrogen, Q32856)

Qubit dsDNA HS Assay Kit (ThermoFisher, Q32851)

Equipment Magnetic rack

Vortex mixer

Hula mixer (gentle rotator mixer)

Microfuge Thermal cycler Ice bucket with ice

Multichannel pipette and tips

P1000 pipette and tips P200 pipette and tips P100 pipette and tips P20 pipette and tips P10 pipette and tips P2 pipette and tips

Qubit fluorometer (or equivalent for QC check)

- 1 Prepare the NEB Blunt/TA Ligase Master Mix according to the manufacturer's instructions, and place on ice:
 - 1. Thaw the reagents at room temperature.
 - 2. Spin down the reagent tubes for 5 seconds.
 - 3. Ensure the reagents are fully mixed by performing 10 full volume pipette mixes.
- 2 Thaw the EDTA at room temperature and mix by vortexing. Then spin down and place on ice.
- 3 Thaw the Native Barcodes (NB01-24) at room temperature. Briefly spin down, individually mix the barcodes required for your number of samples by pipetting, and place them on ice.
- 4 Select a unique barcode for each sample to be run together on the same flow cell. Up to 24 samples can be barcoded and combined in one experiment.

Please note: Only use one barcode per sample.

5 In clean 0.2 ml PCR-tubes or a 96-well plate, add the reagents in the following order per well:

Between each addition, pipette mix 10 - 20 times.

Reagent	Volume
End-prepped DNA	7.5 µl
Native Barcode (NB01-24)	2.5 µl
Blunt/TA Ligase Master Mix	10 µl
Total	20 μΙ

6 Thoroughly mix the reaction by gently pipetting and briefly spinning down.

- **7** Incubate for 20 minutes at room temperature.
- 8 Add the following volume of EDTA to each well and mix thoroughly by pipetting and spin down briefly.

Note: Ensure you follow the instructions for the cap colour of your EDTA tube.

EDTA cap colour	Volume per well
For clear cap EDTA	2 µl
For blue cap EDTA	4 μl



TIP

EDTA is added at this step to stop the reaction.

9 Pool all the barcoded samples in a 1.5 ml Eppendorf DNA LoBind tube.

Note: Ensure you follow the instructions for the cap colour of your EDTA tube.

	Volume per sample	For 6 samples	For 12 samples	For 24 samples
Total volume for preps using clear cap EDTA	22 μΙ	132 μΙ	264 µl	528 μl
Total volume for preps using blue cap EDTA	24 μΙ	144 μΙ	288 μΙ	576 μΙ



TIP

We recommend checking the base of your tubes/plate are all the same volume before pooling and after to ensure all the liquid has been taken forward.

10 Resuspend the AMPure XP Beads (AXP) by vortexing.

Add 0.4X AMPure XP Beads (AXP) to the pooled reaction, and mix by pipetting.

Note: Ensure you follow the instructions for the cap colour of your EDTA tube.

	Volume per sample	For 6 samples	For 12 samples	For 24 samples
Volume of AXP for preps using clear cap EDTA	9 μΙ	53 µl	106 µl	211 μΙ
Volume of AXP for preps using blue cap EDTA	10 μΙ	58 µl	115 µl	230 μΙ

- Incubate on a Hula mixer (rotator mixer) for 10 minutes at room temperature.
- 13 Prepare 2 ml of fresh 80% ethanol in nuclease-free water.
- Spin down the sample and pellet on a magnet for 5 minutes. Keep the tube on the magnetic rack until the eluate is clear and colourless, and pipette off the supernatant.
- 15 Keep the tube on the magnetic rack and wash the beads with 700 μl of freshly prepared 80% ethanol without disturbing the pellet. Remove the ethanol using a pipette and discard.

If the pellet was disturbed, wait for beads to pellet again before removing the ethanol.

- 16 Repeat the previous step.
- Spin down and place the tube back on the magnetic rack. Pipette off any residual ethanol. Allow the pellet to dry for ~30 seconds, but do not dry the pellet to the point of cracking.
- 18 Remove the tube from the magnetic rack and resuspend the pellet in 35 μl nuclease-free water by gently flicking.

- 19 Incubate for 10 minutes at 37°C. Every 2 minutes, agitate the sample by gently flicking for 10 seconds to encourage DNA elution.
- 20 Pellet the beads on a magnetic rack until the eluate is clear and colourless.
- 21 Remove and retain 35 μl of eluate into a clean 1.5 ml Eppendorf DNA LoBind tube.



CHECKPOINT

Quantify 1 µl of eluted sample using a Qubit fluorometer.



END OF STEP

Take forward the barcoded DNA library to the adapter ligation and clean-up step. However, you may store the sample at 4°C overnight.

6. Adapter ligation and clean-up

Materials Long Fragment Buffer (LFB)

Short Fragment Buffer (SFB)

Elution Buffer (EB) Native Adapter (NA) AMPure XP Beads (AXP)

Consumables NEBNext® Quick Ligation Module (NEB, E6056)

1.5 ml Eppendorf DNA LoBind tubes Qubit™ Assay Tubes (Invitrogen, Q32856)

Qubit dsDNA HS Assay Kit (ThermoFisher, Q32851)

Equipment Microfuge

Magnetic rack Vortex mixer

Hula mixer (gentle rotator mixer)

Thermal cycler

P1000 pipette and tips

P200 pipette and tips
P100 pipette and tips
P20 pipette and tips
P10 pipette and tips
Ice bucket with ice
Qubit fluorometer (or equivalent for QC check)



IMPORTANT

The Native Adapter (NA) used in this kit and protocol is not interchangeable with other sequencing adapters.

- 1 Prepare the NEBNext Quick Ligation Reaction Module according to the manufacturer's instructions, and place on ice:
 - 1. Thaw the reagents at room temperature.
 - 2. Spin down the reagent tubes for 5 seconds.
 - 3. Ensure the reagents are fully mixed by performing 10 full volume pipette mixes. **Note:** Do NOT vortex the Quick T4 DNA Ligase.

The NEBNext Quick Ligation Reaction Buffer (5x) may have a little precipitate. Allow the mixture to come to room temperature and pipette the buffer up and down several times to break up the precipitate, followed by vortexing the tube for several seconds to ensure the reagent is thoroughly mixed.



IMPORTANT

Do not vortex the Quick T4 DNA Ligase.

- 2 Spin down the Native Adapter (NA) and Quick T4 DNA Ligase, pipette mix and place on ice.
- 3 Thaw the Elution Buffer (EB) at room temperature and mix by vortexing. Then spin down and place on ice.



IMPORTANT

Depending on the wash buffer (LFB or SFB) used, the clean-up step after adapter ligation is designed to either enrich for DNA fragments of >3 kb, or purify all fragments equally.

- To enrich for DNA fragments of 3 kb or longer, use Long Fragment Buffer (LFB)
- To retain DNA fragments of all sizes, use Short Fragment Buffer (SFB)
- 4 Thaw either Long Fragment Buffer (LFB) or Short Fragment Buffer (SFB) at room temperature and mix by vortexing. Then spin down and keep at room temperature.
- 5 In a 1.5 ml Eppendorf LoBind tube, mix in the following order:

Between each addition, pipette mix 10 - 20 times.

Reagent	Volume
Pooled barcoded sample	30 µl
Native Adapter (NA)	5 μΙ
NEBNext Quick Ligation Reaction Buffer (5X)	10 µl
Quick T4 DNA Ligase	5 μΙ
Total	50 μl

- 6 Thoroughly mix the reaction by gently pipetting and briefly spinning down.
- 7 Incubate the reaction for 20 minutes at room temperature.



IMPORTANT

The next clean-up step uses Long Fragment Buffer (LFB) or Short Fragment Buffer (SFB) rather than 80% ethanol to wash the beads. The use of ethanol will be detrimental to the sequencing reaction.

- 8 Resuspend the AMPure XP Beads (AXP) by vortexing.
- 9 Add 20 μl of resuspended AMPure XP Beads (AXP) to the reaction and mix by pipetting.
- Incubate on a Hula mixer (rotator mixer) for 10 minutes at room temperature.
- Spin down the sample and pellet on the magnetic rack. Keep the tube on the magnet and pipette off the supernatant.
- Wash the beads by adding either 125 μl Long Fragment Buffer (LFB) or Short Fragment Buffer (SFB). Flick the beads to resuspend, spin down, then return the tube to the magnetic rack and allow the beads to pellet. Remove the supernatant using a pipette and discard.
- 13 Repeat the previous step.
- Spin down and place the tube back on the magnet. Pipette off any residual supernatant.
- Remove the tube from the magnetic rack and resuspend pellet in 15 μl Elution Buffer (EB).
- Spin down and incubate for 10 minutes at 37°C. Every 2 minutes, agitate the sample by gently flicking for 10 seconds to encourage DNA elution.
- Pellet the beads on a magnet until the eluate is clear and colourless, for at least 1 minute.
- Remove and retain 15 μl of eluate containing the DNA library into a clean 1.5 ml Eppendorf DNA LoBind tube.



CHECKPOINT

Quantify 1 µl of eluted sample using a Qubit fluorometer.

19 Depending on your DNA library fragment size, prepare your final library in 12 μl of Elution Buffer (EB).

Fragment library length	Flow cell loading amount
Very short (<1 kb)	100 fmol
Short (1-10 kb)	35-50 fmol
Long (>10 kb)	300 ng

Note: If the library yields are below the input recommendations, load the entire library.

If required, we recommend using a mass to mol calculator such as the <u>NEB calculator</u>.



END OF STEP

The prepared library is used for loading onto the flow cell. Store the library on ice or at 4°C until ready to load.



TIP

Library storage recommendations

We recommend storing libraries in Eppendorf DNA LoBind tubes at **4°C for short-term** storage or repeated use, for example, re-loading flow cells between washes. For single use and **long-term storage** of more than 3 months, we recommend storing libraries at **-80°C** in Eppendorf DNA LoBind tubes.



OPTIONAL ACTION

If quantities allow, the library may be diluted in Elution Buffer (EB) for splitting across multiple flow cells.

Depending on how many flow cells the library will be split across, more Elution Buffer (EB) than what is supplied in the kit will be required.

7. Priming and loading the SpotON flow cell

Materials Flow Cell Flush (FCF)

Flow Cell Tether (FCT) Library Solution (LIS) Library Beads (LIB) Sequencing Buffer (SB)

Consumables 1.5 ml Eppendorf DNA LoBind tubes

MinION and GridION Flow Cell

Nuclease-free water (e.g. ThermoFisher, AM9937)

Bovine Serum Albumin (BSA) (50 mg/ml) (e.g Invitrogen™ UltraPure™ BSA 50

mg/ml, AM2616)

Equipment MinION or GridION device

MinION and GridION Flow Cell Light Shield

P1000 pipette and tips P100 pipette and tips P20 pipette and tips P10 pipette and tips



IMPORTANT

Please note, this kit is only compatible with R10.4.1 flow cells (FLO-MIN114).



TIP

Priming and loading a flow cell

We recommend all new users watch the '<u>Priming and loading your flow cell</u>' video before your first run.

Using the Library Solution

For most sequencing experiments, use the Library Beads (LIB) for loading your library onto the flow cell. However, for viscous libraries it may be difficult to load with the beads and may be appropriate to load using the Library Solution (LIS).

1 Thaw the Sequencing Buffer (SB), Library Beads (LIB) or Library Solution (LIS, if using), Flow Cell Tether (FCT) and Flow Cell Flush (FCF) at room temperature before mixing by vortexing. Then spin down and store on ice.



IMPORTANT

For optimal sequencing performance and improved output on MinION R10.4.1 flow cells (FLO-MIN114), we recommend adding Bovine Serum Albumin (BSA) to the flow cell priming mix at a final concentration of 0.2 mg/ml.

Note: We do not recommend using any other albumin type (e.g. recombinant human serum albumin).

2 To prepare the flow cell priming mix with BSA, combine Flow Cell Flush (FCF) and Flow Cell Tether (FCT), as directed below. Mix by pipetting at room temperature.


Note: We are in the process of reformatting our kits with single-use tubes into a bottle format. Please follow the instructions for your kit format.


Single-use tubes format: Add 5 μ l Bovine Serum Albumin (BSA) at 50 mg/ml and 30 μ l Flow Cell Tether (FCT) directly to a tube of Flow Cell Flush (FCF).

Bottle format: In a suitable tube for the number of flow cells, combine the following reagents:

Reagent	Volume per flow cell
Flow Cell Flush (FCF)	1,170 μΙ
Bovine Serum Albumin (BSA) at 50 mg/ml	5 μΙ
Flow Cell Tether (FCT)	30 µl
Total volume	1,205 μΙ

3 Open the MinION or GridION device lid and slide the flow cell under the clip. Press down firmly on the priming port cover to ensure correct thermal and electrical contact.

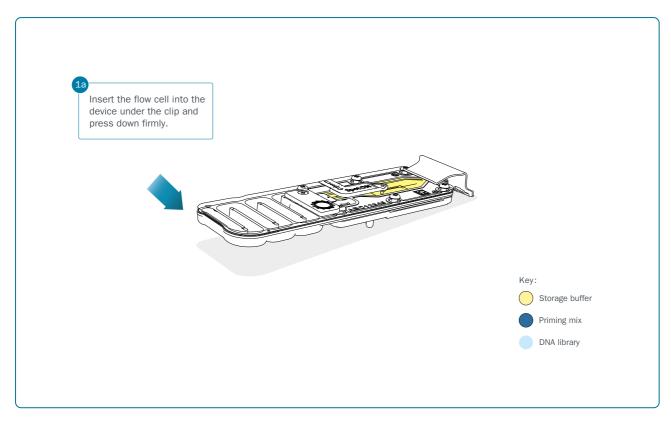

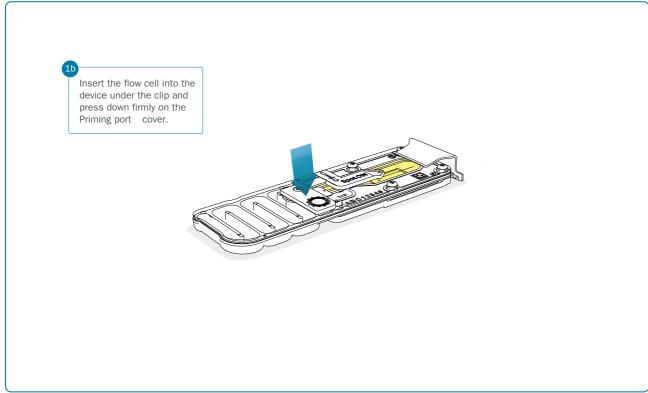




OPTIONAL ACTION

Complete a flow cell check to assess the number of pores available before loading the library.

This step can be omitted if the flow cell has been checked previously.

See the <u>flow cell check instructions</u> in the MinKNOW protocol for more information.

4 Slide the flow cell priming port cover clockwise to open the priming port.

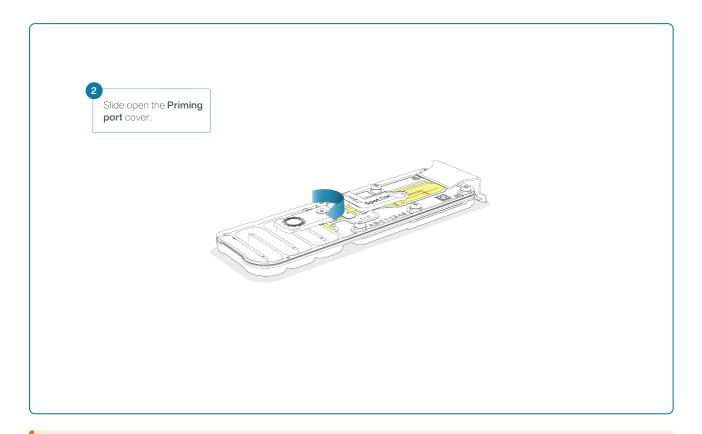




IMPORTANT

Take care when drawing back buffer from the flow cell. Do not remove more than 20-30 μ l, and make sure that the array of pores are covered by buffer at all times. Introducing air bubbles into the array can irreversibly damage pores.


- 5 After opening the priming port, check for a small air bubble under the cover. Draw back a small volume to remove any bubbles:
 - 1. Set a P1000 pipette to 200 μl

- 2. Insert the tip into the priming port
- 3. Turn the wheel until the dial shows 220-230 μ l, to draw back 20-30 μ l, or until you can see a small volume of buffer entering the pipette tip

Note: Visually check that there is continuous buffer from the priming port across the sensor array.

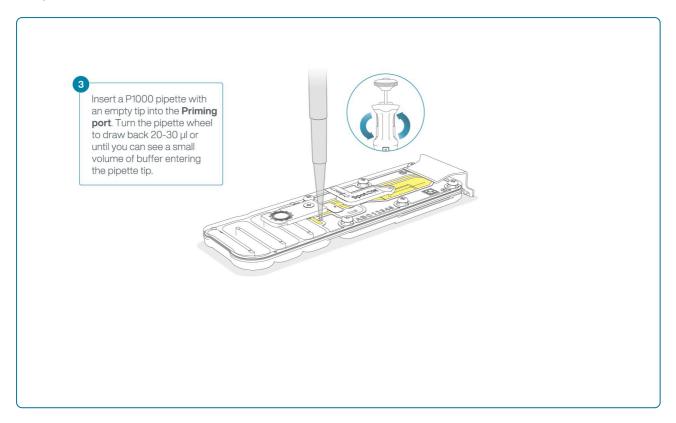

6 Load 800 μl of the priming mix into the flow cell via the priming port, avoiding the introduction of air bubbles. Wait for five minutes. During this time, prepare the library for loading by following the steps below.

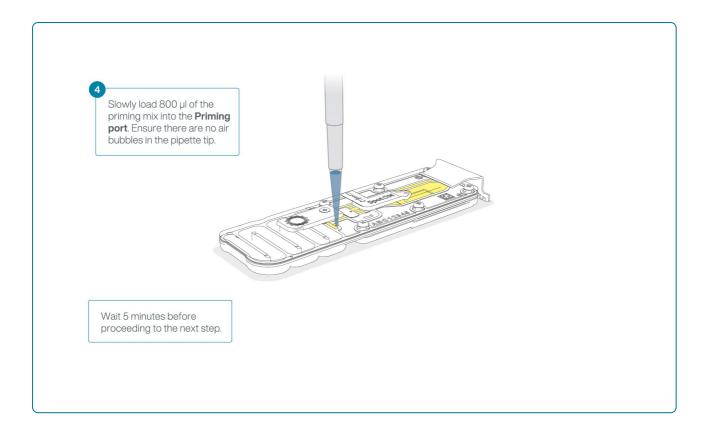

7 Thoroughly mix the contents of the Library Beads (LIB) by pipetting.

IMPORTANT .

The Library Beads (LIB) tube contains a suspension of beads. These beads settle very quickly. It is vital that they are mixed immediately before use.


We recommend using the Library Beads (LIB) for most sequencing experiments. However, the Library Solution (LIS) is available for more viscous libraries.


8 In a new 1.5 ml Eppendorf DNA LoBind tube, prepare the library for loading as follows:

Reagent	Volume per flow cell
Sequencing Buffer (SB)	37.5 μl
Library Beads (LIB) mixed immediately before use, or Library Solution (LIS), if using	25.5 µl
DNA library	12 μΙ
Total	75 μl


9 Complete the flow cell priming:

- 1. Gently lift the SpotON sample port cover to make the SpotON sample port accessible.
- 2. Load **200** μ I of the priming mix into the flow cell priming port (**not** the SpotON sample port), avoiding the introduction of air bubbles.

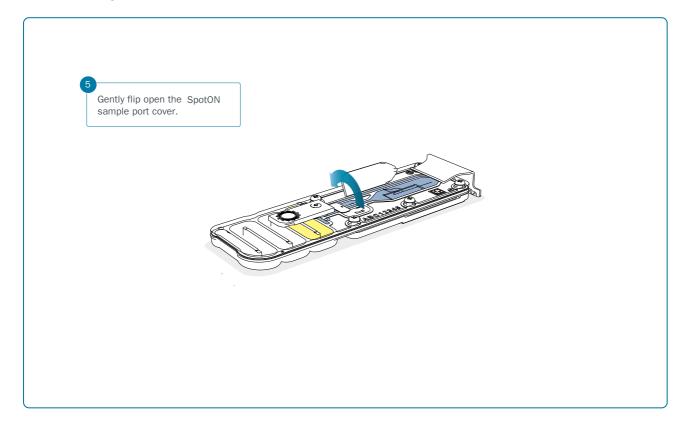


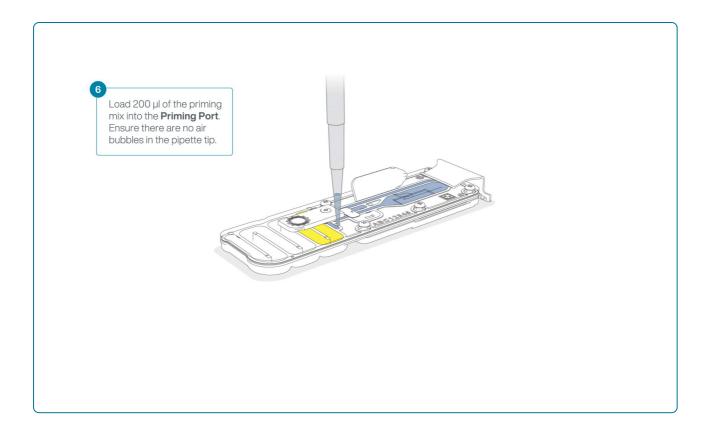


- Mix the prepared library gently by pipetting up and down just prior to loading.
- Add 75 μ l of the prepared library to the flow cell via the SpotON sample port in a dropwise fashion. Ensure each drop flows into the port before adding the next.

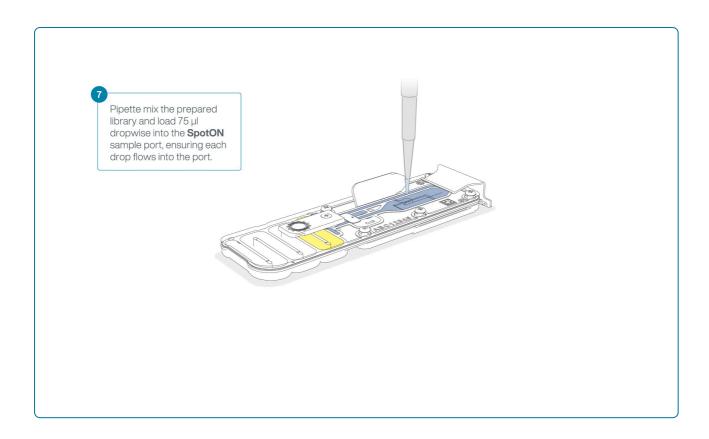

Gently replace the SpotON sample port cover, making sure the bung enters the SpotON port and close the priming port.

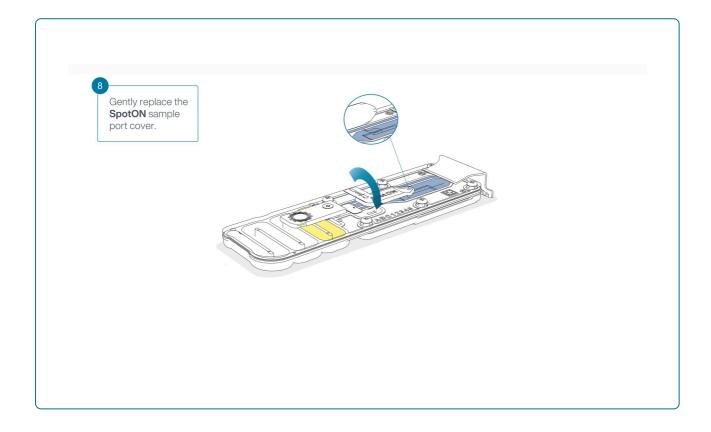

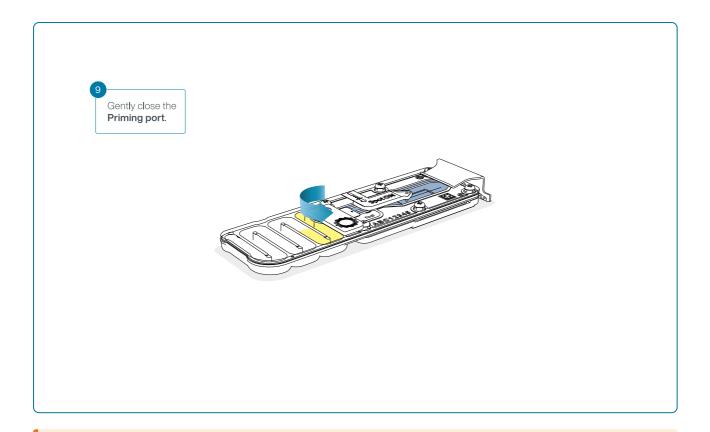




IMPORTANT

Install the light shield on your flow cell as soon as library has been loaded for optimal sequencing output.

We recommend leaving the light shield on the flow cell when library is loaded, including during any washing and reloading steps. The shield can be removed when the library has been removed from the flow cell.

13 Place the light shield onto the flow cell, as follows:

- 1. Carefully place the leading edge of the light shield against the clip. **Note:** Do not force the light shield underneath the clip.
- 2. Gently lower the light shield onto the flow cell. The light shield should sit around the SpotON cover, covering the entire top section of the flow cell.

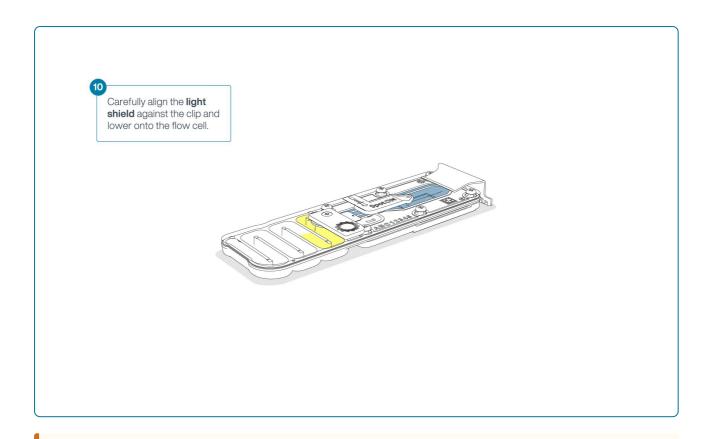



CAUTION

The MinION Flow Cell Light Shield is not secured to the flow cell and careful handling is required after installation.



END OF STEP

Close the device lid and set up a sequencing run on MinKNOW.

8. Data acquisition and basecalling

Overview of nanopore data analysis

For a full overview of nanopore data analysis, which includes options for basecalling and post-basecalling analysis, please refer to the <u>Data Analysis</u> document.

How to start sequencing

The sequencing device control, data acquisition and real-time basecalling are carried out by the MinKNOW software. Please ensure MinKNOW is installed on your computer or device. There are multiple options for how to carry out sequencing:

1. Data acquisition and basecalling in real-time using MinKNOW on a computer

Follow the instructions in the <u>MinKNOW protocol</u> beginning from the "Starting a sequencing run" section until the end of the "Completing a MinKNOW run" section.

2. Data acquisition and basecalling in real-time using the MinION Mk1B/Mk1D device

Follow the instructions in the MinION Mk1B user manual or the MinION Mk1D user manual.

3. Data acquisition and basecalling in real-time using the MinION Mk1C device

Follow the instructions in the MinION Mk1C user manual.

4. Data acquisition and basecalling in real-time using the GridION device

Follow the instructions in the GridION user manual.

5. Data acquisition and basecalling in real-time using the PromethION device

Follow the instructions in the <u>PromethION user manual</u> or the <u>PromethION 2 Solo user manual</u>.

6. Data acquisition using MinKNOW on a computer and basecalling at a later time using MinKNOW

Follow the instructions in the <u>MinKNOW protocol</u> beginning from the "Starting a sequencing run" section until the end of the "Completing a MinKNOW run" section. **When setting your experiment parameters, set the** *Basecalling* **tab to OFF.** After the sequencing experiment has completed, follow the instructions in the <u>Post-run analysis</u> section of the <u>MinKNOW protocol</u>.

9. Downstream analysis

Post-basecalling analysis

There are several options for further analysing your basecalled data:

1. EPI2ME workflows

For in-depth data analysis, Oxford Nanopore Technologies offers a range of bioinformatics tutorials and workflows available in EPI2ME, which are available in the EPI2ME section of the Community. The platform provides a vehicle where workflows deposited in GitHub by our Research and Applications teams can be showcased with descriptive texts, functional bioinformatics code and example data.

2. Research analysis tools

Oxford Nanopore Technologies' Research division has created a number of analysis tools, that are available in the Oxford Nanopore <u>GitHub repository</u>. The tools are aimed at advanced users, and contain instructions for how to install and run the software. They are provided as-is, with minimal support.

3. Community-developed analysis tools

If a data analysis method for your research question is not provided in any of the resources above, please refer to the <u>resource centre</u> and search for bioinformatics tools for your application. Numerous members of the Nanopore Community have developed their own tools and pipelines for analysing nanopore sequencing data, most of which are available on GitHub. Please be aware that these tools are not supported by Oxford Nanopore Technologies, and are not guaranteed to be compatible with the latest chemistry/software configuration.

10. Flow cell reuse and returns

Materials Flow Cell Wash Kit (EXP-WSH004)

1 After your sequencing experiment is complete, if you would like to reuse the flow cell, please follow the Flow Cell Wash Kit protocol and store the washed flow cell at +2°C to +8°C.

The Flow Cell Wash Kit protocol is available on the Nanopore Community.



TIP

We recommend you to wash the flow cell as soon as possible after you stop the run. However, if this is not possible, leave the flow cell on the device and wash it the next day.

2 Alternatively, follow the returns procedure to send the flow cell back to Oxford Nanopore.

Instructions for returning flow cells can be found here.



IMPORTANT

If you encounter issues or have questions about your sequencing experiment, please refer to the Troubleshooting Guide that can be found in the online version of this protocol.

11. Issues during DNA/RNA extraction and library preparation for Kit 14

Below is a list of the most commonly encountered issues, with some suggested causes and solutions.

We also have an FAQ section available on the Nanopore Community Support section.

If you have tried our suggested solutions and the issue still persists, please contact Technical Support via email (support@nanoporetech.com) or via LiveChat in the Nanopore Community.

Low sample quality

Observation	Possible cause	Comments and actions
Low DNA purity (Nanodrop reading for DNA OD 260/280 is <1.8 and OD 260/230 is <2.0-2.2)	The DNA extraction method does not provide the required purity	The effects of contaminants are shown in the Contaminants document. Please try an alternative extraction method that does not result in contaminant carryover.
		Consider performing an additional SPRI clean-up step.
Low RNA integrity (RNA integrity number <9.5 RIN, or the rRNA band is shown as a smear on the gel)	The RNA degraded during extraction	Try a different RNA extraction method. For more info on RIN, please see the RNA Integrity Number document. Further information can be found in the DNA/RNA Handling page.
RNA has a shorter than expected fragment length	The RNA degraded during extraction	Try a different RNA extraction method. For more info on RIN, please see the RNA Integrity Number document. Further information can be found in the DNA/RNA Handling page.
		We recommend working in an RNase-free environment, and to keep your lab equipment RNase-free when working with RNA.

Low DNA recovery after AMPure bead clean-up

Observation	Possible cause	Comments and actions
Low recovery	DNA loss due to a lower than intended AMPure beads-to-	1. AMPure beads settle quickly, so ensure they are well resuspended before adding them to the sample.
	sample ratio	2. When the AMPure beads-to-sample ratio is lower than 0.4:1, DNA fragments of any size will be lost during the clean-up.
Low recovery	DNA fragments are shorter than expected	The lower the AMPure beads-to-sample ratio, the more stringent the selection against short fragments. Please always determine the input DNA length on an agarose gel (or other gel electrophoresis methods) and then calculate the appropriate amount of AMPure beads to use. NEB TriDye
Low recovery	The wash step used	DNA will be eluted from the beads when using ethanol

12. Issues during the sequencing run for Kit 14

ethanol <70%

after end-prep

Below is a list of the most commonly encountered issues, with some suggested causes and solutions.

<70%. Make sure to use the correct percentage.

We also have an FAQ section available on the Nanopore Community Support section.

If you have tried our suggested solutions and the issue still persists, please contact Technical Support via email (support@nanoporetech.com) or via LiveChat in the Nanopore Community.

Fewer pores at the start of sequencing than after Flow Cell Check

Observation	Possible cause	Comments and actions
MinKNOW reported a lower number of pores at the start of sequencing than the number reported by the Flow Cell Check	An air bubble was introduced into the nanopore array	After the Flow Cell Check it is essential to remove any air bubbles near the priming port before priming the flow cell. If not removed, the air bubble can travel to the nanopore array and irreversibly damage the nanopores that have been exposed to air. The best practice to prevent this from happening is demonstrated in this video.
MinKNOW reported a lower number of pores at the start of sequencing than the number reported by the Flow Cell Check	The flow cell is not correctly inserted into the device	Stop the sequencing run, remove the flow cell from the sequencing device and insert it again, checking that the flow cell is firmly seated in the device and that it has reached the target temperature. If applicable, try a different position on the device (GridION/PromethION).
MinKNOW reported a lower number of pores at the start of sequencing than the number reported by the Flow Cell Check	Contaminations in the library damaged or blocked the pores	The pore count during the Flow Cell Check is performed using the QC DNA molecules present in the flow cell storage buffer. At the start of sequencing, the library itself is used to estimate the number of active pores. Because of this, variability of about 10% in the number of pores is expected. A significantly lower pore count reported at the start of sequencing can be due to contaminants in the library that have damaged the membranes or blocked the pores. Alternative DNA/RNA extraction or purification methods may be needed to improve the purity of the input material. The effects of contaminants are shown in the Contaminants Know-how piece. Please try an alternative extraction method that does not result in contaminant carryover.

MinKNOW script failed

Observation	Possible cause	Comments and actions
MinKNOW shows "Script failed"		Restart the computer and then restart MinKNOW. If the issue persists, please collect the MinKNOW log files and contact Technical Support. If you do not have another sequencing device available, we recommend storing the flow cell and the loaded library at 4°C and contact Technical Support for further storage guidance.

Pore occupancy below 40%

Observation	Possible cause	Comments and actions
Pore occupancy <40%	Not enough library was loaded on the flow cell	10–20 fmol of good quality library can be loaded on to a MinION/GridION flow cell. Please quantify the library before loading and calculate mols using tools like the Promega Biomath Calculator, choosing "dsDNA: μg to pmol"
Pore occupancy close to 0	The Native Barcoding Kit was used, and ethanol was used instead of LFB or SFB at the wash step after sequencing adapter ligation	Ethanol can denature the motor protein on the sequencing adapters. Make sure the LFB or SFB buffer was used after ligation of sequencing adapters.
Pore occupancy close to 0	No tether on the flow cell	Tethers are adding during flow cell priming (FCT tube). Make sure FCT was added to FCF before priming.

Shorter than expected read length

Observation	Possible cause	Comments and actions
Shorter than expected read length	Unwanted fragmentation of DNA sample	Read length reflects input DNA fragment length. Input DNA can be fragmented during extraction and library prep.
		1. Please review the Extraction Methods in the Nanopore Community for best practice for extraction.
		2. Visualise the input DNA fragment length distribution on an agarose gel before proceeding to the library prep.
		sample 1 sample 2
		In the image above, Sample 1 is of high molecular weight, whereas Sample 2 has been fragmented.
		3. During library prep, avoid pipetting and vortexing when mixing reagents. Flicking or inverting the tube is sufficient.

Observation	Possible cause	Comments and actions
Large proportion of unavailable pores (shown as blue in the channels panel and pore activity plot)	Contaminants are present in the sample	Some contaminants can be cleared from the pores by the unblocking function built into MinKNOW. If this is successful, the pore status will change to "sequencing pore". If the portion of unavailable pores stays large or increases: 1. A nuclease flush using the Flow Cell Wash Kit (EXP-WSH004) can be
The pore activity plot above shows an increasing proportion of "unavailable" pores over time.		performed, or 2. Run several cycles of PCR to try and dilute any contaminants that may be causing problems.

Large proportion of inactive pores

Observation	Possible cause	Comments and actions
Large proportion of inactive/unavailable pores (shown as light blue in the channels panel and pore activity plot. Pores or membranes are irreversibly damaged)	Air bubbles have been introduced into the flow cell	Air bubbles introduced through flow cell priming and library loading can irreversibly damage the pores. Watch the Priming and loading your flow cell video for best practice
Large proportion of inactive/unavailable pores	Certain compounds co- purified with DNA	Known compounds, include polysaccharides, typically associate with plant genomic DNA. 1. Please refer to the Plant leaf DNA extraction method. 2. Clean-up using the QIAGEN PowerClean Pro kit. 3. Perform a whole genome amplification with the original gDNA sample using the QIAGEN REPLI-g kit.
Large proportion of inactive/unavailable pores	Contaminants are present in the sample	The effects of contaminants are shown in the Contaminants Knowhow piece. Please try an alternative extraction method that does not result in contaminant carryover.

Reduction in sequencing speed and q-score later into the run

Observation	Possible cause	Comments and actions
Reduction in sequencing speed and q-score later into the run	Fast fuel consumption is typically seen in Kit 9 chemistry (e.g. SQK-LSK109) when the flow cell is overloaded with library. Please see the appropriate protocol for your DNA library to find the recommendation.	Add more fuel to the flow cell by following the instructions in the MinKNOW protocol. In future experiments, load lower amounts of library to the flow cell.

Temperature fluctuation

Observation	Possible cause	Comments and actions
Temperature fluctuation	The flow cell has lost contact with the device	Check that there is a heat pad covering the metal plate on the back of the flow cell. Re-insert the flow cell and press it down to make sure the connector pins are firmly in contact with the device. If the problem persists, please contact Technical Services.

Failed to reach target temperature

Observation	Possible cause	Comments and actions
MinKNOW shows "Failed to reach target temperature"	The instrument was placed in a location that is colder than normal room temperature, or a location with poor ventilation (which leads to the flow cells overheating)	MinKNOW has a default timeframe for the flow cell to reach the target temperature. Once the timeframe is exceeded, an error message will appear and the sequencing experiment will continue. However, sequencing at an incorrect temperature may lead to a decrease in throughput and lower q-scores. Please adjust the location of the sequencing device to ensure that it is placed at room temperature with good ventilation, then re-start the process in MinKNOW. Please refer to this link for more information on MinION temperature control.