


PROBE FLAG BLANK (2:1), flat, before bending
u from the neck centre line (= hole line), v from the bend line

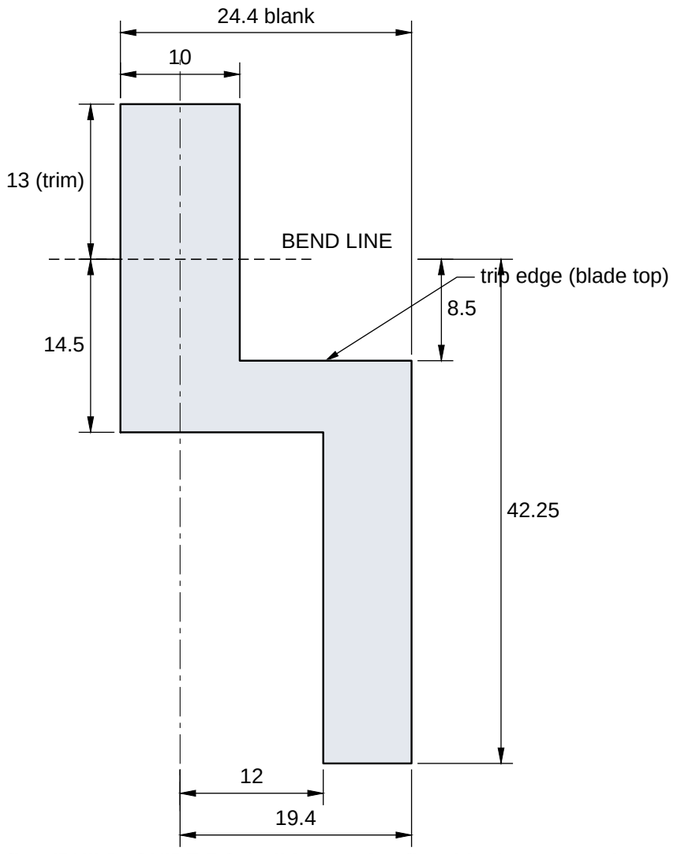

PROBE FLAG AS BENT (2:1), for reference
(head frame: X along the row, Z above the cup face)

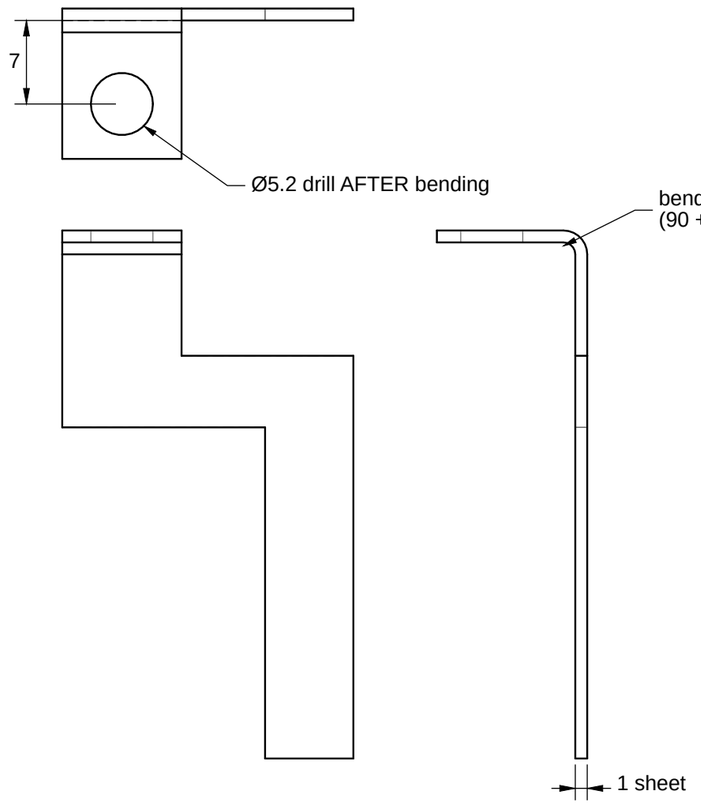

CARRY FLAG (2:1), flat
(seen from the front; top edge = trip edge)

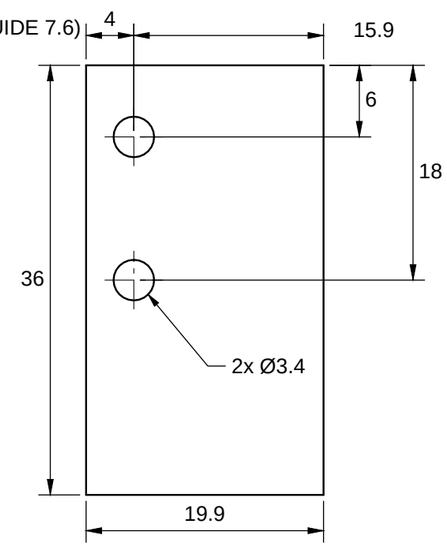

Probe flag (BUILD_GUIDE 7.6; build.py probe_flag_blank.svg notes)

Aluminium sheet, 1 thick (cut_list C-07). 1. Cut and file to the outline; the blade's top edge is the trip edge: straight, square. 2. This view shows the face toward the buffer. Neck in the vise, jaws at the BEND line; bend the tab 90° TOWARD YOU. 3. THEN drill on the centre line, 7 from the plate's inner face. 4. Trim the tab to 2 past the hole. 5. Deburr: it rides in head_foot's guide slot and the sensor slot. Outline: cad/out/probe_flag_blank.dxf (1:1 print: .svg).

Carry flag (BUILD_GUIDE 7.4a)


Aluminium sheet, 1 thick, flat (cut_list C-10). File the top edge straight. Fix to carry_flag_arm's leg end with 2 x M3x8, inner edge toward the spine, top edge flush with the arm's top.

Tolerance: outlines PROPOSED +/-0.2 (no doc states one); bend 90 +/-0.5° (BUILD_GUIDE 7.6). The trip points are set by adjustment on assembly (probe 7.6, carry 7.4a), not by these outlines.


SlabRail - graded-slab batch scanner	**SHEET D-06 of D-17**
Flat parts (probe flag, carry flag)	SCALE 2:1
Rev A - DRAFT FOR DESIGN REVIEW, not released for fabrication	UNITS: mm 3RD ANGLE
SOURCE: cad/model.py @ 640cf57 (drawn by cad/drawings.py)	DATE 2026-10-27 **DO NOT SCALE**

PHASE 0A TEST JIG: one slab between the two cameras exactly as on the machine (BUILD_GUIDE 1.5)


FRONT (1:2)

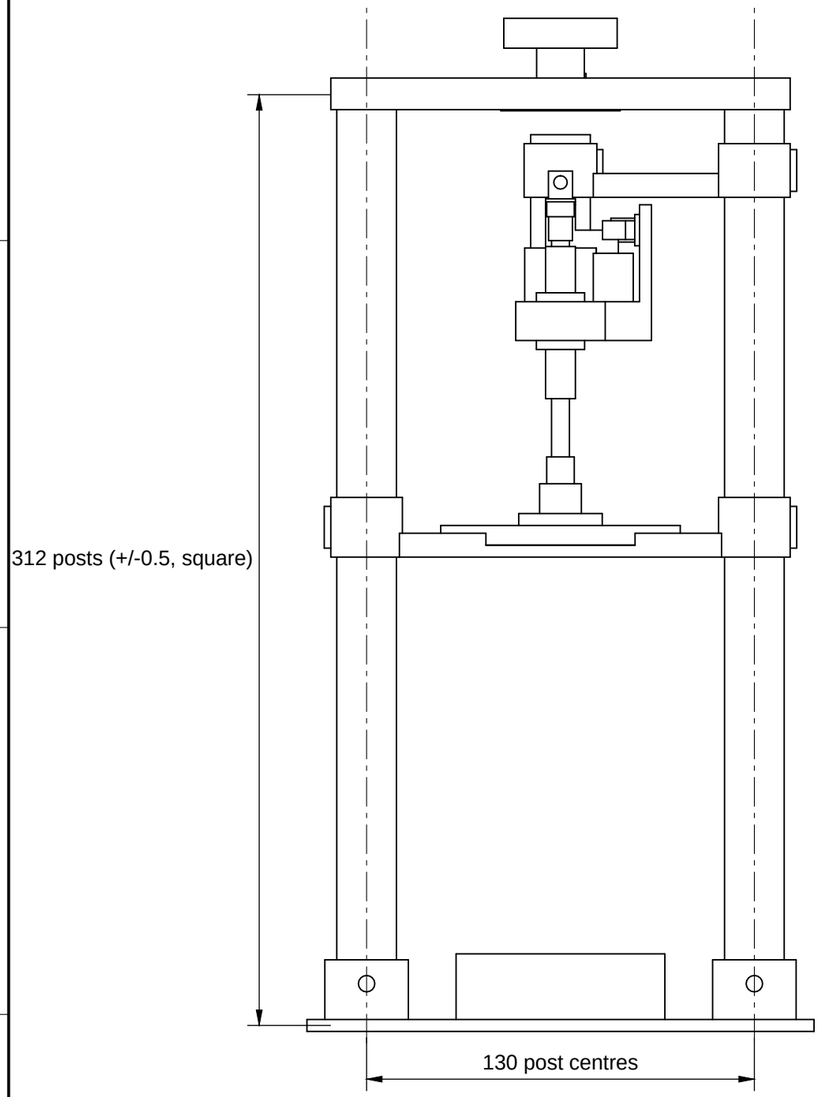

RIGHT (1:2)

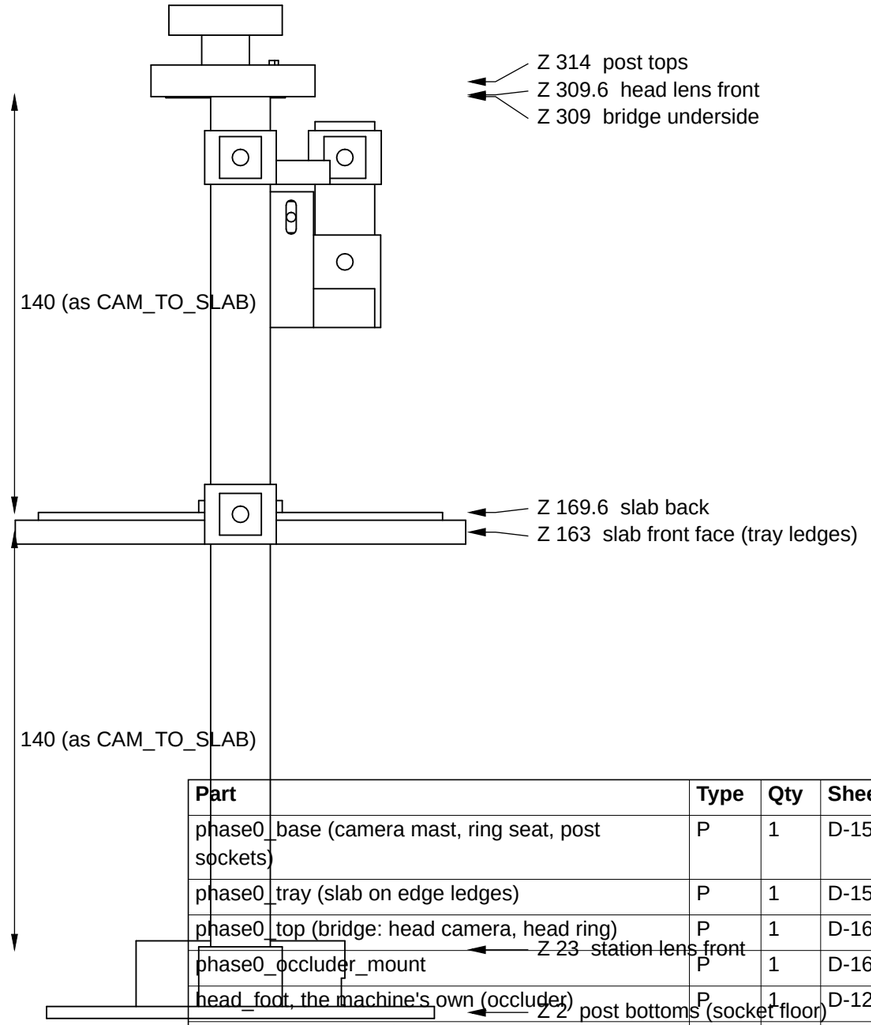

ISO (render, docs/img/phase0_jig.png;

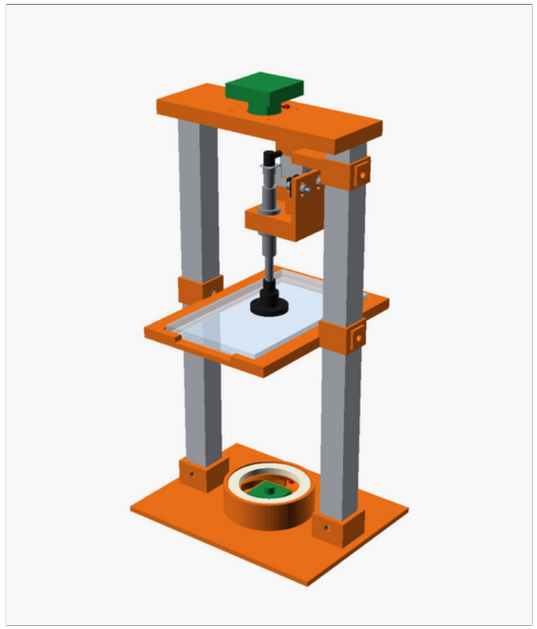

not to scale)

Part	Type	Qty	Sheet
phase0_base (camera mast, ring seat, post sockets)	P	1	D-15
phase0_tray (slab on edge ledges)	P	1	D-15
phase0_top (bridge: head camera, head ring)	P	1	D-16
phase0_occluder_mount	P	1	D-16
head_foot, the machine's own (occluder)	P	1	D-12
2020 post, 312 (C-08)	C	2	D-02
2020 arm stub, 66 (C-09)	C	1	D-02
probe flag (C-07)	S	1	D-06
cameras, LED rings, SMC buffer + cup + elbow, endstop board	B	-	BOM.csv

The posts set the bridge height: cut them square. Both lens-to-slab distances equal CAM_TO_SLAB = 140 on the machine (set +/-2, BUILD_GUIDE 1.5). Phase 0 is the go / no-go test before any motion parts are bought.

SlabRail - graded-slab batch scanner	**SHEET D-17 of D-17**
Phase 0 test jig	SCALE 1:2
Rev A - DRAFT FOR DESIGN REVIEW, not released for fabrication	UNITS: mm 3RD ANGLE
SOURCE: cad/model.py @ 640cf57 (drawn by cad/drawings.py)	DATE 2026-10-27 **DO NOT SCALE**