# This DRM-56 PROMOTIONAL COPY

Has Low Resolution Images For Quicker Download and is


# NOT FOR REPRODUCTION



© 2002

2215 Sanders Road • Northbrook, IL 60062-6135 Telephone: 847.509.9700 • FAX: 847.509.9798 www.ipc.org • e-mail: orderipc@ipc.org

> IPC-DRM-56 1st printing 7.02

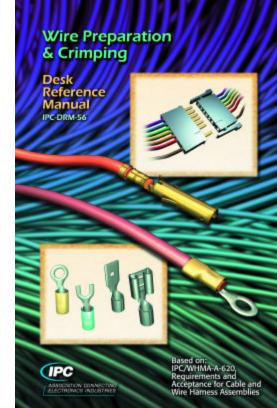

# Table of Contents page

Introduction	2
Classifications	7
Acceptance Criteria	8
Wire Preparation	9
Crimping	13
Open Barrel Crimps	14
Closed Barrel Crimps	23
Glossary	28

#### Note:

Only the subjects listed here are detailed in this manual. All other subjects or images used are previews of what will be in the next revision of DRM-56.

#### Based on: IPC/WHMA-A-620, Requirements and Acceptance for Cable and Wire Harness Assemblies

This DRM does not take precedence over or replace the requirements from any IPC Standard or specification. While based on IPC/M+IMA-A-620, this manual does not cover all related requirements, or repeat the same terms in that industry-consensus standard. IPC disclaims any warranties or guarantizes, oppressed or implied, and shall not be held liable for damages of any kind in connection with the information set forth IMPC-PCM-M-B This manual illustrates and translates portions of the IPC/WHMA-A-620 criteria into common terms for new operators who may be unfamiliar with the technical terms used in that standard.

The differences between target, acceptable, process indicator and defect conditions are illustrated and everyday common words are used in the descriptions.




Those who desire a more technically exact format should use IPC/WHMA-A-620, Requirements and Acceptance for Cable and Wire Harness Assemblies.



Wires typically consist of an electrical conductor such as copper, and an insulating material.

The conductor carries electrical power, like a garden hose carries water.

Insulation usually covers the conductor to protect it from touching, or shorting, against components or other wires

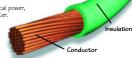

Conductors are either stranded or solid, and are usually copper or plated copper. Most of the wire used in wire harness assembly is stranded.




Wire insulation may be made from various materials including Teflon<sup>®</sup> or PVC – and may be different colors for identification purposes.

There are two different functions performed by wires.

Power wires carry power supply voltage. They distribute operating power within an electronic device.

Signal wires are generally smaller than power wires. They carry the lower voltage signals that control the functional operation of an electronic device, or provide data input and output.

Ribbon cable is an example of a number of small signal wires bonded into a flat cable

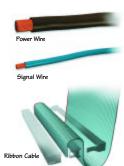

The size of the wire is important to the efficient flow of electricity. The more electrical current the wire must carry, the larger the wire needs to be.

Wire size is specified by AWG, or American Wire Gauge. AWG is a reverse numbering system where the larger numbers refer to the smaller wires. In other words, number 18 AWG wire is smaller than a 14 AWG wire.

It's important to realize that the wire stranding and insulation type or thickness can vary within a particular wire size. This can be due to voltage, temperature and/or environmental requirements.





# Wire Stripping

Wires need to have a specific length of insulation removed before being crimped or soldered to a terminal or contact.

Strip length is determined by the type of terminal or contact being used.



# Wire Tinning (Only for Soldering)




Prior to soldering, the stripped wire needs to be tinned, or coated with a thin film of solder. Tinning is done so that the wire won't be damaged when it is bent.

Tinning also improves solderability.

Wires that have been tinned cannot be used in crimp terminals.



# Terminals

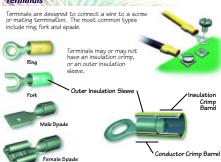

# Coaxial, Triaxial & Twinaxial Cables Introduction

These types of electronic cables transmit radio frequencies for broadcast and other types of data transmissions that require stable, high frequency signals. (covered in next version of this DRM)

Coaxial cable consists of four basic parts: a center conductor that carries the electronic signal: an outer conductor that shields the center conductor from electronic noise: a dielectric made from foam insulation that separates the center and outer conductor, and an outer jacket that protects the parts inside. The size and type of material of the dielectric determines the electrical characteristics of the cable



Triaxial cable has two outer conductors or shields separated by a second dielectric laver. One shield serves as a signal ground, while the other serves as an earth around. providina better noise immunity and shielding.

Triaxia Dielectric Shields Conductor Insulation Twinaxia Dielectric

Insulation

Twinaxial cable has a pair of insulated conductors encased in a common outer conductor or shield. The center conductors may either be twisted or run parallel to one another. A common use of twinax cable is high-speed balanced-mode multiplexed transmission in large computer systems. Balanced mode means that the signal is carried on both conductors. which provides greater noise immunity.

For information on Cable Requirements and Acceptance Criteria, refer to: IPC/WHMA-A620 - Requirements and Acceptance for Cable and Wire Harnesses. Assembly requirements are divided into three classes depending on the ultimate use, life expectancy and operating environment of the electronic assembly. Those classes are as follows:

#### Class 1 General Electronic Products

Includes products suitable for applications where the major requirement is the function of the completed assembly.

#### Class 2 Dedicated Service Electronic Products

Includes products where continued performance and extended life is required and for which uninterrupted service is desired but not critical. Typically, the end use environment would not cause failures.

#### Class 3 High Performance Electronic Products

Includes products where continued high performance or performance-ondemand is critical, equipment downtime cannot be tolerated, end-use environment may be uncommonly harsh, and the equipment must function required.

Notes: Product examples of class types are given for rough estimate only. The environment that a product operates in remains the critical factor in determining classification. For instance, a radio that must function on the surface of Mars will not be in the same class as your typical car radio. The inspector shall not select the class for the part under inspection. The user and manufacturer need to agree on the class to which any product belongs. This should be stated in the procurement documentation package.

Accept and/or reject decisions must be based on applicable documentation such as contract, drawings, specifications such as IPC/WHMA-A-620 and IPC/EIA J-STD-001 and other referenced documents.

# Acceptance Criteria

Criteria are given for each class in one or more of the following levels of condition:

- Target
  - Acceptable
  - Process Indicator
  - Defect

The examples below show the definitions of each acceptance criterion.

# Class 1, 2, 3 Target Condition

A condition that is close to perfect; however, it is a desirable condition and not always achievable and may not be necessary to ensure reliability of the assem bly in its service environment.

# Class 1, 2, 3 Acceptable

This characteristic indicates a condition that, while not necessarily perfect. will maintain the integrity and reliability of the assembly in its service environment. Acceptable can be better than the minimum end product requirements to allow for shifts in the process.

# Class 1, 2, 3 Process Indicator

A process indicator is a condition that does not affect the form, fit, function or reliability of a product. Process indicators should be used to improve the manufacturing process.

# Class 1, 2, 3 Defect

A defect is a condition that is insufficient to ensure the form, fit or function of the assembly in its end use environment. The manufacturer shall rework, repair, scrap, or "use as is" based on design, service and customer requirements.


Note: Many of the illustrations shown as process indicators or defects are exaggerated in order to show the reasons for this classification.

# **Wire Preparation**

Wire preparation involves selecting the correct gauge wire, cutting it to the proper length and removing a specific length of insulation so that the ends of the wire can be crimped or soldered for an electrical connection.

This section provides the criteria for stripping wires



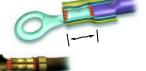

# Wire Stripping Criteria

Class 1, 2, 3 Target Condition

Strands are not scraped, nicked, severed or otherwise damaged.

Strands are not flattened, untwisted, buckled, kinked or otherwise deformed.

Insulation has been trimmed neatly with no signs of pinching, pulling, fraying, discoloration, charring or burning.



Class 1 Acceptable
Class 2, 3 Process Indicator

(see table below) Defect

Strands that are **scraped**, **nicked**, **or severed** become a defect when they exceed the limits specified in the Table below.

### **Defective Strand Damage**

Total number of	Maximum number scraped, nicked or severed for:		
Strands in the wire	Class 1, 2 Crimped or Soldered	Class 3 Crimped Terminations	Class 3 Soldered Terminations
Less than 7	0	0	0
7-15	1	0	1
16-25	3	0	2
26-40	4	3	3
41-60	5	4	4
61-120	6	5	5
121 or more	6%	5%	5%

Note: No damaged strands for wires used at a potential of 6kV or greater.

Reference: IPC/WHMA-A-620 Table 3-1.

Conductor Deformation -Loss of Spiral

Class 1 Acceptable
Class 2, 3 Defect

Class 2, 3 Defect

The general **spiral lay** of the strands has not been maintained.

# Conductor Deformation

Wire Preparation

# Class 1, 2, 3 Acceptable

Wire strands can have some separation (birdcaging) but do not exceed one strand diameter or extend beyond the wire insulation outside diameter.



- Class 1 Acceptable
  Class 2 Process Indicator
- Class 2 Process Indicator
- Class 3 Defect

Wire strands have **separation exceeding one strand**diameter but do not extend beyond wire
insulation outside diameter.

# Class 1, 2, 3 Defects Wire strands have separation exceeding the outside diameter of the wire insulation.

# Insulation Damage

Class 1, 2, 3 Acceptable

**Wire Preparation** 

Class 1, 2, 3 Acceptable
Class 2 Process Indicator

Slight uniform impression in the insulation from the gripping of mechanical strippers. Insulation thickness is not reduced by more than 20%.



Uneven or ragged pieces of insulation are less than half of the insulation outside diameter or 1 mm, whichever is less.

Insulation is **discolored** from the thermal stripping operation.

## Class 1, 2, 3 Defects

Insulation thickness is reduced by more than 20%.

Ragged pieces of insulation are greater than 50% of the insulation outside diameter or 1 mm, whichever is more.

Any cuts or breaks in insulation.

# Crimping

Crimping is a common method of terminating wires to contacts and terminals. Crimping occurs inside the barrel. There are two types of barrels – open and closed.

#### Open Barrel

Open barres have **two "U-shaped"** areas '
– one to crimp the wire conductor and one to crimp the wire insulation. The purpose of the insulation crimp is to provide strain relief.






Conductor Crimp Darrei

#### **Closed Barrel**

Closed barrels have an **"0-shaped"** or closed area where the wire is inserted and crimped.

This type may also have an insulation crimp and
an outer insulation sleeve.



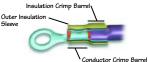

# **Carrier Cut-off Tabs**

Contacts and terminals for crimping often arrive on a reel or spool, bound together by strips of metal at one or both ends of the crimp.

They are removed from this carrier by cutting the connecting tab before or during the crimping process.

# TITE

# Parts of a Open Barrel Crimp

#### Insulation Support Crimp

The insulation support crimp provides strain relief for the wire. The crimp needs to hold the insulation as firmly as possible without cutting through the conductor strainds.

#### Insulation Inspection Window The insulation inspection window shows

the position of the insulation in relation to the transition area between the insulation support crimp and conductor crimp.

#### Bellmouth-

The bellmouth is the flare that is found on both edges of the conductor crimp, acting as a tunnel for the wire strands. This tunnel reduces the possibility that a sharp edge on the crimp will cut or rick the wire strands.

# Conductor Crimp The conductor crimp describes the

mechanical compression of the metal contact around the conductor. This is what creates the continuous conductive electrical path.

#### Conductor Brush

The conductor brush refers to the wire strands that extend past the conductor crimp on the contact side of the termination.

# Crimp Height

Crimp height is measured from the top surface of the formed crimp to the bottom most radial surface.



Note: All crimping needs to comply with the manufacturer's published requirements. The two methods of verifying the reliability of a crimp are by measuring the conductor crimp height and by performing a destructive pull test. Pull testing measures the force it takes to pull apart the termination between the contact and the wire.

# Class 1, 2, 3 Target Condition

Insulation crimp does not cut or break the insulation

Insulation fully enters and extends past the insulation crimo tabs.



### **Deformations**

# Class 2, 3 Acceptable


Minor deformation of the insulation surface as long as the crimp tabs do not cut, break, penetrate or puncture the surface of the wire insulation.



Crimp tabs provide a minimum side support of 180° to the wire insulation and both tabs contact the top of the wire insulation.



Crimp tabs do not meet at the top. but encircle the wire leaving an opening of 45° or less at the top.

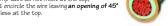

**Punctures** 

Class 1 Acceptable

Class 2 Process Indicator

Class 3 Defect

Puncturing of the insulation surface by the insulation crimp tabs, provided that the tabs do not penetrate down to the conductor.



# Insulation Support Crimp

Open Barrel

Class 1, 2, 3 Defects

The insulation crimp tabs pierce the insulation penetrating down to the conductor.



Crimp tabs that encircle the wire but leave an opening of more than 45° at the top.

The insulation crimp tabs do not provide supportat least 180 degrees around the insulation.


> Both insulation crimp tabs are not in contact with the top of the insulation.


Conductors are in insulation crimp area of the contact

Class 1, 2, 3 Target Condition

Both insulation and conductor are visible within the inspection window, with the transition line centered



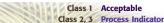

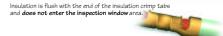

Insulation is flush with, but does not enter the wire crimp area.



# Class 1, 2, 3 Defects



# Bellmouth

Open Barrel

# Class 1, 2, 3 Target Condition

Bellmouth at each end of the conductor crimp area.


Bellmouth height at the conductor entry end is 2X the thickness of the contact/terminal base metal.



# Class 1, 2, 3 Acceptable

Bellmouth at conductor entry is visible but less than 2X the thickness of the metal

Bellmouth only at the conductor entry end and not at the conductor brush end of the crimp.

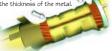

## Class 1, 2, 3 Defects





Excessive bellmouth indicating over crimping or undersize wire aquae.

Class 1, 2, 3 Target Condition



Class 1, 2 Acceptable

Minor deforming of the contact, such as a banana shape, that does not alter its form, fit, function or reliability.

Note: A trial mating may be required for final acceptance.



Crimp **indentations not uniform** but do not affect form, fit, function or reliability. Conductor is flush to end of conductor crimp area.





Open Barrel

Conductor does not extend


out of the crimp area.

Class 1, 2, 3 Defects



**Deformation (banana)** of the contact/terminal that affects form, fit, function or reliability.



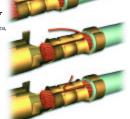

Class 1, 2, 3 Target Condition

The conductor strands protrude slightly past the end of the conductor crimp forming a "conductor brush".

The conductor strands forming the brush are kept together as a group and are not flared out.



Class 1 Acceptable Class 2, 3 Process Indicator

Conductor strands do not protrude past, but are flush with the end of the conductor crimp area of the contact.



# Class 1, 2, 3 Acceptable

Conductor strands are flared out but do not extend outside of the contact.



Class 1 Acceptable Class 2, 3 Defect





Carrier Cut-off Tab

Open Barrel Class 1, 2, 3 Acceptable

No damage to contact or terminal

Cutoff does not. prevent complete mating of the contact/terminal.



# Class 2, 3 Process Indicator

Cutoff tab length at mating end is areater than twice its thickness but does not impede matina.



Cutoff tab lenath at wire entry end is greater than twice its thickness but does not protrude when inserted into connector body.

# Class 1, 2, 3 Defects

Matina end cutoff tab prevents complete matina.







# Parts of a Closed Barrel Crimp

#### Insulation Support Crimp provides strain relief for the wire. The crimp needs to hold the insulation as firmly as possible without cutting through the conductor strands.

#### Conductor Crimp


refers to the mechanical compression of the metal contact around the conductor. This is what creates the continuous conductive electrical path.

#### Bellmouth

is the flare that is found on both edges of the conductor crimp, acting as a tunnel for the wire strands. This tunnel reduces the possibility that a sharp edge on the crimp will cut or nick the wire strands.

#### Conductor Brush

The conductor brush refers to the wire strands that extend past the conductor crimp on the contact side of the termination. By seeing the conductor brush, you verify that compression occurs over the full length of the conductor crimp

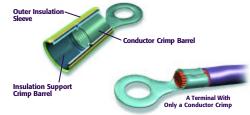

Note: All crimping needs to comply with the manufacturer's published requirements. The two methods of verifying the reliability of a crimp are by measuring the conductor crimp height and by performing a destructive pull test. Pull testing measures the force it takes to pull apart the termination between the contact and the wire.

# Insulation Support Crimp

the insulation.

Closed Barrel

Insulation

Class 1, 2, 3 Target Condition

Insulation

Sleeve

Insulation fully enters and extends inside the Insulation Support Crimp.

Insulation crimp does not cut or break insulation.

The insulation crimp is evenly formed and contacts the wire insulation providing support without damaxing

Class 1 Acceptable
Class 2, 3 Process Indicator



Outer Insulation
Damage Class 1, 2, 3 Defect



Crimp Closed Barrel

Class 1, 2, 3 Acceptable

No insulation in the conductor crimp area.

No conductor strands broken or folded back into crimp area.





Filler wire or foldback, if specified, is within the crimp and is visible at the entry bellmouth, but does not strend beyond the edge of the terminal insulation.

Class 1, 2 Acceptable
Class 3 Process Indic

**Minor deforming** of the contact does not alter its form, fit, function or reliability.



Class 1 Acceptable
Class 2, 3 Defect




Conductor Crimp Crimp Closed Barrel

Class 1, 2, 3 Defects

Insulation extends into conductor crimp area.

Conductor does not extend out of the crimp area.

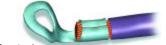

# Deformation of

the contact/terminal that affects form, fit, function or reliability.

Any loose conductor strands that are outside the crimp area, trapped strands, folded back strands.

Crimp Closed Barrel

Class 1, 2, 3 Acceptable



Class 2, 3 Process Indicator



Class 1, 2, 3 Defects

Mating end cutoff tab prevents complete mating.







Appendix

AMERICAN WIRE GAUGE (AWG): A standard numbering system for designating wire diameter. Primarily used in the United States.

**BANANA TERMINAL:** A termination that has excessive bending, making it difficult to insert into a connector housing.

BELLMOUTH: The raised portion at the front and/or back of the wire barrel crimp that provides a gradual entrance and exit for the wire strands without causing damage.

**BRAID:** Woven bare metallic or tinned copper wire used as shielding for wires and cables.

CABLE: A group of individually insulated conductors in twisted or parallel configuration under a common sheath.

CABLE ASSEMBLY: A cable with plugs or connectors attached.

CIRCULAR MIL AREA: Cross-sectional area of a current carrying portion of a conductor expressed in circular mile.

CLOSED BARREL: A contact or terminal with an O-shaped barrel.

COXIA: CABLE: A cable consisting of a center conductor that carries the beat rolls pignal; an outer conductor that shields the center conductor from outside noise; a dielectric that separates the center and outer conductor; and an outer iacket to protect the parts inside.

**CONDUCTOR:** An uninsulated wire or the conductor of an insulated wire suitable for carrying electrical current.

CONDUCTOR BRUSH: The wire strands that extend past the conductor crimp on the conductor side of the termination.

**CONDUCTOR CRIMP:** Refers to the mechanical compression of the metal contact around the conductor. This is what creates the continuous conductive electrical path.

CONNECTOR: A device used to physically and electrically join two or more conductors

**CONTACT:** The conducting part of a connector that acts with another such part to complete or break a circuit.

CONTACT SIZE: Defines the largest size wire that can be used with the specific contact.

**CRIMP:** The final configuration of a terminal barrel formed by the compression of terminal barrel and wire.

CRIMP HEIGHT: A measurement taken of the overall wire barrel height after the terminal has been crimped.

CUT OFF TAB: The small tabs that remain on the front and back of a terminal after it has been applied.

DIELECTRIC: Any insulating medium that intervenes between two conductors.

FLAT CABLE: Any cable with two smooth or corrugated but essentially flat gurfacea

HARNESS: A group of wires and cables, usually made with breakouts, which are tied together or pulled into a rubber or plastic sheath. A harness provides interconnection of an electric circuit.

INSULATION: A material that offers high electrical resistance making it suitable for covering components, terminals and wires to prevent the possible future contact of adjacent conductors resulting in a short circuit.

INSULATION DISPLACEMENT: A technique for terminating an insulated wire to a connector or terminal without pre-stripping the insulation from the conductor. The termination is made by cutting through the insulation from the conductor

INSULATION SUPPORT CRIMP: Provides strain relief for the wire by hold the insulation firmly without cutting the conductor strands.

INSULATION THICKNESS: The wall thickness of the applied insulation.

INTERCONNECTION: Mechanically joining devices together to complete an electrical circuit.

LEAD: A wire, with or without terminals, that connects two points in a circuit.

IIIG A wire terminal

OPEN BARREL: A contact or terminal with two U-shaped areas - one for crimping the conductor and one for crimping the insulation.

PLUG: The part of the two mating halves of a connector that is free to move when not fastened to the other matina half.

PULL TESTING: A destructive test where the terminal and wire are pulled until the termination pulls apart or the wire breaks. Pull testing is used to determine the strength of the crimp.

RIBBON CABLE: A flat cable of individually insulated conductors lying parallel and held together by means of an adhesive film laminate.



SHEATH: The outer covering or jacket of a multi-conductor cable.

SHIELD: A metallic layer placed around a conductor or group of conductors to prevent electrostatic interference between the enclosed wires and external

SOLDER TERMINALS: Electrical/mechanical connection devices that are used to terminate a discrete wire or wires by soldering. The shapes of these terminals include turret, bifurcated, cup, hook and pierced.

STRAIN RELIEF: A technique or item that reduces the transmission of mechanical stresses to the conductor termination.

STRIP LENGTH: A specific length of insulation removed from the wire before it is crimped or soldered to a terminal or contact.

TERMINAL: A device designed to terminate a conductor that is to be affixed to a post, stud, chassis, another conductor, etc., to establish an electrical connection. Some types of terminals include ring, tongue, spade, flag, hook, blade, quick-connect, offset and flanged.

TINNING: The application of solder to the stripped wire to assure the wire to be soldered has a uniform and solderable surface - and that there is no separation of the individual strands.

TRIAXIAL CABLE: Similar to coaxial cable, but consisting of two outer conductors, or shields separated by a second dielectric layer.

TWINAXIAL CABLE: Similar to coaxial cable, but consisting of a pair of insulated conductors enclosed in a common outer conductor, or shield.

WETTING: The formation of a relatively uniform, smooth, unbroken and adherent film of solder to a basis metal.

WIRE: A wire is a slender rod or filament of drawn metal.

WIRE DIAMETER: The overall conductor plus insulation thickness.

WIRE WRAP: The connecting of a solid wire to a square, rectangular or V-shaped terminal by tightly wrapping a solid-conductor wire around the terminal with a special tool.

If you have comments or suggestions regarding this Desk Reference Manual, please contact: IPC Video/CBT P.O. Box 389 Ranchos de Taos, New Mexico 87557 505.758.7937 (Dial 0) service@ipcvideo.org