

Idea Lab One

instrukcja montażu build manual

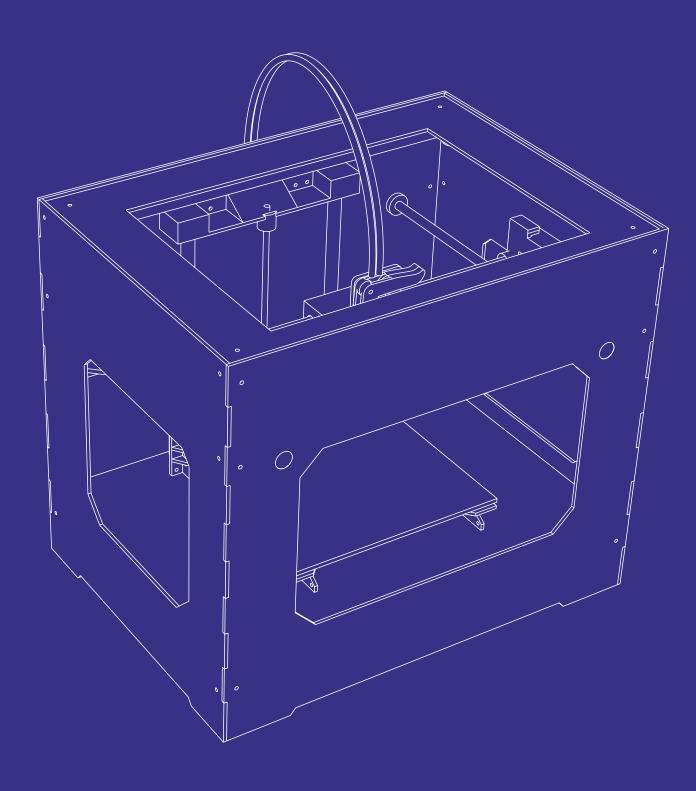


Step 1

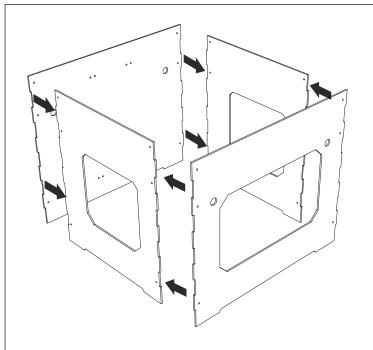


Assembly sides of frame

Step 2

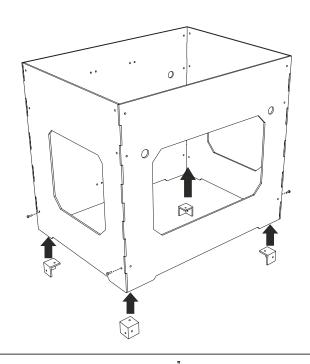

Use 8 M3 screws and assembly 4 bottom corners.
Before mounting corners put M3 nuts into corners

Step 3

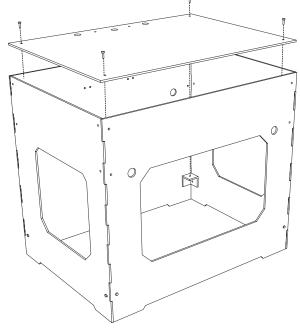

Install bottom plate using 4 M3 screws

