#### ADC INTERFACING WITH PT 51 USING SPI

prepared by Varun Warrier

#### Introduction:

In this experiment we are using the ADC – MCP 3008. The ADC can be given single ended or differential analog inputs and it produces 10 bit digital output. This 10 bit digital output is available on the  $D_{out}$  pin of the ADC serially. We are interfacing this with Pt 51 microcontroller. The microcontroller takes this 10 bit input and modifies data appropriately.

## **ADC interfacing with Pt51**

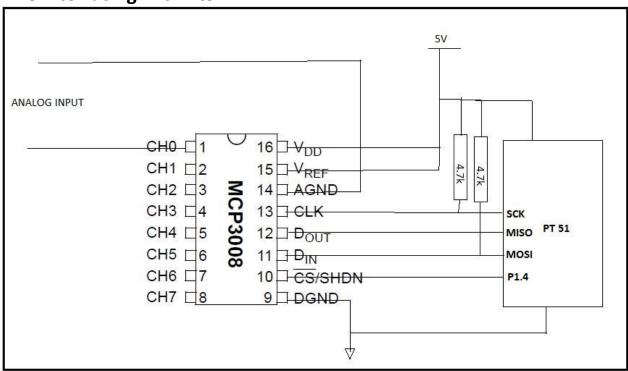


Figure 1: connection diagram

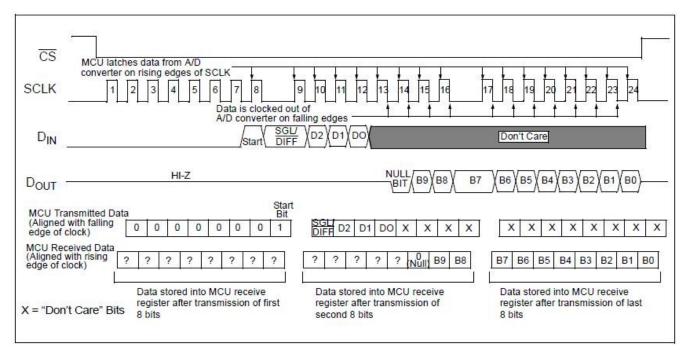


Figure 2: Timing diagram

The SPI pins on the microcontroller are as follows:

Pin	Function	Description
P1.4	SS <sub>bar</sub>	Chip Select
P1.5	MISO	Serial Input
P1.6	SCK	Serial Clock
P1.7	MOSI	Serial Output

The pins on the Pt-51 board marked "SPI" can be used for connecting wires to the ADC

#### **Steps for ADC interfacing:**

- 1. Configure the SPCON register as described below.
- 2. Enable SPI communication.
- 3. Make CS pin of ADC low to select it.
- 4. As shown in timing diagram send logic high to D<sub>in</sub> of ADC to indicate start of conversion, followed by single/differential mode selection, followed by channel selection for ADC input.
- 5. Thus the corresponding digital data is obtained at D<sub>out</sub> pin: null bit followed by 10 bits (MSB first). Refer MCP3008 datasheet for more details.
- 6. After the successful reception of 10 bit of data CS pin of ADC is made high.
- 7. The data bits transmission and reception from microcontroller should be done as per the alignment shown in timing diagram.

#### **Steps to configure SPCON register:**

- 1. Free the SS pin for a general-purpose
- 2. Select one of the Master clock rates (by choosing appropriate values of SPRO, SPR1, SPR2 we can get different baud rates. Select the appropriate baud rate)
- 3. Configure the SPI module as Master (in this case)
- 4. Selects serial clock polarity and phase(1,1) or (0,0)
- 5. Enable the SPI module (SPEN = 1)

## SPCON Register SPCON - Serial Peripheral Control Register (0C3H)

7 6 5 4 3 2 1 0

SPR2 SPEN SSDIS MSTR CPOL CPHA SPR1 SPR0

		7	10	73		
Bit Number	Bit Mnemonic	Description				
7	SPR2	Serial Peripheral Rate 2 Bit with SPR1 and SPR0 define the clock rate.				
6	SPEN	Serial Peripheral Enable Cleared to disable the SPI interface. Set to enable the SPI interface.				
5	SSDIS	SS Disable  Cleared to enable SS in both Master and Slave modes.  Set to disable SS in both Master and Slave modes. In Slave mode, this bit has no effect if CPHA = "0".				
5	MSTR	Serial Peripheral Master Cleared to configure the SPI as a Slave. Set to configure the SPI as a Master.				
4	CPOL	Clock Polarity Cleared to have the SCK set to "0" in idle state. Set to have the SCK set to "1" in idle low.				
3	СРНА	Clock Phase Cleared to have the data sampled when the SCK leaves the idle state (see CPOL). Set to have the data sampled when the SCK returns to idle state (see CPOL).				
2	SPR1	0 0	SPR1 0 0 1	<u>SPR0</u> 0 1	Serial Peripheral Rate Invalid F <sub>CLK PERIPH/</sub> 4 F <sub>CLK PERIPH/</sub> 8	
1	SPR0	0 1 1 1 1	1 0 0 1 1	1 0 1 0	F <sub>CLK PERIPH/</sub> 16 F <sub>CLK PERIPH/</sub> 32 F <sub>CLK PERIPH/</sub> 64 F <sub>CLK PERIPH/</sub> 128 Invalid	

Reset Value = 0001 0100b

# IMPORTANT FORMULAE FOR VOLTAGE CONVERSION CALCULATION: ADC:

$$LSB \ Size = \frac{V_{REF}}{1024}$$

$$Digital\ Output\ Code\ =\ \frac{1024\times V_{IN}}{V_{REF}}$$

Where:

 $V_{IN}$  = analog input voltage

 $V_{REF}$  = analog input voltage