DENON

For Europe & Japan model

SERVICE MANUAL

Ver. 1

MODEL TU-1500AE

AM-FM STEREO TUNER

注　意

サービスをおこなう前に、このサービスマニュアルを必ずお読みください。本機は、火災、感電、けがなどに対する安全性を確保するために、さまざまな配慮をおこなっており、また法的には「電気用品安全法」にもとづき、所定の許可を得て製造されております。
従ってサービスをおこなう際は、これらの安全性が維持されるよう、このサービスマニュアルに記載されている注意事項を必ずお守りください。

● **For purposes of improvement, specifications and design are subject to change without notice.**	● 本機の仕様は性能改良のため、予告なく変更することがあります。 ● 補修用性能部品の保有期間は、製造打切後8年です。
● **Please use this service manual with referring to the operating instructions without fail.**	● 修理の際は、必ず取扱説明書を参照の上、作業を行ってください。
● **Some illustrations using in this service manual are slightly different from the actual set.**	● 本文中に使用しているイラストは、説明の都合上現物と多少異なる場合があります。

DENON

TOKYO, JAPAN
Denon Brand Company, D&M Holdings Inc.

X0266 V.01 DE/CDM 0510

SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

LEAKAGE CURRENT CHECK

Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamps, or if the resistance from chassis to either side of the power cord is less than 460 kohms, the unit is defective.

CAUTION **Please heed the points listed below during servicing and inspection.**

◎Heed the cautions!

Spots requiring particular attention when servicing, such as the cabinet, parts, chassis, etc., have cautions indicated on labels or seals. Be sure to heed these cautions and the cautions indicated in the handling instructions.

◎Caution concerning electric shock!

(1) An AC voltage is impressed on this set, so touching internal metal parts when the set is energized could cause electric shock. Take care to avoid electric shock, by for example using an isolating transformer and gloves when servicing while the set is energized, unplugging the power cord when replacing parts, etc.

(2) There are high voltage parts inside. Handle with extra care when the set is energized.

◎Caution concerning disassembly and assembly!

Though great care is taken when manufacturing parts from sheet metal, there may in some rare cases be burrs on the edges of parts which could cause injury if fingers are moved across them. Use gloves to protect your hands.

◎Only use designated parts!

The set's parts have specific safety properties (fire resistance, voltage resistance, etc.). For replacement parts, be sure to use parts which have the same properties. In particular, for the important safety parts that are marked ⚠ on wiring diagrams and parts lists, be sure to use the designated parts.

◎Be sure to mount parts and arrange the wires as they were originally!

For safety reasons, some parts use tape, tubes or other insulating materials, and some parts are mounted away from the surface of printed circuit boards. Care is also taken with the positions of the wires inside and clamps are used to keep wires away from heating and high voltage parts, so be sure to set everything back as it was originally.

◎Inspect for safety after servicing!

Check that all screws, parts and wires removed or disconnected for servicing have been put back in their original positions, inspect that no parts around the area that has been serviced have been negatively affected, conduct an insulation check on the external metal connectors and between the blades of the power plug, and otherwise check that safety is ensured.

(Insulation check procedure)
Unplug the power cord from the power outlet, disconnect the antenna, plugs, etc., and turn the power switch on. Using a 500V insulation resistance tester, check that the insulation resistance between the terminals of the power plug and the externally exposed metal parts (antenna terminal, headphones terminal, microphone terminal, input terminal, etc.) is 1MΩ or greater. If it is less, the set must be inspected and repaired.

CAUTION **Concerning important safety parts**

Many of the electric and structural parts used in the set have special safety properties. In most cases these properties are difficult to distinguish by sight, and using replacement parts with higher ratings (rated power and withstand voltage) does not necessarily guarantee that safety performance will be preserved. Parts with safety properties are indicated as shown below on the wiring diagrams and parts lists is this service manual. Be sure to replace them with parts with the designated part number.

(1) Schematic diagrams ... Indicated by the ⚠ mark.

(2) Parts lists ... Indicated by the ⚠ mark.

Using parts other than the designated parts could result in electric shock, fires or other dangerous situations.

注　意 **サービス、点検時にはつぎのことにご注意願います。**

◎注意事項をお守りください！

サービスのとき特に注意を必要とする個所についてはキャビネット、部品、シャーシなどにラベルや捺印で注意事項を表示しています。これらの注意書きおよび取扱説明書などの注意事項を必ずお守りください。

◎感電に注意！

(1) このセットは、交流電圧が印加されていますので通電時に内部金属部に触れると感電することがあります。従って通電サービス時には、絶縁トランスの使用や手袋の着用、部品交換には、電源プラグを抜くなどして感電にご注意ください。

(2) 内部には高電圧の部分がありますので、通電時の取扱には十分ご注意ください。

◎分解、組み立て作業時のご注意！

板金部品の端面の『バリ』は、部品製造時に充分管理をしておりますが、板金端面は鋭利となっている箇所が有りますので、部品端面に触れたまま指を動かすとまれに怪我をする場合がありますので十分注意して作業して下さい。手の保護のために手袋を着用してください。

◎指定部品の使用！

セットの部品は難燃性や耐電圧など安全上の特性を持ったものとなっています。従って交換部品は、使用されていたものと同じ特性の部品を使用してください。特に配線図、部品表に ⚠ 印で指定されている安全上重要な部品は必ず指定のものをご使用ください。

◎部品の取付けや配線の引きまわしは、元どおりに！

安全上、テープやチューブなどの絶縁材料を使用したり、プリント基板から浮かして取付けた部品があります。また内部配線は引きまわしやクランパーによって発熱部品や高圧部品に接近しないように配慮されていますので、これらは必ず元どおりにしてください。

◎サービス後は安全点検を！

サービスのために取り外したねじ、部品、配線などが元どおりになっているか、またサービスした個所の周辺を劣化させてしまったところがないかなどを点検し、外部金属端子部と、電源プラグの刃の間の絶縁チェックをおこなうなど、安全性が確保されていることを確認してください。

（絶縁チェックの方法）
電源コンセントから電源プラグを抜き、アンテナやプラグなどを外し、電源スイッチを入れます。500V 絶縁抵抗計を用いて、電源プラグのそれぞれの端子と外部露出金属部［アンテナ端子、ヘッドホン端子マイク端子、入力端子など］との間で、絶縁抵抗値が１ MΩ 以上であること、この値以下のときはセットの点検修理が必要です。

注　意 **安全上重要な部品について**


本機に使用している多くの電気部品、および機構部品は安全上、特別な特性を持っています。この特性はほとんどの場合、外観では判別つきにくく、またもとの部品より高い定格（定格電力、耐圧）を持ったものを使用しても安全性が維持されるとは、限りません。安全上の特性を持った部品は、このサービスマニュアルの配線図、部品表につぎのように表示していますので必ず指定されている部品番号のものを使用願います。

(1) 配線図…⚠マークで表示しています。


(2) 部品表…⚠マークで表示しています。

指定された部品と異なるものを使用した場合には、感電、火災などの危険を生じる恐れがあります。

LEVEL DIAGRAMS

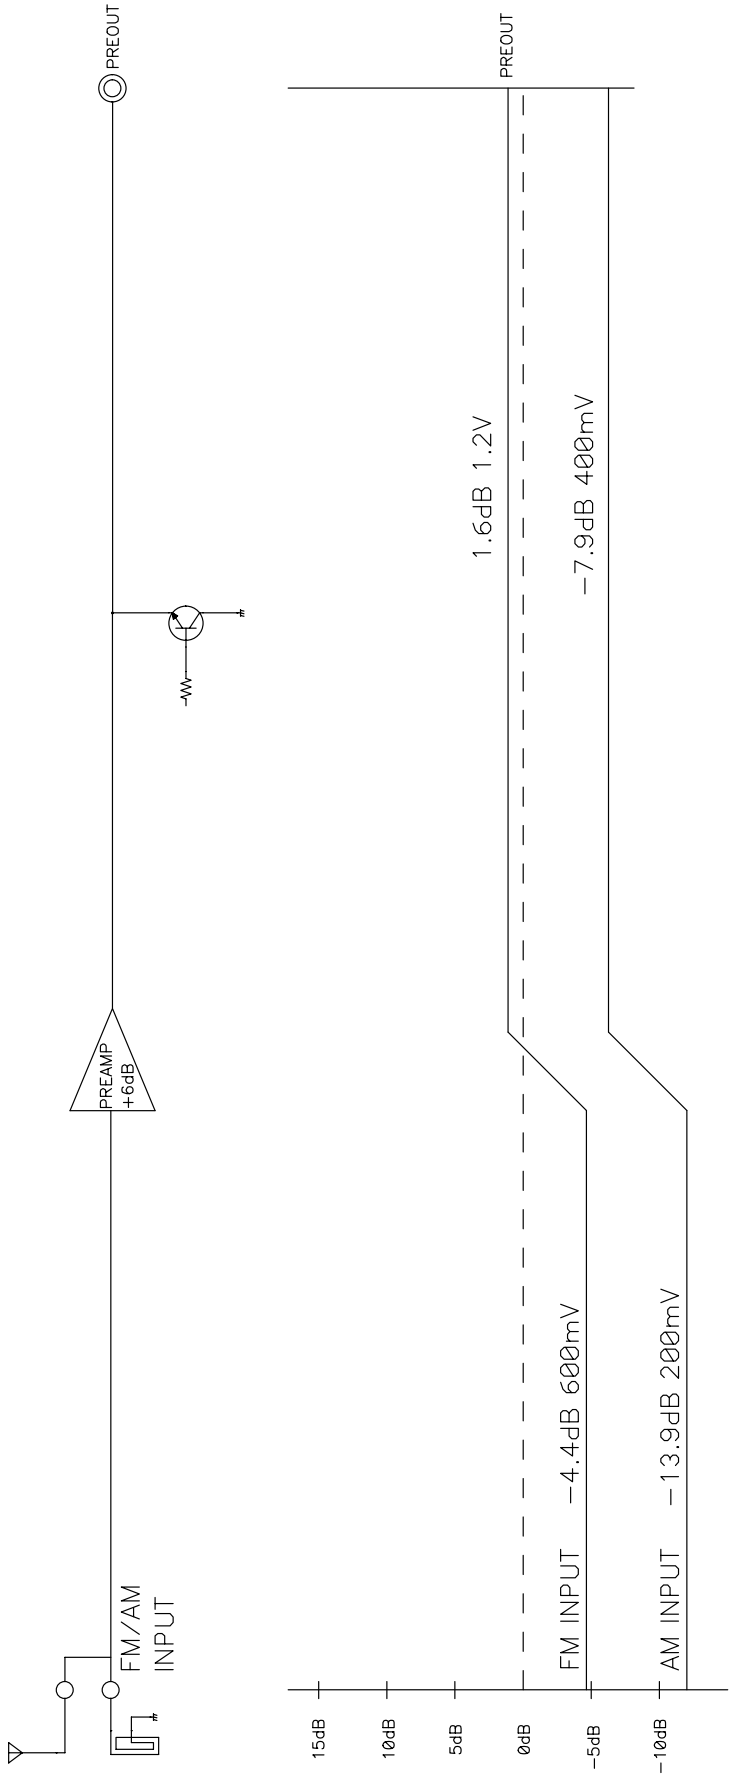

BLOCK DIAGRAMS

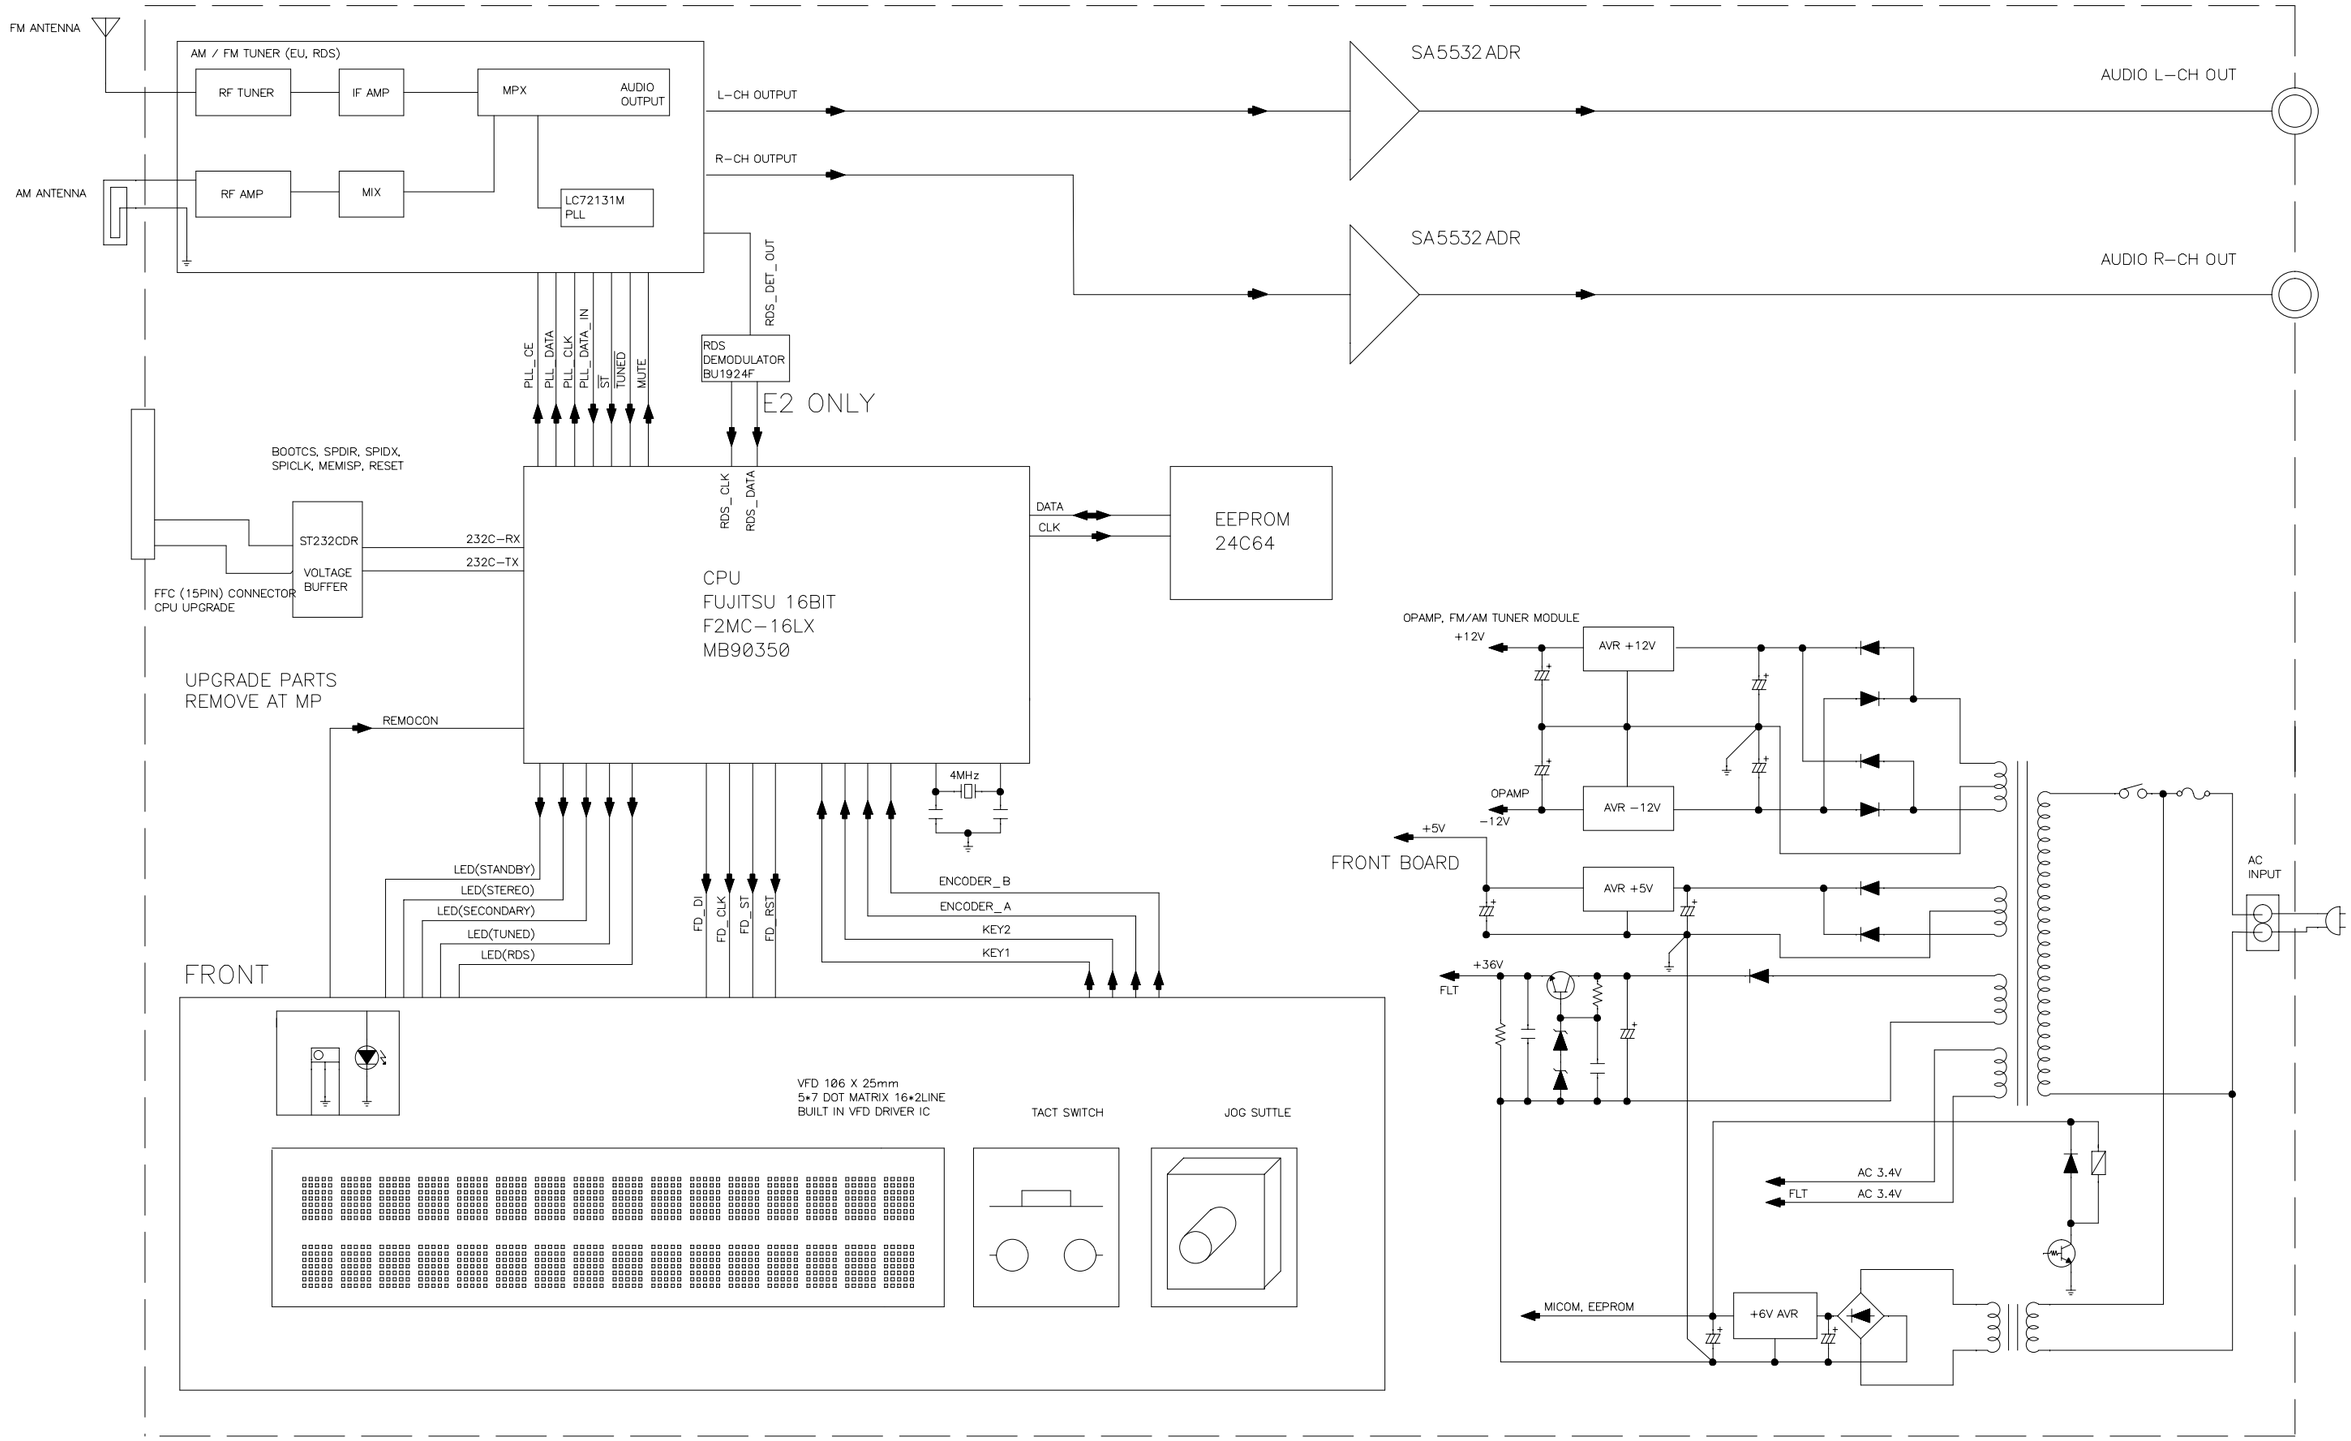


SEMICONDUCTORS

Only major semiconductors are shown, general semiconductors etc. are omitted to list.
主な半導体を記載しています。汎用の半導体は記載を省略しています。

1. IC's


MB90F352C (IC300)

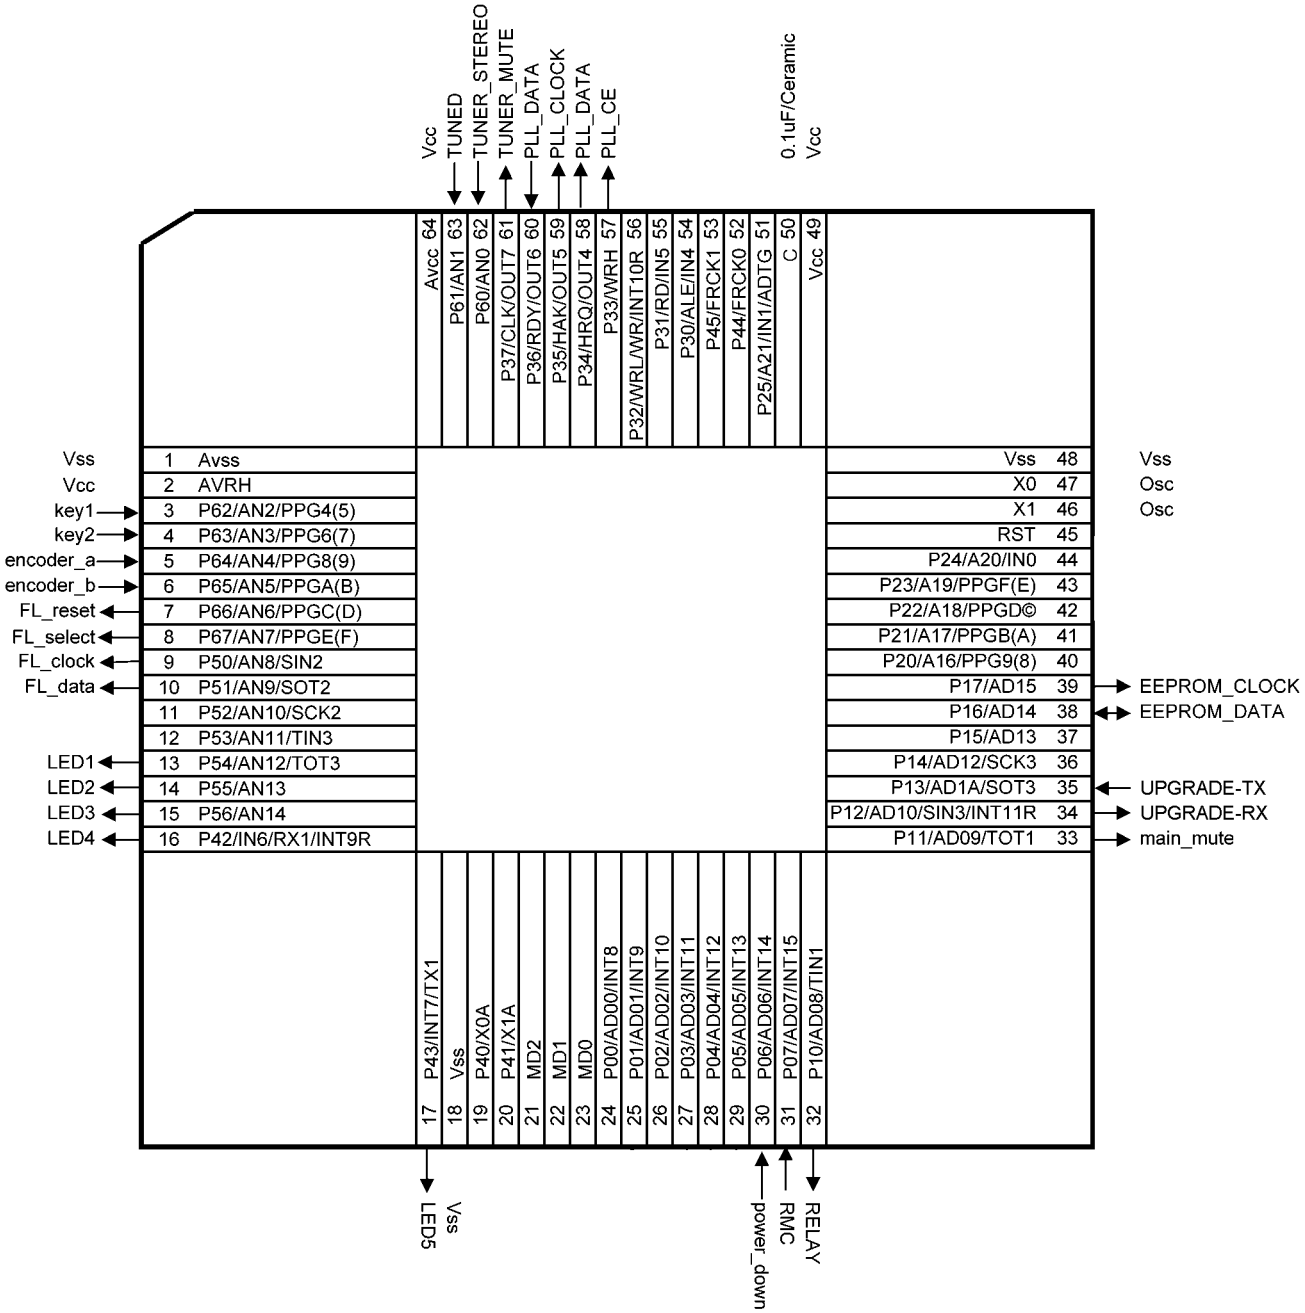


MB90F352C Terminal Function

Pin No.	Pin Name	I/O	Function
1	Avss		Vss
2	AVRH		Vcc
3	P62/AN2/PPG4(5)		key1
4	P63/AN3/PPG6(7)		key2
5	P64/AN4/PPG8(9)	I	encoder_a
6	P65/AN5/PPGA(B)	I	encoder_b
7	P66/AN6/PPGC(D)	O	FLT_RESET
8	P67/AN7/PPGE(F)	O	FLT_SELECT
9	P50/AN8/SIN2	O	FLT_CLOCK
10	P51/AN9/SOT2	O	FLT_DATA
11	P52/AN10/SCK2	O	
12	P53/AN11/TIN3	O	
13	P54/AN12/TOT3	O	LED_STANDBY
14	P55/AN13	O	LED_STEREO
15	P56/AN14	O	LED_SECONDARY
16	P42/IN6/RX1/INT9R	O	LED_TUNED
17	P43/INT7/TX1	O	LED_RDS
18	Vss		GND
19	P40/X0A		
20	P41/X1A		
21	MD2		MICOM UPGRADE
22	MD1		MICOM UPGRADE
23	MD0		MICOM UPGRADE
24	P00/AD00/INT8	O	
25	P01/AD01/INT9	O	
26	P02/AD02/INT10	O	
27	P03/AD03/INT11	O	
28	P04/AD04/INT12	O	
29	P05/AD05/INT13	O	
30	P06/AD06/INT14	I	POWER_DOWN
31	P07/AD07/INT15	I	REMOCON
32	P10/AD08/TIN1	O	POWER_RELAY
33	P11/AD09/TOT1	O	MAIN_MUTE
34	P12/AD10/SIN3/INT11R	O	UPGRADE_RX
35	P13/AD1A/SOT3	O	UPGRADE_TX
36	P14/AD12/SCK3	O	POWER_DAB
37	P15/AD13	O	
38	P16/AD14	O	EEPROM_DATA
39	P17/AD15	O	EEPROM_CLOCK
40	P20/A16/PPG9(8)	O	
41	P21/A17/PPGB(A)	O	
42	P22/A18/PPGD?	O	
43	P23/A19/PPGF(E)	O	
44	P24/A20/IN0	O	
45	RST		
46	X1		4MHz
47	X0		4MHz
48	Vss		GND
49	Vcc		VCC
50	C		0.1UF/CERAMIC
51	P25/A21/IN1/ADTG	O	
52	P44/FRCK0	O	
53	P45/FRCK1	O	
54	P30/ALE/IN4	O	
55	P31/RD/IN5	O	
56	P32/WRL/WR/INT10R	O	
57	P33/WRH	O	PLL_CE
58	P34/HRQ/OUT4	O	PLL_DATA_OUT(PLL DATA TRANS)
59	P35/HAK/OUT5	O	PLL_CLOCK
60	P36/RDY/OUT6	I	PLL_DATA_IN(IF READ)
61	P37/CLK/OUT7	O	TUNER_MUTE
62	P60/AN0	I	TUNER_STEREO
63	P61/AN1	I	TUNER_TUNED
64	Avcc		VCC

BU1924F (IC306) : Europe model only

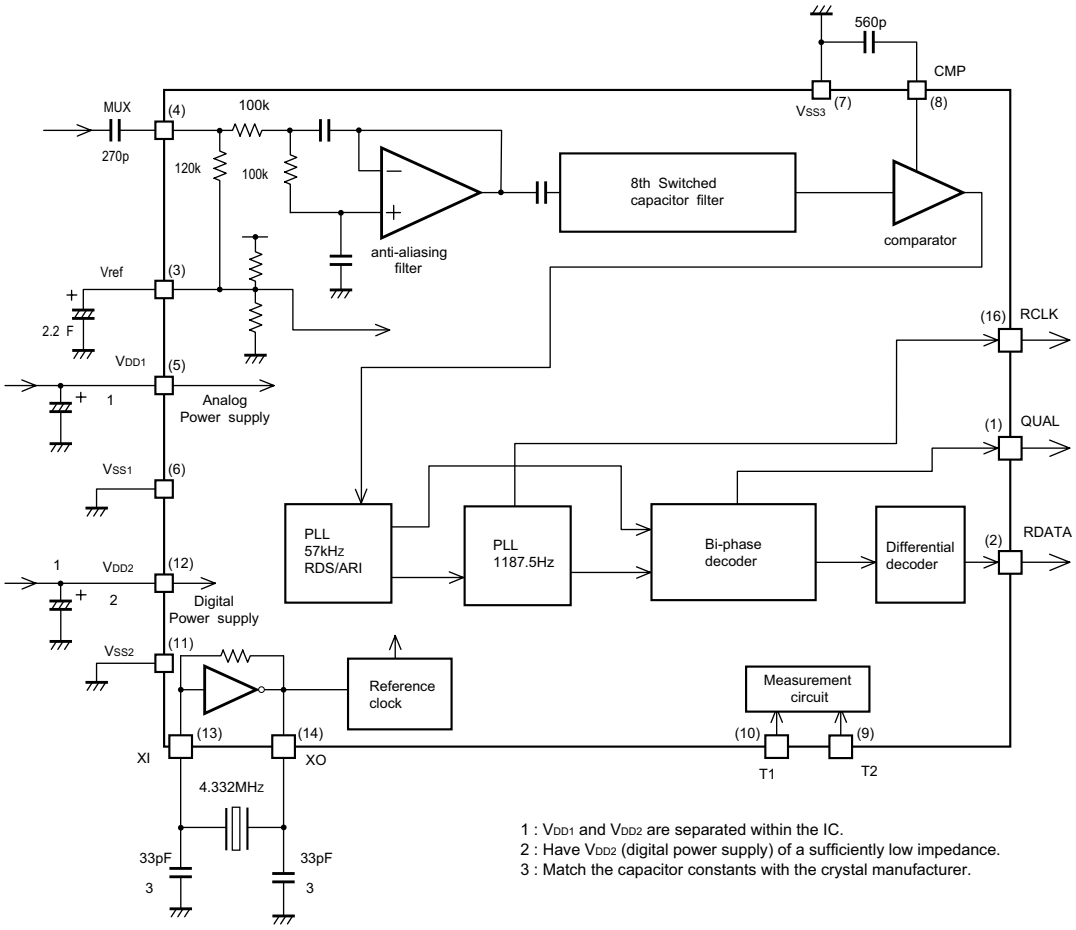


1 : V_{DD1} and V_{DD2} are separated within the IC.
2 : Have V_{DD2} (digital power supply) of a sufficiently low impedance.
3 : Match the capacitor constants with the crystal manufacturer.

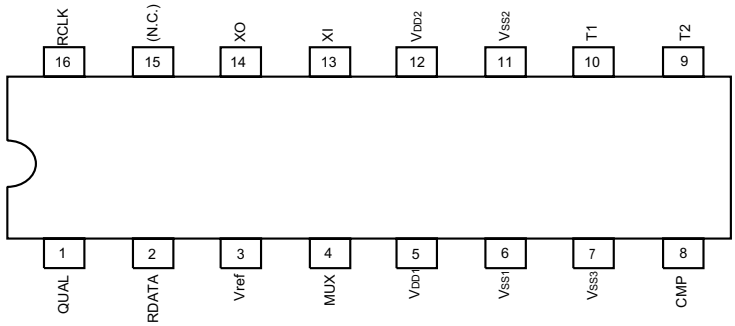

2. FL DISPLAY

162-SD-10GINK (FLT100)

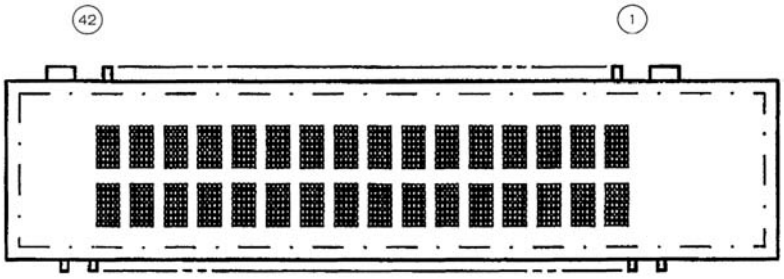



PIN CONNECTION

PIN NO.	42	41	40	39~7	6	5	4	3	2	1	10	9	8	7	6	5	4	3	2	1
CONNECTION	F1	NP	NP	NX	TSB	TSC	TSA	DA	CP	CS	IRESET	VSS	VDD	LGND2	LGND1	VH	PGND	NP	NP	F2

NOTE
1) F1,F2 ---- Filament
2) NP ------- No pin
3) NX ------ No extend pin
4) DL ------- Datum Line
5) LGNDn ---- Logic GND pin
6) PGND ----- Power GND pin
7) VH ------- High Voltage Supply pin
8) VDD ------ Logic Voltage Supply pin
9) CP ------- Shift Register Clock
10) DA ------- Serial Data Input
11) TSA,TSC -- Test pin A/C (Leave this open.)
12) TSB ------ Test pin B (Connect it with L-GND on PCB.)
13) $\overline{CS}$ ------- Chip select Input
14) $\overline{RESET}$ ---- Reset Input
15) OSC ------ Pin for self-oscillation
16) Field of vision is a minimum of 36.9° from the upper side, 12.2° from the lower side.
17) Solder composition is Sn-3Ag-0.5Cu.

GRID ASSIGNMENT

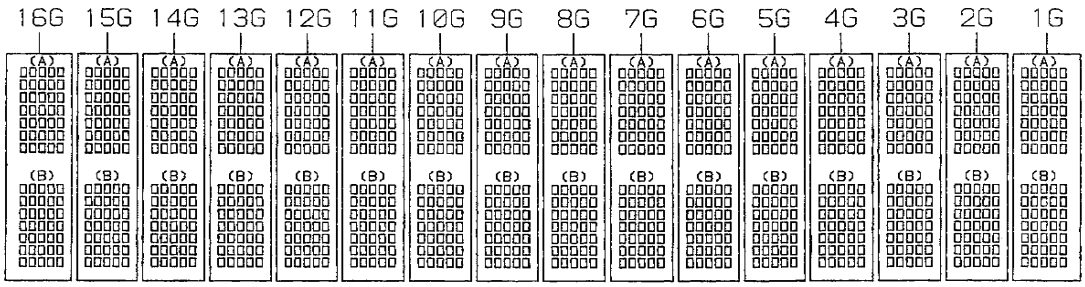

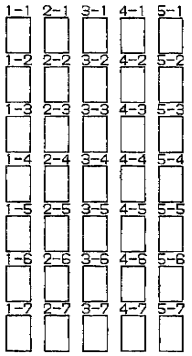

(16G~1G)


ROM CODE

* ROM CODE_A(B) is the character set for A0/B34 to A34/B0.
*00000000B(00H) to 00000111B(07H) are the CGRAM_A(B) addresses.


MSB / LSB	0000	0001	0010	0011	0100	0101	0110	0111	1000	1001	1010	1011	1100	1101	1110	1111
0000	RAM0															
0001	RAM1															
0010	RAM2															
0011	RAM3															
0100	RAM4															
0101	RAM5															
0110	RAM6															
0111	RAM7															
1000																
1001																
1010																
1011																
1100																
1101																
1110																
1111																

PRINTED WIRING BOARDS

TU-1500AE P.W.B. UNIT (1/2)

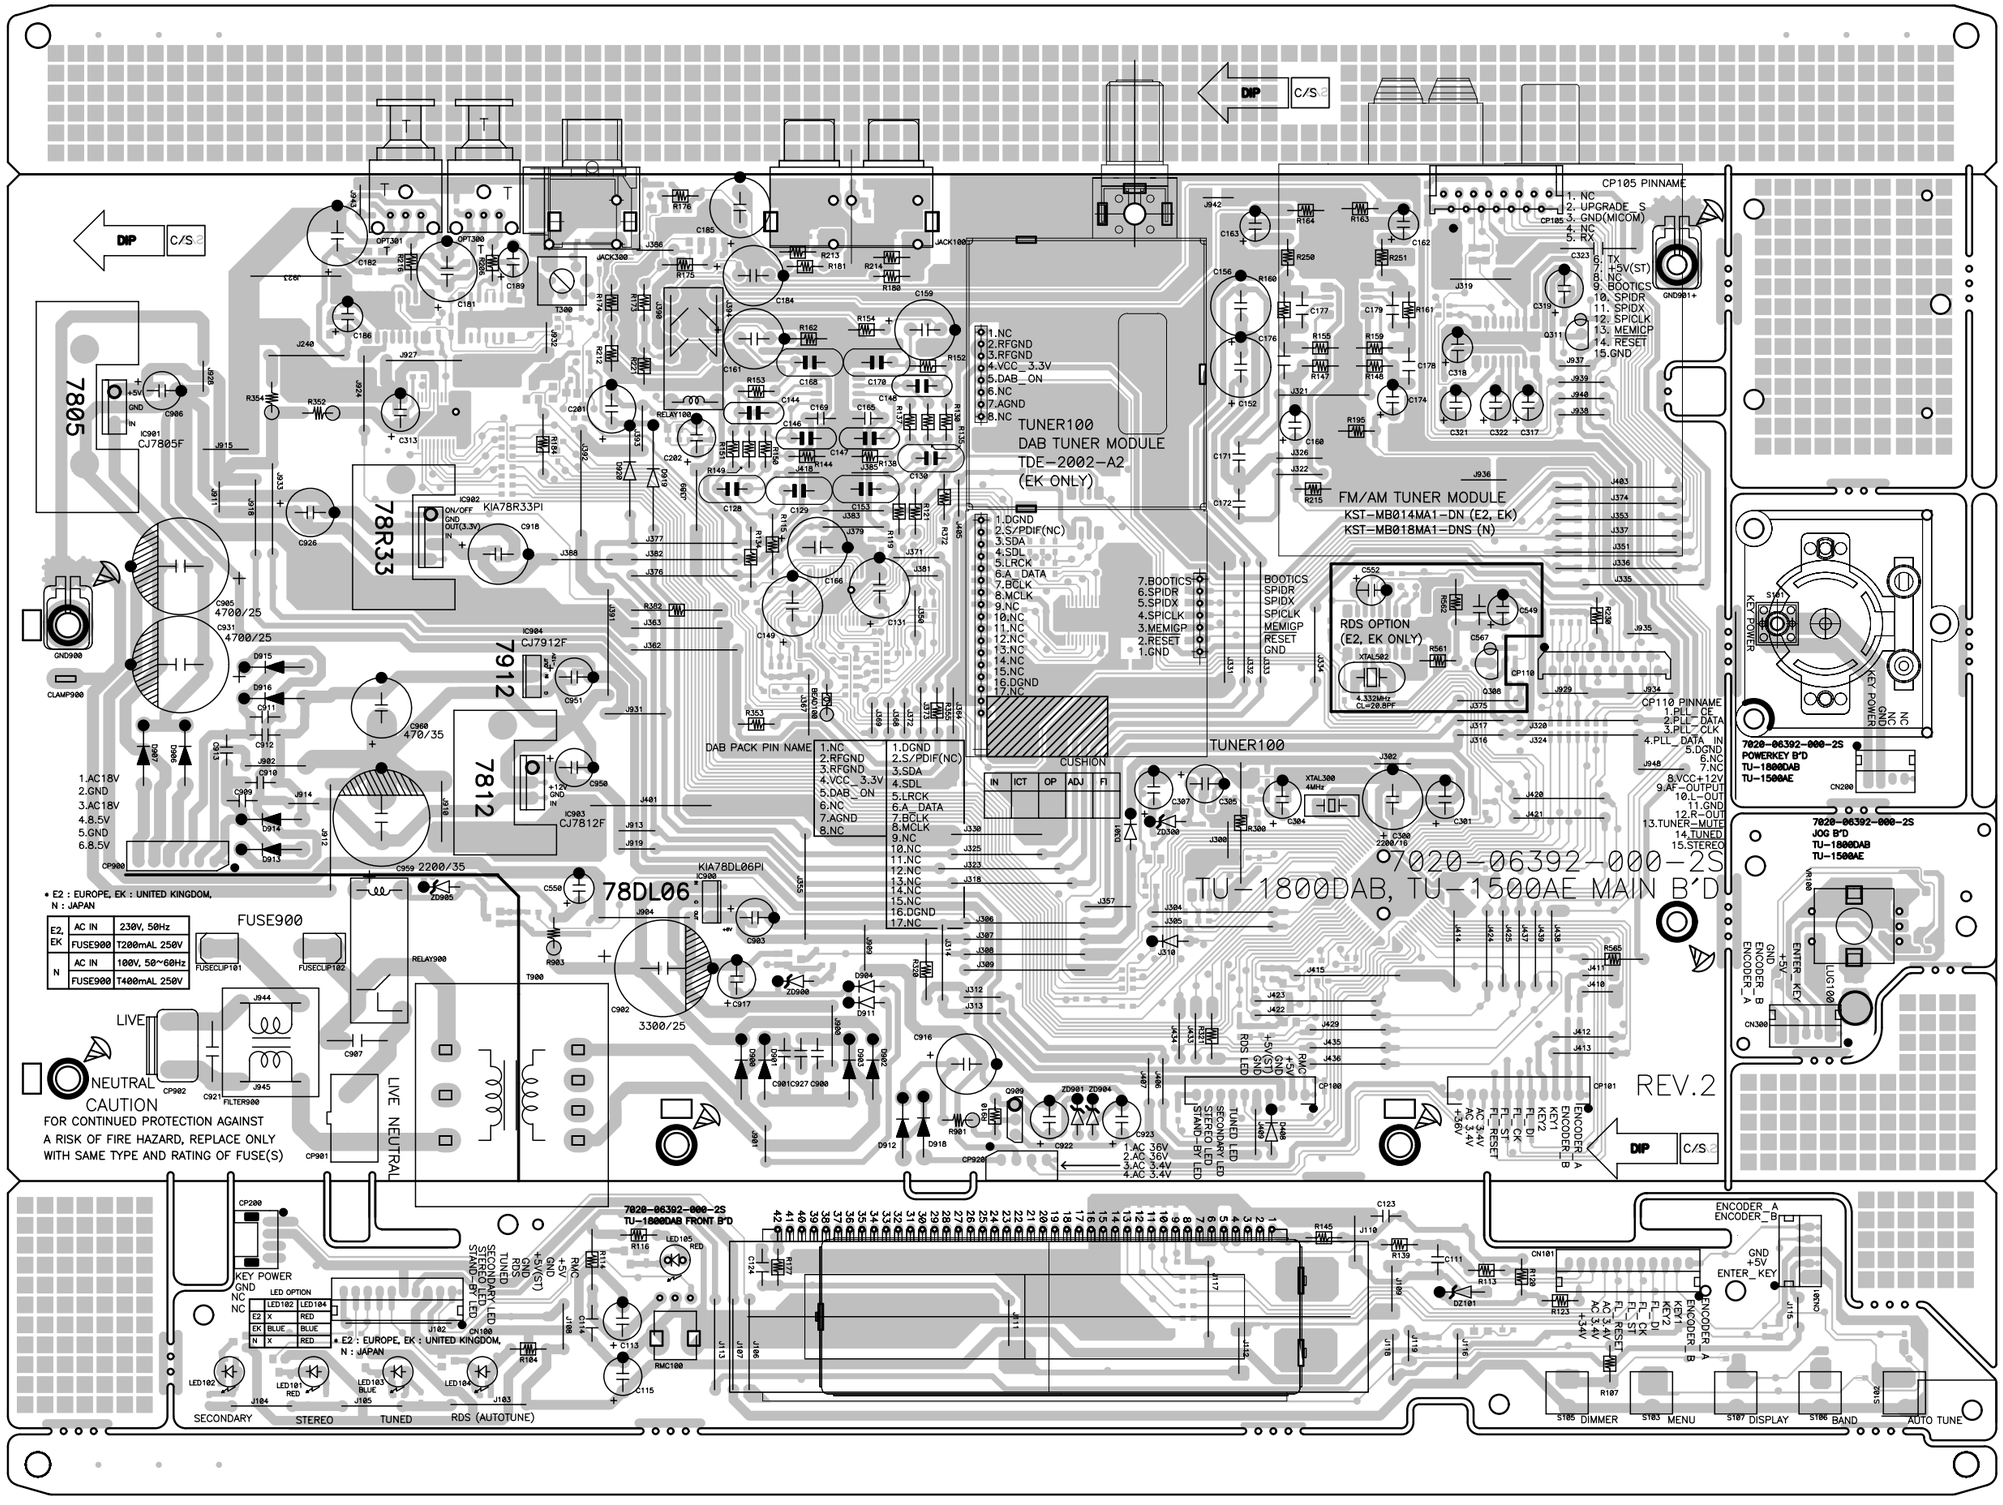

TU-1500AE P.W.B. UNIT (2/2)

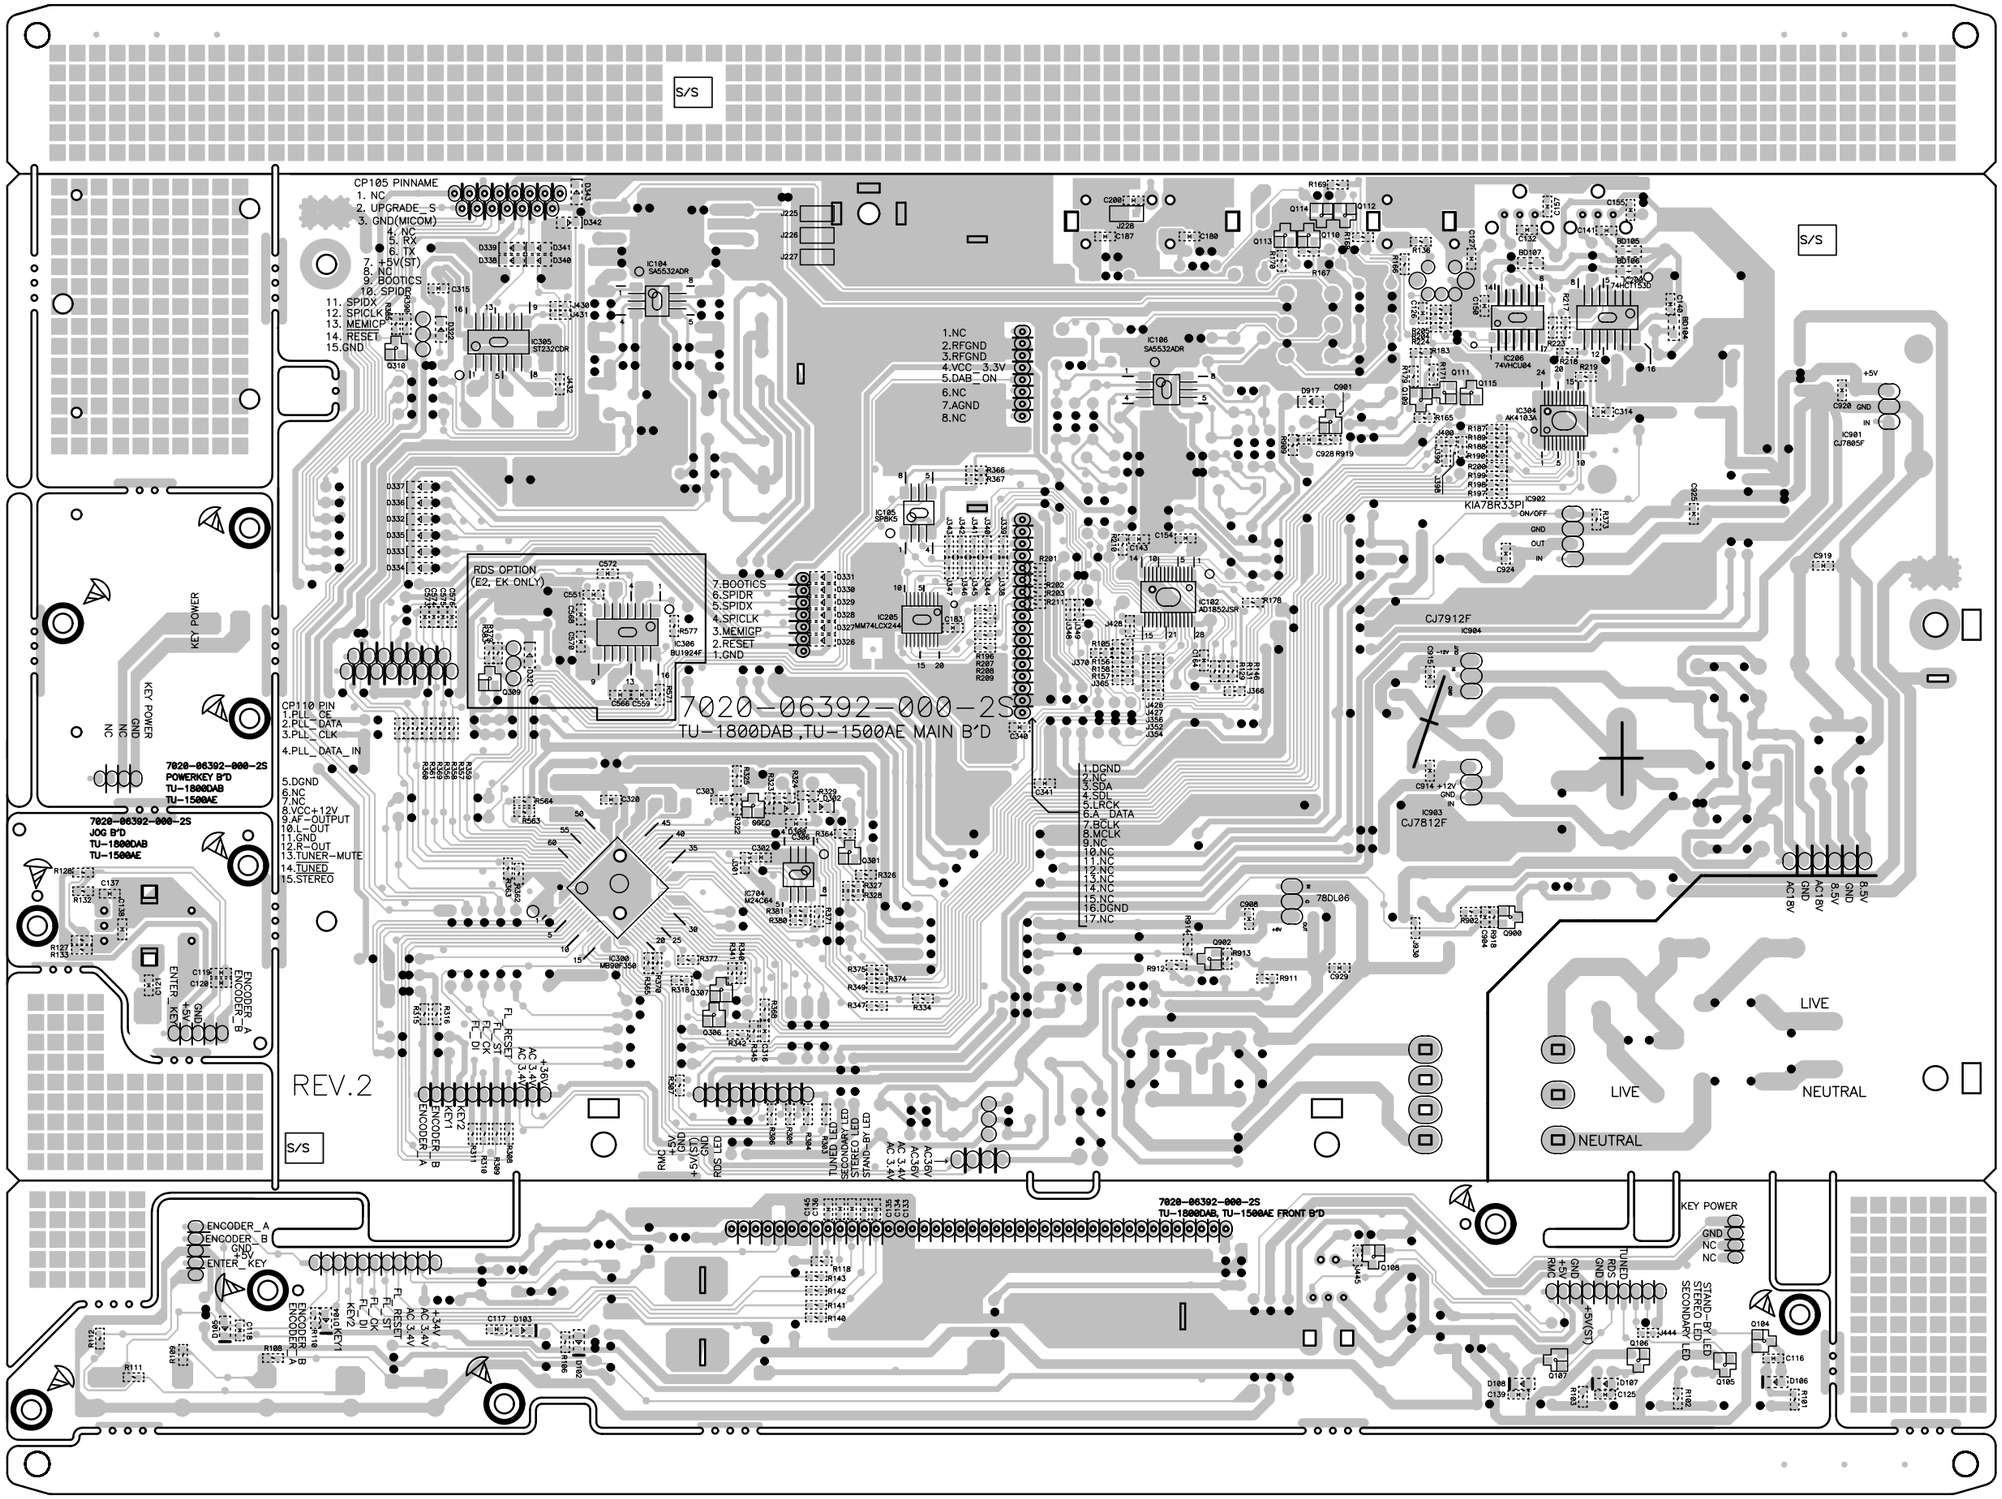

NOTE FOR PARTS LIST

- Part indicated with the mark "nsp" are not always in stock and possibly to take a long period of time for supplying, or in some case supplying of part may be refused.
- When ordering of part, clearly indicate "1" and "I" (i) to avoid mis-supplying.
- Ordering part without stating its part number can not be supplied.
- Part indicated with the mark " ★ " is not illustrated in the exploded view.
- Not including Carbon Film Resister ±5%, 1/4W Type in the P.W.Board parts list. (Refer to the Schematic Diagram for those parts.)
- Not including Carbon Chip Resister 1/16W Type in the P.W.Board parts list. (Refer to the Schematic Diagram for those parts.)

WARNING:
Parts marked with this symbol ⚠ have critical characteristics.
Use ONLY replacement parts recommended by the manufacturer.

部品表について

1．nsp 印の部品は常時在庫していませんので供給に長時間を要することがあります。
場合によっては、供給をお断りすることがあります。
2．部品を発注する際は特に数字の " 1 " と英字の " I " との区別をはっきり記入してください。
3．部品番号を表示していない部品は供給できません。
4．⚠印の部品は安全上重要な部品です。交換するときは、安全および性能維持のため必ず指定の部品をご使用ください。
5．★印のついている部品は分解図中には記載していません。
6．カーボン抵抗器± 5%、1/4W 型は記載していません。定数は回路図を参照願います。
7．カーボンチップ抵抗器 1/16W 型は記載していません。定数は回路図を参照願います。
8．部品表の抵抗器、コンデンサの品名記号の読み方は表を参照してください。

● Resistors

Ex.: RN (Type) 14K (Shape and performance) 2E (Power) 182 (Resistance) G (Allowable error) FR (Others)

RD : Carbon RC : Composition RS : Metal oxide film RW : Winding RN : Metal film RK : Metal mixture	2B : 1/8W 2E : 1/4W 2H : 1/2W 3A : 1W 3D : 2W 3F : 3W 3H : 5W	F : ±1% G : ±2% J : ±5% K : ±10% M : ±20%	P : Pulse-resistant type NL : Low noise type NB : Non-burning type FR : Fuse-resistor F : Lead wire forming

✻ Resistance

1 8 2 ⇒ 1800 ohm = 1.8 kohm
Indicates number of zeros after effective number.
2-digit effective number.
• Units: ohm

1 R 2 ⇒ 1.2 ohm
1-digit effective number.
2-digit effective number, decimal point indicated by R.
• Units: ohm

● Capacitors

Ex.: CE (Type) 04W (Shape and performance) 1H (Dielectric strength) 2R2 (Capacity) M (Allowable error) BP (Others)

CE : Aluminum foil electrolytic CA : Aluminum solid electrolytic CS : Tantalum electrolytic CQ : Film CK : Ceramic CC : Ceramic CP : Oil CM : Mica CF : Metallized CH : Metallized	0J : 6.3V 1A : 10V 1C : 16V 1E : 25V 1V : 35V 1H : 50V 2A : 100V 2B : 125V 2C : 160V 2D : 200V 2E : 250V 2H : 500V 2J : 630V	F : ±1% G : ±2% J : ±5% K : ±10% M : ±20% Z : +80% –20% P : +100% –0% C : ±0.25pF D : ±0.5pF = : Others	HS : High stability type BP : Non-polar type HR : Ripple-resistant type DL : For change and discharge HF : For assuring high requency U : UL part C : CSA part W : UL-CSA type F : Lead wire forming

✻ Capacity (electrolyte only)

2 2 2 ⇒ 2200μF
Indicates number of zeros after effective number.
2-digit effective number.
• Units: μF.

2 R 2 ⇒ 2.2μF
1-digit effective number.
2-digit effective number, decimal point indicated by R.
• Units: μF.

✻ Capacity (except electrolyte)

2 2 2 ⇒ 2200pF=0.0022μF
(More than 2) Indicates number of zeros after effective number.
2-digit effective number.
• Units: pF.

2 2 1 ⇒ 220pF
(0 or 1) Indicates number of zeros after effective number.
2-digit effective number.
• Units: pF.

• When the dielectric strength is indicated in AC, "AC" is included after the dieelectric strength value.

●抵抗器

例) RN 種類 / 14K 形状特性 / 2E 電力 / 182 抵抗値 / G 許容差 / FR その他

RD ： カーボン RC ： 固定体 RS ： 金属系皮膜 RW ： 巻線 RN ： 金属皮膜 RK ： 金属混合体	2B ： 1/8 W 2E ： 1/4 W 2H ： 1/2 W 3A ： 1 W 3D ： 2 W 3F ： 3 W 3H ： 5 W	F ： ±1% G ： ±2% J ： ±5% K ： ±10% M ： ±20%	P ： 耐パルス形 NL ： 低雑音形 NB ： 不燃形 FR ： ヒューズ抵抗 F ： リード線成形

＊抵抗値

18 2 ⇨ 1800Ω=1.8kΩ
有効数字につづく 0 の数を表わす。
2 桁の有効数字を表わす。

1R 2 ⇨ 1.2Ω
1 桁の有効数字を表わす。
2 桁の有効数字で小数点は R で表わす。
：単位はΩ

●コンデンサ

例) CE 種類 / 04W 形状特性 / 1H 耐圧 / 2R2 容量 / M 許容差 / BP その他

CE ： アルミ箔電解 CA ： アルミ固体電解 CS ： タンタル電解 CQ ： フィルム CK ： セラミック CC ： セラミック CP ： オイル CM ： マイカ CF ： メタライズド CH ： メタライズド	0J ： 6.3 V 1A ： 10 V 1C ： 16 V 1E ： 25 V 1V ： 35 V 1H ： 50 V 2A ： 100 V 2B ： 125 V 2C ： 160 V 2D ： 200 V 2E ： 250 V 2H ： 500 V 2J ： 630 V	F ： ±1% G ： ±2% J ： ±5% K ： ±10% M ： ±20% Z ： +80% –20% P ： +100% – 0% C ： ±0.25pF D ： ±0.5pF = ： その他	HS ： 高安定形 BP ： 無極性形 HR ： 耐リップル形 DL ： 充放電対策用 HF ： 高周波保証用 U ： UL 部品 C ： CSA 部品 W ： UL-CSA 部品 F ： リード線成形

＊容量値

● 電解コンデンサの場合

22 2 ⇨ 2200μF
有効数字につづく 0 の数を表わす。
2 桁の有効数字を表わす。
：単位はμF

2R 2 ⇨ 2.2μF
1 桁の有効数字を表わす。
2 桁の有効数字で小数点は R で表わす。
：単位はμF

● 電解コンデンサ以外の場合

22 2 ⇨ 2200pF=0.0022μF
有効数字につづく 0 の数を表わす。
2 桁の有効数字を表わす。
：単位はpF

22 1 ⇨ 220pF
有効数字につづく 0 の数を表わす。
(0 の数が 0 または 1 の場合)
2 桁の有効数字を表わす。
：単位はpF

● 耐圧を交流で表示する場合は、耐圧表示の次に「AC」を表示します。

PARTS LIST OF P.W.B. UNIT ASS'Y

＊本表に記載されている部品は、補修用部品のため製品に使用している部品とは一部、形状、寸法などが異なる場合があります。
＊ The parts listed below are for maintenance only, might differ from the parts used in the unit in appearances or dimensions.

＊ "nsp" 印の部品は常時在庫していませんので供給に長時間を要することがあります。場合によっては、供給をお断りする場合があります。
＊ Part indicated with the mark "nsp" are not always in stock and possibly to take a long period of time for supplying, or in some case supplying of part may be refused.

Note: The symbols in the column "Remarks" indicate the following destinations.
E2 : Europe model JP : Japan model

MAIN P.W.B. UNIT ASS'Y


	Ref. No.	nsp	Part No.	Part Name	Remarks		Q'ty	New
SEMICONDUCTORS GROUP								
	IC104		00D 262 3555 901	SA5532ADR		J121553200040		
	IC300		00D 963 0267 104	MB90F352PFM-G FLASH	JP	J020903520020S		*
	IC300		00D 963 0270 405	MB90F352PFM-G FLASH	E2	J020903520030S		*
	IC305		00D 963 0226 404	ST232CDR		J046232000030S		
	IC704		00D 963 0267 007	M24C64-WMN6TP		J000240640010S		
	IC900		00D 960 0188 909	KIA78DL06PI		J126780600140S		
	IC901		00D 960 0296 008	CJ7805F		J126780500400S		
	IC903		00D 960 0296 105	CJ7812F		J126781200220S		
	IC904		00D 960 0296 202	CJ7912F		J126791200130S		
	Q105		00D 960 0111 808	KRC107S		J5020107S0050S		
	Q106		00D 960 0111 808	KRC107S		J5020107S0050S		
	Q107		00D 960 0111 808	KRC107S		J5020107S0050S		
	Q108		00D 960 0111 808	KRC107S		J5020107S0050S		
	Q109		00D 963 0267 308	KRA101S		J520010100010S		
	Q110		00D 963 0044 301	KTC2875B		J5222875B0010S		
	Q111		00D 960 0111 808	KRC107S		J5020107S0050S		
	Q112		00D 963 0044 301	KTC2875B		J5222875B0010S		
	Q113		00D 963 0044 301	KTC2875B		J5222875B0010S		
	Q114		00D 963 0044 301	KTC2875B		J5222875B0010S		
	Q115		00D 963 0066 606	KTC3875Y		J5223875Y0210S		
	Q300		00D 963 0066 606	KTC3875Y		J5223875Y0210S		
	Q301		00D 960 0285 006	KRC104S		J522104S00210S		
	Q306		00D 963 0066 606	KTC3875Y		J5223875Y0210S		
	Q307		00D 963 0226 909	KRC114S		J522011400210S		
	Q310		00D 960 0111 808	KRC107S		J5020107S0050S		
	Q311		00D 963 0102 803	2SA933S		J5000933S0050S		
	Q900		00D 963 0066 606	KTC3875Y		J5223875Y0210S		
	Q902		00D 963 0066 606	KTC3875Y		J5223875Y0210S		
	Q909		00D 963 0226 705	KTC1027Y		J5021027Y0020S		
	D102		00D 963 0219 709	1N4148W		K005041480020S		
	D103		00D 963 0219 709	1N4148W		K005041480020S		
	D104		00D 963 0219 709	1N4148W		K005041480020S		
	D105		00D 963 0219 709	1N4148W		K005041480020S		
	D107		00D 963 0219 709	1N4148W		K005041480020S		
	D300		00D 963 0219 709	1N4148W		K005041480020S		
	D301		00D 276 0401 905	1SS133T		K000013300520S		
	D302		00D 963 0219 709	1N4148W		K005041480020S		
	D322		00D 963 0219 709	1N4148W		K005041480020S		
	D338		00D 963 0219 709	1N4148W		K005041480020S		
	D339		00D 963 0219 709	1N4148W		K005041480020S		
	D340		00D 963 0219 709	1N4148W		K005041480020S		
	D341		00D 963 0219 709	1N4148W		K005041480020S		
	D342		00D 963 0219 709	1N4148W		K005041480020S		
	D343		00D 963 0219 709	1N4148W		K005041480020S		
	D408		00D 276 0401 905	1SS133T		K000013300520S		
	D900		00D 963 0058 407	IN4007		K000400700520S		
	D901		00D 963 0058 407	IN4007		K000400700520S		
	D902		00D 963 0058 407	IN4007		K000400700520S		
	D903		00D 963 0058 407	IN4007		K000400700520S		
	D904		00D 276 0401 905	1SS133T		K000013300520S		

	Ref. No.	nsp	Part No.	Part Name	Remarks		Q'ty	New
	D906		00D 963 0058 407	IN4007		K000400700520S		
	D907		00D 963 0058 407	IN4007		K000400700520S		
	D911		00D 276 0401 905	1SS133T		K000013300520S		
	D912		00D 963 0058 407	IN4007		K000400700520S		
	D913		00D 963 0058 407	IN4007		K000400700520S		
	D914		00D 963 0058 407	IN4007		K000400700520S		
	D915		00D 963 0058 407	IN4007		K000400700520S		
	D916		00D 963 0058 407	IN4007		K000400700520S		
	D918		00D 963 0058 407	IN4007		K000400700520S		
	D919		00D 276 0401 905	1SS133T		K000013300520S		
	D920		00D 276 0401 905	1SS133T		K000013300520S		
	ZD101		00D 960 0095 500	MTZJ5.1B		K06005R144520S		
	ZD300		00D 963 0047 502	MTZJ3.3B		K06003R344520S		
	ZD900		00D 960 0132 803	MTZJ4.7B		K06004R744520S		
	ZD901		00D 963 0046 202	MTZJ18B		K06018R044520S		
	ZD904		00D 963 0046 202	MTZJ18B		K06018R044520S		
	ZD905		00D 276 0401 905	1SS133T		K000013300520S		
	RMC100		00D 963 0225 405	NJL33H380A		E940333800010P		
	LED101		00D 963 0227 209	HL-50RDR RED		K500052008010S		
	LED103		00D 963 0267 502	HL-50CNBLU		K500056000060S		
	LED104		00D 963 0227 209	HL-50RDR RED		K500052008010S		
	LED105		00D 963 0227 102	SLR342VC3		K500032101061S		
	XTAL300		00D 963 0225 201	CSTLS4M00G53-A0		E830400000020S		
	FLT100		00D 963 0227 403	FLT 162-SD-10GINK		K530162100010S		
RESISTORS GROUP								
	R901		00D 963 0266 600	R,METAL 22-J,1W		C060022065050S		
	R903		00D 963 0266 600	R,METAL 27-J,1W		C060027065050S		
	VR100		00D 963 0225 502	ENCODER EC11B20D2		G121112020010S		
CAPACITORS GROUP								
	C111	nsp	00D 960 9010 816	C,CERAMIC 0.1UF-Z/50V		D006104597050S		
	C113	nsp	00D 960 9009 911	C,ELECT 100UF-M/10V		D040101082050F		
	C114	nsp	00D 963 0020 202	C,CERAMIC 0.1UF-Z/50V		D005104597530S		
	C115	nsp	00D 960 9009 911	C,ELECT 100UF-M/10V		D040101082050F		
	C117	nsp	00D 963 9004 698	C,CERAMIC 0.01UF-K/50V		D011103777160S		
	C118	nsp	00D 963 9004 698	C,CERAMIC 0.01UF-K/50V		D011103777160S		
	C119		00D 963 0224 309	C,CERAMIC 820PF-K/50V		D011821777160S		
	C120		00D 963 0224 309	C,CERAMIC 820PF-K/50V		D011821777160S		
	C121	nsp	00D 963 9004 708	C,CERAMIC 0.1UF-K/50V		D011104577160S		
	C123	nsp	00D 963 0223 504	C,CERAMIC 0.047UF-Z/50V		D004473597050S		
	C124	nsp	00D 963 0225 609	C,CERAMIC 0.047UF-Z/50V		D005473597520S		
	C125	nsp	00D 963 9004 708	C,CERAMIC 0.1UF-K/50V		D011104577160S		
	C133		00D 963 0223 601	C,CERAMIC 100PF-J/50V		D010101167160S		
	C134		00D 963 0223 601	C,CERAMIC 100PF-J/50V		D010101167160S		
	C135		00D 963 0223 601	C,CERAMIC 100PF-J/50V		D010101167160S		
	C136		00D 963 0223 601	C,CERAMIC 100PF-J/50V		D010101167160S		
	C137		00D 963 0224 105	C,CERAMIC 1000PF-K/50V		D011102777160S		
	C138		00D 963 0224 105	C,CERAMIC 1000PF-K/50V		D011102777160S		
	C145	nsp	00D 963 0223 902	C,CERAMIC 39PF-J/50V		D010390167160S		
	C152	nsp	00D 963 9005 794	C,ELECT 100UF-M/16V		D040101083100F		
	C156	nsp	00D 963 9005 794	C,ELECT 100UF-M/16V		D040101083100F		
	C160	nsp	00D 960 9010 832	C,ELECT 10UF-M/16V		D040100083050F		
	C162	nsp	00D 960 9010 832	C,ELECT 10UF-M/16V		D040100083050F		
	C163	nsp	00D 960 9010 832	C,ELECT 10UF-M/16V		D040100083050F		
	C171	nsp	00D 963 0233 109	C,CERAMIC 0.01UF-Z/50V		D004103097060S		
	C172	nsp	00D 963 0233 109	C,CERAMIC 0.01UF-Z/50V		D004103097060S		
	C174	nsp	00D 960 9010 832	C,ELECT 10UF-M/16V		D040100083050F		

	Ref. No.	nsp	Part No.	Part Name	Remarks		Q'ty	New
	C176	nsp	00D 963 0223 106	C,CERAMIC 10PF-J/50V		D001100067520S		
	C177	nsp	00D 963 0223 203	C,CERAMIC 33PF-J/50V		D001330067520S		
	C178	nsp	00D 963 0223 106	C,CERAMIC 10PF-J/50V		D001100067520S		
	C179	nsp	00D 963 0223 203	C,CERAMIC 33PF-J/50V		D001330067520S		
	C180		00D 963 0224 008	C,CERAMIC 470PF-J/50V		D010471167160S		
	C184		00D 254 4573 981	CE04W1H100MT(RE3)		D040100087380		
	C185		00D 254 4573 981	CE04W1H100MT(RE3)		D040100087380		
	C187		00D 963 0224 008	C,CERAMIC 470PF-J/50V		D010471167160S		
	C200	nsp	00D 963 9004 708	C,CERAMIC 0.1UF-K/50V		D011104577160S		
	C201		00D 254 4538 971	CE04W1C471MT SMG/RE3	E2			
	C201		00D 963 0224 600	C,ELECT 220UF-M/16V	JP	D040221083090F		
	C300		00D 960 0133 501	C,ELECT 2200UF-M/16V		D040222083080F		
	C301	nsp	00D 963 9005 794	C,ELECT 100UF-M/16V		D040101083100F		
	C302		00D 963 0224 105	C,CERAMIC 1000PF-K/50V		D011102777160S		
	C303	nsp	00D 963 9004 708	C,CERAMIC 0.1UF-K/50V		D011104577160S		
	C305	nsp	00D 963 9005 778	C,ELECT 10UF-M/50V		D040100087050F		
	C306	nsp	00D 963 9004 698	C,CERAMIC 0.01UF-K/50V		D011103777160S		
	C307	nsp	00D 963 9005 778	C,ELECT 10UF-M/50V		D040100087050F		
	C315	nsp	00D 963 9004 698	C,CERAMIC 0.01UF-K/50V		D011103777160S		
	C316		00D 963 0224 105	C,CERAMIC 1000PF-K/50V		D011102777160S		
	C317		-	C,ELECT 0.1UF-M/50V		D040R10087060F		
	C318		-	C,ELECT 0.1UF-M/50V		D040R10087060F		
	C319	nsp	00D 960 9009 911	C,ELECT 100UF-M/10V		D040101082130F		
	C320	nsp	00D 963 9004 698	C,CERAMIC 0.01UF-K/50V		D011103777160S		
	C321		-	C,ELECT 0.1UF-M/50V		D040R10087060F		
	C322		-	C,ELECT 0.1UF-M/50V		D040R10087060F		
	C323	nsp	00D 963 0233 303	C,CERAMIC 0.01UF-M/16V		D005103773530S		
	C550	nsp	00D 963 9005 927	C,ELECT 0.1UF-M/50V		D040R10087070F		
	C575		00D 963 0223 601	C,CERAMIC 100PF-J/50V		D010101167160S		
	C576		00D 963 0223 601	C,CERAMIC 100PF-J/50V		D010101167160S		
	C900	nsp	00D 960 0215 801	C,CERAMIC 0.01UF-Z/500V		D00410359D050S		
	C901	nsp	00D 960 0215 801	C,CERAMIC 0.01UF-Z/500V		D00410359D050S		
	C902		00D 963 0224 804	C,ELECT 3300UF-M/25V		D040332084010F		
	C903	nsp	00D 963 9005 862	C,ELECT 47UF-M/16V		D040470083080F		
	C904		00D 963 0224 105	C,CERAMIC 1000PF-K/50V		D011102777160S		
	C905		00D 963 0183 301	C,ELECT 4700UF-M/25V		D040472084020F		
	C906	nsp	00D 963 9005 862	C,ELECT 47UF-M/16V		D040470083080F		
⚠	C907		00D 963 9006 191	C,CERAMIC AC13F472MDOA		D00847208K070S		
	C908	nsp	00D 963 9004 698	C,CERAMIC 0.01UF-K/50V		D011103777160S		
	C909	nsp	00D 960 0215 801	C,CERAMIC 0.01UF-Z/500V		D00410359D050S		
	C910	nsp	00D 960 0215 801	C,CERAMIC 0.01UF-Z/500V		D00410359D050S		
	C911	nsp	00D 960 0215 801	C,CERAMIC 0.01UF-Z/500V		D00410359D050S		
	C912	nsp	00D 960 0215 801	C,CERAMIC 0.01UF-Z/500V		D00410359D050S		
	C913	nsp	00D 960 0215 801	C,CERAMIC 0.01UF-Z/500V		D00410359D050S		
	C914	nsp	00D 963 9004 698	C,CERAMIC 0.01UF-K/50V		D011103777160S		
	C915	nsp	00D 963 9004 698	C,CERAMIC 0.01UF-K/50V		D011103777160S		
	C916		-	C,ELECT 47UF-M/100V		D04047008C130F		
	C917	nsp	00D 963 9005 749	C,ELECT 1UF-M/50V		D040010087080F		
	C919	nsp	00D 963 9004 698	C,CERAMIC 0.01UF-K/50V		D011103777160S		
	C920	nsp	00D 963 9004 698	C,CERAMIC 0.01UF-K/50V		D011103777160S		
	C922	nsp	00D 963 9005 888	C,ELECT 47UF-M/50V		D040470087060F		
	C923	nsp	00D 963 9005 749	C,ELECT 1UF-M/50V		D040010087080F		
	C927	nsp	00D 960 0215 801	C,CERAMIC 0.01UF-Z/500V		D00410359D050S		
	C929	nsp	00D 963 9004 698	C,CERAMIC 0.01UF-K/50V		D011103777160S		
	C950	nsp	00D 963 9005 862	C,ELECT 47UF-M/16V		D040470083080F		
	C951	nsp	00D 963 9005 862	C,ELECT 47UF-M/16V		D040470083080F		
	C959		00D 963 0224 707	C,ELECT 2200UF-M/35V		D040222085020F		
	C960		00D 960 0186 406	C,ELECT 470UF-M/35V		D040471085010F		
OTHER PARTS GROUP								
⚠	RELAY900		00D 963 0225 900	RELAY G5PA-1 DC6V 5A		G680060502010S		
	S101		00D 963 0095 305	SW,TACT SKHV10910D01		G180040500010S		
	S103		00D 963 0095 305	SW,TACT SKHV10910D01		G180040500010S		
	S105		00D 963 0095 305	SW,TACT SKHV10910D01		G180040500010S		

	Ref. No.	nsp	Part No.	Part Name	Remarks		Q'ty	New
	S106		00D 963 0095 305	SW,TACT SKHV10910D01		G180040500010S		
	S107		00D 963 0095 305	SW,TACT SKHV10910D01		G180040500010S		
	JACK100		00D 963 0225 803	TER,RCA 2PIN		G601206B0500YS		
⚠	T900		00D 963 0266 309	POWER TRANS (STAND BY)	JP	8200350150230S		*
⚠	T900		00D 963 0222 709	POWER TRANS (STAND BY)	E2	8200350150180S		
⚠	FUSE900		00D 963 0272 306	FUSE T500MA/250V	JP	N751225000110		
⚠	FUSE900		00D 963 0228 402	FUSE T200MA/250V	E2	N751222000110		
	FUSECL1	nsp	00D 960 0005 804	HOLDER,FUSE CLIP		G645000050010		
	FUSECL2	nsp	00D 960 0005 804	HOLDER,FUSE CLIP		G645000050010		
	GND900		00D 963 0265 805	TERMINAL		3790040886000S		
	GND901		00D 963 0265 805	TERMINAL		3790040886000S		
	CLAMP900		00D 960 0260 005	CLAMP		4330000120000S		
	CN100	nsp	00D 963 0227 704	CN,WIRE 310MM/10P		L000311100010S		
	CN101	nsp	00D 963 0227 500	CN,WIRE 160MM/11P		L000161110010S		
	CN200	nsp	00D 963 0227 801	CN,WIRE 70MM/4P		L000700040050S		
	CN301	nsp	00D 963 0227 908	CN,WIRE 70MM/5P		L000700050010S		
	CP100	nsp	00D 963 0228 208	CN.WAFER 10P		L101220100000S		
	CP101	nsp	00D 963 0060 806	CN.WAFER 11P		L101220110000S		
	CP105	nsp	00D 963 0149 303	CN.FPC 15P		L131111500010F		
	CP110	nsp	00D 963 0149 303	CN.FPC 15P		L131111500010F		
	CP200	nsp	00D 963 0228 101	CN.WAFER 04P		L101220040010S		
	CP900	nsp	00D 960 0128 804	CN.WAFER 6P		L102526700600S		
	CP901	nsp	00D 960 0123 304	CN.WAFER		L104353280200S		
	CP902	nsp	00D 963 0267 803	CN.WAFER 2P		L108202000220F		
	CP920	nsp	00D 960 0217 553	CN.WAFER 4P		L102526700400S		
	LUG100		-	TER WIRE 100MM/1P		8410101010090F		
		nsp	00D 963 0018 007	SCREW 3*8 B-TYPE ZNY/BH		B020030081B10S		
			-	HEAT SINK		2120044288010S		
		nsp	00D 963 0221 409	HOLDER FLT		4320210496100S		

EXPLODED VIEWS

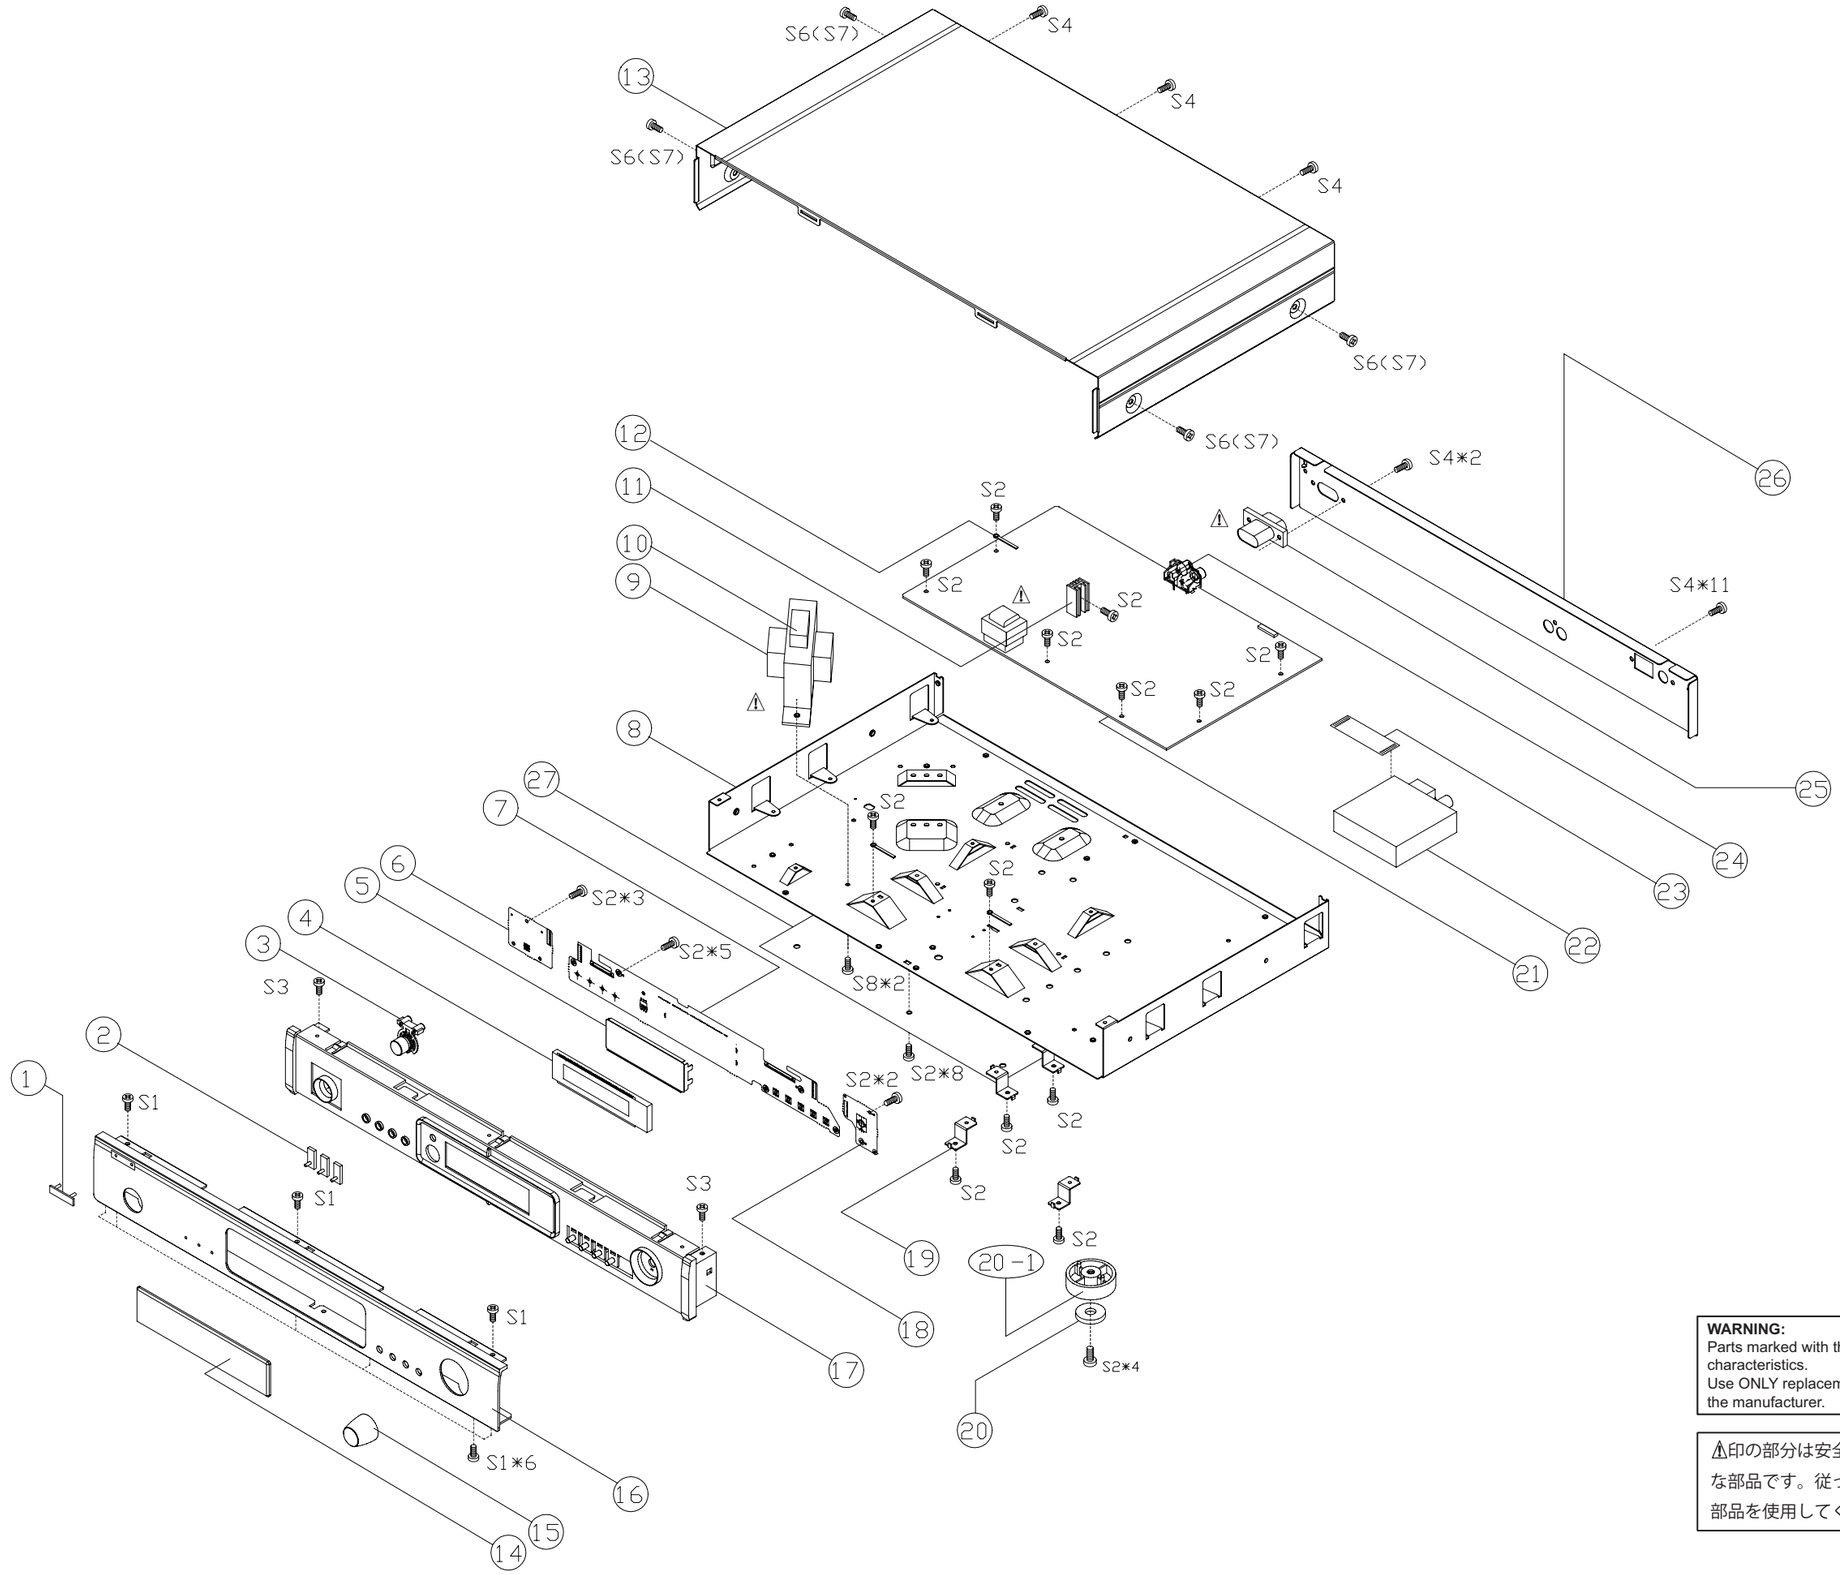

WARNING:
Parts marked with this symbol ⚠ have critical characteristics.
Use ONLY replacement parts recommended by the manufacturer.

⚠印の部分は安全を維持するために重要な部品です。従って交換時は必ず指定の部品を使用してください。

PARTS LIST OF EXPLODED VIEW


＊本表に記載されている部品は、補修用部品のため製品に使用している部品とは一部、形状、寸法などが異なる場合があります。
＊ The parts listed below are for maintenance only, might differ from the parts used in the unit in appearances or dimensions.

＊ "nsp" 印の部品は常時在庫していませんので供給に長時間を要することがあります。場合によっては、供給をお断りする場合があります。
＊ Part indicated with the mark “nsp” are not always in stock and possibly to take a long period of time for supplying, or in some case supplying of part may be refused.

Note: The symbols in the column "Remarks" indicate the following destinations.
BKE2 : Europe(Black) model　SPE2 : Europe(Premium Silver) model　JP : Japan model

	Ref. No.	nsp	Part No.	Part Name	Remarks		Q'ty	New
	A		00D 963 0266 202	PWB ASS'Y-MAIN	JP	7025HU0503010	1	*
	A		00D 963 0270 502	PWB ASS'Y-MAIN	BKE2,SPE2	7025HU0503030	1	*
	6		-	POWER KEY		7028063924020		
	7		-	FRONT		7028063922020		
	18		-	JOG		7028063923020		
	21		-	MAIN		7028063921020		
	1		00D 963 0051 514	BADGE	SPE2,JP	5630210028100S	1	
	1		00D 963 0270 609	BADGE	BKE2	5630210028000S	1	
	2		00D 963 0051 310	LENS LED		3710210023001S	3	
	3		00D 963 0221 904	BUTTON ONSTAND BY	SPE2,JP	5097212368030SZ	1	
	3		00D 963 0184 106	BUTTON ONSTAND BY	BKE2	5097212368000SZ	1	
	4		00D 963 0227 403	FLT		K530162100010S	1	
	5	nsp	00D 963 0221 409	HOLDER FLT		4320210496100S	1	
	8	nsp	00D 963 0220 808	MAIN CHASSIS		3200211676000S	1	
⚠	9		00D 963 0266 406	POWER TRANS	JP	8200570300040S	1	*
⚠	9		00D 963 0222 806	POWER TRANS	BKE2,SPE2	8200570300010S	1	
	10	nsp	00D 963 0221 205	CUSHION TRANS		4050211325000S	1	
	11		-	HEAT SINK TR		2120044288010S	1	
	12		00D 960 0244 403	CLAMP		4330000310000S	3	
	13	nsp	00D 963 0220 206	TOP COVER	SPE2,JP	3000210586000S	1	
	13	nsp	00D 963 0220 303	TOP COVER	BKE2	3000210586100S	1	
	14		00D 963 0265 708	WINDOW	JP	5077212123010S	1	*
	14		00D 963 0221 603	WINDOW	BKE2,SPE2	5077212123000S	1	
	15		00D 963 0221 700	KNOB TUNING	SPE2,JP	5087211198000SZ	1	
	15		00D 963 0221 807	KNOB TUNING	BKE2	5087211198010SZ	1	
	16		00D 963 0265 407	FRONT PANEL	JP	3067212178100S	1	*
	16		00D 963 0270 706	FRONT PANEL	BKE2	3067212178130S	1	*
	16		00D 963 0270 803	FRONT PANEL	SPE2	3067212178120S	1	*
	17		00D 963 0265 504	INNER PANEL	SPE2,JP	3067212181100S	1	*
	17		00D 963 0270 900	INNER PANEL	BKE2	3067212181200S	1	*
	19		-	BRACKET PCB		4010212226000S	4	
	20	nsp	00D 963 0221 302	CUSHION FOOT		4050211335000S	4	
	20-1	nsp	00D 963 0221 108	FOOT		4007210271000S	4	
	22		00D 963 0266 901	TUNER,FM/AM	JP	E903018100010S	1	*
	22		00D 963 0145 705	TUNER,FM/AM	BKE2,SPE2	E903014100030	1	
	23	nsp	00D 963 0267 900	CABLE,FLAT CARD		L301151150030S	1	
	24		00D 963 0225 803	RCA JACK 2PIN		G601206B0500YS	1	
⚠	25		00D 963 0227 607	2P AC INLET ASS'Y		L000211020030S	1	
	26	nsp	00D 963 0265 601	BACK PANEL	JP	3207211666100S	1	*
	26	nsp	00D 963 0271 006	BACK PANEL	BKE2,SPE2	3207211666110S	1	*
	27	nsp	00D 963 0221 506	PLATE BOTTOM		4470210806000S	1	
SCREWS								
	S1	nsp	00D 960 9008 006	SCREW 3*8 B-TYPE BK/FH		B020030083F10S	9	
	S2	nsp	00D 963 0018 007	SCREW 3*8 B-TYPE ZNY/BH	SPE2,JP	B020030081B10S	35	
	S2	nsp	00D 963 0018 007	SCREW 3*8 B-TYPE ZNY/BH	BKE2	B020030081B10S	29	
	S3	nsp	00D 963 9004 038	SCREW 3*8 B-TYPE ZNY/BH		1500001206010S	2	
	S4		00D 963 0127 707	SCREW 3*10 B-TYPE(DOT) BK/BH		B020030103B11S	14	
	S6		00D 963 9004 012	SCREW 4*8 B-TYPE(DOT) NI/BH	SPE2,JP	1500040084B10S	4	
	S7		00D 963 0048 307	SCREW 4*8 B-TYPE(DOT) NI/BH	BKE2	1500040083B10S	4	
	S8	nsp	00D 960 9009 610	SCREW 4*10 P+S-WASHER ZNY/BH		B028940101B10S	2	

PACKING VIEW

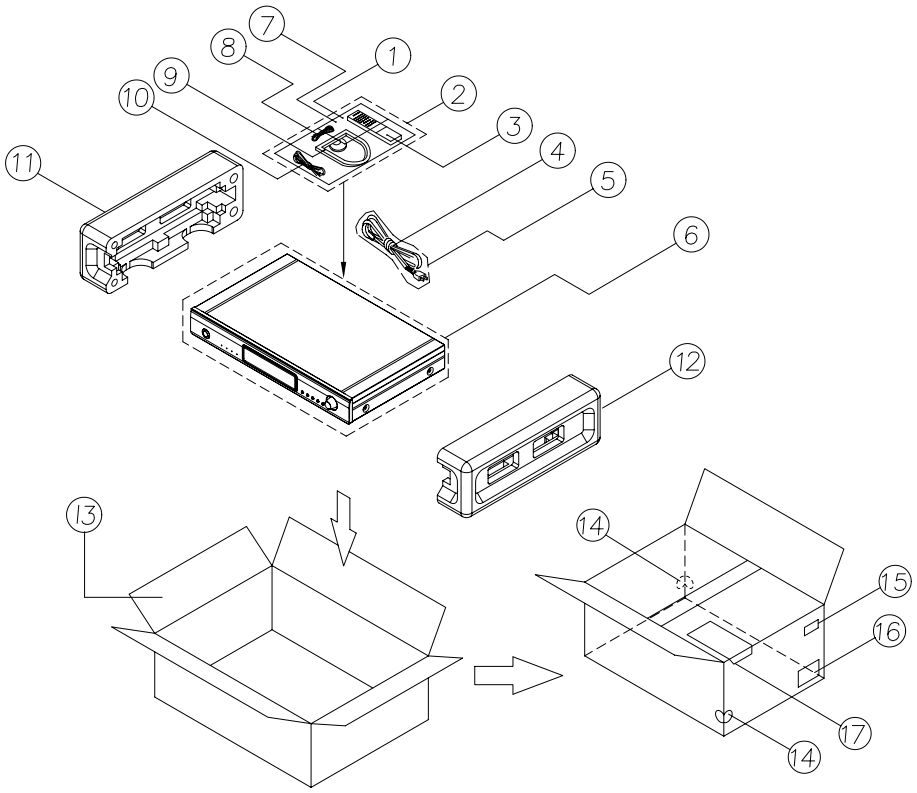


PARTS LIST OF PACKING & ACCESSORIES

＊本表に記載されている部品は、補修用部品のため製品に使用している部品とは一部、形状、寸法などが異なる場合があります。
＊ The parts listed below are for maintenance only, might differ from the parts used in the unit in appearances or dimensions.
＊ "nsp" 印の部品は常時在庫していませんので供給に長時間を要することがあります。場合によっては、供給をお断りする場合があります。
＊ Part indicated with the mark “nsp” are not always in stock and possibly to take a long period of time for supplying, or in some case supplying of part may be refused.

Note: The symbols in the column "Remarks" indicate the following destinations.
BKE2 : Europe(Black) model SPE2 : Europe(Premium Silver) model JP : Japan model

	Ref. No.	nsp	Part No.	Part Name	Remarks		Q'ty	New
	1		00D 963 0265 902	INSTRUCTION MANUAL	JP	5707210140020S	1	*
	1		00D 963 0271 103	INSTRUCTION MANUAL	BKE2,SPE2	5707210140030S	1	*
	2	nsp	00D 960 0107 809	POLY BAG		6337000240010S	1	
	3		00D 399 1046 015	REMOCON RC-1027BK	BKE2	8300102700020S	1	*
	3		00D 399 1046 002	REMOCON RC-1027SP	SPE2,JP	8300102700010S	1	*
⚠	4		00D 963 0267 706	CORD ASSY	JP	L068125070010S	1	*
⚠	4		00D 963 0271 200	CORD ASSY	BKE2,SPE2	L068250250020S	1	*
	5	nsp	00D 963 0222 505	POLY BAG		6330210089000S	1	
	6	nsp	00D 963 0222 408	PE,SHEET		6327040022012S	1	
	7		-	S.S LIST	BKE2,SPE2	5777001620018S	1	
	7		-	SVC STATION LIST	JP	5777200040017S	1	
	8		00D 963 0158 006	FM ANT.		E605010070001S	1	
	9		00D 963 0145 307	AM LOOP ANT.		E605010110010	1	
	10		00D 963 0267 609	CORD,RCA		L063122020010F	1	
	11	nsp	00D 963 0222 301	CUSHION,SNOW L		6230211294000S	1	
	12	nsp	00D 963 0222 204	CUSHION,SNOW R		6230211284000S	1	
	13	nsp	00D 963 0266 008	BOX,GIFT	JP	6007210760010S	1	*
	13	nsp	00D 963 0271 307	BOX,GIFT	BKE2	6007210760040S	1	*
	13	nsp	00D 963 0271 404	BOX,GIFT	SPE2	6007210760020S	1	*
	14		-	COLOR LABEL	SPE2	5507020170680S	2	
	15	nsp	00D 963 0265 805	POS LABEL	JP	5507002350050S	1	*
	15		-	E2 POS LABEL	BKE2	5507002350080S	1	*
	15		-	E2 POS LABEL	SPE2	5507002350070S	1	*
	16		-	CONTROL LABEL	BKE2,SPE2	5500014920010S	2	*
	17		-	GUARANTEE CARD	JP	5777001470074S	1	
	★		-	BATTERY,DRY		G670001R50210	2	

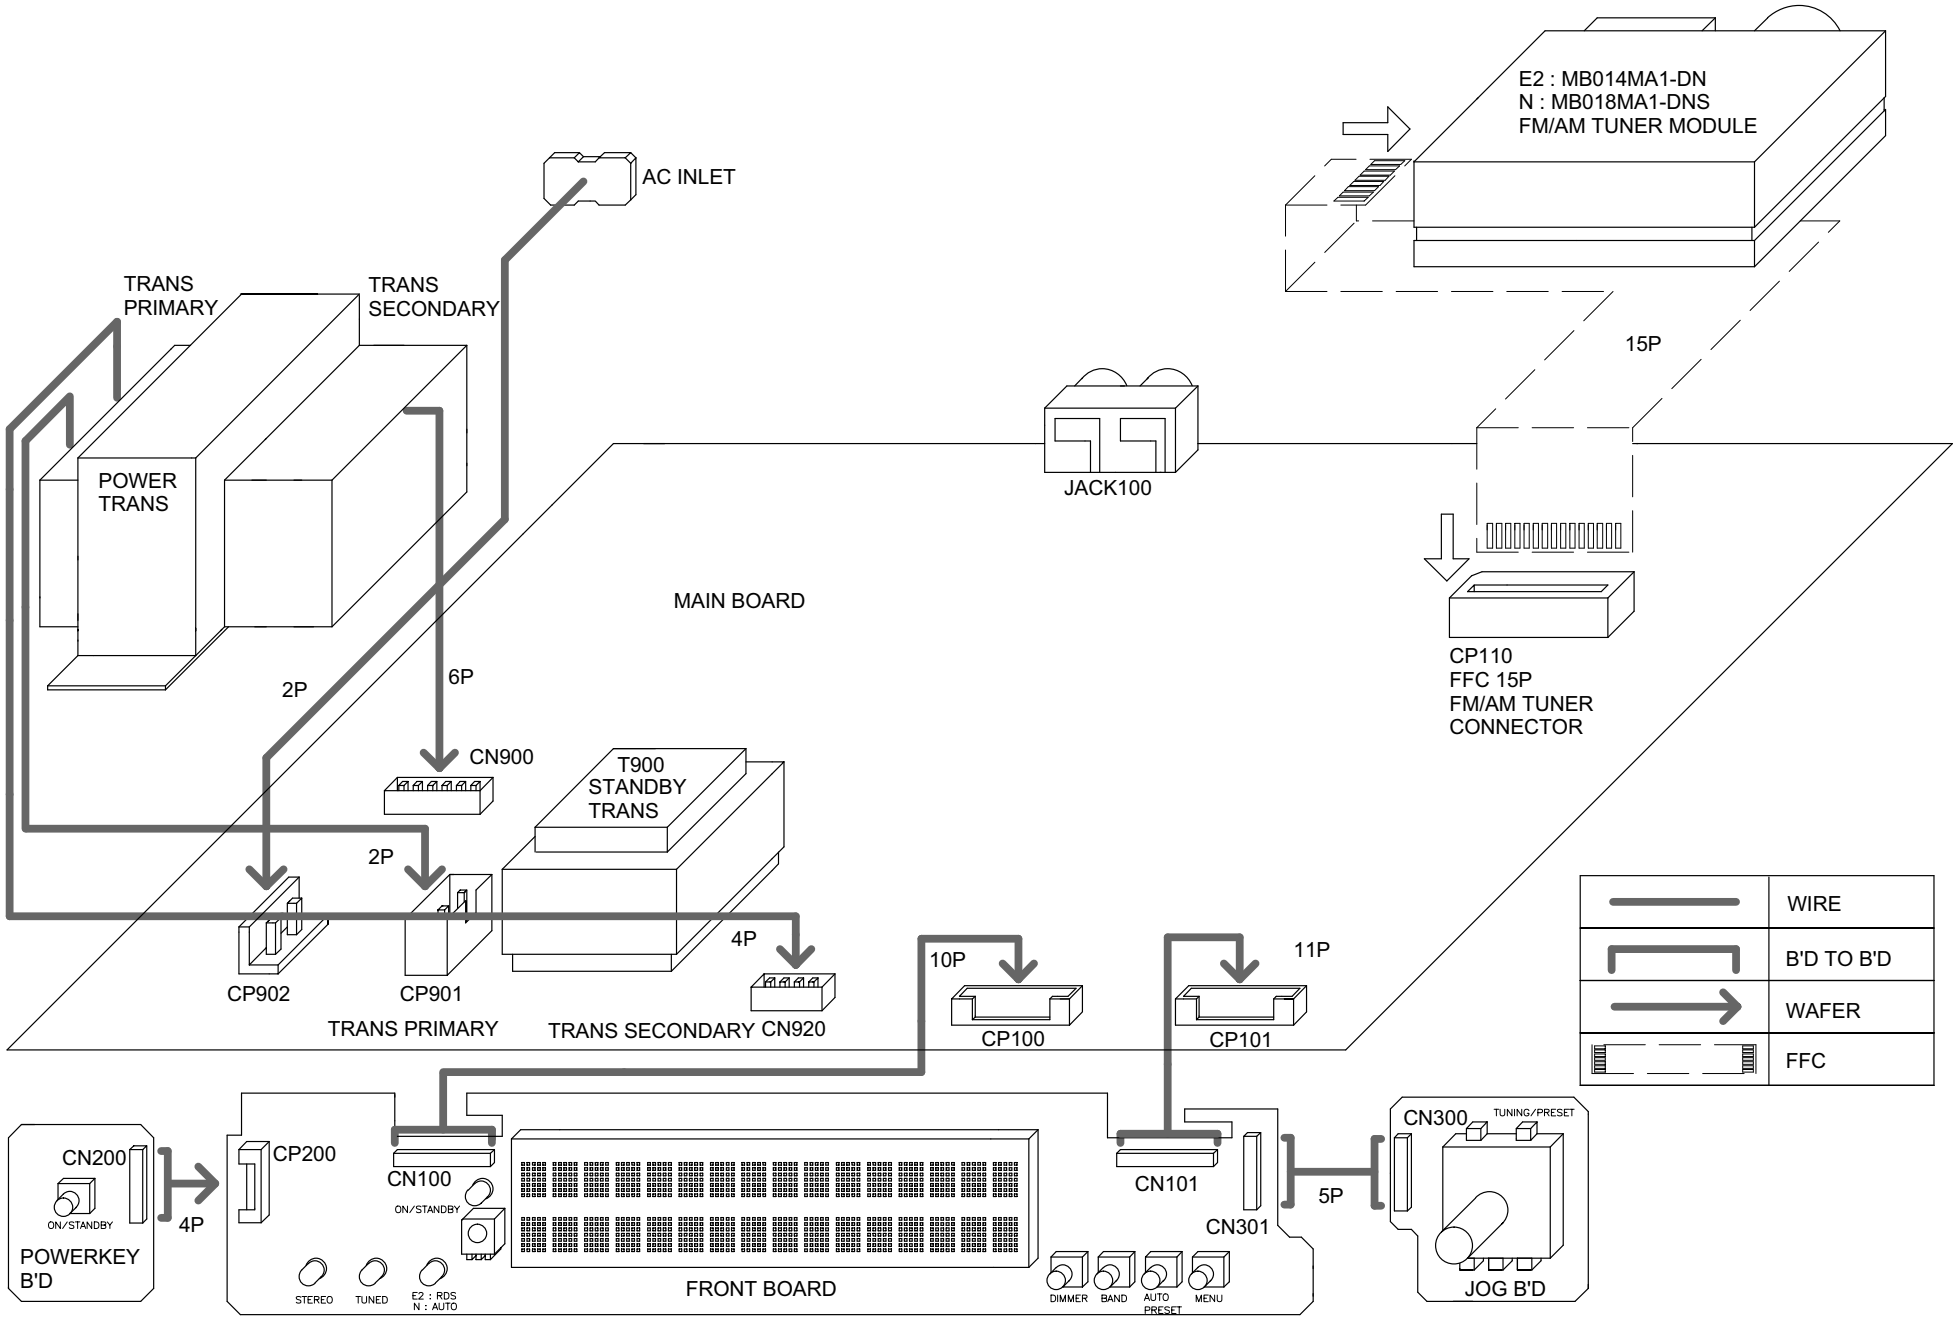
E2 : MB014MA1-DN
N : MB018MA1-DNS
FM/AM TUNER MODULE
AC INLET
TRANS PRIMARY
TRANS SECONDARY
POWER TRANS
15P
JACK100
MAIN BOARD
CP110
FFC 15P
FM/AM TUNER
CONNECTOR
2P
6P
CN900
T900
STANDBY
TRANS
2P
4P
CP902
CP901
TRANS PRIMARY
TRANS SECONDARY
CN920
10P
11P
CP100
CP101
WIRE
B'D TO B'D
WAFER
FFC
CN200
ON/STANDBY
4P
POWERKEY
B'D
CP200
CN100
ON/STANDBY
CN101
CN301
5P
CN300
TUNING/PRESET
JOG B'D
STEREO
TUNED
E2 : RDS
N : AUTO
FRONT BOARD
DIMMER
BAND
AUTO
PRESET
MENU

NOTE FOR SCHEMATIC DIAGRAM

WARNING:
Parts marked with this symbol ⚠ have critical characteristics. Use ONLY replacement parts recommended by the manufacturer.

CAUTION:
Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamps, or if the resistance from chassis to either side of the power cord is less than 460 kohms, the unit is defective.

WARNING:
DO NOT return the unit to the customer until the problem is located and corrected.


NOTICE:
ALL RESISTANCE VALUES IN OHM. k=1,000 OHM
M=1,000,000 OHM
ALL CAPACITANCE VALUES IN MICRO FARAD.
P=MICRO-MICRO FARAD
EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL INPUT CONDITION.
CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.

配線図について


⚠ 印の部品は安全を維持するために重要な部品です。
従って交換時は必ず指定の部品を使用してください。

注）
(1) 指定なき抵抗値は Ω、k は kΩ、M は MΩ を示す。
(2) 指定なきコンデンサーの値は μF、p は pF を示す。
(3) 各部の電圧は無信号の値を示す。
(4) この配線図は基本配線図です。改良等のため変更することがありますのでご了承ください。


SCHEMATIC DIAGRAMS (1/2)

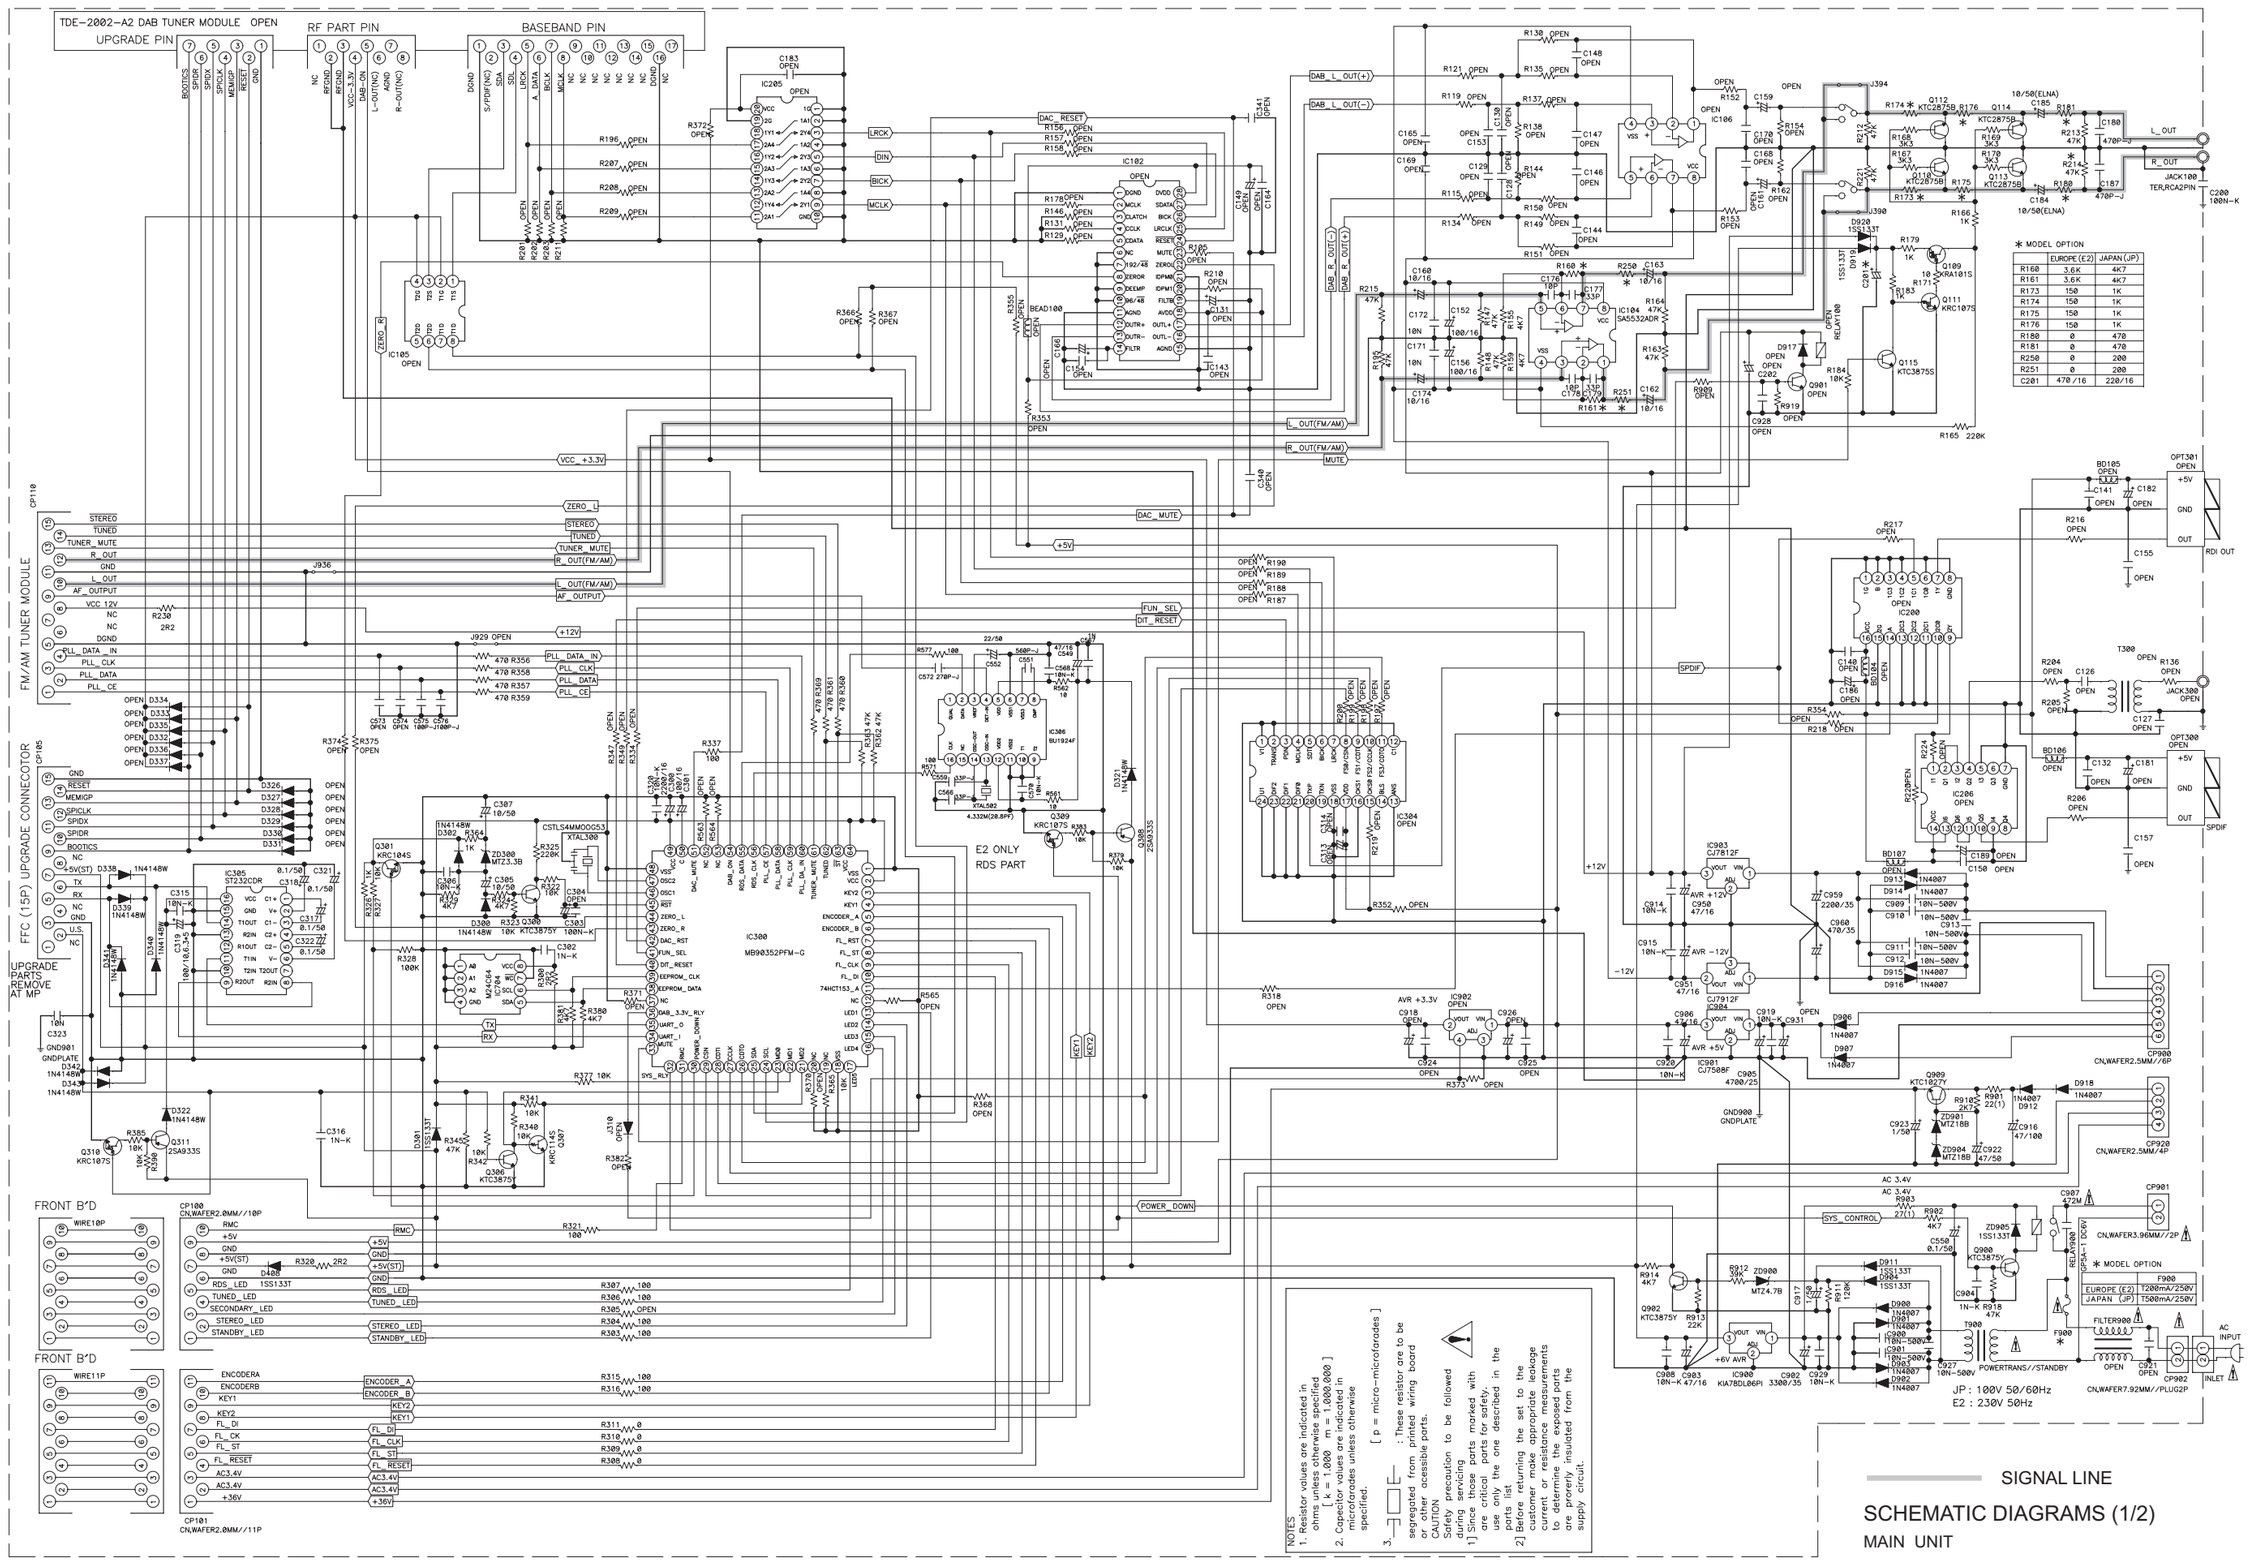


TUNING BOARD

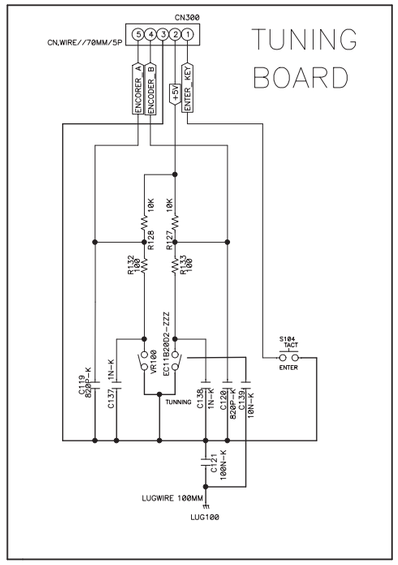


POWER-ON BOARD

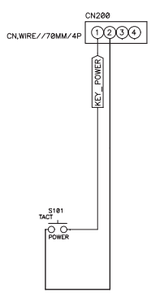

FRONT BOARD

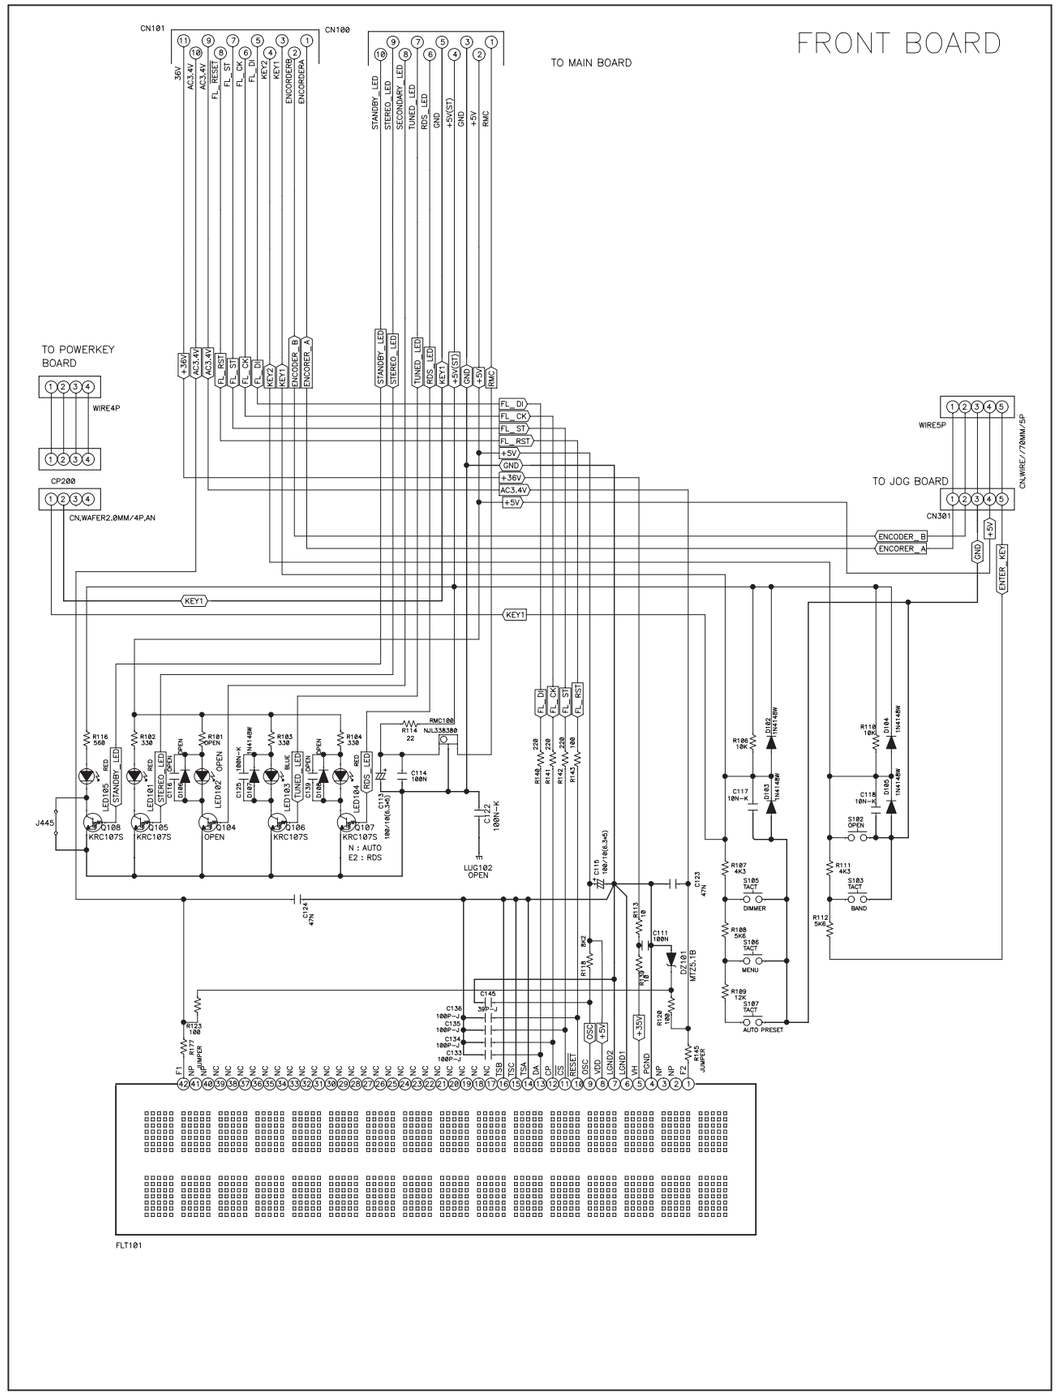

POWER TRANS

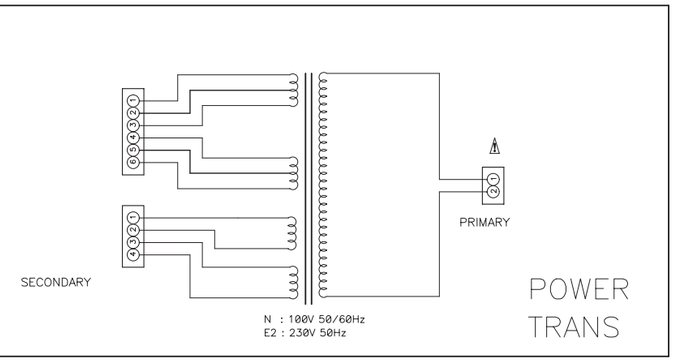

SCHEMATIC DIAGRAMS (2/2)

FRONT UNIT
TUNING UNIT
POWER-ON UNIT
POWER TRANS UNIT

DOCUMENTS FOR WEEE (Europe model)


Details of Recycle Parts

＊ You have to remove the parts that marked “WEEE Mark ◆ " when the recycling processing. (Europe model only)

Ref. No.	WEEE Mark	Part Name	Material	Q'ty
1		BADGE	Alminum	1
2		LENS LED	PMMA	3
3		BUTTON ONSTAND BY	Complex	1
6	◆	ONSTAND BY UNIT	Complex	1
7	◆	FRONT UNIT	Complex	1
8		MAIN CHASSIS	Steel	1
9	◆	POWER TRANS	Complex	1
10		CUSHION TRANS	CR	1
12		CLAMP	Complex	3
15		TOP COVER	PVC+Steel	1
16		WINDOW	PMMA	1
17		KNOB TUNING	Complex	1
18		FRONT PANEL	Alminum	1
19		FRAME PANEL	ABS	1
20	◆	TUNING UNIT	Complex	1
21		BRACKET PCB	Steel	4
22		CUSHION FOOT	CR	4
22-1		FOOT	ABS	4
24	◆	MAIN UNIT	Complex	1
25	◆	TUNER,FM/AM	Complex	1
29	◆	2P AC INLET ASS'Y	Complex	1
30		BACK PANEL	Steel	1
31		PLATE BOTTOM	Steel	1
35	◆	POWER TRANS(STAND BY)	Complex	1
36	◆	CABLE,FLAT CARD 1.25MM	Complex	1
SCREWS				
S1		SCREW 3*8 B-TYPE	Steel	9
S2		SCREW 3*8 B-TYPE	Steel	35
S3		SCREW 3*8 B-TYPE	Steel	2
S4		SCREW 3*10 B-TYPE(DOT)	Steel	16
S6		SCREW 4*8 B-TYPE(DOT)	Steel	4
S8		SCREW 4*10 P+S-WASHER	Steel	2


Exploded view of TU-1500AE

You have to remove the parts that marked "WEEE mark ♦" when the recycling processing. (Europe model only)

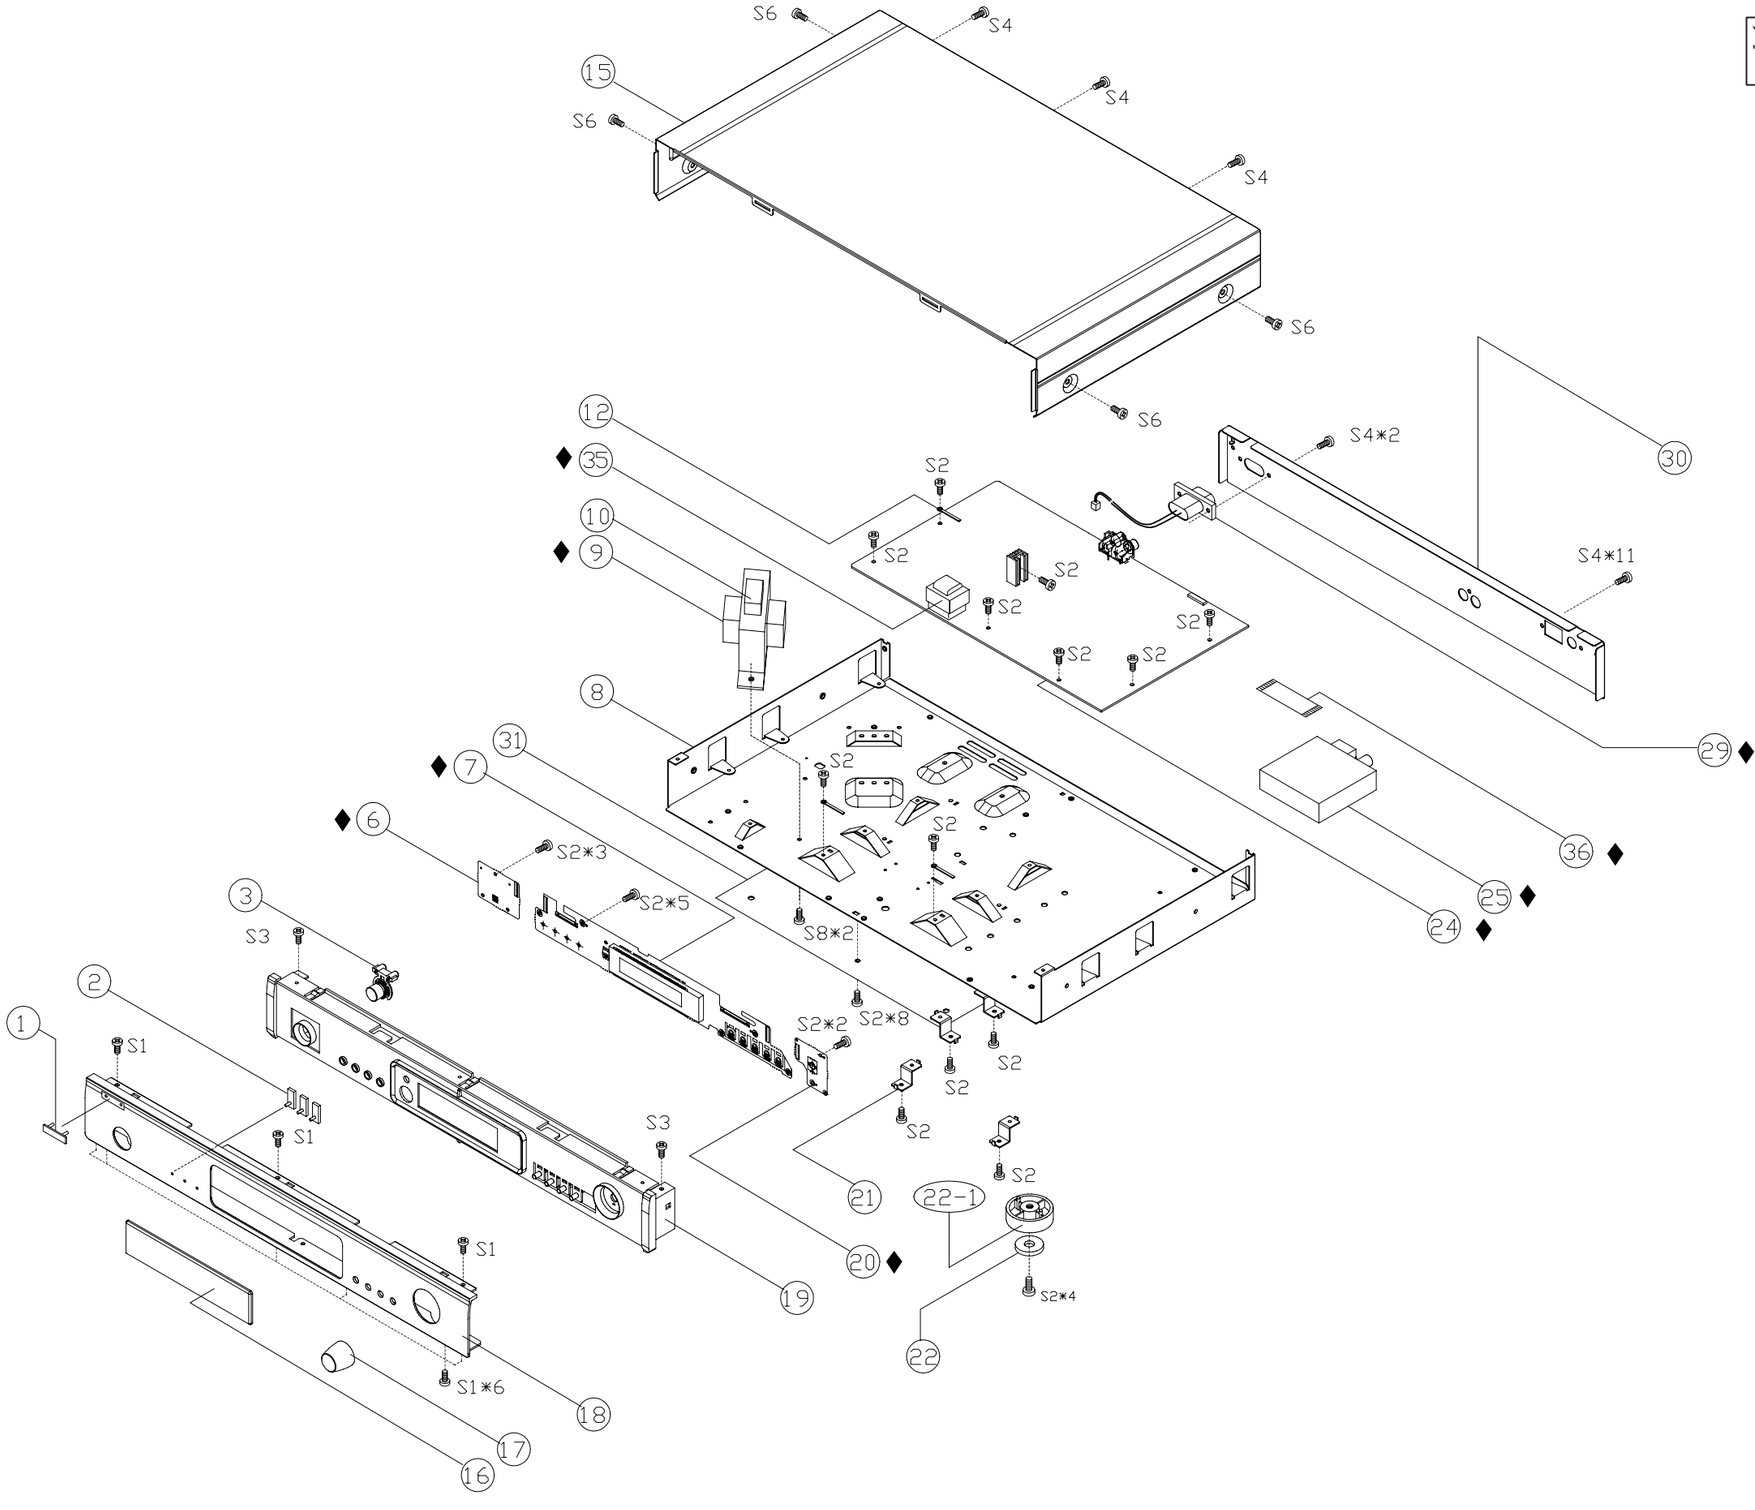


Details of Recycle parts for Power transformer

Part No.9 : POWER TRANS

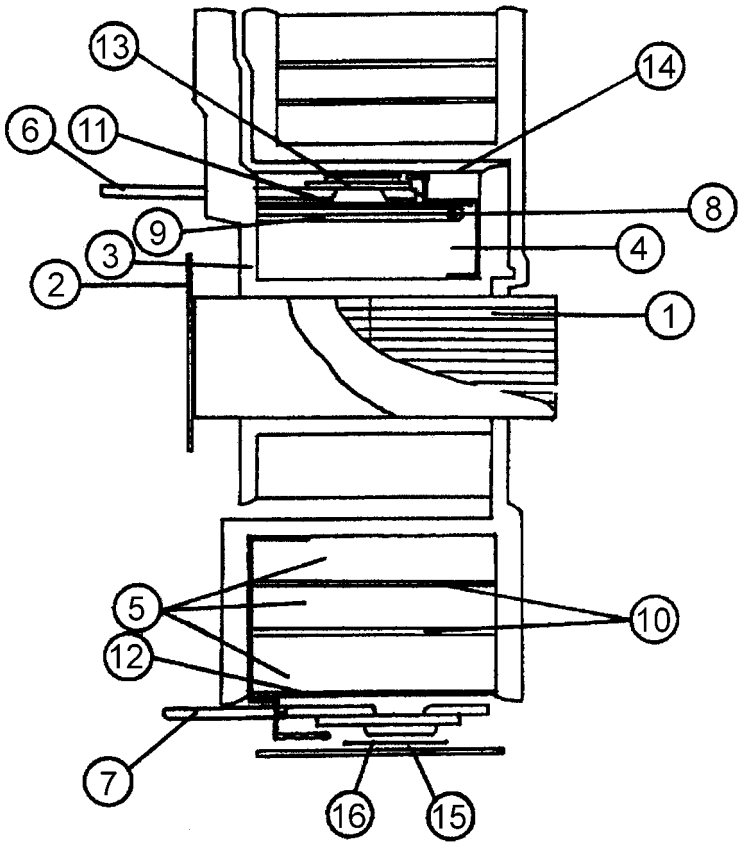

No.	Material
1	STEEL
2	STEEL
3	PBTP
4	COPPER WIRE
5	COPPER WIRE
6	COPPER ALLOY
7	COPPER ALLOY
8	COMPLEX
9	SR
10	PET
11	PET/PRESS BOARD
12	PET/PRESS BOARD
13	PRESS BOARD
14	PET
15	PET/PRESS BOARD
16	PET

Part No.35 : POWER TRANS (STAND BY)

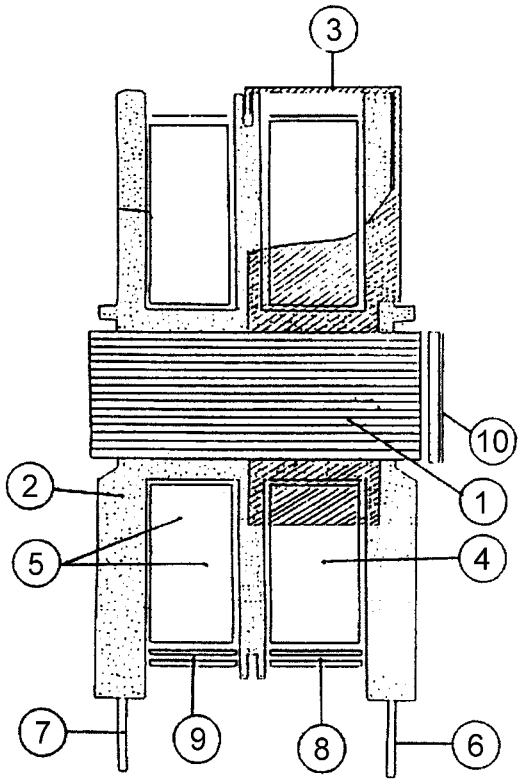

No.	Material
1	STEEL
2	PETP
3	PA
4	COPPER WIRE
5	COPPER WIRE
6	COPPER ALLOY
7	COPPER ALLOY
8	PET
9	PET
10	PET