# Wi-Fi 101

# ModusToolbox version: 2.3 Training version: 1.1



# Chapter 3: RTOS

### Time 2 Hours

After completing this chapter, you will have a fundamental understanding of the role of the RTOS plays in building projects. You will be able to use the FreeRTOS API to create and use tasks, semaphores, mutexes, queues and timers.

### **Table of Contents**

3.1	An Introduction to RTOS	3
3.1.1	General	3
3.1.2	Tasks/Threads	3
3.1.3	Potential Pitfalls	3
3.1.4	Semaphore	2
3.1.5	Mutex	4
3.1.6	Queue	2
3.1.7	Events/Notifications	4
3.1.8	Timers	4
3.1.9	Interrupts	5
3.2	RTOS Abstraction Layer	5
3.3	FreeRTOS	6
3.3.1	Getting Started	6
3.3.2	FreeRTOSConfig.h	7
3.3.3	Configuration Settings	7
3.3.4	Kernel Interface Functions	9
3.3.5	Interrupts	10
3.3.6	Tasks	11
3.3.7	Queues	12
3.3.8	Semaphores and Mutexes	14
3.3.9	Timers	16
3.3.10	Task Notifications	16
3.3.11	References	17
3.4	Exercise(s)	. 17
3.4.1	Exercise 1: Use a Task to Blink an LED	17
3.4.2	Exercise 2: Use a Semaphore	18
3.4.3	Exercise 3: (Advanced) Use a Mutex	19
3.4.4	Exercise 4: (Advanced) Use a Queue	20
3.4.5	Exercise 5: (Advanced) Use an RTOS Timer	20



## **Document conventions**

Convention	Usage	Example
Courier New	Displays code	CY_ISR_PROTO(MyISR);
Italics	Displays file names and paths	sourcefile.hex
[bracketed, bold]	Displays keyboard commands in procedures	[Enter] or [Ctrl] [C]
Menu > Selection	Represents menu paths	File > New Project > Clone
Bold	Displays commands, menu paths and selections, and icon names in procedures	Click the <b>Debugger</b> icon, and then click <b>Next</b> .



### 3.1 An Introduction to RTOS

#### 3.1.1 General

The purpose of an RTOS is to reduce the complexity of writing embedded firmware that has multiple asynchronous, response-time-critical tasks that have overlapping resource requirements. For example, you might have a device that is reading and writing data to a connected network, reading and writing data to an external filesystem, and reading and writing data from peripherals. Making sure that you deal with the timing requirement of responding to network requests while continuing to support the peripherals can be complex and therefore error prone. By using an RTOS you can separate the system functions into separate tasks (called **threads or tasks**) and develop them in a somewhat independent fashion.

## 3.1.2 Tasks/Threads

A task or thread is a specific execution context. The RTOS maintains a list of tasks that are idle, halted or running and which task needs to run next (based on priority) and at what time. This function in the RTOS is called the scheduler. There are two major schemes for managing which threads/tasks/processes are active in operating systems: preemptive and co-operative.

In preemptive multitasking the CPU completely controls which task is running and can stop and start them as required. In this scheme the scheduler uses CPU protected modes to wrest control from active tasks, halt them, and move onto the next task. Higher priority tasks will be prioritized to run before lower priority tasks. That is, if a task is running and a higher priority task requests a turn, the RTOS will suspend the lower priority task and switch to the higher priority task. Preemptive multitasking is the scheme that is used in Windows, Linux etc.

In co-operative multitasking each process must be a good citizen and yield control back to the RTOS. There are a number of mechanisms for yielding control such as RTOS delay functions, semaphores, mutexes, and queues (which we will discuss later in this document).

Most embedded RTOSes are configured in a hybrid mode. It is preemptive for higher priority tasks and "round robin" for tasks of equal priority. Therefore, higher priority tasks will always run at the expense of lower priority tasks, so it is important to yield control to give lower priority tasks a turn. If not, tasks that don't yield control will prevent lower or equal priority tasks from running at all. It is good practice to have some form of yield control mechanism in every task to prevent such situations.

#### 3.1.3 Potential Pitfalls

All of this sounds great, but there are three serious bugs which can easily be created in these types of systems and these bugs can be very hard to find. These bugs are all caused by side effects of interactions between the tasks. The big three are:

- Cyclic dependencies which can cause deadlocks.
- Resource conflicts when sharing memory and sharing peripherals which can cause erratic nondeterministic behavior.
- Difficulties in executing inter-process communication.

But all hope is not lost. Every RTOS gives you mechanisms to deal with these problems, specifically semaphores, mutexes and queues all of which we will discuss.



## 3.1.4 Semaphore

A <u>semaphore</u> is a signaling mechanism between tasks. The name semaphore (originally sailing ship signal flags) was applied to computers by Dijkstra in a paper about synchronizing sequential processes. Semaphores can either be binary or counting. In the case of a counting semaphore, they are usually implemented as a simple unsigned integer. When you "set" a counting semaphore it increments the value of the semaphore. When you "get" a semaphore it decrements the value, but if the value is 0 the task will SUSPEND itself until the semaphore is set. So, you can use a semaphore to signal between tasks that something is ready. For instance, you could have a "collectData" task that reads data from a sensor and a "sendData" task that sends the data up to the cloud. The sendData task would "get" the semaphore which will suspend the task UNTIL the collectData task "sets" the semaphore when it has new data available that needs to be sent.

#### 3.1.5 Mutex

Mutex is an abbreviation for "Mutual Exclusion". A mutex is a lock on a specific resource - if you request a mutex on a resource that is already locked by another task, then your task will suspend until the lock is released. Without a mutex, you may see strange behavior if two tasks try to access the same shared resource at the same time or when one task starts to use a shared resource but is then preempted by another task that uses the same resource before the first task is done. Shared resources can be things like a UART or an I2C interface, a shared block of memory, etc.

## **3.1.6** Queue

A queue is a task-safe mechanism to send data to another task. The queue is a FIFO - you read from the front and you write to the back. If you try to read a queue that is empty your task will suspend until something is written into it. The payload in a queue (size of each entry) and the size of the queue (number of entries) is user configurable at queue creation time.

## 3.1.7 Events/Notifications

Events and notifications can be likened to that of a notice board, where multiple tasks have visibility to it. Tasks can check the values in the event or notification objects to determine if a certain event/notification happened and take appropriate action. Once an event is no longer required in the system, it can be cleared.

#### **3.1.8** Timers

An RTOS timer allows you to schedule a function to run at a specified interval - e.g. send your data to the cloud every 10 seconds. When you set up a timer you specify the function you want run and how often you want it run.

Note that there is a single execution of the function every time the timer expires rather than a continually executing task, so the function should NOT have an infinite loop – it should just run and exit each time the timer calls it.

Since the timer is a function, not a task, make sure you don't exit the main application task if your project has no other active tasks because that will crash the system.



#### 3.1.9 **Interrupts**

An interrupt is a signal to the processor that an event has occurred, and that immediate attention is required. An interrupt is handled with an interrupt service routine (ISR). An interrupt is a function, not a task, so it should do what it needs to do and then exit (i.e. no infinite loop). It is also important not to call any long blocking functions inside of an ISR since it will prevent other tasks from running until it completes.

Interrupts have priorities just like tasks. A higher priority interrupt can cause an ISR for a lower priority interrupt to suspend until the higher priority ISR completes. This is called a nested interrupt.

#### 3.2 **RTOS Abstraction Layer**

In order to help make libraries as portable as possible within ModusToolbox, a thin RTOS Abstraction library for PSoC 6 has been developed called abstraction-rtos. This library provides a unified API around the actual RTOS. This allows libraries to be written independent of the RTOS actually selected for the application. The abstraction layer provides access to all the standard RTOS resources described above.

While the primary purpose of the abstraction library is for use by other libraries, the abstraction layer could be used by the application code. However, since the application generally only needs to support one RTOS, this is typically an unnecessary overhead. In most cases, you will not need to include the abstraction-rtos library or use any of its functions directly in your application.

The RTOS abstraction layer functions generally all work the same way. The basic process is:

- 1. Include the cyabs\_rtos.h header file so that you have access to the RTOS functions.
- 2. Declare a variable of the right type (e.g. cy mutex t)
- 3. Call the appropriate create or initialize function (e.g. cy rtos init mutex). Provide it with a reference to the variable that was created in step 2.
- 4. Access the RTOS object using one of the access functions (e.g. cy rtos set mutex).
- 5. If you don't need it anymore, free up the pointer with the appropriate de-init function (e.g. cy rtos deinit mutex).

Note:

All these functions need a pointer, so it is generally best to declare these "shared" resources as static global variables within the file that they are used.

You can find the full documentation for the RTOS Abstraction layer on GitHub at:

https://github.com/cypresssemiconductorco/abstraction-rtos



### 3.3 FreeRTOS

The RTOS we will be using in this class is Amazon's FreeRTOS.

## 3.3.1 Getting Started

To create a FreeRTOS application you need to do the following:

- 1. Create an application to start with. This is the application that you will add FreeRTOS into.
- 2. Add the FreeRTOS library (freertos) to the application using the Library Manager.
- 3. Add the following to the COMPONENTS variable in your Makefile.

```
COMPONENTS+=FREERTOS
```

- 4. Copy the FreeRTOSConfig.h file from the ../mtb\_shared/freertos/<version>/Source/portable/COMPONENT\_<core> directory to your project. This is a template containing settings to customize how FreeRTOS behaves. More on that in a minute.
- 5. Open the copied *FreeRTOSConfig.h* file and remove the #warning line.
- 6. In the *main.c* file:
  - Include the required header files:

```
#include "cyhal.h"
#include "cybsp.h"
#include "FreeRTOS.h"
#include "task.h"
```

• Create a function for any tasks that your application requires. For example:

```
void MyFunction(void *arg)
{
    (void)arg;

    /* Initialize hardware */

    for (;;)
    {
        /* Do something */
        MyActions();

        /* Allow other tasks to execute */
        vTaskDelay(500);
    }
}
```



Create a task that runs your function and start the RTOS scheduler:

```
int main (void)
{
   /* Initialize the device and board peripherals */
    if (CY RSLT SUCCESS != cybsp init())
         /* Unable to initialize BSP so HALT */
        CY ASSERT (0);
    }
    if (pdPASS == xTaskCreate(MyFunction, // Task function
                                   "Task Name", // Task name
                                  1024, // Task stack size
NULL, // Parameters passed to task
5, // Task priority
NULL) // Task handle
    {
         vTaskStartScheduler();
    }
    /* vTaskStartScheduler should never return.
        If we get here, then there was a serious error */
    CY ASSERT (0);
}
```

## 3.3.2 FreeRTOSConfig.h

This file is where you configure how FreeRTOS will work. It also contains the system specific configuration. A predefined template you can modify is in the ../mtb\_shared/freertos/Source/portable/COMPONENT\_<core> directory. When you build this template it will generate a warning. You should make a copy of this file, save it in your project directory and remove the warning. This file controls the APIs you can call as well as other FreeRTOS settings. For many applications, the template will work just fine as-is.

## 3.3.3 Configuration Settings

The FreeRTOS Customization documentation describes the configuration options available in the FreeRTOSConfig.h file. The following configuration values are specific to a PSoC 6 MCU FreeRTOS port:

#### 3.3.3.1 configCPU\_CLOCK\_HZ

This parameter passes the frequency of the MCU core clock required for FreeRTOS system timer configuration. The pre-configured FreeRTOSConfig.h file provided with the FreeRTOS library sets the configCPU CLOCK HZ value as SystemCoreClock, which is calculated by the PSoC 6 MCU system startup code. You should not need to modify this parameter.

#### configMAX\_SYSCALL\_INTERRUPT\_PRIORITY 3.3.3.2

This parameter sets the highest interrupt priority from which to call interrupt-safe FreeRTOS functions. Calling FreeRTOS functions from an interrupt with a priority higher than configMAX SYSCALL INTERRUPT PRIORITY causes FreeRTOS to generate an exception. To avoid this exception, you can do one of the following:

Reduce all interrupt priorities to configMAX SYSCALL INTERRUPT PRIORITY or lower.



- Trigger an interrupt with a priority less or equal to <code>configMAX\_SYSCALL\_INTERRUPT\_PRIORITY</code> and call the FreeRTOS functions from this interrupt handler.
- Call the FreeRTOS functions from the traceTASKSWITCHEDOUT macro. See this post on FreeRTOS support forums.

Note:

Code that writes to the flash block (including the Flash/Bluetooth LE/Emulated EEPROM/DFU) uses system calls and thus the system pipe (IPC) interrupt to do so. If the IPC interrupt priority is less than or equal to <code>configMAX\_SYSCALL\_INTERRUPT\_PRIORITY</code> and another task is running at the same or higher priority than the IPC or if a critical section is entered during the flash write this can cause issues with both blocking and partially blocking flash writes. See the PSoC 6 PDL Flash Driver documentation for more details.

## 3.3.3.3 configHEAP\_ALLOCATION\_SCHEME

This parameter specifies the memory management scheme. The FreeRTOS kernel requires RAM for each created task, queue, mutex, software timer, semaphore, or event group. To manage used memory, FreeRTOS implements several different memory management schemes so that you can choose the most suitable for your application.

Each scheme is documented in the <u>FreeRTOS Memory Management</u> topic. The memory management implementation files are in the freertos/Source/portable/MemMang directory.

The available memory management schemes:

- HEAP ALLOCATION TYPE1 (heap 1) The simplest, does not permit memory to be freed.
- HEAP\_ALLOCATION\_TYPE2 (heap 2) Permits memory to be freed, but not does coalesce adjacent free blocks.
- HEAP ALLOCATION TYPE3 (heap 3) Simply wraps a standard malloc and free for task safety.
- HEAP\_ALLOCATION\_TYPE4 (heap\_4) Coalesces adjacent free blocks to avoid fragmentation. Includes the absolute address-placement option.
- HEAP\_ALLOCATION\_TYPE5 (<a href="heap\_5">heap\_4</a>, with the ability to span the heap across multiple non-adjacent memory areas.
- NO\_HEAP\_ALLOCATION Disables the memory management, used for applications with static memory allocation.

In the heap\_3 memory scheme, your linker file must specify a sufficient size of heap and stack, and your firmware must implement and use malloc and free to allocate and release memory.

In the other memory schemes, the RTOS itself allocates a stack and heap. For these schemes, the stack defined in the Board Support Package (BSP) linker file is used only by the main function and the functions it calls. We'll talk more about BSPs in Chapter 5a.

## 3.3.3.4 configTOTAL\_HEAP\_SIZE

This parameter specifies a total amount of RAM available for the FreRTOS heap. This parameter ignored when heap\_3 memory scheme is used.



#### configMINIMAL\_STACK\_SIZE 3.3.3.5

This parameter specifies the size of the stack used by the idle task. It is not recommended to reduce the default parameter value.

#### 3.3.4 Kernel Interface Functions

While the API lists a dozen kernel functions, there are only 6 needed in day to day use, and 4 of them are paired sets. They are broken down by what type of task scheduler you're using. The FreeRTOSConfig.h file controls the scheduler type; see the FreeRTOS <u>Customization</u> documentation.

#### 3.3.4.1 Cooperative

taskYIELD - Lets the kernel schedule someone else. Note this is not like a delay which blocks the task for a specified period of time. Instead it allows tasks at the same or higher priority to run. Lower priority tasks will never run because of a yield.

Note:

This can be used in a preemptive system if there are specific places where you want to let other tasks run, instead of waiting for the next system tick to kick you out. For example, you may want to yield before starting a critical section.

If you want to allow any task to run, even a lower priority task, you can use vTaskDelay. We'll cover that in just a minute.

#### **Preemptive** 3.3.4.2

There are critical section functions that are useful in a preemptive system to prevent a task from being preempted for some critical operation.

Note: FreeRTOS API functions must not be called in a critical section.

- taskENTER CRITICAL/taskEXIT CRITICAL Defines a block of code that must be performed atomically. Must not be called from an ISR.
- taskENTER CRITICAL FROM ISR/taskEXIT CRITICAL FROM ISR Defines a block of code that must be performed atomically. Must only be called from an ISR.

In general, you should stay in the same scope for the enter critical section/exit critical section. In some cases, you may want to call other APIs and if those APIs do not rely on interrupts you're fine. That said, like interrupts, critical sections should be kept short whenever possible.



## 3.3.5 Interrupts

Interrupts will do just as you would expect; stop the current task so that they can be serviced. In fact, this is how the preemptive/time slice systems are implemented, with a system tick interrupt at the lowest interrupt priority. Here is an ISR from a CapSense code example:

```
static void capsense_timer_callback(TimerHandle_t xTimer)
{
    capsense_command_t cmd = CAPSENSE_SCAN;
    BaseType_t xYieldRequired;

    (void)xTimer;

    /* Send command to start CapSense scan */
    if(pdPASS != xQueueSendToBackFromISR(capsense_cmd_q, &cmd, &xYieldRequired))
    {
        /* handle full queue */
    }
    else
    {
        portYIELD_FROM_ISR(xYieldRequired);
    }
}
```

You may be wondering what portYIELD\_FROM\_ISR does. Well let's imagine task 1 with a priority of 2 is executing when the ISR comes in. Provided interrupts are enabled and task 1 is not in a critical section, the system will switch to the ISR and run it.

Notice that the ISR calls the function xQueueSendToBackFromISR that may unblock a task. Also notice the function has the "FromISR" suffix so that it is safe to call inside the ISR. If this unblocks a task with a higher priority than the one which was executing when the ISR fired, xYieldRequired will be set to true. Continuing the example, assume xQueueSendToBackFromISR unblocks task 2 and it has a priority of 3, so xYieldRequired is true.

When portYIELD\_FROM\_ISR is called with a value of true, this queues up a scheduler change as the next action once the ISR is complete. From the user's point of view, the system processing is task  $1 \rightarrow ISR \rightarrow task 2$ . Once task 2 is done (or blocked again), the scheduler will go back to task 1.

If portYIELD\_FROM\_ISR is false, the task will be executed once the ISR exits since nothing else of a higher priority asked for a turn. From the user's perspective it looks like task  $1 \rightarrow ISR \rightarrow task 1$ . Failing to call portYIELD FROM ISR has the same behavior as calling it with false.

With our example if you failed to call portyIELD\_FROM\_ISR, the behavior the user will observe is task  $1 \rightarrow ISR \rightarrow task \ 1 \rightarrow task \ 2$ . A scheduler event like an ISR or system tick is required before task 1 is suspended, so this would delay when the higher priority task (task 2 in this case) gets to run.



### 3.3.6 Tasks

Documentation on task creation can be found at: https://www.freertos.org/a00019.html

To create a task, you use the <u>xTaskCreate</u> API. Its protype is:

Of particular interest to us is the priority. Zero is the lowest and generally reserved for the idle task which may or may not feed a watchdog timer (WDT). In a preemptive system there are (generally) two basic rules at play:

- Task with highest priority will run first, and never give up the CPU until the task is blocked
- If 2 or more tasks with the same priority do not give up the CPU (they don't block), then FreeRTOS will share the CPU between them. *FreeRTOSConfig.h* determines how this sharing happens.

You can make a task give up the CPU (that is, block it) by calling:

<u>vTaskDelay</u>	This simply blocks the task so that something else can run; you decide how long you want it to block (in ms).
xQueueSend	If the Queue you are sending to is full, this task will be blocked until there is space in the queue.
<u>xQueueReceive</u>	If the Queue you are reading from is empty, this task will be blocked until there is data in the queue.
xSemaphoreTake	The task will be blocked if the semaphore has not been given.

There are other ways for tasks to become blocked as well, but these are the most common.



## **3.3.7 Queues**

Documentation on queues creation can be found at https://www.freertos.org/a00018.html

You can communicate between tasks by using Queues or Semaphores. In order to use the queue functions, you must include *queue.h* in your source code. Let's create an example to communicate between two tasks. Here's some sample code:

```
#include "FreeRTOS.h"
#include "task.h"
#include "queue.h"
#include "stdio.h"
// Global Queue Handle
static QueueHandle t qh = 0;
void task tx(void *p)
    int myInt = 0;
   while (1)
    {
        myInt++;
        if (!xQueueSend(qh, &myInt, 500))
            puts ("Failed to send item to queue within 500ms");
        vTaskDelay(1000);
    }
}
void task rx(void *p)
    int myInt = 0;
    while (1)
    {
        if (!xQueueReceive(qh, &myInt, 1000))
        {
            puts ("Failed to receive item within 1000 ms");
        }
        else
        {
            printf("Received: %u\n", myInt);
        }
    }
}
int main(void)
{
    qh = xQueueCreate(1, sizeof(int));
    xTaskCreate(task_tx, (char *)"t1", 2048, 0, 1, 0);
    xTaskCreate(task_rx, (char *)"t2", 2048, 0, 1, 0);
    vTaskStartScheduler();
   CY_ASSERT(0); // Should never get here
}
```

Note:

In main, we create the Queue before creating tasks, because sending to an un-initialized Queue will
crash the system.



- In task tx, we send one item every second. If the queue is full the task will block for 500ms (set by the timeout value). Once the queue is no longer full, the item will be sent. If the queue stays full for 500ms, the task unblocks due to the timeout and we print a failure message.
- In task rx, we receive one item, and we do not use vTaskDelay. This is because if there is nothing in the queue, FreeRTOS will block the task from running. xQueueReceive will unblock the task as soon as an item shows up in the queue. If nothing shows up in 1000ms, the task will unblock anyway that is set by the value of 1000 for the timeout in the xQueueReceive function call.
- If the priority of the receiving queue(task rx) is higher, FreeRTOS will switch tasks the moment xQueueSend happens, and the next line inside task tx will not execute since CPU will be switched overto task rx.



## 3.3.8 Semaphores and Mutexes

Documentation on semaphores and mutexes can be found at: https://www.freertos.org/a00113.html

In FreeRTOS, there is no separate Mutex function. That is not a problem since a mutex is just a special case of a semaphore. Let me show you with an example. Note that you need to include *semphr.h* in your source code to use semaphores (or mutexes).

#### 3.3.8.1 Mutexes

Semaphores in FreeRTOS can be used as mutexes with a <u>priority inversion</u> mechanism such that a lower priority task that holds a mutex for a shared resource will prevent a higher priority task from running if that higher priority task requires the same mutex. One of the best examples of a mutex is to guard a resource or a door with a key. For instance, let's say you have an SPI BUS, and only one task should use it at a time.

A mutex will only allow ONE task to get past an xSemaphoreTake operation and other tasks will be put to sleep if they reach this function at the same time. In this example, the two tasks use a semaphore as a mutex.

```
#include "FreeRTOS.h"
#include "task.h"
#include "semphr.h"
static SemaphoreHandle t spi bus lock=0;
void task one()
    while (1)
        if (xSemaphoreTake(spi bus lock, 1000))
        {
            // Use Guarded Resource
            // Give Semaphore back:
            xSemaphoreGive(spi bus lock);
        }
    }
}
void task two()
    while (1)
        if (xSemaphoreTake(spi bus lock, 1000))
            // Use Guarded Resource
            // Give Semaphore back:
            xSemaphoreGive(spi bus lock);
        }
    }
}
int main (void)
    spi bus lock = xSemaphoreCreateMutex();
    xTaskCreate(task_one, (char *)"t1", 2048, 0, 1, 0);
    xTaskCreate(task two, (char *)"t2", 2048, 0, 1, 0);
    vTaskStartScheduler();
    CY ASSERT (0);
```

Note that the semaphore was created using the function xSemaphoreCreateMutex which takes care of setting up the semaphore with priority inversion.



## 3.3.8.2 Binary Semaphore

A binary semaphore can also be used like a mutex, but binary semaphores doesn't provide a priority inversion mechanism. Binary semaphores are better suited for helper tasks for interrupts. For example, if you have an interrupt and you don't want to do a lot of processing inside the interrupt, you can use a helper task. To accomplish this, you can perform a semaphore "give" operation inside the interrupt, and a dedicated task will block on the corresponding take operation.

```
#include "FreeRTOS.h"
#include "task.h"
#include "semphr.h"
#define LONG TIME Oxffff
static SemaphoreHandle t event signal = 0;
void System Interrupt()
    static BaseType t xHigherPriorityTaskWoken;
   xSemaphoreGiveFromISR(event signal, &xHigherPriorityTaskWoken);
void system_interrupt_task()
    while (1)
    {
        if (pdTRUE == xSemaphoreTake(event signal, LONG TIME))
            // Process the interrupt
    }
}
int main (void)
   vSemaphoreCreateBinary(event_signal); // Create the semaphore
   xSemaphoreTake(event_signal, 0); // Take semaphore after creating it.
   // create your task, assuming it has an interrupt at some point
   vTaskStartScheduler();
   CY ASSERT (0);
```

The above code shows an example of deferred interrupt processing. The idea is that you don't want to process the interrupt inside <code>System\_Interrupt</code> because you'd be in a critical section with system interrupts globally disabled, therefore, you can potentially lock up the system or destroy real-time processing if the interrupt processing takes too long.

In the example, the ISR function <code>System\_Interrupt</code> just gives the semaphore (with the FromISR designation) and then exits. The actual processing happens inside the function <code>system\_interrupt\_task</code>, which waits for the semaphore and then does the processing. This way, other critical tasks that have a higher priority than <code>system\_interrupt\_task</code> can run first.

Another way to use binary semaphore is to wake up one task from another task by giving the semaphore. The semaphore will essentially act like a signal that may indicate: "Something happened, now go do the work in another task".

Again, remember that when you create a semaphore in FreeRTOS, it is ready to be taken, so you may want to take the semaphore after you create it such that the task waiting on this semaphore will block until given by somebody.



## 3.3.8.3 Counting Semaphore

As you leaned earlier, a counting semaphore keeps track of how many times it was given rather than being a binary event. With a counting semaphore, you specify the depth and the initial count when you create the semaphore. Its function prototype looks like this:

#### **3.3.9 Timers**

Documentation on RTOS timers can be found at: <a href="https://www.freertos.org/FreeRTOS-Software-Timer-API-Functions.html">https://www.freertos.org/FreeRTOS-Software-Timer-API-Functions.html</a>

When you setup the timer using xTimerCreate, you specify the function you want run and when you want it run. It also takes a parameter that indicates whether the timer should only trigger once (i.e. a one-shot timer) or whether it should be periodic.

Once you create a timer, it needs to be started using xTimerStart.

### 3.3.10 Task Notifications

Every FreeRTOS task has a 32-bit notification value. An RTOS task notification is an event sent directly to a task that can unblock the receiving task, and optionally update the receiving task's notification value. Unblocking an RTOS task with a direct notification is 45% faster and uses less RAM than unblocking a task with a binary semaphore.

Notifications are sent using the xTaskNotify and xTaskNotifyGive functions and received using xTaskNotifyWait and ulTaskNotifyTake functions. A task that calls one of the receiving functions will block for a specified amount of time until another task calls one of the sending functions, specifying the blocked receiving task.

Task notifications can update the receiving task's notification value in several ways:

- Set the receiving task's notification value with or without overwriting previous notification values
- Set one or more bits in the receiving task's notification value
- Increment the receiving task's notification value

If you want to use a notification as a binary semaphore you should use the xTaskNotifyGive and the ulTaskNotifyTake functions. If you want to use a notification to deliver more data than a simple binary semaphore provides you should use the xTaskNotify and the xTaskNotifyWait functions.

Note:

The functions mentioned thus-far for sending task notifications are not ISR safe! If you want to send a notification from an ISR you will need to call the ISR safe equivalent of the function you want:

xTaskNotifyFromISR of vTaskNotifyGiveFromISR

There is a complete description of, as well as a plethora of usage examples for notifications, available from <u>FreeRTOS's website</u>.



### 3.3.11 References

The information above comes for a variety of sources: Some of the following sources have more recommendations/information.

- https://www.freertos.org/a00106.html
- <a href="https://github.com/cypresssemiconductorco/freertos">https://github.com/cypresssemiconductorco/freertos</a>
- http://socialledge.com/sjsu/index.php/FreeRTOS Tutorial

## 3.4 Exercise(s)

## 3.4.1 Exercise 1: Use a Task to Blink an LED

Create a task to blink an LED every 500ms. Create a new application called ch03\_ex01\_task using the Import button to select your ch02\_ex02\_blinkled exercise as a template. 2. Include the *freertos* library using the ModusToolbox Library Manager. Add the following include statements to *main.c*: #include "FreeRTOS.h" #include "task.h" 4. Add the following to the COMPONENTS variable in your *Makefile*: COMPONENTS+=FREERTOS 5. Copy the FreeRTOSConfig.h file from the mtb\_shared/freertos/<version>/Source/portable/COMPONENT\_<core> directory to your top-level project directory. Open the copied FreeRTOSConfig.h file and remove the "#warning This is a template..." line. Setup a new task to blink the LED on/off every 500ms. Hint Move the code from the 02\_blinkled project's main application loop into the task's loop. Change the cyhal system delay ms calls to vTaskDelay instead so that the task will suspend during the delay. Hint Remember that vTaskStartScheduler never returns so any code after that in the main function can be removed. **Hint** If there is nothing to be done in the main application loop, then you can just remove the for (;;) loop entirely. If you leave the loop in, you need a delay such as vTaskDelay(1) so that the LED task gets a chance to run. Program your project to the board.




## 3.4.2 Exercise 2: Use a Semaphore

Create a program where the main task looks for a button press then uses a semaphore to communicate to the toggle LED task. 1. Create a new project called **ch03\_ex02\_semaphore** using the **Import** button to select your previous exercise (ch03\_ex01\_task) as a template. 2. Add the freertos library to the application and add #include "semphr.h" to main.c. 3. Create a new semaphore. **Hint** The semaphore functions can be found at the **FreeRTOS** website. 4. Use a pin interrupt to detect a button press and set the semaphore when the button is pressed. **Hint** Refer to the interrupt exercise from the previous chapter if you need a refresher. Hint Remember that you need to use a special semaphore function in an ISR. If that function returns pdPASS you should call the function portYIELD FROM ISR to give control to the highest priority task when the interrupt exits. 5. Use xSemaphoreTake inside the task that blinks the LED so that it waits for the semaphore forever and then toggles the LED rather than blinking constantly. **Hint** You can replace the delay function calls with the get semaphore function. Hint If the task has "blink" in its name you should rename it to be consistent with what it now does. Hint Use portMAX DELAY so that the task will wait indefinitely until the button is pressed. **Questions to Answer**  Do you need vTaskDelay in the LED task? Why or why not? 2. What happens if you use a value of 500 for the semaphore timeout? Why?



## 3.4.3 Exercise 3: (Advanced) Use a Mutex

An LED may behave strangely if two tasks try to blink it at the same time. You will use a mutex to lock access to one task at a time.

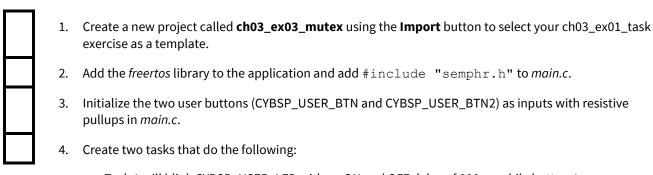

- a. Task 1 will blink CYBSP\_USER\_LED with an ON and OFF delay of <u>200ms</u> while <u>button 1</u> (CYBSP\_USER\_BTN) is being pressed.
- b. Task 2 will blink the same LED (CYBSP\_USER\_LED) with an ON and OFF delay of <u>100ms</u> while <u>button 2</u> (CYBSP\_USER\_BTN2) is being pressed.
- c. Make sure you yield control in the task when the button is not being pressed.

As an example, Task 1 should look like this:

```
void led1Task(void *arg)
{
   while(1)
   {
      while(!cyhal_gpio_read( CYBSP_USER_BTN )) // Loop while button is pressed
      {
            cyhal_gpio_toggle( CYBSP_USER_LED );
            vTaskDelay(200);
      }
      vTaskDelay(1); // Yield control when button is not pressed
   }
}
```

- 5. In the main application setup, the two tasks and get them running.
- 6. Program your project to the board.
- 7. Press button 1 and button 2 separately to observe the blink rates. Then press both buttons simultaneously. Do you see issues with the blinking?
- 8. Add a mutex to the project so that when you press button 1 it will ignore button 2 and vice versa. That is, the LED blink rate will follow the first button that was pressed.

#### **Questions to Answer**

1. What happens if you forget to unlock the mutex in one of the tasks? Why?



# 3.4.4 Exercise 4: (Advanced) Use a Queue

Use a queue to send a message to indicate the number of times to blink an LED.

	1.	Create a new project called <b>ch03_ex04_queue</b> using the <b>Import</b> button to select your ch03_ex02_semaphore exercise as a template.
	2.	Add the <i>freertos</i> library to the application.
	3.	Remove the semaphore from the project and instead create a queue.
		<pre>Hint Don't forget #include "queue.h"</pre>
	4.	Add a static variable to the ISR that increments each time the button is pressed.
	5.	Push the value onto the queue in the ISR to give the LED task access to it.
		<b>Hint</b> Remember that there is a special function to use from inside the ISR.
	6.	In the LED task, pop the value from the queue to determine how many times to blink the LED
	7.	Program your project to the board. Press the button a few times to see how the number of blinks is increased with each press.
<b>3.4.5</b> Make ar	n I Fl	Exercise 5: (Advanced) Use an RTOS Timer  D blink using a timer.
Make al		5 billik danig d tillici.
	1.	Create a new project called <b>ch03_ex05_timer</b> using the <b>Import</b> button to select your ch03_ex01_task exercise as a template.
	2.	Add the <i>freertos</i> library to the application.
	3.	Update the LED task function so that it is just a simple function to toggle the LED with no while (1) loop and no $vTaskDelay$ .
		<b>Hint</b> If the function has task in its name, change it to be consistent with its use.
	4.	Remove the task creation function call and instead create and start an RTOS timer that will call the LED function every 250ms.
		<pre>Hint Don't forget #include "timers.h"</pre>
	5.	Program your project to the board.
Questic	ons t	to Answer
	1.	What happens if you don't remove the while (1) loop from the function that blinks the LED? Why?