

Chapter 5: AnyCloud Wi-Fi Networking

Time 1 ¾ Hours

At the end of this chapter you will understand the fundamentals of operating as a Wi-Fi Station (STA) and connecting to a Wi-Fi Access Point (AP). You will have an introduction to the TCP/IP Networking stack, and you will have a basic understanding of the first three layers of the Open Systems Interconnection (OSI) reference model for a network stack (i.e. physical, datalink and network layers). You will also have a basic understanding of the Wi-Fi datalink layer which handles connections and encryption. Finally, you will understand some of the basics of IP networking (addresses, netmasks).

Most importantly, you will be able to use AnyCloud to connect your IoT device to a Wi-Fi Network.

5.1	TCP/IP NETWORKING STACK	2
5.2	(PHYSICAL/DATALINK) WI-FI BASICS	
5.2.1	SSID (THE NAME OF THE WIRELESS NETWORK)	
5.2.2	BAND (EITHER 2.4GHZ OR 5GHZ)	
5.2.3		
5.2.4	ENCRYPTION (OPEN, WEP, WPA, WPA2)	∠
5.2.5	MEDIA ACCESS CONTROL (MAC) ADDRESS	5
5.2.6	ARP	5
5.3	IP NETWORKING	(
5.4	WI-FI CONNECTION MANAGER (WCM)	
5.5	CY_RSLT_T	9
5.6	DOCUMENTATION	
5.7	ONBOARDING	10
5.8	MULTICAST DNS	10
5.8.1	Overview	10
5.8.2	Message Structure	11
5.8.3	SERVICE DISCOVERY	12
5.8.4	SERVICE ADVERTISING	14
5.8.5	USING MDNS IN ANYCLOUD	15
5.9	EXERCISE(S)	17
5.9.1	EXERCISE 1: CONNECT TO WPA2 WIFI NETWORK	17
5.9.2	EXERCISE 2: CONNECT TO AN OPEN NETWORK	19
5.9.3	EXERCISE 3: PRINT NETWORK INFORMATION	19
5.9.4	EXERCISE 4: (ADVANCED) MULTIPLE NETWORK CONNECTIVITY	20
5.10	RECOMMENDED READING	2.1





5.1 TCP/IP Networking Stack


TCP/IP stands for Transmission Control Protocol/Internet Protocol. Almost all complicated systems manage the overall complexity by dividing the system into layers. The "Network Stack" or more accurately, the "TCP/IP Network Stack" is exactly that: a hierarchical system for reliably communicating over multiple networking mediums (Wi-Fi, Ethernet, etc.). Each layer isolates the user of that layer from the complexity of the layer below it, and simplifies the communication for the layer above it. You might hear about the OSI Network Model which is another, similar way to describe networking layers; however, it is easier to envision IP networks using the TCP/IP model.

Each layer takes the input of the layer above it and then embeds that information into one or more of the Protocol Data Units (PDUs) of that layer. A PDU is the atomic unit of data for a given layer: e.g. the Datalink Layer takes an IP packet and divides it up into 1 or more Wi-Fi Data Link Layer Frames. The physical layer takes Datalink Layer Frames and divides them up into bits.

<u>Layer</u>	<u>Protocol</u>	<u>Protocol Data Unit</u>	Comment
Layer 5 Application	DNS, DHCP, MQTT, HTTP, etc.	Data	The layers below the application provide the mechanism to trade useful data. The application layer is the actual protocol to do something useful in the device
			e.g. HTTP (get or put data), DNS (find an IP address from a name), MQTT (publish or subscribe), etc.
Layer 4 Transport	TCP	(TCP) <u>Segments</u>	Reliable, ordered, error checked stream of bytes – think of it as a pipe between computers or as a phone call.
	<u>UDP</u>	(UDP) <u>Datagram</u>	An unreliable connectionless datagram flow— think of it like dropping an envelope in the mail to the post office, you don't know it is received until the other side confirms and delivery order is not guaranteed.
Layer 3 Network	<u>IP</u>	<u>Packets</u>	An IP network can send and receive IP packets with source and destination IP addresses to anywhere on the Internet. The IP layer deals with addressing and routing of packets.
Layer 2 <u>Data-Link</u>	802.11 MAC	<u>Frame</u>	A frame is the atomic unit of transmission in the network. Each frame is no more than one Maximum Transmission Unit (MTU) of data which is specific to each data-link layer. All the data from the layers above are broken into frames by the data link layer. Converts bits into unencrypted frames. This layer only communicates on the Local Area Network. A frame contains the MAC address for the source and destination which are mapped to/from the IP addresses.
Layer 1 Physical	802.11(<u>a</u> , <u>b</u> , <u>g</u> , <u>n</u> , <u>ac</u>)	Bits	Sends and receives streams of bits over the Wi-Fi Radio; handles carrier access and arbitration for the network medium.



In graphical form:

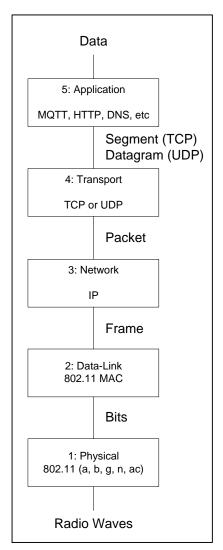





5.2 (Physical/Datalink) Wi-Fi Basics

There are two ends of a Wi-Fi network: The Station (i.e. the IoT device) and the Access Point (i.e. the wireless router). In order for a Station to connect to a Wi-Fi Access Point, it must know the following information: **SSID, Encryption Scheme**, and **Password** (if required). The Wi-Fi chip will take care of selecting the proper band and channel. To send the data all Wi-Fi Datalink Frames are labeled with the source and destination **MAC Addresses**.

5.2.1 SSID (the name of the wireless network)

SSID (https://en.wikipedia.org/wiki/Service_set (802.11 network) stands for Service Set Identifier. The SSID is the network name and is composed of 1-32 bytes (a.k.a. octets - which is the same as an 8-bit byte - but for some reason which is lost in the mists of history, networking guys always call them octets). The name does not have to be human readable (e.g. ASCII) but because it is unencoded bytes, it is effectively case sensitive (be careful).

5.2.2 Band (either 2.4GHz or 5GHz)

Wi-Fi radios encode 1's and 0's with one of a number of different modulation schemes depending on the type of Wi-Fi network (a,b,g,n,ac,ax) and operating mode. The types of encoding are transparent to your IoT application since the chip, radio, and firmware will virtualize this for you. The data is then transmitted into the 2.4GHz or 5GHz band (which band is important). Note that 5 GHz band has higher throughput and less latency but less range while the opposite is true for 2.4 GHz band.

5.2.3 Channel number

The available channels (https://en.wikipedia.org/wiki/List of WLAN_channels) are band (2.4 GHz vs 5 GHz) and geographically (location) specific. Additionally, the FCC regulates which channels and bands may be used for different operating regions of the world. At the Wi-Fi layer, this is configured via a country-code setting which maps to a set of available channels for that region. 2.4 GHz is pretty simple, there are channels 1-14 with 1-11 available all over the world. 5 GHz is region specific and regulatory bodies (e.g. the FCC) will mandate which channels you may use depending on the region.

However, from the station point of view (and therefore for this class) none of this matters since when you try to join an SSID the AnyCloud SDK will scan all the channels looking for the correct SSID.

5.2.4 Encryption (Open, WEP, WPA, WPA2)

In order to provide security for Wi-Fi networks it is common to use data link layer encryption (https://en.wikipedia.org/wiki/Wireless_security). The types of network encryption are Open (i.e. no security), Wireless_security). The types of network encryption are Open (i.e. no security), WEP)) which is not completely secure (but may be OK for some type of limited legacy applications), WI-FI Protected Access (WPA) and WPA2 which has largely displaced WPA (you must support WPA2 to use the Wi-Fi logo on your product). From here on we will just call it WPA but we generally mean WPA2. There are two versions of WPA: one called "Personal" or "Pre Shared Key" (PSK) and one called "Enterprise".

WEP and WPA PSK both use a password—called a key—to encrypt the data. The WEP encryption scheme is not recommended as it is very easy to compromise (e.g. using tools like Wireshark and



AirSnort). The PSK key scheme of WPA is very secure as it uses <u>AES</u> (Advanced Encryption Standard). However, sharing keys is a painful, unsecure process because it means that everyone has the same key. To solve the key distribution problem, most enterprise networking solutions use WPA Enterprise which requires use of a RADIUS server to handle authentication of each station individually.

Enterprise security is an oncoming crisis for the IoT market and is a differentiating feature of AnyCloud – when you use AnyCloud, this is all taken care of for you – auto-magically!

5.2.5 Media Access Control (MAC) Address

The Wi-Fi MAC address (https://en.wikipedia.org/wiki/MAC address) is a 48-bit unique number comprised of an OUI (Organizationally Unique ID) and a station ID. The first three bytes of the MAC address are the OUI field which is assigned by IEEE to be unique per manufacturer (e.g. Infineon). For the datalink layer to send a frame it must address the frame with a source and destination MAC address. Other devices on the network will only pass frames into the higher levels of the stack that are addressed to them. Remember that the Datalink Layer does not know anything about the higher layers (e.g. IP). Finally, the most significant bit of the most significant byte (e.g. bit 47) specifies a multicast (Group) address and the special address of all 1's (e.g. ff:ff:ff:ff:ff) is a broadcast address (send to everyone).

The datalink layer needs to be able to figure out the MAC address of a given IP address in order to send data to that IP address out on the Wi-Fi network. To figure out this mapping there is a protocol called Address Resolution Protocol (ARP).

5.2.6 ARP


Inside of every device there is an ARP (https://en.wikipedia.org/wiki/Address Resolution Protocol) table that has a map of MAC address to IP address. To discover the MAC address of an IP address, an "ARP request" is broadcast to the network. All devices attached to a network listen for ARP requests. If you hear an ARP request with your IP address in it, you respond with your MAC address. From that point forward both sides add that information to their ARP table (and in fact if you hear others ARPing you can update your table as well). The brilliant part of this scheme is that if you ARP for an IP address that is not on your local network, the router will respond with its MAC address (the subject of the next section).







5.3 IP Networking

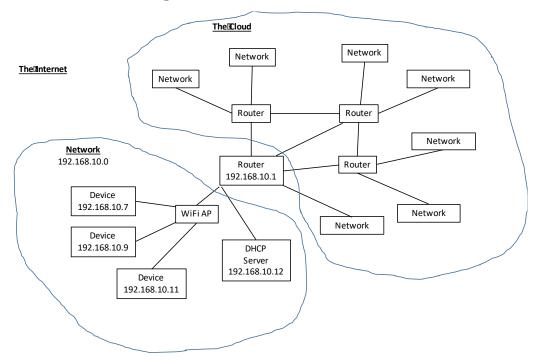

The Internet is a mesh of interconnected **IP networks**. **The Cloud** is all of the Internet that is accessible by your network but may also mean servers that are attached to a network somewhere on the Internet.

All **devices** on the Internet have a legal <u>IP address</u> and belong to an (IP) **Network** that is defined by a **Netmask**. **Routers** are devices that connect IP networks by taking IP packets from one network and forwarding them along to the correct next network. This is a complicated task and is outside of the scope of this class, but it is the reason that Cisco is valued at over \$150B. For the purposes of this class you should just think that once you have connected to the network that your packets are magically transported to the other end.

An IP Address uniquely identifies an individual device with a 32-bit number that is generally expressed as four hex-bytes separated by periods. E.g. 192.168.15.7. IP addresses are divided into two parts: the network address (which is the first x number of bits) and the client address which are the last 32-x bits. The netmask defines the split of network/client. E.g. the netmask for 192.168.15.* is 255.255.255.0

An <u>IP Network</u> (sometimes called an IP Subnetwork) is the collection of devices that all share the same network address e.g. all of the devices on 192.168.15.* (netmask 255.255.255.0) are all part of the same IP Network.

Most commonly, IP addresses for IoT type devices are assigned dynamically by a Dynamic Host Control Protocol (DHCP) server. To dynamically assign a DHCP address you first send a Layer-2 broadcast datagram requesting an IP address (DHREQUEST). When a DHCP server hears the request, it responds with the required information. DHCP is integrated into AnyCloud, it handles this exchange of information for you automatically when enabled.

5.4 Wi-Fi Connection Manager (WCM)

The Wi-Fi Connection Manager is a set of API's that are useful for establishing and monitoring Wi-Fi connections on Infineon Platforms. The WCM holds all of the relevant data for connecting to Wi-Fi inside a struct of type cy wcm connect params t, which in turn holds several other structs.

```
4839 /*
484
    * Structure used to pass the Wi-Fi connection parameter information to \ref cy_wcm_connect_ap.
485 *
486 */
487⊖ typedef struct
488 {
      489
490
      cy_wcm_mac_t
                         *static_ip_settings; /**< Static IP settings of the device (optional). */
491
     cy_wcm_ip_setting_t
                        band;
     cy_wcm_wifi_band_t
                                          /**< Radio band to be connected (optional). */
493 |} cy_wcm_connect_params_t;
```

These connection parameters are built during the make process and written into the flash along with your application, but they can be modified (and written) on the fly by your application.

Before you can connect to Wi-Fi you need to populate some of the parameters with the appropriate data. To preconfigure the Wi-Fi section of connection parameters you will typically create the following #defines in a file called wifi_config.h.

```
41 #ifndef WIFI_CONFIG_H_
42 #define WIFI_CONFIG_H_
44 #include "cy_wcm.h"
45
47 * Macros
                 48 **
49 /* SSID of the Wi-Fi Access Point to which the MQTT client connects. */
50 #define WIFI_SSID
                                      "MY WIFI SSID"
51
52 /* Passkey of the above mentioned Wi-Fi SSID. */
53 #define WIFI PASSWORD
                                      "MY WIFI PASSWORD"
54
55⊖ /* Security type of the Wi-Fi access point. See 'cy_wcm_security_t' structure
56 * in "cy_wcm.h" for more details.
57 */
57
58 #define WIFI_SECURITY
                                     CY_WCM_SECURITY_WPA2_AES_PSK
60 /* Maximum Wi-Fi re-connection limit. */
61 #define MAX_WIFI_CONN_RETRIES
                                      (10u)
62
63 /* Wi-Fi re-connection time interval in milliseconds. */
64 #define WIFI_CONN_RETRY_INTERVAL_MS
                                      (2000)
65
66 #endif /* WIFI CONFIG H */
```

Once you have created the wifi_config.h file you can populate the relevant parts of the cy wcm connect params t struct with the following code:

```
/* Configure the connection parameters for the Wi-Fi interface. */
memset(&connect_param, 0, sizeof(cy_wcm_connect_params_t));
memcpy(connect_param.ap_credentials.SSID, WIFI_SSID, sizeof(WIFI_SSID));
memcpy(connect_param.ap_credentials.password, WIFI_PASSWORD, sizeof(WIFI_PASSWORD));
connect_param.ap_credentials.security = WIFI_SECURITY;
```





The device can operate in three modes, Client mode (STA), Software Enabled Access Point mode (softAP), and concurrent Client/Access Point mode, although currently only client mode is supported. Modes can be changed by editing the interface member (which is of type cy wcm interface t) of acy wcm config t struct.

```
458⊖ typedef struct
459 {
460
        cy_wcm_interface_t interface; /**< Interface type. */</pre>
461 } cy_wcm_config_t;
```

```
267⊖ typedef enum
268 {
  269
270
271
272 } cy_wcm_interface_t;
```

A pointer to the cy wcm config t struct is passed to the function cy wcm init, which initializes the Wi-Fi Connection Manager.

Once you have initialized the Wi-Fi Connection Manager and populated a cy wcm connect params t struct, you can connect to Wi-Fi by calling the cy wcm connect ap function, which takes a pointer to the cy wcm connect params t struct, and a pointer to a variable of type cy wcm ip address t, to hold the IP address of your device once the connection has been made.

To find the definition (or possible definitions) of the #defines you can highlight, right click, and select Open declaration. For example, if you open the declaration of CY WCM SECURITY WPA2 AES PSK, it will take you to:

```
* Enumeration of Wi-Fi Security Modes
                     typedef enum
220
                                    CY_MCM_SECURITY_MPA_SARE

CY_MCM_SECURITY_MPB_SHARED = ( MEP_ENABLED, 
CY_MCM_SECURITY_MPB_SHARED = ( MEP_ENABLED ), 
CY_MCM_SECURITY_MPB_TKIP_PSK = ( MEP_ENABLED ), 
CY_MCM_SECURITY_MPA_TKIP_PSK = ( MEP_SECURITY | TKIP_ENABLED ), 
CY_MCM_SECURITY_MPA_MIXED_PSK = ( MEP_SECURITY | AES_ENABLED ), 
CY_MCM_SECURITY_MPA_MIXED_PSK = ( MEP_SECURITY | AES_ENABLED ), 
CY_MCM_SECURITY_MPA_MIXED_PSK = ( MEP_SECURITY | AES_ENABLED ), 
CY_MCM_SECURITY_MPA_SECURITY_MPA_SECURITY | AES_ENABLED | TKIP_ENABLED ), 
CY_MCM_SECURITY_MPA_SET_PSK = ( MEP_SECURITY | AES_ENABLED | TKIP_ENABLED ), 
CY_MCM_SECURITY_MPA_SAE = ( MEP_SECURITY | AES_ENABLED | TRIP_ENABLED ), 
CY_MCM_SECURITY_MPA_SAE = ( MEP_SECURITY | AES_ENABLED | TRIP_ENABLED ), 
CY_MCM_SECURITY_MPA_SAE = ( MEP_SECURITY | AES_ENABLED | TRIP_ENABLED ), 
CY_MCM_SECURITY_MPA_SAE = ( MEP_SECURITY | AES_ENABLED ), 
CY_MCM_SECURITY_MPA_SAE = ( MEP_SECURITY | MES_ENABLED ), 
CY_MC
                                       CY WCM SECURITY OPEN
                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         /**< Open security.
                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         /**< MEP PSK security with open authentication.
/**< MEP PSK security with shared authentication.
/**< WAP PSK security with TKIP.
/**< WAP A PSK security with AES.
                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   /**< WPA PSK security with AES & TKIP.
/**< WPA PSK security with AES & TKIP.
/**< WPA2 PSK security with AES.
/**< WPA2 PSK security with TKIP.
/**< WPA2 PSK security with AES and TKIP.
/**< WPA2 FBT PSK security with AES and TKIP.
/**< WPA3 security with AES.
/**< WPA3 WPA2 PSK security with AES.
                                    CY_NCM_SECURITY_IBSS_OPEN = ( IBSS_ENABLED ),
CY_NCM_SECURITY_WPS_SECURE = ( WPS_ENABLED | AES_ENABLED),
                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      /**< Open security on IBSS ad-hoc network.
/**< WPS with AES security.
                                     CY WCM SECURITY UNKNOWN
                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      /**< Returned by \ensuremath{\mbox{\sc result_callback_t}} if
                                        CY_WCM_SECURITY_FORCE_32_BIT = 0x7fffffff
                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      /**< Exists only to force whd_security_t type to 32 bit
```

You can see from the figure above that AnyCloud supports just about any type of Wi-Fi security you can think of.




5.5 CY_RSLT_T

Throughout ModusToolbox, a value from many of the functions is returned telling you what happened. The return value is of the type cy_rslt_t which is a giant enumeration. Some values that are returned include $CY_RSLT_SUCCESS$, $CY_RSLT_PENDING$ and CY_RSLT_ERROR . The cy_rslt_t type is a structured bitfield which encodes information about result type, the originating module, and a code for the specific error (or warning etc). In order to extract these individual fields from a cy_rslt_t value, the utility macros $CY_RSLT_GET_TYPE$, $CY_RSLT_GET_MODULE$, and $CY_RSLT_GET_CODE$ are provided in the file $cy_result.h$. To see all of the potential WCM cy_rslt_t types, you can look in the Wi-Fi Connection Manager Library documentation under **API Reference > Macros > WCM results/error codes**.



5.6 Documentation

The relevant documentation for the networking management functions are in the Wi-Fi Connection Manager Library documentation under **API Reference > Functions**.

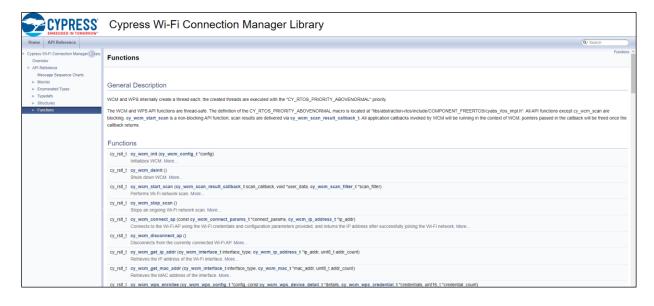





5.7 Onboarding

Onboarding is the process used to get an IoT device connected to the network. That is, it needs to know the Wi-Fi SSID to connect to, the password to use, the encryption keys to use, etc. There are several possible strategies for solving this problem including:

- Include the Cirrent ZipKey agent in your device
 - The agent uses a ZipKey hotspot (created by internet service providers such as Xfinity) to connect to the Cirrent Cloud and then automatically configures your IoT device to use your Wi-Fi network. See www.cirrent.com for additional details.
 - The Cirrent cloud also provides IoT network intelligence which allows you to monitor, diagnose, and improve performance of your solutions in the field.
- Start a Wi-Fi Access Point with a web server on the IoT device, then connecting to the IoT device from a computer or a cellphone. A web browser on the computer or cellphone is used to configure the IoT device which then restarts in client mode using the stored configuration.
- Connect to the IoT device using Bluetooth and then use a phone-based App to configure the device's Wi-Fi settings.
- Connect the IoT device to a computer using a USB or Serial connection and then configuring the device's Wi-Fi settings with a computer-based application.
- Preprogram the device with the required information.

AnyCloud supports all these methods. In this class, we will mainly use the pre-programmed method in the interest of simplicity and time. Some examples in later chapters use a Wi-Fi Access Point with a web server on the IoT device. The other methods are demonstrated in the sample applications that come with ModusToolbox.

5.8 Multicast DNS

5.8.1 Overview

The Dynamic Name Service (DNS) is how a device finds the IP address for a given network name (such as a web server). Traditionally, a device needs to be configured with a DNS server's address to be provided so that a device knows who to ask to look up IP addresses.

Multicast DNS, or mDNS, is a zero-configuration networking service for resolving hostnames to IP addresses within a local network. mDNS was designed to work as a stand-alone protocol and can provide local hostname to IP address resolution even in the absence of a standard DNS server. mDNS can also work alongside a DNS server without any issues. mDNS works by sending IP Multicast messages. Multicast is a method of sending IP messages to a group of interested receivers via a single transmission. As a result, when an mDNS client wishes to send a message to other mDNS clients, it only has to send one message, but that message will be delivered to every other mDNS client on the same network. mDNS also supports Unicast messaging, but only in specific circumstances.



By default mDNS exclusively resolves hostnames with the ".local" first level domain. (i.e. myComputer.local) As of July 2020, ".local" domains are not available for registration on the internet and are only used by local networks. When an mDNS client needs to resolve a hostname, it multicasts a query message that asks the host with the queried name to identify itself. The host that was just queried then multicasts a response message containing its IP address. Every mDNS device on the same network will receive both the query and the response messages and will update its mDNS caches accordingly.

5.8.2 Message Structure

mDNS messages are sent using User Datagram Protocol (UDP) from the UDP port 5353 to the IPv4 address 224.0.0.152 or the IPv6 address FF02::FB. mDNS messages are based on the unicast DNS packet format and only differ slightly from that standard. Both queries and responses are in the same format but contain different information. An mDNS message contains five fields:

Header
Question
Answer
Authority
Additional

The header section details the information contained in the message and consists of the following fields:

Field	Description	Bit Length
ID	Query Identifier	16
QR	Query/Response Bit - Boolean flag indicating whether the message is a query (0) or reply (1)	1
OPCODE	Query Type - Only standard queries are supported over multicast, so this must always be 0	4
AA	Authoritative Answer Bit - Boolean flag indicating whether the message is a response from an authoritative nameserver. Queries must always have this bit set to 0	1
TC	Truncated Bit - In query messages if the TC bit is set it means that additional Known-Answer records may be following shortly. In response messages, the TC bit must be 0	1
RD	Recursion Desired Bit – This should always be 0	1
RA	Recursion Available Bit - This should always be 0	1
Z	Zero Bit - This should always be 0	1
AD	Authentic Data Bit - This should always be 0	1
CD	Checking Disabled Bit - This should always be 0	1
RCODE	Response Code - This should always be 0	1
QDCOUNT	Integer specifying the number of entries in the question section	16
ANCOUNT	Integer specifying the number of resource records in the answer section	16
NSCOUNT	Integer specifying the number of name server resource records in the authority records section	16
ARCOUNT	Integer specifying the number of resource records in the additional records section	16





The Question section contains all the information pertaining to any query any client may have. The question section consists of the following fields:


Field	Description	Bit Length
QNAME	Hostname of the device being queried	Variable
QTYPE	The type of query – This can be any of the defined DNS Record Types	16
UNICAST-RESPONSE	Boolean flag indicating whether a unicast response is desired	1
QCLASS	Class Code	15

The answer, authority, and additional sections all share the same format: a variable number of resource records, where the number of records is specified in the corresponding count field in the header. Each resource record has the following format:

Field	Description	Bit Length
RRNAME	Name of the node to which the record pertains	Variable
RRTYPE	The type of resource record	16
CACHE-FLUSH	Boolean flag indicating whether cached records should be purged or appended to	1
RRCLASS	Resource record class code	15
TTL	Time To Live - Number of seconds that that the resource record should be cached	32
RDLENGTH	Integer length (in bytes) of the RDATA field	16
RDATA	Resource Data; internal layout varies by RRTYPE	Variable

5.8.3 Service Discovery

mDNS is also commonly used for service advertising and discovery. DNS-SD (DNS Service Discovery) is another protocol that specifies how resource records are named and structured to facilitate the discovery of services supported by devices on your local network i.e. printing, file transfer, web pages, or other network services. DNS-SD queries can be sent via multicast, so that every device on the local network will receive the service discovery query. Any devices with services that were queried for can then send a response. The following are examples of a mDNS Service Discovery query and response as captured via Wireshark.

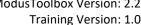



First is an mDNS query asking any devices on the network that support IPP (Internet Printing Protocol) to respond with their hostname.

```
■ Wireshark · Packet 24 · Wi-Fi

                                  Frame 24: 75 bytes on wire (600 bits), 75 bytes captured (600 bits) on interface \Device\NPF_{2DEIEC3A-2718-48AB-A656-D899ECD09706}, id 0 Ethernet II, Src: Tp-LinkT_d4:73:7c (50:3e:aa:d4:73:7c), Dst: IPv4mcast_fb (01:00:5e:00:00:fb)
                               Internet Protocol Version 4, Src: 192.168.86.69, Dst: 224.0.0.251
User Datagram Protocol, Src Port: 5353, Dst Port: 5353
Multicast Domain Name System (query)
                                    Transaction ID: 0x00000

Flags: 0x0000 Standard query
                                                                               | 18gs: 0x00000 Standard query | 0...... | Response: Message is a query | 0.000 0..... | 0.000 0.... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 0... | 0.000 
                                                            \dots \dots \dots \dots = Non-authenticated data: Unacceptable Questions: 1
                                                            Answer RRs: 0
                                                          Authority RRs: 0
Additional RRs: 0
                                  Voucrist
Voucris
                                                                                                              Type: PTR (domain name PoinTeR) (12)
.000 0000 0000 0001 = Class: IN (0x0001)
1..... = "QU" question: True
```

Next is a response from a printer on my network to the previous query.

```
Frame 34: 1408 bytes on wire (11264 bits), 1408 bytes captured (11264 bits) on interface \Device\NPF_{2DE1EC3A-2718-48AB-A656-D899ECD09706}, id 0
 Ethernet II, Src: HewlettP_c5:5c:64 (48:ba:4e:c5:5c:64), Dst: IPv4mcast_fb (01:00:5e:00:00:fb)
Internet Protocol Version 4, Src: 192.168.86.34, Dst: 224.0.0.251
User Datagram Protocol, Src Port: 5353, Dst Port: 5353
Multicast Domain Name System (response)
Transaction ID: 0x0000
 ......0. ... = Z; reserved (0)
.....0. ... = Answer authenticated: Answer/authority portion was not authenticated by the server
            .... .... 0 .... = Non-authenticated data: Unacceptable
             .... .... 0000 = Reply code: No error (0)
      Ouestions: 0
      Authority RRs: 0
      Additional RRs: 9

✓ Answers

       > _ipp._tcp.local: type PTR, class IN, HP ENVY 5660 series [C55C64]._ipp._tcp.local
> _ipps._tcp.local: type PTR, class IN, HP ENVY 5660 series [C55C64]._ipps._tcp.local

▼ Additional records

       > HP ENVY 5660 series [C55C64]._ipp._tcp.local: type TXT, class IN, cache flush
      > HP ENVY 5660 series [C55C64]_ipp._tcp.local: type TXT, class IN, cache flush

HP ENVY 5660 series [C55C64]_ipps._tcp.local: type TXT, class IN, cache flush

> HP48BA4EC55C64.local: type A, class IN, cache flush, addr 192.168.86.34

> HP48BA4EC55C64.local: type AAAA, class IN, cache flush, addr 1680::4aba:4eff:fec5:5c64

> HP ENVY 5660 series [C55C64]_ipp._tcp.local: type SRV, class IN, cache flush, priority 0, weight 0, port 631, target HP48BA4EC55C64.local

> HP ENVY 5660 series [C55C64]_ipps._tcp.local: type SRV, class IN, cache flush, priority 0, weight 0, port 443, target HP48BA4EC55C64.local

> HP ENVY 5660 series [C55C64]_ipp._tcp.local: type NSEC, class IN, cache flush, next domain name HP ENVY 5660 series [C55C64]_ipp._tcp.local

> HP ENVY 5660 series [C55C64]_ipps._tcp.local: type NSEC, class IN, cache flush, next domain name HP ENVY 5660 series [C55C64]_ipps._tcp.local
         HP48BA4EC55C64.local: type NSEC, class IN, cache flush, next domain name HP48BA4EC55C64.local
```





5.8.4 **Service Advertising**

Whenever a device starts up, wakes from sleep, or has any reason to believe that its network connectivity has changed in some way it must do two things. First it must "probe" for any devices on the local network that may have conflicting resource records with itself. The device sends mDNS queries for all of its resource records, then waits to make sure nothing responds. Once the device has confirmed there are no conflicts between its resource records and the records of other devices on the network it can then "announce" its records to the network. An announcement consists of a mDNS message whose answer section contains all of the resource records the device is claiming. The following are examples of a device probing and announcing as captured via Wireshark.

First is the probing message sent by a printer on my network during its startup.

```
✓ Wireshark · Packet 329 · Wi-Fi


      Frame 329: 643 bytes on wire (5144 bits), 643 bytes captured (5144 bits) on interface \Device\NPF_{2DE1EC3A-2718-48AB-A656-D899ECD09706}, id 0
     Ethernet II, Src: HewlettP_c5:5c:64 (48:ba:4e:c5:5c:64), Dst: IPv4mcast_fb (01:00:5e:00:00:fb)
      Internet Protocol Version 4, Src: 192.168.86.34, Dst: 224.0.0.251
     User Datagram Protocol, Src Port: 5353, Dst Port: 5353
    Multicast Domain Name System (query)
Transaction ID: 0x0000

▼ Flags: 0x0000 Standard query

               0... .... = Response: Message is a query
               .000 0..... = Opcode: Standard query (0)
.....0. = Truncated: Message is not truncated
               .....0 .... = Recursion desired: Don't do query recursively .....0. ... = Z: reserved (0)
                 .... .... 0 .... = Non-authenticated data: Unacceptable
          Questions: 10
           Answer RRs: 0
          Authority RRs: 10
Additional RRs: 0
      ✓ Queries
            Queries
> HP48BA4EC55C64.local: type ANY, class IN, "QU" question
> HP48BA4EC55C64.local: type ANY, class IN, "QU" question
               HP ENVY 5660 series [C55C64]._printer._tcp.local: type ANY, class IN, "QU" question
           > HP ENNY 5660 series [C55C64].printer._tcp.local: type ANY, class IN, "QU" question
> HP ENNY 5660 series [C55C64]._pdl-datastream_tcp.local: type ANY, class IN, "QU" question
> HP ENNY 5660 series [C55C64]._ipp_tcp.local: type ANY, class IN, "QU" question
> HP ENNY 5660 series [C55C64]._scanner._tcp.local: type ANY, class IN, "QU" question
> HP ENNY 5660 series [C55C64]._scanner._tcp.local: type ANY, class IN, "QU" question
> HP ENNY 5660 series [C55C64]._uscan._tcp.local: type ANY, class IN, "QU" question
> HP ENNY 5660 series [C55C64]._uscan._tcp.local: type ANY, class IN, "QU" question
> HP ENNY 5660 series [C55C64]._ipps._tcp.local: type ANY, class IN, "QU" question

▼ Authoritative nameservers

               HP48BA4EC55C64.local: type A, class IN, addr 192.168.86.34
              HP48BA4EC55C64.local: type AAAA, class IN, addr fe80::4aba:4eff:fec5:5c64
           > HP ENNY 5660 series [C55C64]_printer_tcp.local: type SRV, class IN, priority 0, weight 0, port 0, target HP48BA4EC55C64.local
> HP ENNY 5660 series [C55C64]_printer_tcp.local: type SRV, class IN, priority 0, weight 0, port 9100, target HP48BA4EC55C64.local
> HP ENNY 5660 series [C55C64]_printer_tcp.local: type SRV, class IN, priority 0, weight 0, port 631, target HP48BA4EC55C64.local
> HP ENNY 5660 series [C55C64]_htp__tcp.local: type SRV, class IN, priority 0, weight 0, port 80, target HP48BA4EC55C64.local
            > HP ENVY 5660 series [C55C64]._scanner._tcp.local: type SRV, class IN, priority 0, weight 0, port 8080, target HP48BA4EC55C64.local 
> HP ENVY 5660 series [C55C64]._http-alt._tcp.local: type SRV, class IN, priority 0, weight 0, port 8080, target HP48BA4EC55C64.local
               HP ENVY 5660 series [C55C64]._uscan._tcp.local: type SRV, class IN, priority 0, weight 0, port 8080, target HP48BA4EC55C64.local
               HP ENVY 5660 series [C55C64]._ipps._tcp.local: type SRV, class IN, priority 0, weight 0, port 443, target HP48BA4EC55C64.local
```

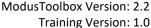



Second is the announcement message sent by the same printer on my network during its startup.

```
■ Wireshark · Packet 403 · Wi-Fi

          Frame 403: 1491 bytes on wire (11928 bits), 1491 bytes captured (11928 bits) on interface \Device\NPF_{2DE1EC3A-2718-48AB-A656-D899ECD09706}, id 0
         Ethernet II, Src: HewlettP_c5:5c:64 (48:ba:4e:c5:5c:64), Dst: IPv4mcast_fb (01:00:5e:00:00:fb)
Internet Protocol Version 4, Src: 192.168.86.34, Dst: 224.0.0.251
         User Datagram Protocol, Src Port: 5353, Dst Port: 5353
            Multicast Domain Name System (response)
                  Transaction ID: 0x0000
         ......0.... = Z: reserved (0)
......0.... = Answer authenticated: Answer/authority portion was not authenticated by the server
                        Questions: 0
                Answer RRs: 16
Authority RRs: 0
                 Additional RRs: 0
                 34.86.168.192.in-addr.arpa: type PTR, class IN, cache flush, HP48BA4EC55C64.local

4.6.C.5.S.C.E.F.F.E.4.A.B.A.4.0.0.0.0.0.0.0.0.0.0.0.0.8.E.F.ip6.arpa: type PTR, class IN, cache flush, HP48BA4EC55C64.local

4.6.C.5.S.C.E.F.F.E.4.A.B.A.4.0.0.0.0.0.0.0.0.0.0.0.0.0.8.E.F.ip6.arpa: type PTR, class IN, cache flush

5. services._dns-sd._udp.local: type PTR, class IN, pdl-datastream._tcp.local

6. pdl-datastream._tcp.local: type PTR, class IN, pdl-datastream._tcp.local

7. pdl-datastream._tcp.local: type PTR, class IN, HP ENVY 5660 series [C55C64]..pdl-datastream._tcp.local

8. pdl-datastream._tcp.local: type PTR, class IN, HP ENVY 5660 series [C55C64].ipp._tcp.local

9. services._dns-sd._udp.local: type PTR, class IN, HP ENVY 5660 series [C55C64].ipp._tcp.local

9. universal._sub._ipp._tcp.local: type PTR, class IN, HP ENVY 5660 series [C55C64].ipp._tcp.local

9. universal._sub._ipp._tcp.local: type PTR, class IN, HP ENVY 5660 series [C55C64].ipp._tcp.local

9. ipp._tcp.local: type PTR, class IN, HP ENVY 5660 series [C55C64].ipp._tcp.local

10. pp._tcp.local: type PTR, class IN, HP ENVY 5660 series [C55C64].ipp._tcp.local

11. pp._tcp.local: type PTR, class IN, HP ENVY 5660 series [C55C64].http._tcp.local

12. printer._sub._ttp._tcp.local: type PTR, class IN, HP ENVY 5660 series [C55C64].http._tcp.local

13. printer._sub._ttp._tcp.local: type PTR, class IN, HP ENVY 5660 series [C55C64].http._tcp.local

14. http._tcp.local: type PTR, class IN, HP ENVY 5660 series [C55C64].http._tcp.local

15. http._tcp.local: type PTR, class IN, BENVY 5660 series [C55C64].http._tcp.local

15. pervices._dns-sd._udp.local: type PTR, class IN, scanner._tcp.local

15. pervices._dns-sd._udp.local: type PTR, class IN, scanner._tcp.local
                   > 34.86.168.192.in-addr.arpa: type PTR, class IN, cache flush, HP48BA4EC55C64.local
                          _services._dns-sd._udp.local: type PTR, class IN, _scanner._tcp.local
```

5.8.5 Using mDNS in AnyCloud

Responding to mDNS Queries

The LWIP Library includes an "mDNS Responder" that will automatically respond to mDNS queries sent to your device. To make use of this feature you must do the following:

1. Set the following #defines in *lwipopts.h*:

```
#define LWIP MDNS RESPONDER 1
#define LWIP NUM NETIF CLIENT DATA 1
```

2. In the application's *Makefile*, add the following path to the SOURCES variable:

```
$(SEARCH lwip)/src/apps/mdns/mdns.c
```

3. In the application code, #include the following header files:

```
#include "mdns.h"
#include "cy lwip.h"
```

4. To initialize and start the mDNS responder, add the following code to your application:

```
err t error;
mdns_resp_init();
/* IP of my device */
struct netif *myNetif;
myNetif = cy_lwip_get_interface(CY_LWIP STA NW INTERFACE);
error = mdns_resp_add_netif(myNetif, "myDevice", 100);
if (error == \overline{ERR} \ OK) {
       printf("mDNS responder initialized successfully.\n");
```





Make sure to add the code above after your code to initialize the secure sockets library and connect to Wi-Fi.

Replace "myDevice" with whatever you want the hostname of your device to be. The third argument of mdns_resp_add_netif is the time to live value that will be attached to all messages sent by the responder.


5. Add services to your device by calling the mdns resp add service function.

Resolving mDNS Hostnames

The secure sockets function cy socket gethostbyname is capable of resolving hostnames that end in ".local" via mDNS. To enable this, all you need to do is add the following #define to lwipopts.h:

#define LWIP_DNS_SUPPORT_MDNS_QUERIES 1

Documentation for the LWIP library can be found here.

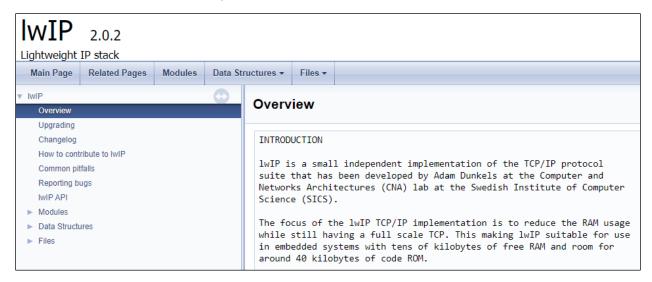

The documentation related to the mDNS responder can be found under Modules > Applications > MDNS.



5.9 Exercise(s)

5.9.1 Exercise 1: Connect to WPA2 WiFi Network

Create an App that attaches to a WPA2 AES PSK network, have LED1 turn on for success and blink on failure.

1.	Create a new application named ch05_ex01 template.	_attach based on the Empty_PSoC6_App
2.	Open the Library manager and add the wifi-	connection-manager and retarget-io libraries.
		elies on other WiFi Middleware libraries, but as matically (IwIP, mbedTLS, secure-sockets, wificon-rtos).
3.	Copy the files from the <i>mtb_shared/wifi-mw</i> top-level project directory. The files are:	v-core/latest-vX.X/configs directory to your
	freeRTOSConfig.h lwipopts.h mbedtls_user_config.h	
4.	Open the copied <i>mbedtls_user_config.h</i> file commented out:	and verify that the following line is not
	#define MBEDTLS_NO_PLATFORM_ENTRO	PY
5.	Add the following lines to your project Make	efile:
	COMPONENTS=FREERTOS LWIP MBEDTLS DEFINES+=MBEDTLS_USER_CONFIG_FILE DEFINES+=CYBSP_WIFI_CAPABLE	='"mbedtls_user_config.h"'
	Hint There are blank COMPONENTS and DEF	INES lines in the file that you can modify.
	Copy the following code into a new file calle	d wifi_config.h:
	<pre>#ifndef WIFI_CONFIG_H_ #define WIFI_CONFIG_H_</pre>	
	#include "cy_wcm.h"	
	/* SSID of the Wi-Fi Access Point to whic #define WIFI_SSID	h the MQTT client connects. */ "MY_WIFI_SSID"
	<pre>/* Passkey of the above mentioned Wi-Fi S #define WIFI_PASSWORD</pre>	SID. */ "MY_WIFI_PASSWORD"
	/* Security type of the Wi-Fi access poin * in "cy_wcm.h" for more details. */	
	#define WIFI_SECURITY	CY_WCM_SECURITY_WPA2_AES_PSK
	<pre>/* Maximum Wi-Fi re-connection limit. */ #define MAX_WIFI_CONN_RETRIES</pre>	(10u)
	<pre>/* Wi-Fi re-connection time interval in m #define WIFI_CONN_RETRY_INTERVAL_MS</pre>	illiseconds. */ (2000)
	#endif /* WIFT CONFIG H */	





	6.	Modify wifi_config.h for your Wi-Fi AP credentials
--	----	--

Hint The network name and password are on the back cover of the manual.

7. Change *main.c* to the following:

```
#include "cy_pdl.h"
#include "cyhal.h"
#include "cybsp.h"
#include "FreeRTOS.h'
#include "task.h"
#include "wifi_config.h"
#include "cy_retarget_io.h"
#include "cy_wcm.h"
void wifi_connect(void *arg)
     cy_rslt_t result;
     cy_wcm_connect_params_t connect_param;
     cy_wcm_ip_address_t ip_address;
     uint32_t retry_count;
     /* Configure the interface as a Wi-Fi STA (i.e. Client) and initialize the WCM. */ cy_wcm_config_t config = {.interface = CY\_WCM\_INTERFACE\_TYPE\_STA};
     cy_wcm_init(&config);
     printf("\nWi-Fi Connection Manager initialized.\n");
     /\star Configure the connection parameters for the Wi-Fi interface. \star/
    memset(&connect_param, 0, sizeof(cy_wcm_connect_params_t));
memcpy(connect_param.ap_credentials.SSID, WIFI_SSID, sizeof(WIFI_SSID));
memcpy(connect_param.ap_credentials.password, WIFI_PASSWORD, sizeof(WIFI_PASSWORD));
     connect_param.ap_credentials.security = WIFI_SECURITY;
     /* Connect to the Wi-Fi AP. */
     for (retry_count = 0; retry_count < MAX_WIFI_CONN_RETRIES; retry_count++)</pre>
          printf("Connecting to Wi-Fi AP '%s'\n", connect_param.ap_credentials.SSID);
          result = cy_wcm_connect_ap(&connect_param, &ip_address);
          if (result == CY_RSLT_SUCCESS)
               \textbf{printf}\,(\text{"Successfully connected to }\underline{\text{Wi}}\text{-}\underline{\text{Fi}}\ \text{network '%s'.}\n"\text{,}
                         connect_param.ap_credentials.SSID);
              break:
          }
     for(::) {
        //Enter code to handle LED
int main (void)
     cy_rslt_t result;
     /* Initialize the device and board peripherals */
     result = cybsp_init() ;
     if (result != CY_RSLT_SUCCESS)
          CY ASSERT(0);
     /* Initialize retarget-\underline{\text{io}} to use the debug UART port. */
     cy_retarget_io_init(CYBSP_DEBUG_UART_TX, CYBSP_DEBUG_UART_RX, CY_RETARGET_IO_BAUDRATE);
     __enable_irq();
     printf("\x1b[2J\x1b[;H\n"); /* ANSI ESC sequence to clear screen. */
     /\!\!\!\!\!\!^{\star} Create the MQTT Client task. \!\!\!\!\!^{\star}/\!\!\!\!\!
     xTaskCreate(wifi_connect, "wifi_connect_task", 1024, NULL, 5, NULL);
                                          /* Never Returns */
     vTaskStartScheduler();
```



	8.	Edit this code so that your device turns on an LED if it connects and blinks an LED continuously if it is unable to.
		Hint Use a serial terminal emulator to look at messages from the device as it boots and connects.
5.9.2	Exe	rcise 2: Connect to an Open Network
	1.	How would you modify the previous exercise to attach to a different network that is open (i.e. no security)?
		Hint There are only two changes required.
5.9.3	Exe	rcise 3: Print Network Information
	1.	Create a new project called ch05_ex03_print based on the Empty_PSoC6_App template.
	2.	Copy the following files from ch05_ex01_attach:
		FreeRTOSConfig.h lwipopts.h main.c mbedtls_user_config.h wifi_config.h Makefile
	3.	Add the wifi-connection-manager and retarget-io libraries.
	4.	Add code to the wifi_connect function to print out networking information if the connection is successful:
		 Your IP address (cy_wcm_ip_address_t) Netmask (cy_wcm_connect_params_t) Router Gateway (cy_wcm_connect_params_t) The IP address of www.infineon.com (cy_socket_gethostbyname()) MAC Address of your device (cy_wcm_get_mac_addr()) a. Hint Your IP address can be obtained from the cy_wcm_ip_address_t object that you passed into the cy_wcm_connect_ap function b. Hint Your netmask and gateway addresses can be obtained from the cy_wcm_connect_ap function
		c. Hint Be sure to #include "cy_secure_sockets.h" in order to use cy_socket_gethostbyname

Training Version: 1.0





- d. Hint The addresses (IP address, Netmask, Gateway, and Infineon.com) are returned as a structure of type <code>cy_wcm_ip_address_t</code>. One element in the structure (called <code>ip.v4</code>) is a <code>uint32_t</code> which contains the IPV4 address as 4 hex bytes. You can mask off each of these bytes individually and print them as decimal values separated by periods to get the format that is typically seen. For example, the netmask of 255.255.255.0 will be returned as <code>0xFFFFFFF00</code>.
- e. Hint Make sure the third argument you pass to <code>cy_wcm_get_mac_addr</code> is the length of the <code>cy_wcm_mac_t</code> pointer you passed in.
- f. **Hint** The MAC address is returned as a structure of type <code>cy_wcm_mac_t</code>. This structure contains an array of <code>uint8_t</code> objects. You can print each of these bytes individually separated by ":" to see the MAC address in the typical format.

5.9.4 Exercise 4: (Advanced) Multiple Network Connectivity

Create an application that can switch between two different SSIDs.

Hint A second network is available for this exercise. See the back cover or the manual or ask ar
instructor for the name and password for the second network.

1.	Create a new project called ch05_ex04_multi based on the Empty_PSoC6_App template.
2.	Copy the following files from ch05_ex03_print:
_	FreeRTOSConfig.h lwipopts.h
	main.c

main.c mbedtls_user_config.h wifi_config.h Makefile

- 3. Add the wifi-connection-manager and retarget-io libraries.
- 4. Create a function that can print the SSID/Passphrase and Security that your device is currently connected to.
- 5. Create a function that takes input as (char* ssid, char* passphrase, cy_wcm_security_t security) and then connects to the network specified by that information:
 - a. Take the network down (cy_wcm_disconnect_ap).
 - b. Write the new parameters to an object of type <code>cy_wcm_connect_params_t</code> to update the ssid and passphrase:
 - c. **Hint** Since the values are strings:
 - Use memcpy to copy the values into the buffer.
 - Make sure you update the string length in the structure (you can use strlen to find the length of the string).
 - d. Restart the network (cy wcm connect ap).



6	5 .	Use the console as input. When the user presses '0' or '1' switch between the two networks.
		If the user presses 'p', call the print function that you wrote in step 2.
_		Hint Review the UART receive exercise from chapter 2.
7	7.	Program the project to the kit. Test the functionality to change the selected network and print out the network details for each network.

5.10 Recommended Reading

- [1] TCP/IP Illustrated Volume 1: The Protocols, W.R. Stevens, ISBN 0201633469 "aka" the Networking Bible, if there is one book to get on TCP/IP networking, this is it!
- [2] UNIX Network Programming W.R. Stevens, ISBN 01394 if you want to learn BSD Socket programming, there is no other reference best book and the foundation of all networking software today.
- [3] RFC 1122 "Requirements for Internet Hosts Communications Layers"; Internet Engineering Task Force (IETF) https://tools.ietf.org/html/rfc1122
- [4] RFC 826 "An Ethernet Address Resolution Protocol"; Internet Engineering Task Force (IETF) https://tools.ietf.org/html/rfc826
- [5] RFC 153 "Dynamic Host Configuration Protocol"; Internet Engineering Task Force (IETF) https://tools.ietf.org/html/rfc1531