

#### ModusToolbox

#### **About this document**

#### **Scope and purpose**

This user guide describes the Secure Firmware Upgrade for CYW207xx and CYW208xx devices using ModusToolbox® software.

#### **Reference documents**

This User Manual should be read in conjunction with the following documents:

- [1] WICED Firmware Upgrade Library. Document Number: 002-19289: WICED Bluetooth SDK
- [2] ota\_firmware\_upgrade, Document Number: 002-19289: WICED Bluetooth code example
- [3] hci\_firmware\_upgrade, Document Number: 002-19289: WICED Bluetooth code example

#### ModusToolbox

**Table of Contents** 






# Table of Contents

Abo	out this document	1
Tab	le of Contents	2
1	Introduction	
2	IoT Resources	
3	Preparing the Secure Firmware Image	5
4	Keys Generation	
5	Project Modification	
6	Source Code to Support SFU	8
6.1	Changes to the GATT Database for OTA Firmware Upgrades	
6.2	Firmware Upgrade Library Access for OTA Firmware Upgrade	10
6.3	Firmware Upgrade Library Access for HCI Firmware Upgrade	
7	Building the SFU Image	15
8	Sign the SOTAFU Image	16
9	Upgrade Firmware	17
Revi	evision history	

#### ModusToolbox





#### 1 Introduction

The Secure Firmware Upgrade (SFU) SDK feature uses elliptic curve cryptography to implement a secure method to upgrade the firmware of devices that are based on Cypress WICED CYW207xx and CYW208xx Bluetooth chips. The Elliptic Curve Digital Signature Algorithm (ECDSA) is used to sign the image which is verified by the firmware after the download and before the new image is allowed to be executed on the chip.

The device memory is split into active and passive partitions. The new firmware image is downloaded to the passive partition and then verified. If the verification is successful, then the partitions are swapped and the new image is executed during the next device startup. This two-step process ensures that interrupted or unverified downloads do not cause interruption of the service.

The SFU also verifies that the image for the correct product is has been downloaded. The application image embeds four bytes of Product Version information which includes two bytes of a product ID, one byte with the major version and one byte with the minor version. The Product Version information is verified during the upgrade.

The digital signature is prepared by calculating an SHA256 hash of the firmware image file and then signed using the ECDSA algorithm with secp256r1 curve.

Verification of the new image will fail unless the following conditions are met:

• ECDSA verification must pass. This guarantees the image integrity and validates that the image was created by the authorized party which had access to the private key.

If verification fails, the new image will not be activated and the existing application will continue to run without interruption.

Details of the Firmware Upgrade protocol are discussed in the WICED Firmware Upgrade Library document [1] included in the WICED Bluetooth SDK.



**IoT Resources** 



2 **IoT Resources** 

Cypress provides a wealth of data at http://www.cypress.com/internet-things-iot to help you to select the right IoT device for your design, and quickly and effectively integrate the device into your design. Cypress provides customer access to a wide range of information, including technical documentation, schematic diagrams, product bill of materials, PCB layout information, and software updates. Customers can acquire technical documentation and software from the Cypress Support Community website (http://community.cypress.com).

# Secure Firmware Upgrade for CYW207xx and CYW208xx ModusToolbox



**Preparing the Secure Firmware Image** 

### 3 Preparing the Secure Firmware Image

The WICED Bluetooth SDK provides tools to create a signed firmware image. Some changes are also required to the application code to support the SFU feature. Detailed information is provided in the following sections. Below is a summary of the required steps to make the application SFU compatible.

- 1. Create a public and private key pair (see Section 4). Save the private key in a safe location. When an updated version of the application is developed, it should be signed with the same private key.
- 2. Modify the application project to include a file with the public key and to link with the library supporting upgrade and memory access (see Section 5).
- 3. Modify the application source code as follows (see Section 6).
  - a) Define the application Product Version information.
  - b) Add the OTA Secure Upgrade service to the GATT database if using Over-the-Air (OTA) Firmware Upgrade.
  - c) Process commands and data received from the peer during SFU process.
- 4. Build the application. See the Kit Guide for your device included with your WICED Bluetooth SDK for the description of the build process.
- 5. Sign the built image using the private key generated in step 1 (see Section 8).

Below is a summary of the steps required to prepare the next version of the application.

- 1. If security vulnerability is being fixed, increment the major version and optionally set the minor version to zero (0). Otherwise, increment the minor version.
- 2. Build the new version of the application.
- 3. Sign the application using the same private key that was used to sign the original version of the application.

Note:

The WICED Bluetooth SDK contains source code and binaries for applications to generate ECDSA keys, sign and verify the image. See the mtb\_shared/wiced\_btsdk project in the ModusToolbox IDE Project Explorer pane, under the mtb\_shared/wiced\_btsdk/tools/btsdk-utils/ecdsa256 directory.

ModusToolbox

**Keys Generation** 



### 4 Keys Generation

The WICED Bluetooth SDK includes a utility to create the private and public keys (ecdsa\_genkey.exe). The application can be used to generate a public-private key pair or to create a public key based on a previously generated private key. In the latter case pass the name of the file with the binary private key as a parameter.

When application is executed, it generates:

- ecdsa256\_key.pri.bin Contains binary representation of the private key.
- ecdsa256\_key.pub.bin Contains binary representation of the public key.
- ecdsa256\_key\_plus.pub.bin Contains binary representation of the public key concatenated with two bytes containing the number of zero bits in the key. This can be used when public key is stored in the OTP area and can be tempered with.
- ecdsa256\_pub.c Source code containing the public key that can be included in the WICED application project that will perform SFU.

#### ModusToolbox





### **5** Project Modification

Copy the *ecdsa256\_pub.c* file generated as per **Keys Generation** to the application source folder. The ModusToolbox build system will automatically build all sources found under the application folder.

Modify the application Makefile:

- Initialize the OTA FW UPGRADE and OTA SEC FW UPGRADE Makefile variables to 1.
- Include the Firmware Upgrade Library components:

```
ifeq ($(OTA_FW_UPGRADE),1)
COMPONENTS+=fw_upgrade_lib
endif
```

You can either use the Library Manager to add the Firmware Upgrade library to the application or manually perform similar changes. The Library Manager will "git clone" the library repository to mtb\_shared/wiced\_btsdk/dev-kit/libraries and then add a corresponding search path to the libs/mtb.mk file. The deps/btsdk-ota.mtb file is added to reference the btsdk-ota library repo.

Add code to the application to use the btsdk-ota library.

The **ota\_firmware\_upgrade** sample application demonstrates the use of the btsdk-ota library, and is available for download using the ModusToolbox New Application wizard or by launching the Project Creator tool directly.

The 'hci\_firmware\_upgrade' sample application provides an example of firmware upgrade via HCI UART rather than OTA.

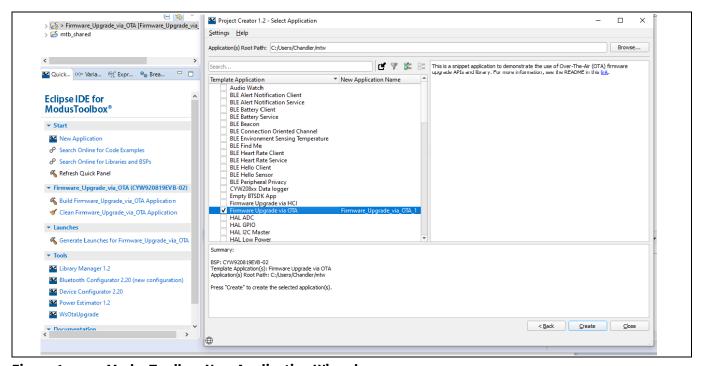


Figure 1 ModusToolbox New Application Wizard

#### ModusToolbox

**Source Code to Support SFU** 



### 6 Source Code to Support SFU

Each application that supports SFU should have the code to process SFU commands and image data (see **Firmware Upgrade Library Access**). In addition, any application supporting OTA firmware upgrade should provide a GATT database section that includes descriptions of the SFU service and characteristics (see Changes to the GATT Database).

#### 6.1 Changes to the GATT Database for OTA Firmware Upgrades

To include SFU the application GATT database shall publish a special Cypress vendor-specific service. Definitions for the handles and UUIDs are included in the *wiced\_bt\_ota\_firmware\_upgrade.h* header file.

Typically, the application will need to include the following snippet in the GATT database. This can be done manually, or the Bluetooth Configurator tool may be used to generate and/or modify the GATT database. In either case, the resultant GATT database must be registered with the stack using the wiced bt gatt db init API.


Do the following to add the secure OTA service using the BT Configurator:

- 1. Launch the BT Configurator tool from the Quick Launch panel in the Eclipse IDE.
- On the GATT Settings tab, right-click the GATT > Server entry, and then select Add Service > Custom OTA Secure Firmware Upgrade.

This creates the Custom OTA Secure Firmware Upgrade service.

3. (Optional) Select the **Control Point, Client Characteristic Configuration,** and **Data** entries and configure **Write Authentication Required** for each entry to optionally utilize Bluetooth security for the service.

Note that some applications may require or disallow Bluetooth security, depending on the application needs. This setting maps to the LEGATTDB\_PERM\_AUTH\_WRITABLE flag used in the following manual snippet example.

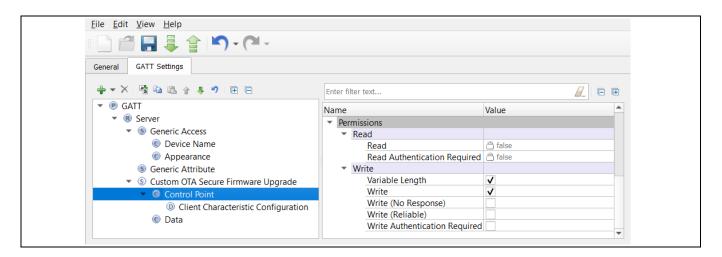

If modifying the GATT database manually, the handles used by the service should be in sorted order. Place the OTA service after the last application service in the GATT database structure. If an application already has an existing GATT database that is registered with the wiced\_bt\_gatt\_db\_init API, the following snippet can be added as-is in the application code.

# Secure Firmware Upgrade for CYW207xx and CYW208xx ModusToolbox



#### **Source Code to Support SFU**

```
(HANDLE OTA FW UPGRADE SERVICE, UUID OTA SEC FW UPGRADE SERVICE),
    // Handles 0xff01: characteristic Secure Firmware Upgrade Control Point, handle
0xff02
    // characteristic value.
    CHARACTERISTIC UUID128 WRITABLE
    (
        HANDLE_OTA_FW_UPGRADE_CHARACTERISTIC_CONTROL_POINT,
        HANDLE OTA FW UPGRADE CONTROL POINT,
        UUID OTA FW UPGRADE CHARACTERISTIC CONTROL POINT,
        LEGATIDB CHAR PROP WRITE | LEGATIDB CHAR PROP NOTIFY |
LEGATTDB CHAR PROP INDICATE,
        LEGATIDB PERM VARIABLE LENGTH | LEGATIDB PERM WRITE REQ |
LEGATTDB PERM AUTH WRITABLE
    ),
    // Handle 0xff03: Declare client characteristic configuration descriptor
    CHAR DESCRIPTOR UUID16 WRITABLE
    (
        HANDLE OTA FW UPGRADE CLIENT CONFIGURATION DESCRIPTOR,
        UUID DESCRIPTOR CLIENT CHARACTERISTIC CONFIGURATION,
        LEGATTDB PERM READABLE | LEGATTDB PERM WRITE REQ |
LEGATTDB PERM AUTH WRITABLE
    ),
    // Handle 0xff04: characteristic OTA firmware upgrade data, handle 0xff05
characteristic
    // value. This characteristic is used to send portions of the FW image
    CHARACTERISTIC UUID128 WRITABLE
    (
        HANDLE OTA FW UPGRADE CHARACTERISTIC DATA,
        HANDLE OTA FW UPGRADE DATA,
        UUID OTA FW UPGRADE CHARACTERISTIC DATA,
        LEGATTDB CHAR PROP WRITE,
        LEGATTOB PERM VARIABLE LENGTH | LEGATTOB PERM WRITE REQ |
LEGATTDB PERM AUTH WRITABLE
    ),
```



**Source Code to Support SFU** 



#### 6.2 Firmware Upgrade Library Access for OTA Firmware Upgrade

The WICED Firmware Upgrade Library (available from the Library Manager; see **Section 5**) implements the functionality that is common for all applications that require firmware upgrade.

The application needs to initialize the library, send notifications to the library when a connection to a peer device is established or dropped, and pass to the library packets received from the connected peer and destined for the OTA Firmware Upgrade service. This includes read, write, and indication confirmation messages received from the peer device.

Note:

In the samples below the code assumes that OTA Firmware Upgrade service is the last service in the GATT database.

#### 6.2.1 Library Initialization

The WICED Firmware Upgrade Library should be initialized any time during the application execution after the stack has been initialized and before the first GATT Write request is passed to the library.

The following snippet shows library initialization that is performed during device startup.

```
void app_init(void)
{
    /* Initialize WICED app */
    wiced_bt_app_init();

    // arguments are key, optional status callback, and optional data send callback
    if (!wiced_ota_fw_upgrade_init(&ecdsa256_public_key, NULL, NULL))
    {
        WICED_BT_TRACE("OTA upgrade Init failure!!!\n");
    }

    // Continue with the application initialization
```

#### 6.2.2 Connection Handler

The application passes connection up/down events to the library whenever it receives notification from the stack.

The following snippet of the code shows how the application should process connection events.

```
wiced_bt_gatt_status_t app_connection_status_event(wiced_bt_gatt_connection_status_t
*p_status)
{
    // Pass connection up/down event to the OTA FW upgrade library
    wiced_ota_fw_upgrade_connection_status_event(p_status);
    // Continue with the event processing
```

#### ModusToolbox

**Source Code to Support SFU** 



#### 6.2.3 Read Handler

The following snippet of the code shows how the application should process GATT Read requests from the peer.

```
wiced_bt_gatt_status_t app_read_handler(uint16_t conn_id, wiced_bt_gatt_read_t *
p_read)
{
    // if read request is for the OTA FW upgrade service, pass it to the library to
process
    if (p_read->handle > HANDLE_OTA_FW_UPGRADE_SERVICE)
    {
        return wiced_ota_fw_upgrade_read_handler(conn_id, p_read);
    }

    // Continue with the event processing
```

#### 6.2.4 Write Handler

The following snippet of the code shows how the application should process GATT Write requests from the peer.

```
wiced_bt_gatt_status_t app_write_handler(uint16_t conn_id, wiced_bt_gatt_write_t *
p_write_data)
{
    // if write request is for the OTA FW upgrade service, pass it to the library to
process
    if (p_write_data->handle > HANDLE_OTA_FW_UPGRADE_SERVICE)
    {
        return wiced_ota_fw_upgrade_write_handler(conn_id, p_write_data);
    }

    // Continue with the event processing
```

#### 6.2.5 Indication Confirmation Handler

The following snippet of the code shows how the application should process GATT Indication Confirmations received from the peer.

```
wiced_bt_gatt_status_t app_conf_handler(uint16_t conn_id, uint16_t handle)
{
    // if indication confirmation is for the OTA FW upgrade service, pass it to the library
    // to process
    if (handle > HANDLE_OTA_FW_UPGRADE_SERVICE)
    {
        return wiced_ota_fw_upgrade_indication_cfm_handler (conn_id, handle);
    }
}
```

#### ModusToolbox



**Source Code to Support SFU** 

```
// Continue with the event processing
```

#### Firmware Upgrade Library Access for HCI Firmware Upgrade 6.3

The WICED Firmware Upgrade Library should be initialized any time during the application execution after the stack has been initialized and before the first HCI command is passed to the library.

The following snippet shows library initialization that is performed during device startup.

```
void app init(void)
{
    /* Initialize WICED app */
    wiced bt app init();
    // arguments are key, optional status callback, and optional data send callback
    if (!wiced hci fw upgrade init(&ecdsa256 public key, status callback, NULL))
    {
        WICED BT TRACE("HCI upgrade Init failure!!!\n");
    // Continue with the application initialization
```

#### **Command Interface** 6.3.1

HCI commands with opcode type HCI CONTROL DFU COMMAND WRITE COMMAND are relayed to the firmware upgrade library using hci fw upgrade handle command(). Commands from the host such as prepare, download, verify, and abort are handled in this way, as shown in the following code example.

```
case HCI CONTROL DFU COMMAND WRITE COMMAND:
        WICED BT TRACE ("Write command: %d %d len %d\n", *p data, *(p data+1),
length);
        if (!hci fw upgrade handle command(dfu conn id, p data, length))
            if(*p data != WICED HCI UPGRADE COMMAND ABORT)
            {
                WICED BT TRACE("hci handle command failed.\n");
                rc = HCI CONTROL STATUS FAILED;
            }
        break;
```

#### ModusToolbox

**Source Code to Support SFU** 



#### 6.3.2 **Data Transfer Interface**

HCI firmware upgrade data is transferred using packets with opcode

HCI\_CONTROL\_DFU\_COMMAND\_WRITE DATA. The packet data is be transferred to the library by calling hci\_fw\_upgrade\_handle\_data(), as in the following code example.

```
case HCI_CONTROL_DFU_COMMAND_WRITE_DATA:
   WICED BT TRACE ("Write data %B\n", p data);
    if (!hci fw upgrade handle data(dfu conn id, p data, length))
        WICED BT TRACE("hci handle data failed.\n");
        rc = HCI CONTROL STATUS FAILED;
    else
    {
        WICED BT TRACE("Send data event to HCI\n");
        wiced transport send data ( HCI CONTROL DFU EVENT DATA, NULL, 0 );
    }
   break;
```

#### 6.3.3 **Events**

When the status callback is provided the library will call it to provide library state updates, such as started, aborted, verification started, and completed. These events may be relayed to the host. Following is an example.

```
* This callback receives status updates from the firmware upgrade library.
void hci dfu status callback(uint8 t status)
    WICED BT TRACE("status callback %d\n", status);
    switch(status)
        case HCI_FW_UPGRADE_STATUS_STARTED:
            // now prepared for download
            wiced transport send data( HCI CONTROL DFU EVENT STARTED, NULL, 0 );
            break;
        case HCI_FW_UPGRADE_STATUS_ABORTED:
            // response now aborted
            wiced transport send data( HCI CONTROL DFU EVENT ABORTED, NULL, 0 );
            break;
        case HCI FW UPGRADE STATUS COMPLETED:
            // operation completed
            wiced deinit timer(&dfu timer);
            wiced transport send data( HCI CONTROL DFU EVENT VERIFIED, NULL, 0 );
```

#### ModusToolbox



### Source Code to Support SFU

```
break;
         case HCI_FW_UPGRADE_STATUS_VERIFICATION_START:
             // verification started
             wiced transport send data( HCI CONTROL DFU EVENT VERIFICATION, NULL, 0 );
             break;
        default:
             \label{thm:wiced_bt_thm} \mbox{WICED_BT\_TRACE( "hci_dfu_status_callback unknown status %d\n", status );}
             break;
    }
}
```

ModusToolbox

**Building the SFU Image** 



### 7 Building the SFU Image

When a target application is built, a separate binary file for the upgrade is created in the build directory. For example, when the **ota\_firmware\_upgrade** is successfully built for the CYW920819EVB-02 platform, the OTA\_FirmwareUpgrade\_CYW920819EVB-02.ota.bin file is created in the output folder for the application.



Sign the SOTAFU Image



### 8 Sign the SOTAFU Image

Execute the ecdsa\_sign utility, passing the name of the OTA upgrade image file name as a parameter.

The command below is used to sign the *OTA\_FirmwareUpgrade\_CYW920819EVB-02.ota.bin* file created during the build process.

Note:

The following procedure should be executed in a secure environment since a private key is used. The application uses the ecdsa256\_key.pri.bin file.

```
ecdsa_sign OTA_FirmwareUpgrade_CYW920819EVB-02.ota.bin
hash = f8314ab0600f3b5c6477df534710cd944939686440bb72c33d859e8200421f89
r = 771b80bbee9fdf06e28c1ff2a86cd15ef5ddc9bababaa43d98018531bb3af223
s = c85975f5757749fa76983e3714b694bc00096f43ab6ad3990f238c30d006bc97
Signed file OTA FirmwareUpgrade CYW920819EVB-02.ota.bin.signed
```

The signed output file can be used to perform the upgrade. During execution the application prints out the hash of the image and the signature that can be used for debugging.

ModusToolbox

**Upgrade Firmware** 



### 9 Upgrade Firmware

The wiced\_btsdk/tools/btsdk-peer-apps-ota directory contains the source code and the executables to perform the upgrade in Windows or Android environments. Under Windows pair the computer with the device running the image, and execute the WsOtaUpgrade utility passing the name of the signed firmware image file as a parameter. For example:

<path>\WsOtaUpgrade.exe OTA\_FirmwareUpgrade\_CYW920819EVB-02.ota.bin.signed

The application displays the progress of the operation and the status when the procedure is complete.

### ModusToolbox

**Revision history** 



### **Revision history**

Document Revision	Date of revision	Description of changes
**	2017-08-23	Initial release
*A	2018-10-08	Replaced "WICED Studio" with "ModusToolbox".
		Replaced "WICED Studio SDK" with "WICED SDK with PSoC 6 Support".
		Updated Sales page.
*B	2019-02-19	Updated to include CYW20819
		Replaced "WICED SDK with PSoC 6 Support" with "WICED Bluetooth SDK"
*C	2019-04-24	Removed Associated Part Family
		Updated for BT SDK release
*D	2019-10-15	Updated for ModusToolbox 2.0
*E	2021-01-15	Updated for ModusToolbox 2.2 and HCI (not over-the-air) firmware update

#### Trademarks

All referenced product or service names and trademarks are the property of their respective owners.

Edition 2021-01-15
Published by
Infineon Technologies AG
81726 München, Germany

© 2021 Infineon Technologies AG. All Rights Reserved.

Do you have a question about this document?

Go to www.cypress.com/support

Document reference 002-16561 Rev. \*E

#### **IMPORTANT NOTICE**

The information given in this document shall in no event be regarded as a guarantee of conditions or characteristics ("Beschaffenheitsgarantie").

With respect to any examples, hints or any typical values stated herein and/or any information regarding the application of the product, Infineon Technologies hereby disclaims any and all warranties and liabilities of any kind, including without limitation warranties of non-infringement of intellectual property rights of any third party.

In addition, any information given in this document is subject to customer's compliance with its obligations stated in this document and any applicable legal requirements, norms and standards concerning customer's products and any use of the product of Infineon Technologies in customer's applications.

The data contained in this document is exclusively intended for technically trained staff. It is the responsibility of customer's technical departments to evaluate the suitability of the product for the intended application and the completeness of the product information given in this document with respect to such application.

For further information on the product, technology, delivery terms and conditions and prices please contact your nearest Infineon Technologies office (www.infineon.com).

#### WARNINGS

Due to technical requirements products may contain dangerous substances. For information on the types in question please contact your nearest Infineon Technologies office.

Except as otherwise explicitly approved by Infineon Technologies in a written document signed by authorized representatives of Infineon Technologies, Infineon Technologies' products may not be used in any applications where a failure of the product or any consequences of the use thereof can reasonably be expected to result in personal injury.