A confident start to your vanity.

Your illustrated preparation guide for a ready-to-assemble bathroom cabinet. Use this alongside the final manual for your exact cabinet, top, sink and hardware.





Before you begin

Confirm the SKU, dimensions, complete parts list and manufacturer assembly sequence. RTA assembly does not include plumbing disconnection, wall mounting or sink installation.

This sample guide illustrates a generic floor-standing cabinet. It does not specify fastener types, torque, load ratings or permitted plumbing cutouts. A wall-hung vanity requires its own structural fixing design.

Have ready

Model manual, protective blanket, tape measure, level and the tools named by the manufacturer. Check panels, hardware and finish for damage before assembly.


Prepare. Align. Square.

Work on a clean, protected surface with enough room to lay out the panels. Keep the doors and finished faces protected until needed.




01 Sort your kit

Match each panel and connector to the model parts diagram. Identify the base, left and right sides, rails, back components and doors or drawers.




02 Dry-fit in the specified order

Follow the manufacturer sequence to align the base and sides. Check the finished-face direction. Do not force connectors or substitute hardware.



03 Square before securing


Check the cabinet diagonals and use the manual to confirm the correct alignment. Secure the specified connections without overtightening.

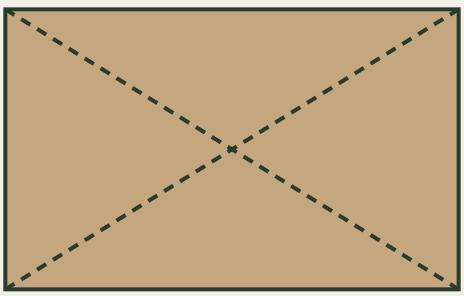

Finish the cabinet. Pause at plumbing.


04 Fit the doors and drawers

Use the supplied model instructions to fit hinges, runners and fronts. Adjust the gaps and check smooth movement. Do not assume every sample vanity uses the same hardware.

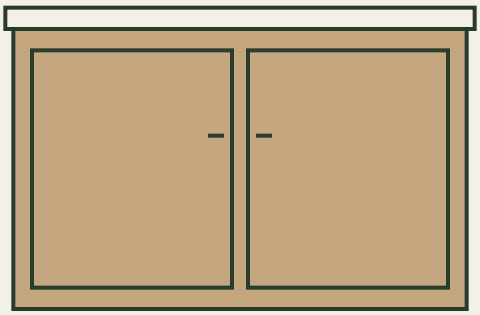


05 Protect the service space

Compare the sink bowl, P-trap, valves and pipework against the real usable cabinet interior. A diagram planning zone is not permission to cut a back, base, rail or drawer.

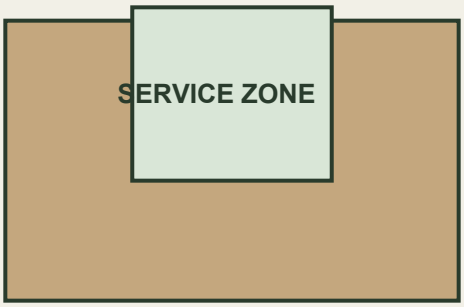

06 Hand off the installation review

Confirm the top and sink templates, fixing points and manufacturer instructions with your installer. Plumbing reconnection and any structural mounting are separate work.

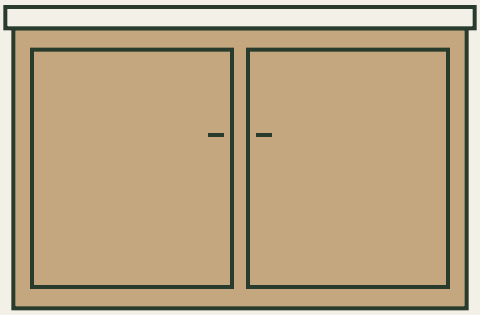

Stop if parts do not align, a panel is damaged or the plumbing conflicts with a drawer, rail or base. Contact the supplier before modifying a component.

Measure the room behind the look.

Record the actual site conditions. Use the website simulator for a preliminary cabinet arrangement, then review this worksheet with the final product drawings.

Cabinet SKU / finish

Room width and depth

Cabinet run starts from left wall

Drain center from left wall / floor

Hot and cold valve positions

Wall or floor plumbing entry

Sink model and cutout template

Basin depth below countertop

Top dimensions / overhang / faucet holes

Door swings, toilet and shower clearances

Wall construction / fixing requirements

Installer / specification review date

The simulator does not establish local code or accessibility compliance. Its 24-inch access zone and sink planning zones are illustrative allowances, not installation standards.

One final check before ordering.

☐ The complete package

Itemize cabinet, top, sink, faucet, drain, handles, hardware, delivery, tax and installation. A styled render does not show what is included in the price.

☐ The actual fit

Confirm cabinet and sink dimensions, finished height, drawer orientation, pipework and service access using model-specific drawings.

☐ The assembly instructions

Obtain the matching hardware list and RTA manual for every cabinet SKU. Use load-rated structural guidance for a floating unit.

☐ The supply plan

Confirm real inventory, a written lead time, damage/returns procedures and any promotion terms. Website launch-preview prices and stock are examples.

Planning reference

Lowe's, "How to Replace a Bathroom Vanity": an overview of removal, pipework and installation scope. Always follow the product manufacturer instructions.

https://www.lowes.com/n/how-to/install-vanity-sink

Questions about your cabinet plan?

Kabby Home | 773-247-8282 | Chicago showroom: 1200 W 37th St