

# **Software Solutions User Guide**

# Contents

|                                                              |          |
|--------------------------------------------------------------|----------|
| <b>Software Solutions User Guide.....</b>                    | <b>4</b> |
| About this edition.....                                      | 4        |
| Drivers.....                                                 | 4        |
| Introduction.....                                            | 4        |
| Setup and installation.....                                  | 5        |
| How to check the driver version under Windows and macOS..... | 5        |
| How to set up a print server.....                            | 5        |
| Troubleshooting.....                                         | 7        |
| Support elevation.....                                       | 7        |
| HP Click driver.....                                         | 8        |
| Introduction.....                                            | 8        |
| Printing process.....                                        | 9        |
| Deployment procedures.....                                   | 12       |
| HP Click printing software.....                              | 13       |
| Introduction.....                                            | 13       |
| Installation.....                                            | 13       |
| Licensing.....                                               | 13       |
| Preferences.....                                             | 14       |
| Job preparation.....                                         | 14       |
| Nesting.....                                                 | 14       |
| Printing.....                                                | 15       |
| Troubleshooting.....                                         | 15       |
| Enable SNMP.....                                             | 16       |
| HP SmartStream.....                                          | 17       |
| What is it for?.....                                         | 17       |
| Getting started.....                                         | 18       |
| Introduction.....                                            | 18       |
| Printers.....                                                | 18       |
| Set preferences.....                                         | 19       |
| Job preparation.....                                         | 20       |
| Print preview.....                                           | 22       |
| Printing.....                                                | 23       |
| Color management.....                                        | 24       |
| History.....                                                 | 25       |
| Folding.....                                                 | 25       |
| Scanning.....                                                | 27       |
| Accounting.....                                              | 28       |
| Submission driver.....                                       | 31       |
| Troubleshooting.....                                         | 31       |
| Optional modules for advanced users.....                     | 32       |
| Shortcut keys.....                                           | 33       |
| HP SmartTracker.....                                         | 33       |
| Connectivity.....                                            | 34       |
| Printers.....                                                | 34       |
| Permissions.....                                             | 34       |
| Options.....                                                 | 36       |
| Costs.....                                                   | 36       |
| Prices.....                                                  | 38       |
| About the home screen.....                                   | 38       |

|                                   |           |
|-----------------------------------|-----------|
| Marking a job as billable.....    | 39        |
| Filtering.....                    | 40        |
| Removing a filter.....            | 40        |
| Projects.....                     | 41        |
| Departments.....                  | 41        |
| Import/export CSV.....            | 41        |
| Generating reports.....           | 41        |
| Summary.....                      | 42        |
| Reports.....                      | 45        |
| Custom.....                       | 48        |
| Custom jobs/pages (raw data)..... | 50        |
| Custom logo.....                  | 51        |
| Database management.....          | 52        |
| Support tool.....                 | 52        |
| Manual update.....                | 54        |
| Logging out.....                  | 54        |
| <b>Index.....</b>                 | <b>55</b> |

# Software Solutions User Guide

These software solutions are available for use with HP printers.

## About this edition

Edition 1, April 2025

© 2023–2025 HP Development Company, L.P.

### Legal notices

This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of HP.

### Warranty

The information contained in this document is subject to change without notice.

HP makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

HP shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

## Drivers

This is the User Guide for SW Solutions Drivers.

### Introduction

The following is a summary of the compatibility matrix for the driver software.

**Table 1: Compatibility matrix**

| OS                       | Driver                     |
|--------------------------|----------------------------|
| Windows 10, 11           | PCL3 v4 for design         |
| Windows Server 2012–2022 | PDF v4 for design          |
| Windows 11               | HP Click driver            |
| macOS 13                 | Generic raster             |
| macOS 14                 | PostScript<br>(+12 m p.l.) |
| macOS 15                 |                            |

**Table 2: Recommendation Matrix**

|    |                                                          | <b>Priority</b>                       |                      |
|----|----------------------------------------------------------|---------------------------------------|----------------------|
|    |                                                          | <b>Fidelity and transparency</b>      | <b>Line accuracy</b> |
| OS | <b>Windows 10, 11</b><br><b>Windows Server 2012–2023</b> | PDF                                   | PCL3 v4              |
|    | <b>macOS</b>                                             | macOS PostScript driver               | macOS raster driver  |
|    |                                                          | <b>Graphic and color applications</b> | <b>CAD</b>           |

## Setup and installation

### How to check the driver version under Windows and macOS

This section explains how to check the driver version both under Windows and under macOS.

### How to set up a print server

The objective of a print server is to streamline and optimize printing tasks throughout the network. The print server works as an intermediary between client computers and printers, handling print jobs and ensuring efficient print management.

#### Prerequisites

- Ensure you have administrative rights on the server.
- Verify network connectivity is established.
- Ensure SNMP is enabled on the network.

#### Steps to set up a print server


1. Log in to the server with administrative credentials.
2. Open the 'Print Management' console from the Control Panel.
3. For Windows Server 2019:
  - a. Navigate to 'Tools' and select 'Print Management'.
  - b. In the 'Print Management' console, right-click on 'Print Servers' and select 'Add/Remove Servers'.
  - c. Add the local server and click 'OK'.
4. For Windows Server 2022:
  - a. Navigate to 'Tools' and select 'Print Management'.
  - b. In the 'Print Management' console, right-click on 'Print Servers' and select 'Add/Remove Servers'.
  - c. Add the local server and click 'OK'.
5. Right-click on 'Printers' under the server name and select 'Add Printer'.
6. Follow the wizard to add a new printer, selecting the appropriate drivers and settings.

#### Troubleshooting

**Note:** If you encounter issues with SNMP or bi-directionality, refer to the following topics for assistance:

- [Enable SNMP](#) on page 16
-

## Print Server Setup — Architecture

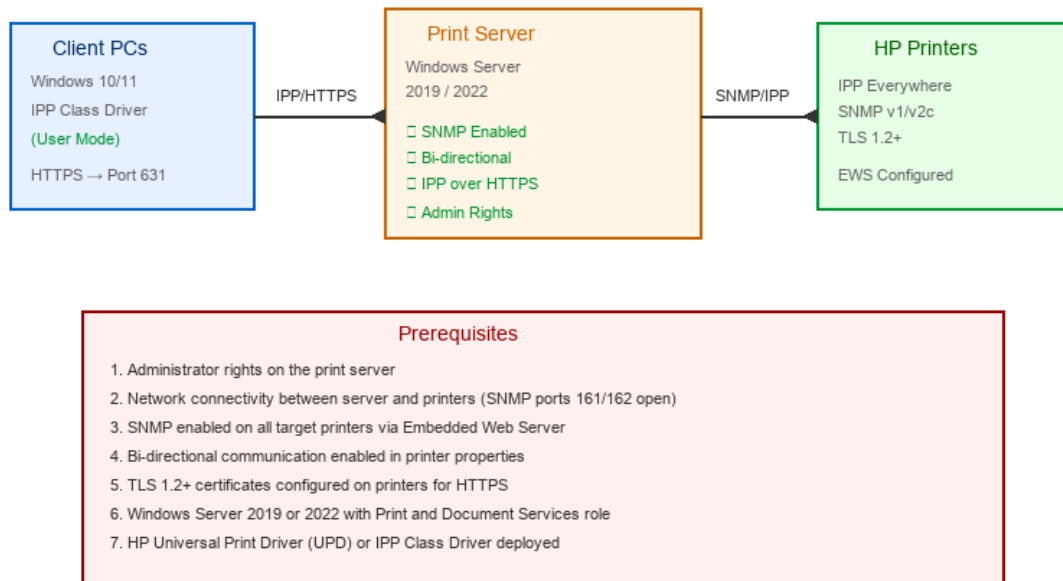

### V3 print architecture

1. Client connects to the shared printer on the server.
2. Server sends driver details to the client.
3. Client checks for an existing suitable driver.
4. If not found, client checks its local driver store for a simplified version of the driver.
5. If not found, client tries to download the simplified driver from the server.
6. If not found, client prompts user to provide the simplified driver manually.

### V4 print architecture

1. Client connects to the shared printer on the server.
2. Server sends driver details to the client.
3. Client checks whether it has the necessary HP v4 driver.
4. If not found in local store, client uses Windows Update to fetch the HP v4 driver.
5. If Windows Update is unavailable, client prompts user to provide the HP v4 driver manually.
6. Once the HP v4 driver is installed, client uses Windows Update to fetch any necessary printer extensions and PDFs.

### Transitioning from V3/V4 drivers to an IPP class driver

Migrating from legacy V3/V4 print drivers to the HP Click driver, powered by IPP class driver technology, brings significant improvements in security, simplified IT management, and a smoother printing experience. By utilizing Microsoft's Print Support Apps (PSA) framework and the Internet Printing Protocol (IPP) over HTTPS, the HP Click driver reduces many of the risks and complexities associated with traditional drivers.

### Understanding legacy V3 print drivers

Designed for early Windows versions (XP, 7).

Operate in kernel mode, meaning they have unrestricted access to the system.

Security risks: Vulnerabilities in drivers can be exploited to gain unauthorized system control.

Stability issues: Faulty drivers can cause system crashes, including Blue Screen Of Death (BSOD) errors.

### **Kernel mode and its security vulnerabilities**

Kernel mode allows drivers to execute with the highest privileges in the system, meaning:

- If a malicious or faulty driver runs in kernel mode, it can cause complete system failure.
- Attackers can exploit kernel-mode vulnerabilities to execute unauthorized code, steal data, or install persistent malware.
- Buggy print drivers running in kernel mode can crash the entire OS, affecting business operations.

To mitigate these risks, modern driver architectures move away from kernel mode and operate in user mode instead.

### **V4 print drivers: Limited improvement, persistent drawbacks**

Microsoft introduced V4 print drivers as an attempt to reduce the reliance on kernel-mode execution and improve manageability. However, V4 drivers still present drawbacks:

- Operate in user mode – Unlike V3 drivers, V4 print drivers execute in user mode, which reduces system-wide failure risks but still has limitations.
- Security limitations – Although V4 drivers execute in user mode, they still require direct access to system resources, creating potential attack vectors.

### **HP Click driver with PSA + IPP class driver**

The HP Click driver eliminates the need for traditional drivers by leveraging:

- IPP over HTTPS for secure communication between printers and Windows.
- User-mode execution in an isolated environment, preventing system-wide failures.
- Microsoft Store-based updates, ensuring compliance with security best practices.

### **Advantages of HP Click driver**

No kernel-mode execution – Reduces the risk of driver-based security threats.

Isolated execution environment – The driver runs in a sandboxed user mode, ensuring vulnerabilities are contained within the application.

Prevents system-wide crashes – Eliminates the risk of BSODs caused by faulty drivers.

Automatic security updates – Ensures the latest protections through controlled Microsoft Store updates.

Limited system exposure – Since the HP Click driver operates within an isolated environment, any exploitation attempts remain at the application level and do not compromise system-wide integrity.

Reduced attack surface – Since PSA handles driver execution, it limits system-level exposure, further strengthening security.

Supports cloud and network printing – Fully compatible with IPP over HTTPS for remote printing.

Microsoft-recommended printing solution – Ensures long-term support and compatibility.

Enhanced reliability – Since the driver operates within an isolated user-mode framework, any crashes and errors do not propagate to the rest of the system.

## **Troubleshooting**

## **Support elevation**

### How to reach HP Support

For the elevation process, the following information will be required:

- Driver version number
- Print path:
  - Application version number
  - Settings applied
- OS version number
- Troubleshooting done: bi-di, spooler reset, reinstallation
- .prn file

## HP Click driver

---

This is the User Guide for SW Solutions HP Click Driver.

### Introduction

The HP Click driver is an advanced, software-driven printer driver designed to optimize print workflows, reduce errors, and improve user experience. By integrating Printer Support App (PSA) functions, it simplifies the printing process for users.

#### Product features and benefits

##### Full integration with Windows 11

The HP Click driver seamlessly integrates with Windows 11, aligning with native system print paths to enhance accessibility and ease of use.

The HP Click driver addresses common printing issues that often lead to reprints, offering a dependable, high-quality solution for professionals who need accurate output with minimal intervention.

##### Efficiency in print flow

A streamlined, guided workflow from document selection to final print. This guided workflow includes automatic adjustments and setting retention for quick, repeatable, and high-quality output.

##### Reliability and error management

Equipped with advanced error detection and management features, the driver helps users to prevent common printing issues, ensuring that prints are accurate and meet quality expectations.

The HP Click driver is optimized for customers in small to medium enterprises, particularly in industries such as AEC (Architecture, Engineering, and Construction). The key attributes include:

- **Direct application printing:** Users can print directly from commonly used applications (Windows) without needing additional software.
- **Compatibility with natural workflow:** The driver's integration into the existing Windows print path allows users to work within their familiar digital environment, minimizing disruptions, and improving productivity.

The HP Click driver addresses common printing issues that often lead to reprints, offering a dependable, high-quality solution for professionals who need accurate output with minimal intervention.



### Comparison of HP Click driver and HP Click application

The following table outlines the distinct capabilities of the HP Click driver compared to the HP Click application, highlighting its exclusive features and functions for Windows 11 users.

**Table 3: Comparison of HP Click driver and HP Click application**

| Feature            | HP Click driver                  | HP Click application          |
|--------------------|----------------------------------|-------------------------------|
| Print preview      | Available, real-time             | Not available                 |
| Error protection   | Active error alerts and logs     | No built-in error protection  |
| PDF saving         | Simultaneous print and save      | Not available                 |
| Print progress     | Visible and updated in real-time | No detailed progress view     |
| File compatibility | Any Windows application          | PDF, JPEG, TIFF, DWF, HP-GL/2 |
| Operating systems  | Windows 11                       | Windows, macOS                |

### Supported operating system

The HP Click driver currently runs under Windows 11.

### Supported printers


The HP Click driver currently supports various HP DesignJet printers (including contractual and MFPs).

- HP DesignJet T210
- HP DesignJet T230
- HP DesignJet T250
- HP DesignJet T630
- HP DesignJet T650
- HP DesignJet T850
- HP DesignJet T858
- HP DesignJet T908
- HP DesignJet T918
- HP DesignJet T950
- HP DesignJet Studio


### Printing process

Follow the steps in the order presented.

1. **Open desired application:** Start by opening a Windows-compatible application, such as AutoCAD, Revit, Bluebeam, and so on.
2. **Access Print menu:** Open the file you wish to print, then select **Print** from the application menu.
3. **Select HP Click driver queue:** Choose the HP Click driver in the Print dialog as the designated print queue.
4. **Adjust print properties:** In the driver's UI, adjust necessary print settings for the current job.
5. **Enable print preview:** By default, the driver will show a preview. If not needed, disable to print directly.

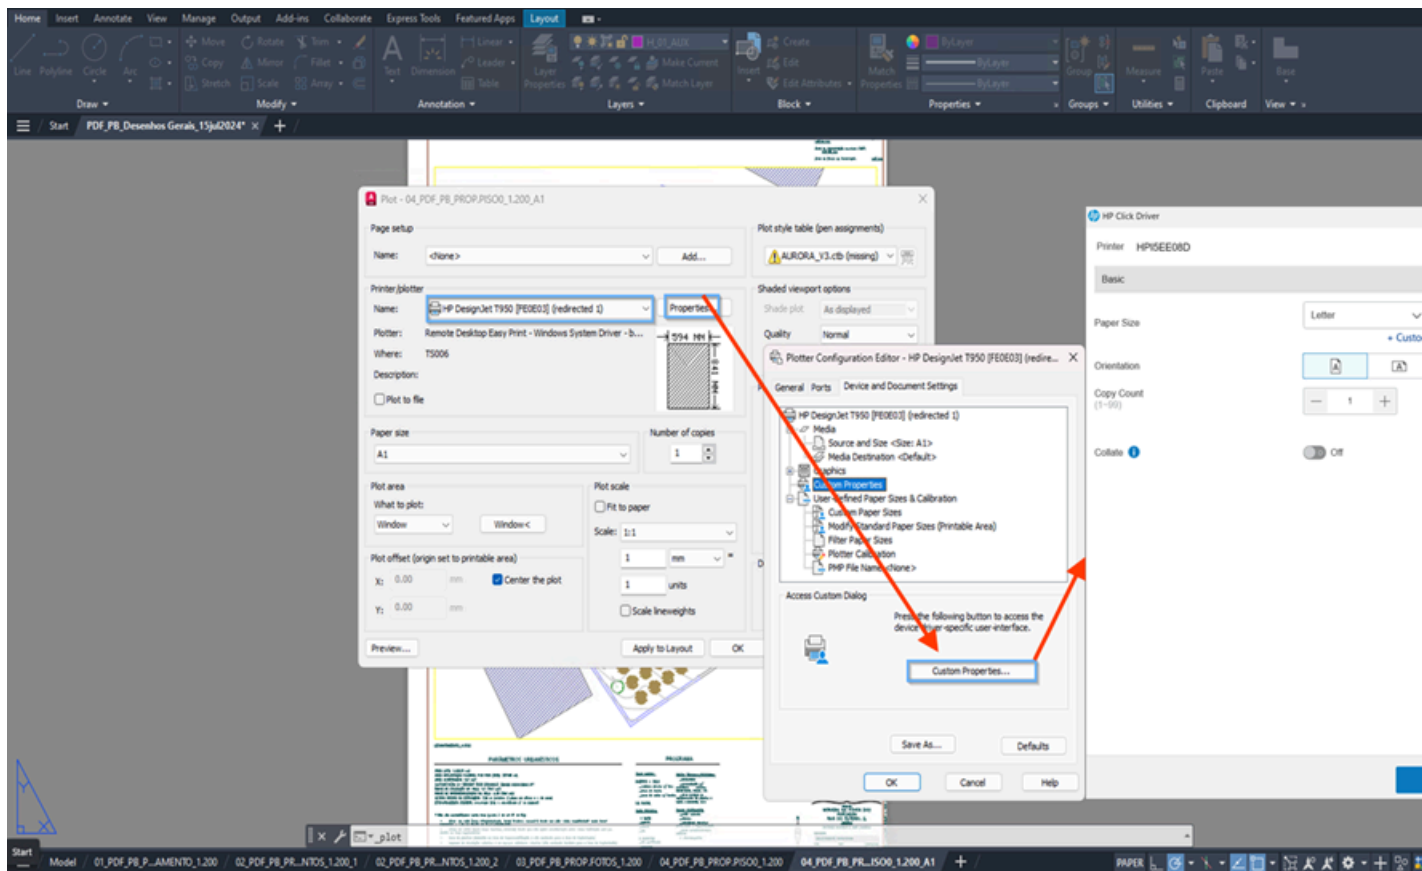



Remember that the print preview can be disabled by clicking the toggle located in the top-right corner. All print settings will then be shown.

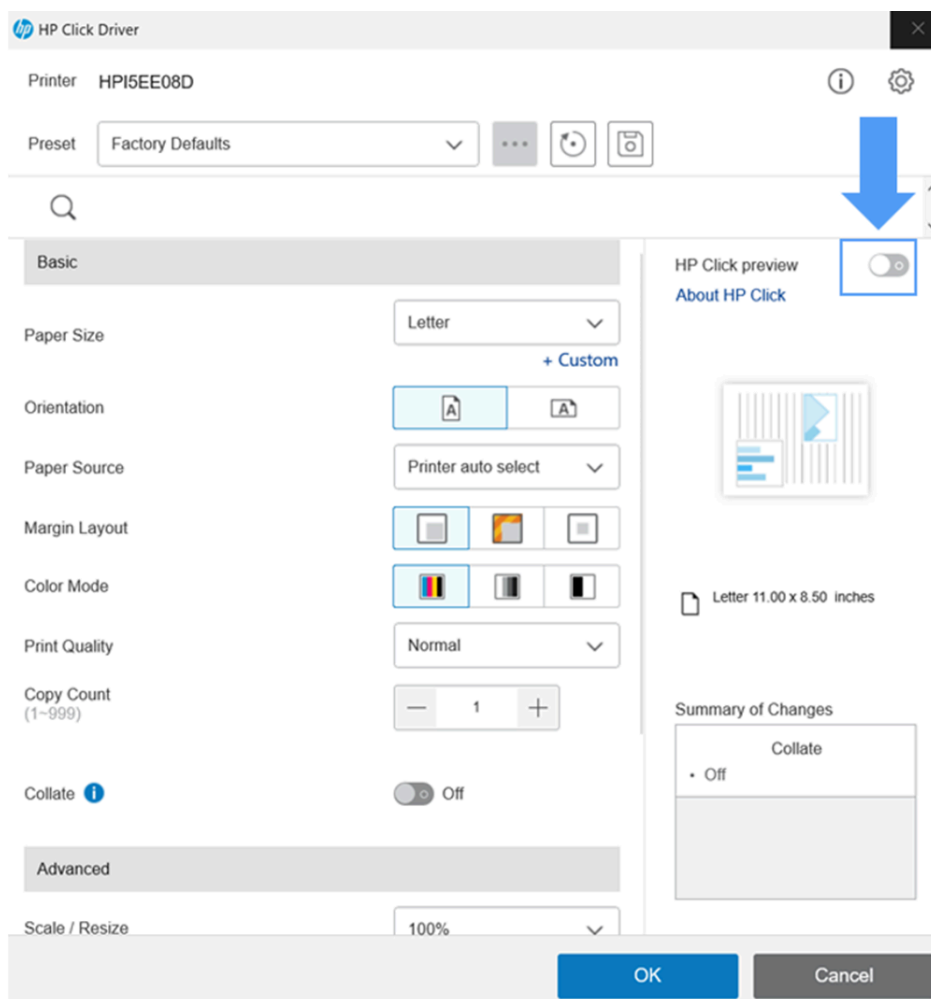

### Note:

When the print preview is disabled, users cannot adjust final settings in the preview before sending the job.

If the user keeps the print preview enabled, some print settings can be adjusted in the driver UI. However, when the user clicks **Print** in the application's Print dialog, the print preview will appear, allowing access to additional print settings and features.

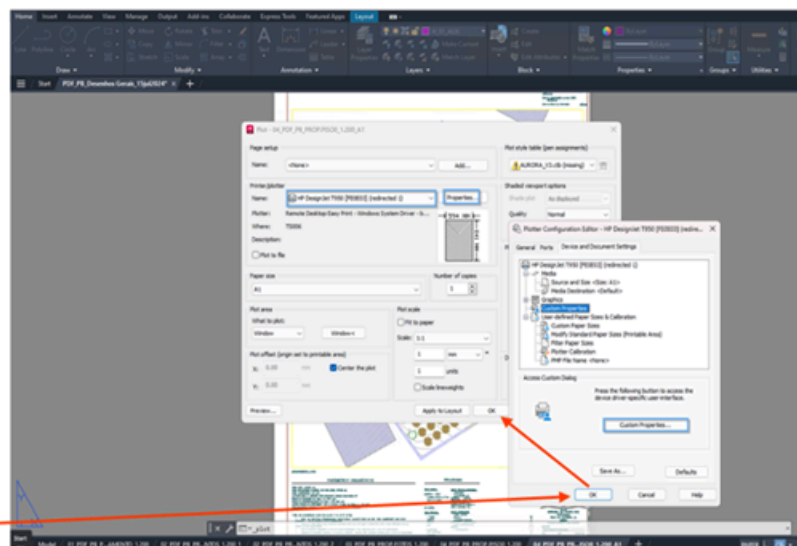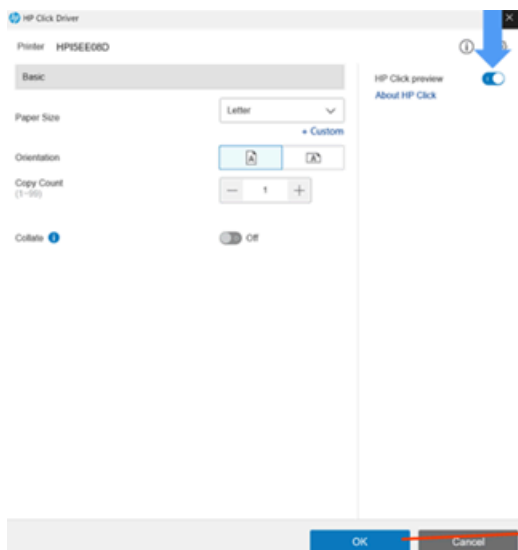

## Deployment procedures

### Using Windows Update

#### Workflow

#### 1. Server setup

- Set up an IPP (Internet Printing Protocol) printer queue on the server.

#### 2. Client setup

- Connect the client computer to the server and to the printer queue created on the server.

#### **Note:**

The HP Click driver interface may not initially open correctly because the required files are pending download from Windows Update.

#### 3. Windows Update

- Download the .inf driver file via Windows Update.

#### 4. Microsoft Store

- Download the HP Click driver **.msix** bundle from the Microsoft Store.

#### 5. Verification:

- Once all necessary software components are downloaded and installed, the HP Click driver interface should open correctly.
- You can now submit print jobs from the client to the server, which will forward them to the connected physical printer.

### Without using Windows Update

#### Workflow

- Install the HP Click driver and configure it to connect to a physical printer on the server.

#### Alternative installation methods

#### • **Option A: Manual installation on client machines**

- Manually install the driver on each client machine.
- Connect the client to the server to finalize the installation.
- This process ensures that all required files for the HP Click driver interface are available.

#### • **Option B: Using the .msix file for deployment**

- Purpose: The .msix file enables IT administrators to deploy the driver across multiple client machines without requiring individual manual installations.
- Required files: Install the HP Click driver **.inf** file and the HP Click driver **.msix** bundle.
- Server setup: Set up an IPP (Internet Printing Protocol) printer queue.

## HP Click printing software

---

This is the User Guide for SW Solutions HP Click printing software.

### Introduction

#### Who is it for?

HP Click is an easy-to-use job-submittal tool designed for people with low-volume printing needs, who want to print reliably. Ideal for a broad range of graphics and technical applications including posters, roll-up banners, info-graphic presentations, maps, and CAD documents.

### Installation

#### Requirements

This topic explains the concepts involved in this subject.

Microsoft Windows 7 or later (64-bit only)

- Intel Core i3 2.4 GHz with four virtual cores/threads, or equivalent or better processor
- 4 GB of RAM, or more
- 3.5 GB of free space on hard disk, or more, plus 100 MB for each additional printer
- Screen resolution of 1280 × 1024 pixels, or more, tuned or calibrated to sRGB for optimal performance
- Ethernet network, IPv4, 100 Mb/s or faster

Mac OS X 10.10 or later

- Intel Core i5 1.6GHz with dual core, or equivalent or better processor
- 4 GB of RAM, or more
- 3.5 GB of free space on hard disk, or more
- Screen resolution of 1280 × 1024 pixels, or more, tuned or calibrated to sRGB for optimal performance
- Ethernet network, IPv4, 100 Mb/s or faster

Ensure that your computer is connected to the same subnet as your printers. Otherwise, ensure that computer and printers are able to communicate through the 8080, 8085, 8086, 9100, 9102 TCP, and 161 UDP ports.

If you feel the need of improvement, the performance of the application can be improved by exceeding the minimum specifications above: more than 4GB of RAM (which requires a 64-bit operating system), a faster processor with more cores, a faster network, and a faster hard disk drive (ideally a solid-state drive).

#### Supported languages

HP Click can operate in English, Portuguese, Spanish, Catalan, French, Dutch, Italian, German, Polish, Russian, Chinese Simplified, Chinese Traditional, Korean, or Japanese.

#### Updates

HP Click is updated automatically to incorporate bug and security fixes, add new features or performance enhancements.

If you want to make sure you have the latest version of HP Click or want to manually download it, go to <http://www.hp.com/go/hpclick/software>.

### Licensing


For further information on how to install a USB license and to get the trial license, go to the website.

See <http://www.hp.com/go/hpclick/howtoinstall>.

## Preferences

The application preferences allow you to change the HP Click configuration, which is initially set automatically.


To access the preferences, click the  icon in the title bar, then click **Preferences** to change the general preferences, or **Printers** to change the list of printers.

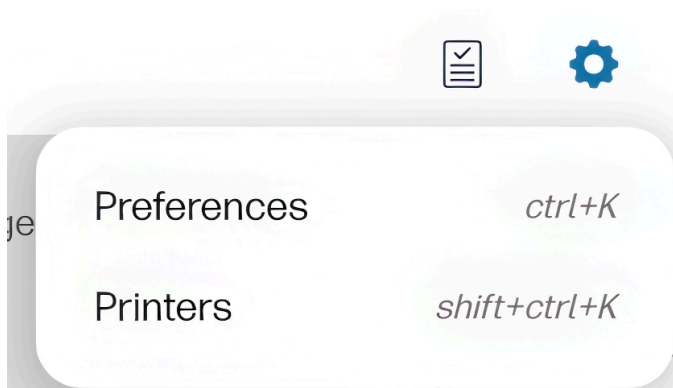

## Job preparation

### Nesting

Nesting enables you to save paper and time by printing two or more pages side by side on the paper, if the paper is wide enough.

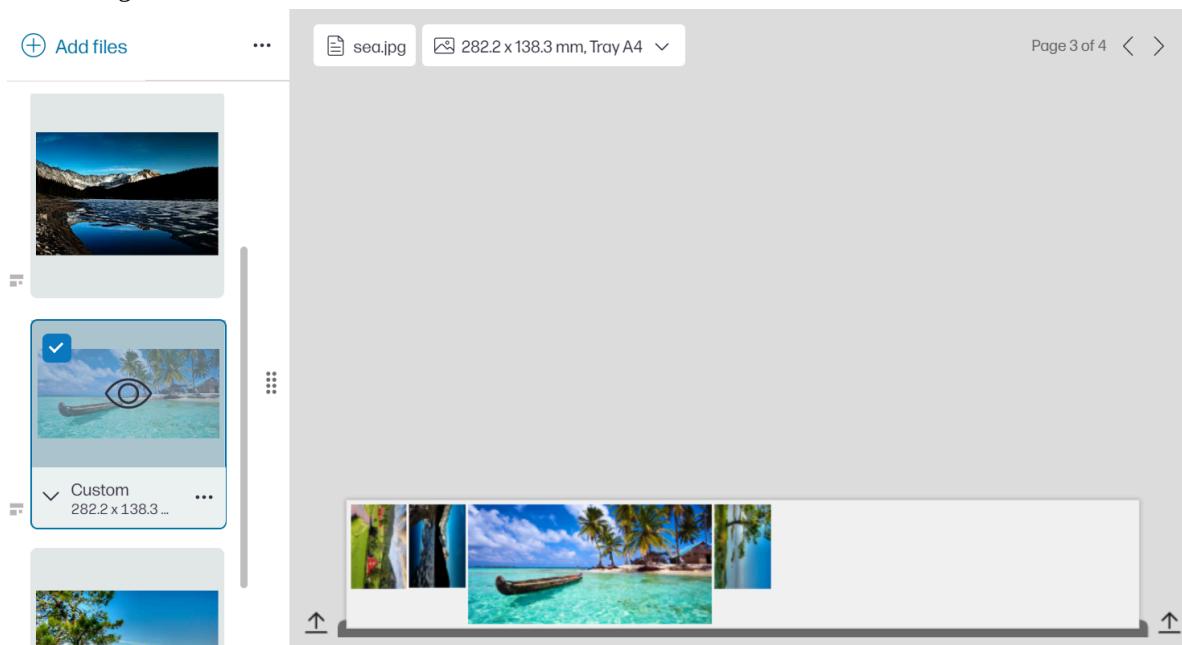

#### Note:

The application may automatically change the order of the pages and/or rotate pages in order to save paper. If you want to rotate or align a page manually, make sure nesting is disabled.

You can turn nesting on and off for each printer using the icon in the settings, and you can also choose the distance between nested pages.

With nesting enabled, you can check in the preview how many pages of your document are together on an output page.

#### Tip:

To apply nesting to multiple copies, add the desired pages again. Setting job copies does not affect nesting.

The pages that are nested together on the same sheet are marked with the  icon next to each thumbnail.

## Printing

When printing is possible, the **Print** button is enabled. If it is disabled, you must ensure that the printer is connected and ready for printing, or use a different printer that is ready for printing.

When you click the **Print** button, all pages loaded into the application are printed, except those pages that you have unchecked.

By default, pages are printed at the original size specified, unless you have used the resizing options.

If the printer can hold pages in a queue, all the pages are immediately sent to the printer. Otherwise, the application holds each page until the printer is ready to receive it. The progress of sending the job to the printer is indicated in the **Print** button.

You can see the jobs in the queue by selecting the **Printer job queue** link available in the **Print settings** dialog, which will open a link to the Embedded Web Server in your default browser.


The application sends the pages of a job in the order in which they appear on the screen.

### Note:

The application provides information to the user about the status of the job sent to print: **Printed**, **Canceled**, or **Failed**.

## Troubleshooting

To access the troubleshooting tool, enter the section **Get Help** in the menu and tap the **Support tool** button.

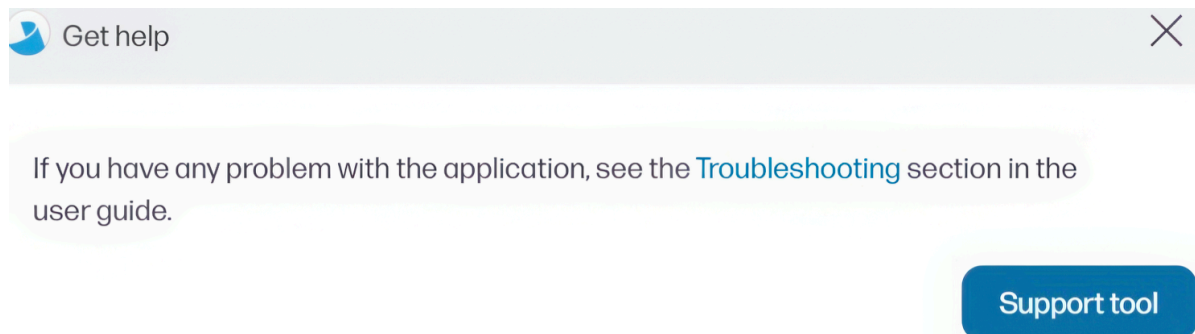

**Table 4: Troubleshooting**

| Situation                                                                  | Suggested action                                                                                                                                                                                                                        |
|----------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| HP Click does not start, or fails while starting.                          | Ensure that you are using a 64-bit operating system.<br>Uninstall and reinstall HP Click.                                                                                                                                               |
| During the discovery process, a printer is not detected nor added.         | Sometimes, depending on the topology of the network, the discovery process is unable to detect a printer. Add the printer manually by IP address or hostname.<br><b>Note:</b><br>Only HP printers can be connected to this application. |
| When adding a printer by hostname, HP Click says that it is “unreachable”. | Sometimes a computer cannot resolve the hostname. Add the printer by IP address.                                                                                                                                                        |

| Situation                                                                                 | Suggested action                                                                                                                                                                         |
|-------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Adding a printer fails.                                                                   | Ensure that the printer is one of the supported printers.                                                                                                                                |
| HP Click says that a printer has an incompatible firmware version.                        | Update the printer's firmware to the latest version.<br>HP Click needs the latest printer firmware to work correctly.                                                                    |
| In the preview, the whole image is shaded yellow, indicating that it will all be clipped. | Ensure that the printer has a roll selected and that the roll is wide enough for the image.<br><br>Use the page options to reduce the size of the image so that it will fit on the roll. |
| You have deleted one or more files by mistake.                                            | Once you have deleted a file, there is no way to restore it. You will have to add each file again.                                                                                       |
| The error message "Unsupported file format" appears when adding a file.                   | Check that the file is in one of the supported file formats.                                                                                                                             |
| The <b>Print</b> button is disabled.                                                      | Ensure that at least one thumbnail is selected to print.<br><br>Ensure that there is a connection between the printer and the computer.<br><br>Ensure that the printer is turned on.     |

If you need further help with HP Click, contact [hpclick.support@hp.com](mailto:hpclick.support@hp.com).


## Enable SNMP

SNMP can be configured through the Embedded Web Server, in the Network Settings.

Ensure the following to enable SNMP:

- SNMP v1/v2 is enabled.
- It has read/write access.
- The community name is set to public.



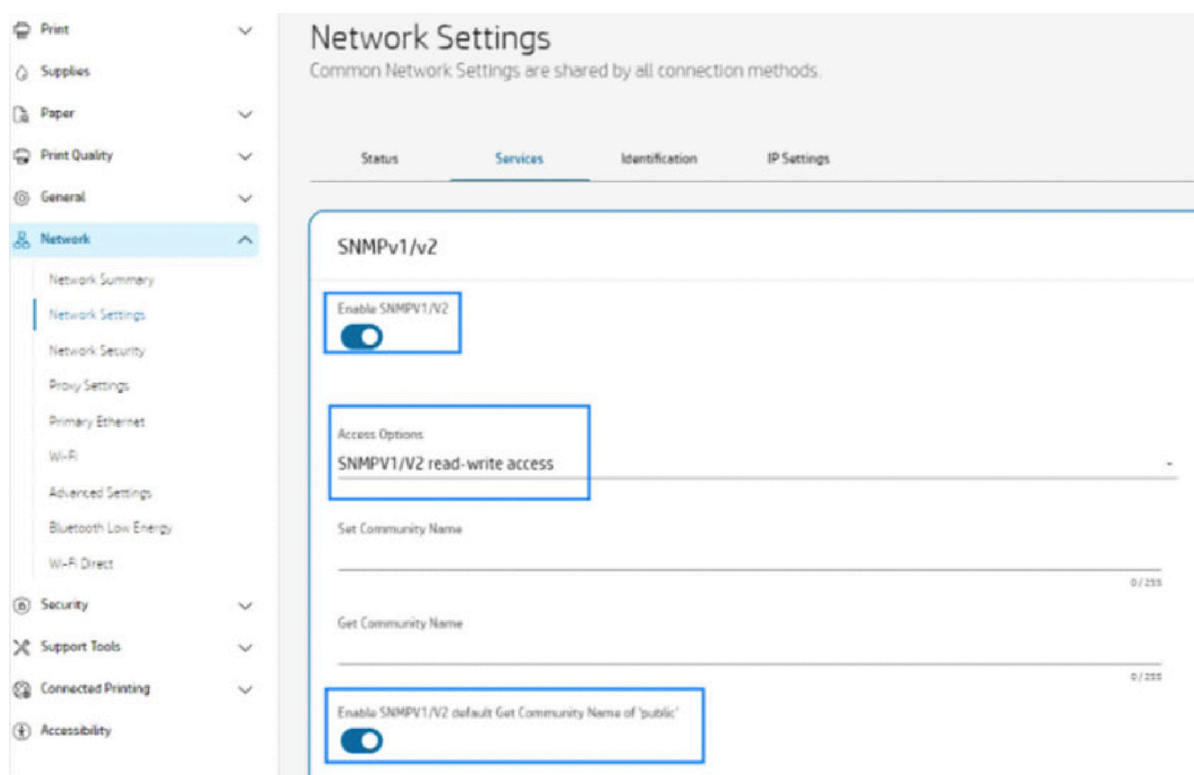

## HP SmartStream

This is the User Guide for SW Solutions HP SmartStream.

### What is it for?

HP SmartStream for HP PageWide XL printers and HP DesignJet Production printers is a professional software solution that helps to improve your productivity and operator efficiency, while expanding your color production. Now, your large-format production workflow will be twice as efficient for both monochrome and color without changing your current workflow.

**SPEED** – Do jobs in half the time

- Respond to the tightest deadlines with ultra-fast HP SmartStream Preflight Manager file analysis and processing.
- Reduce reprints—rely on native PDF management with Adobe PDF Print Engine 4.
- Stop changing settings one by one—create presets to bundle all desired settings, then reuse as needed.
- Simplify production of large jobs—visualize clusters of pages by size and content.
- Stay productive with an easy and intuitive user interface.

**EFFICIENCY** – Streamline your production workflow

- Easily distribute the HP SmartStream configuration into different workstations—presets, hot folders, printers.
- Make sure files are produced reliably with automatic detection of potential issues.
- Run HP PageWide XL and HP DesignJet production accessories—such as an online folder and high-capacity or integrated stacker—using generic accessory support.
- Operate your non-HP large-format LED printers through standard drivers.\*
- Manage all connected HP PageWide XL and HP DesignJet production printers in your fleet.

**GROWTH** – Expand with color production

- Efficiently produce all your GIS maps and point-of-sale (POS) posters on HP PageWide XL printers.
- Preview color, just as it will print, and adjust settings with interactive HP Crystal Preview Technology.

- Get the most out of your paper with nesting designed to minimize paper waste.
- Get accurate data for invoicing—the job report summary even includes pixel coverage.

Bring key efficiencies to your business by adding a powerful solution to enhance your current production workflow. Now you can turn operator efficiency into operating profit with HP SmartStream software for HP PageWide XL printers and HP DesignJet Production printers.

\* Support is provided for a limited number of brands and models. For more information, see <http://www.hp.com/go/smartstreampagewidexl> and <http://www.hp.com/go/smartstreamdesignjet>.

## Getting started

The following steps provide the complete procedure for this topic.

1. Install the software and software licenses. See the installation guide.
2. Create a job in the job preparation pane, which gives you many tools for manipulating and setting up each job before printing. To create your first job, select the printer that you want to use, and drag and drop one or more files onto the job preparation pane (or click  to browse for files). At this point, the Preflight Manager checks each file and reports any errors in the file that could affect printing. You can preview pages in the preview pane.

### Note:

The supported file formats are PDF, JPEG, TIFF, HP-GL/2, DWF, as well as SMJ and ZIP files containing files in any of the preceding formats.

3. Send your job to the printing queue (using the **Print job** button), where you can monitor its progress.

### Tip:

If you are printing to an HP DesignJet printer, do not close the application or shut down the computer until your job has printed.

4. Conveniently reprint past jobs from the application's history tab.

### Note:

Whenever a new version of the application becomes available, it will notify you, and it can update itself if you give permission.

## Introduction

The following sections provide details for this topic.

## Printers

The following sections provide details for this topic.

### Change a printer's IP address or hostname

If the IP address of a printer changes, it is removed from HP SmartStream.

To add it again with the new IP address see [#unique\\_42](#).

When you add it with the new IP address, HP SmartStream detects that it is the same printer with a new IP address, and asks whether you would like to merge the two printers.

- Click **Merge** to merge the two printers: the new printer keeps the history of the old printer.
- Click **Duplicate** not to merge the printers: the new printer's history starts off empty.

### Printers pane

The printers pane is at the far left of the window. By default, it shows only the names of the printers that you have added.

Click a printer name to select the active printer; the rest of the window always shows the jobs for the active printer, in any of the three tabs.

The active printer is shown with a lighter background color than the others.

To widen the pane and see more information about each printer, click the active printer or double-click an inactive printer (which also activates it). You can now see up-to-date status information on the printer and its accessories.

**Note:**

There may be a short delay while the application retrieves the status information from the printer.

To return to the default narrow pane, click the icon in the top right corner.

To see more details about the active printer, click **Details**.

When fully expanded, the printers pane contains the following items:

**Table 5: Printers pane**

| Pane | Items                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|      | <ol style="list-style-type: none"> <li>1. The name of the printer</li> <li>2. The overall status of the printer</li> <li>3. A picture of the printer</li> <li>4. An expander button to increase or decrease the number of details shown</li> <li>5. The total number of pages in the queue for this printer.</li> <li>6. The ink level in each ink cartridge</li> <li>7. The dimensions and type of paper loaded on each roll, and a warning or error message if necessary</li> <li>8. The status of the folder and stacker, if any</li> <li>9. A link that opens the printer's Embedded Web Server</li> </ol> |

The collapsed printers pane (before clicking **Details**) contains only items 1 to 4 above.

If the pane is too small to show all of the printers, you can move up and down the list by clicking the and buttons at the bottom of the pane.

## Set preferences

The preferences dialog allows you to configure HP SmartStream.

### Presets

A preset is a group of settings saved together under a single name.

You can create, modify, or delete presets in the **Presets** tab.


On the left, you can select from a list of presets that you have created. They are displayed in the same order in the preset drop-down menu in the job preparation pane. You can delete a preset by right-clicking its name in this list.

On the right, you can see the settings of the selected preset. A setting is part of the preset only if the box to the left of the setting is checked.

You can use the Preset column in the job preparation pane to apply a preset to one or more pages, or to a whole job.

## Job preparation

You can create and edit jobs in the job preparation pane.

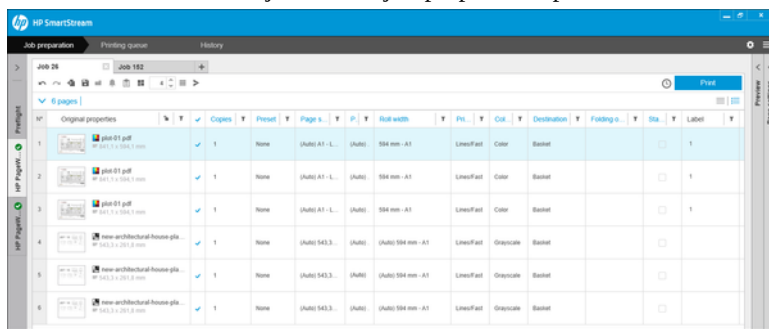

HP SmartStream allows you to work in two different ways:

- You can select a specific printer and prepare a job for that printer.
- You can select the Preflight desk in order to prepare a job without specifying a specific printer. This allows you to check page size and alignment. The job can be assigned to a printer later, by clicking ► or by dragging the job to a printer in the printers pane.

### Gloss enhancer

Gloss enhancer is a layer of coating that you can apply to prints to create a special effect. It can be switched on or off in the job options, and applies to the whole job.

See [#unique\\_48](#).

#### Note:

Gloss enhancer cannot be applied on all paper types.

#### Note:

For printers that support this feature.

### Stamps

In the preparation pane, in the **Stamp** column, you can choose to assign a stamp to a page or create a new one. This prints a text and/or graphical stamp or watermark over the contents of the page; you can assign the same stamp to all pages of a job, or particular stamps to particular pages.

You can specify the position of the stamp and the formatting of a text stamp: its font, size, color, angle, opacity, and offset. You can add various dynamic fields to be displayed as part of the text.

TIFF, PNG, and JPEG files can be imported to provide a graphical stamp. You can also import one of these files contained in a ZIP file. If the ZIP file is password-protected, you will need to give the password in order to import the image successfully.

#### Note:

A ZIP file within a ZIP file is not supported.

The stamp can consist of a maximum of five layers.

**Export stamp template** : You can export your stamp design as a template. Templates are saved in **My Documents \HP SmartStream\Stamps**, with the **.smst** extension (HP SmartStream Stamp Template file).

**Open stamp template** : You can open a stamp design saved in a template file. All stamp fields are filled with data from the template, or they become empty if the corresponding fields in the template are empty.

## Nesting

Nesting enables you to save paper and time, by printing two or more pages side-by-side on the paper (if the paper is wide enough). In this way, you can print the whole document more quickly, and avoid wasting paper.

### Note:

When you nest a job, the paper type and print quality must be the same for all pages in the job.

### Note:

Nesting is not available if you have chosen the Preflight desk.

You can set the nesting parameters for each printer in the printer preferences (see [#unique\\_51](#)), and you can turn nesting on and off for each job using the  icon in the toolbar.

In the preview (see [Print preview](#) on page 22), you can see how your pages will be nested, and you can move individual pages in the preview if you like. The order and positioning of pages that you set in the preview will be respected in the final print.

If you have asked for multiple copies of a page, the copies of that page can be nested, which is known as N-up printing.

## Move or copy a job or pages to another printer

To move a job to another printer, click the job tab (containing the job name) and drag it to the other printer in the printers pane.


Alternatively, you can use the **Send** button.

You can select one or more pages and drag them to a printer, in which case a new job is created for that printer with those pages.

To copy instead of moving, hold down the Ctrl key during the operation.

## Print preview

The preview pane shows what your final print will look like, and adds a visual indication of margins and clipping (if any).

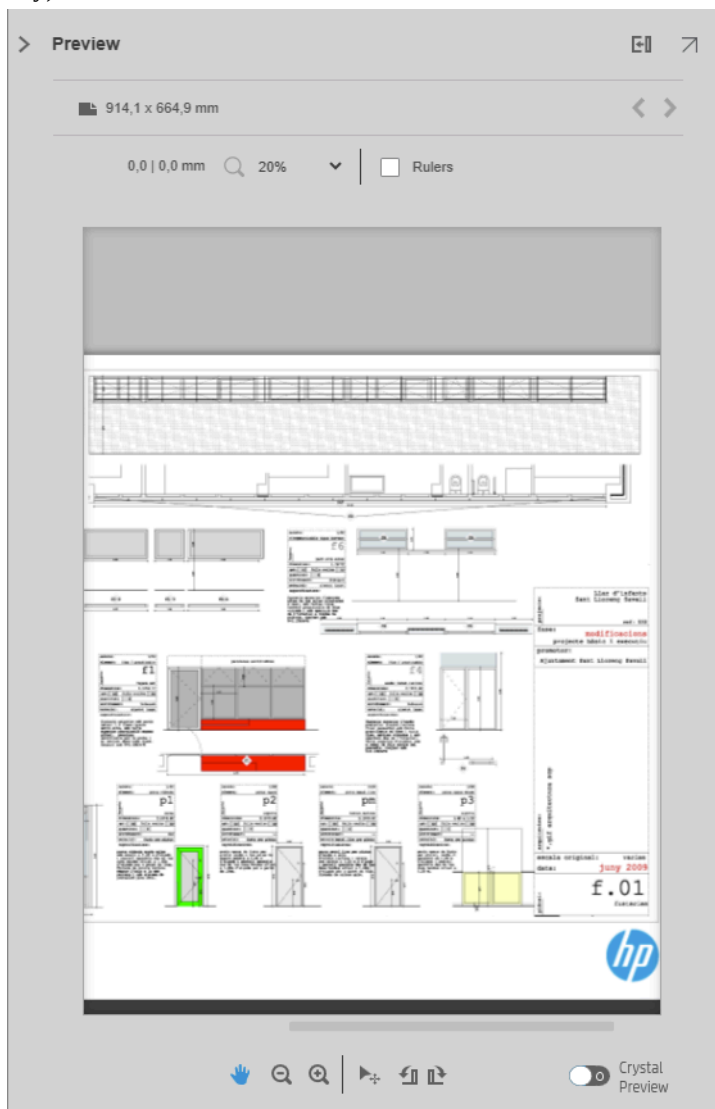

The preview pane can be enlarged by dragging the left pane border further to the left, or maximized by clicking the maximize button in the top right corner of the pane.

You can zoom in or out by using the Zoom drop-down menu (above the preview), or by pressing the Ctrl key and moving the mouse wheel. You can also zoom in on a particular section of the preview by clicking and dragging to form a rectangle enclosing that section.

If you have zoomed in so that the preview is too big to fit in the available space, you can view different parts of it by using the scroll bars, or by pressing the space bar and dragging the image with the mouse (panning). If you have a mouse wheel, you can use it to pan vertically or (with the Shift key) horizontally.

The interactive preview also allows you to adjust the paper and the page freely with the Move tool, or rotate left or right with the Rotate buttons.

## Image, page, and roll

HP SmartStream distinguishes between the image, the page, and the roll.

The documents you want to print consist of one or more pages, called original pages. For each original page, you can select it completely or crop it to select a particular part of it. The part of the original page selected for printing is called the image.

Images are laid out on destination pages, called simply pages in HP SmartStream. The destination page is the output you want to print. If cutting lines are requested, they will be drawn around this page. By default, the destination page size is the same as the image size, but you can define a different page size which may create margins between the image and the page. When there is a difference between the image size and the page size, you can set how the image is aligned within the page in the page options. See [#unique\\_55](#).

Pages are printed on rolls of paper. The roll can be wider than the page, in which case you can set how the page is aligned within the roll in the paper source options. See [#unique\\_56](#).

## Mirror

Mirroring allows you to reflect an image horizontally or vertically.

For horizontal mirroring, click the Horizontal Mirror icon , and for vertical mirroring click the Vertical Mirror icon .

## Printing

### Filtered and unchecked pages

If you have hidden some pages by using a filter, they disappear from the screen and are not printed. However, if you remove the filter, those pages reappear in the job preparation pane.

See [#unique\\_60](#).

If you have excluded some pages by unchecking the box in the Print column, they remain visible on the screen. When you click **Print job** and the job is printed, the excluded pages are not printed, but they are added to the history together with the printed pages.

### Printing queue

You can monitor the printing process by clicking **Printing queue** near the top of the window.

In the printing queue tab, you can see the progress of each job and document in the active printer queue, including the destination of the print, which may be the stacker, the folder, or the basket.

At the top of the printing queue are the **Cancel all** and **Hold all** buttons, which can be clicked to cancel or put on hold all jobs in the queue. There is also a **Release all** button to release all jobs that have been held.

In the Actions column, at job level only, there is a **Cancel** button to cancel the job. If the job has not started printing, there is also a **Hold** button to put the job on hold, and a **Modify settings** button that returns the job to the job preparation pane so that you can modify the print settings.

If you are printing to an HP PageWide XL printer:

- You can cancel only your own jobs from the application. You can cancel jobs created by other people from the printer's control panel.
- You can change the order of the jobs in the queue.

The job at the top of the queue is printed first, and any jobs added to the queue are added at the bottom. You can change the order of the jobs in the queue by dragging a job into a different position, except for jobs that are currently printing or about to be printed. You cannot drag a job to a different printer.

Before printing, each page of a job is checked for mismatches between the job settings and the loaded roll (for instance, the wrong paper type is loaded). If there is a mismatch, you can resolve the problem by modifying the print settings, loading a different roll, or canceling the job.

### Job status

- The current status of a job is displaying below the printing progress bar. A normal, successful job passes through the following states: **Waiting to process in printer\***, **Waiting to process\*\***, **Processing in printer\***, **Processing\*\***, **Waiting to print**, **Printing**, **Printed**.
- If the job encounters some problem, you may see: **Paused**, **Failed**.
- If you interrupt the job in some way, you may see: **On hold in printer\***, **On hold for mismatch**, **Canceling**, **Canceled**, **Pausing**, **Printer paused\***, **Releasing**.
- In the Finishing column, you may see: **Servicing\***, **Stacking**, **Folding**, **Completed**.

\* HP PageWide printers only

\*\* HP DesignJet printers only

### Cancel jobs

This topic explains the concepts involved in this subject.

There are three ways of canceling print jobs:

- In the printing queue, click the **Cancel** button in the Actions column, next to the job name, to cancel that job.
- In the printing queue, click the **Cancel all** button at the top of the queue to cancel all jobs for a particular printer.

#### Note:

With an HP PageWide XL printer, all jobs for that printer are shown, but **Cancel all** cancels only the HP SmartStream jobs.

- Use the printer's control panel to cancel the job that is currently printing. Any other jobs for that printer in the HP SmartStream queue are also canceled.

## Color management

HP SmartStream provides many advanced color management features with a very simple user interface. ICC V4 and V2 color profiles are fully supported for all supported file types, plus black point compensation, PDF output intent, HP Professional PANTONE emulation, and Crystal Preview soft-proofing.

See [#unique\\_64](#).

HP Professional PANTONE Emulation (HP PPE) is a technology that replaces PANTONE color names with RGB or CMYK colors calculated specifically for your printer and paper at print time, in the same way that professional graphic artists and prepress professionals prepare PANTONE emulations by hand. The results are professional-quality emulations of PANTONE colors that look as similar to the originals as possible with a given combination of printer and paper.

Crystal Preview soft-proofing uses the Adobe Libraries to emulate on your screen what your print will look like on paper, using color profiles provided with your printer to take account of the characteristics of paper, ink, and printing mode.

### Supported color spaces

- PDF: Any color space supported by PDF 1.7
- JPEG: Gray, RGB, CMYK, and ITU/Fax CIE L \* a \* b \*
- TIFF: Monochrome, indexed, gray, RGB, CMYK, and CIE L \* a \* b \*
- HPGL2: Adobe RGB, sRGB, and Device RGB

### Color options

Color management is automatically applied by HP SmartStream to provide optimal color output. However, you can choose between two color management options in the Preferences window (see [#unique\\_51](#)):

- **Relative colorimetric:** This is the default option. It favors more saturated colors and modern CMYK standards. It uses relative colorimetric rendering intent and black point compensation, sRGB IEC 61966-2.1 as the default RGB color space, and ISO Coated v2 as the default CMYK color space.



- **Perceptual:** This option provides color consistency with a printer using a PostScript driver. It uses perceptual rendering intent, sRGB IEC 61966-2.1 as the default RGB color space, and SWOP as the default CMYK color space.

## History

The HP SmartStream history preserves a record of printed jobs in case you want to reprint any of them later; perhaps with changed settings.

### Note:

You can also save jobs outside the history, using the  icon in the toolbar. See [#unique\\_66](#).

The history contains a tab for each printer, which has its own separate history.

The history includes various items of information about the original job, including its success or failure.

To manage the size of the history, you can set a time limit in the general preferences: jobs older than this are deleted from the history. See [#unique\\_67](#).

### Tip:

#### How can I reprint from the history in case of a mismatch?

Click the **Reprint** button, and correct the mismatch by changing the loaded paper or changing the print settings in the job preparation tab.

#### Search the history

There is a search field that you can use to search for past jobs or documents by name.

#### Reprint a job

To reprint a job, click the **Reprint** button in the job action column.

- If the job was printed on an HP PageWide XL printer, the reprint is done by the printer.
- In the case of other printers, the job is returned to the job preparation pane for error detection; if there are no errors, the job moves automatically to the printing queue and is sent to the active printer. If you want to change the printer, click and hold the **Prepare to print** button, which displays a menu of all the available printers; select the one you want.

### Note:

You can reprint only a whole job; you cannot select part of a job. You can select the number of copies.

### Note:

If the printer no longer has the same rolls available, there may be a mismatch between the job and the available rolls, in which case you are offered the opportunity to modify the job settings.

#### Reconfigure a job

To change settings or revalidate an old job, click the **Prepare to print** button in the job action column. The job is moved to the job preparation pane.

Any settings that were originally set automatically are recalculated, which may change the settings, depending on the rolls loaded. Settings that were set manually remain unchanged. You can change any of the settings manually.

#### Remove jobs from the history

You can remove an individual job by clicking the **Remove** button in the job action column.

## Folding


If your printer has a folder installed, you can select the folding style as one of the print options. Also, you can choose to print jobs in reverse order whenever the folder is in use.

See [#unique\\_56](#).

| Folding options             | Paper type         |
|-----------------------------|--------------------|
| Folder Selected             |                    |
| 190 x 297                   | per                |
| 190 + Margin x 297          |                    |
| 210 x 297                   | per                |
| 210 x 305                   |                    |
| 210 Inverse Din             |                    |
| AFNOR 297                   | per                |
| 7,5 inch x 11 inch          |                    |
| 7,5 inch + Margin x 11 inch |                    |
| Folder Selected             | (Auto) Plain Paper |

If the folder permits custom folding styles, you can create them by selecting **Create** from the folding style print option and then filling in the specifications of your custom folding style.

Folding style

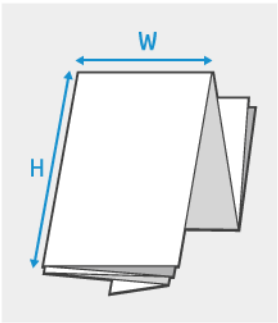

**Name:**   
**Folding options:** ☐ Fan-fold only  
☐ Compensation  
☐ Tabs  
**Width (W):**  
From 203 to 920 mm   
**Height (H):**  
From 500 to 3500 mm   
**Margin (M):**  
From 0 to 5 mm

|         |                                      |
|---------|--------------------------------------|
| Custom1 | 203+2 mm (Fan-fold and Compensation) |
| Custom2 | 203x500 mm (Tabs)                    |
|         |                                      |

You can specify in the dialog the dimensions of your custom folding style. You can also choose from the following options:

- **Fan-fold only:** The folding style is fan-fold, and has no cross-fold part.
- **Compensation:** The folding style performs compensation if necessary.
- **Tabs:** The folding style uses tabs (this option appears only if the folder has tabs).


**Note:**

If you are using an HP PageWide printer, any custom folding style created with the printer's control panel will automatically be synchronized to HP SmartStream.

You can specify in the application preferences whether you want to see the dimensions of the folded paper indicated in green in the preview. See [#unique\\_67](#).

**Note:**

In some cases, the folded dimensions may not be shown because the application does not know them.

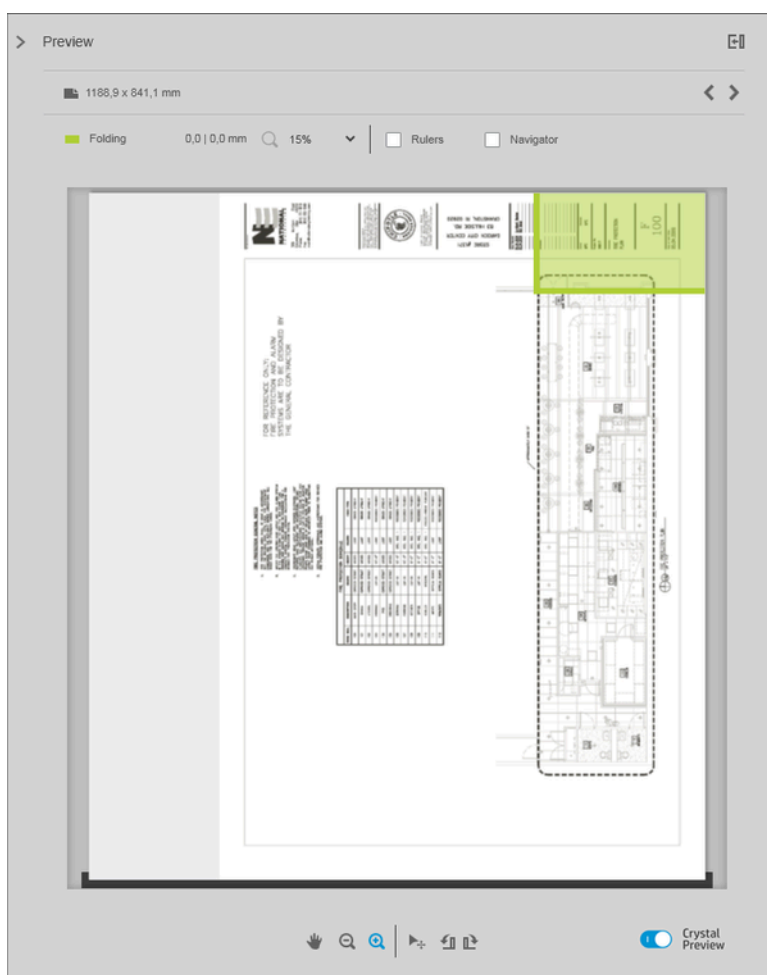

The green rectangle in the preview indicates which part of the page will be on top after folding. If the page contains some header or summary information describing its contents, you may want to ensure that this is in the green rectangle, so that it will be easily visible once the page has been folded. To move the contents of the page, you can use the rotation, alignment, and/or margins options (among the paper source options in the settings pane).

The following steps are recommended to check that the required content is in the green rectangle, and to adjust the page if necessary:

1. Set the default alignment between page and roll in the preferences so that the page is placed on the correct side of the roll (see [#unique\\_51](#)). You need to do this only once.
2. Select the first page of the job to see it in the preview.
3. Zoom in on the green rectangle. You may want to maximize the preview.
4. If required, use the E key on the keyboard to rotate the page 90° counterclockwise or the R key to rotate 90° clockwise.
5. Use the down-arrow navigation key to select and preview the next page.

## Scanning

The following sections provide details for this topic.

### Tip:

If you have no scanner connected, you can still use the printer-specific preferences to set up a hot folder from which you can import files conveniently into a job. See [#unique\\_51](#).

## Accounting

The  icon in the toolbar displays information about the job that may be used for accounting purposes. The icon appears in the job preparation pane and in the history pane; but some of the information is available only from the history pane, after the job has been printed.

You can decide in the general preferences (see [#unique\\_67](#)) what information is displayed.

The **General** tab normally includes:

- Total number of pages; total area of paper printed (not including wasted paper outside the page area); and total length of paper printed
- Number of pages per paper-type category
- Number of pages per page size
- Number of pages per color mode
- Number of pages per page length
- Area of paper used per print-coverage category

**Note:**

A job analysis module is available that can calculate the print coverage per page in advance, so that you can plan your jobs.

Job details

General

Accounting

Work log

Pages

Pages area

Job length

9

4.68 m<sup>2</sup>

1.99 m

Table view: 

Page size / Paper type

|              | A0       | A1       | A4       | Total    |
|--------------|----------|----------|----------|----------|
| Coated Paper | 3        | 3        | 3        | 9        |
| <b>Total</b> | <b>3</b> | <b>3</b> | <b>3</b> | <b>9</b> |

| Print Coverage | < 10%               | 10-50%             | >50%               |
|----------------|---------------------|--------------------|--------------------|
| Mono           | 0.19 m <sup>2</sup> | 0.0 m <sup>2</sup> | 0.0 m <sup>2</sup> |
| Color          | 4.5 m <sup>2</sup>  |                    |                    |

Export

OK

In the general preferences (see [#unique\\_67](#)), you can move two sliders to adjust the three print-coverage categories shown in this tab.

Print coverage

Configure job details print coverage categories threshold to classify pages after print.

23

0

88


100

☐ Apply set threshold to past printed jobs


The units of measurement used in the job details are those you have chosen for the application in general.

If you have selected the Preflight desk, you will see here only the page counts, with no paper types nor printed area.

You can click the **Export** button to export the job details to a file in the PDF or CSV format.

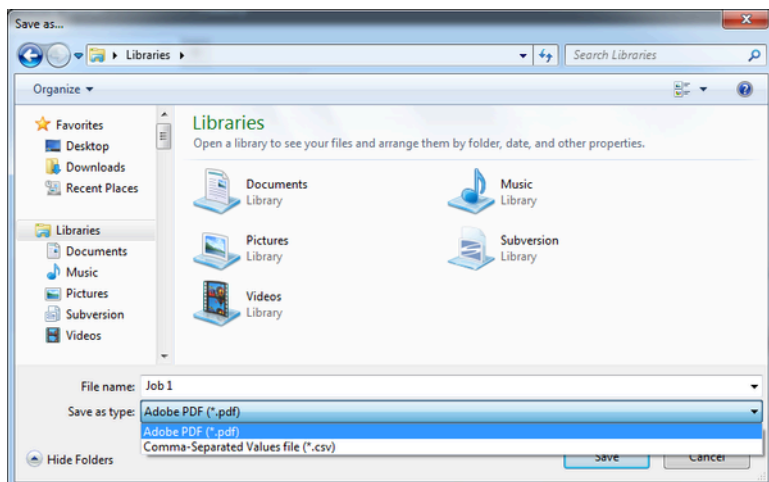

If you have chosen to gather page accounting data from the printer (see [#unique\\_51](#)), the history pane will contain an icon to access the accounting data.

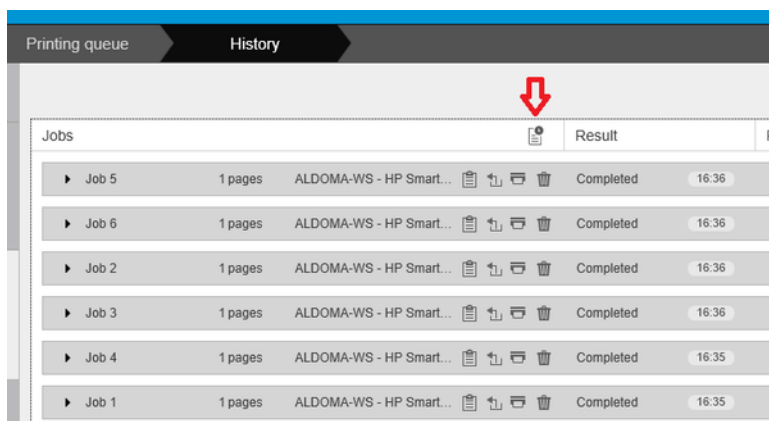

The **Accounting** tab contains information that you can attach to the job for accounting purposes.

Job details

General Accounting Work log

Use template: None

Client name:

Job order:

Account ID:  Add to list

Comments:

Export OK

You can select a previously-created template from the **Use template** list as an alternative to filling in the fields manually. To create a template, click **Create** at the bottom of the **Use template** list. Accounting templates are saved in **My Documents\HP SmartStream\Accounting templates** with the **.smat** extension (HP SmartStream Accounting Template file).

The **Work log** tab contains a summary of the settings that were applied to the printed pages, and a summary of any unsolvable issues.

Job details

General Accounting Work log

**Actions** Total: 78

Cropped images 78

**3 unsolvable issues:**

- 1 Missing fonts
- 1 Unprintable layers
- 1 Disabled layers

Export OK

If you want a higher level of accounting details, such as getting to know which users sent jobs to print, and generating and customizing reports with accounting information, consider using HP SmartTracker software. Your service representative can give you more information about HP SmartTracker.

## Submission driver

The HP SmartStream Submission Driver enables you to send content from any application (including CAD and graphics applications) and any file format (including DWF, DWG, Microsoft Office, and so on) to be prepared and printed with HP SmartStream.

The submission driver appears among your system's list of printers and creates a package containing the content to be printed plus the print instructions and accounting information. Once submitted, the package is sent to the hot folder monitored by HP SmartStream. See [#unique\\_76](#).

The submission driver is an ideal companion for HP SmartStream in enterprise environments with Central Reprographic Departments (see [#unique\\_77](#)), or for anyone using applications that are unable to save HP SmartStream-supported file formats (see [Color management](#) on page 24).

## Troubleshooting

The following sections provide details for this topic.

### Error codes

There are some issues that may cause an application error window to be displayed, showing one or more error codes and descriptions. These are listed in the table below.

**Table 6: Error codes**

| Error code | Short description                                                     | Full description                                                                                                                                                                                                                                    |
|------------|-----------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2001-0199  | Non-recoverable generic database error                                | An internal database error has occurred. Restart the application.<br>If the problem persists, contact your reseller.                                                                                                                                |
| 2002-0186  | Disk error: can't create temporary storage in infrastructure          | The application does not have sufficient system resources to create temporary data. You are recommended to restart the application. Before restarting the application, check that, for example, your hard disk has sufficient free space.           |
| 2002-1086  | Disk error in analysis                                                | The application does not have sufficient system resources to perform the file analysis. It is recommended to restart the application. Before restarting the application you can check if for example your system has sufficient disk space.         |
| 2002-1087  | Analysis: application or resources not found or no access permissions | The application stopped working. One of its resources is not responding. You are recommended to restart the application.<br>If the problem persists, the application may need to be reinstalled. Contact your reseller if necessary.                |
| 2002-2086  | Disk error: can't create temporary storage in job processing          | The application does not have sufficient system resources to process a job you want to print. You are recommended to restart the application. Before restarting the application, check that, for example, your hard disk has sufficient free space. |
| 2002-2087  | Application or resources not found or no access permissions           | The application stopped working. One of its resources is not responding. You are recommended to restart the application.<br>If the problem persists, the application may need to be reinstalled. Contact your reseller if necessary.                |

| Error code | Short description                                             | Full description                                                                                                                                                                                                                                     |
|------------|---------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2002-5086  | Disk error: HP-GL/2 can't write to disk                       | The application does not have sufficient system resources to process an HP-GL/2 file. You are recommended to restart the application. Before restarting the application, check that, for example, your hard disk has sufficient free space.          |
| 2002-5186  | Disk error in Imaging Library                                 | The application does not have sufficient system resources to analyze a raster document. You are recommended to restart the application. Before restarting the application, check that, for example, your hard disk has sufficient free space.        |
| 2002-6186  | Disk error in PDF Library                                     | The application does not have sufficient system resources to analyze a PDF document. You are recommended to restart the application. Before restarting the application, check that, for example, your hard disk has sufficient free space.           |
| 2202-5144  | Disk error: can't create temporary storage in Imaging Library | The application does not have sufficient system resources. You are recommended to restart the application. Before restarting the application, check that, for example, your hard disk has sufficient free space.                                     |
| 2202-8089  | Unsupported printer or required license                       | Check that the printer you are trying to use is supported by the application (see the installation guide). In particular, check that it is a PostScript printer.<br><br>Check that the required licenses are installed (see the installation guide). |
|            | Printer protocol unsupported version. Upgrade SW application. | This application is not compatible with the printer. Contact your reseller for upgrade possibilities, or download the upgrade from the link.                                                                                                         |
|            | Printer protocol unsupported version. Upgrade printer FW.     | The firmware of one of the installed printers is not compatible. Check whether firmware updates are available for your printers, or download the update from the link.                                                                               |

## Optional modules for advanced users

Three optional modules are available for HP SmartStream: the document organizer module, the pixel analysis module, and the workflow management module.

Each module requires a specific electronic license. If the license is not present, the features of the module will not appear in the application.

### Workflow management module

The workflow management module allows HP SmartStream to use Job Definition Format (JDF) files.

JDF is a technical standard in use with XML files. HP SmartStream JDF supports job settings such as job name, job copies, and collate; and document settings such as number of copies, color mode, and destination.

When a JDF file is added it will be analyzed as a separate job, regardless of the job in which it was inserted.

Once the JDF file has been analyzed, only the files referenced by the JDF will exist as documents in the application; the JDF file itself is not preserved as an item within the application (as with SMJ and ZIP files).



## Shortcut keys

You can use keyboard shortcuts (keys or combinations of keys) to do things that you would otherwise do with a mouse.

### Job selectors

These shortcuts can be used in job preparation, in the job queue, or in the history.

**Table 7: Job selectors**

| Key            | Function     |
|----------------|--------------|
| Ctrl 1         | First job    |
| Ctrl 2 to 8    | Job 2 to 8   |
| Ctrl 9         | Last job     |
| Ctrl Tab       | Next job     |
| Shift Ctrl Tab | Previous job |
| Ctrl D         | Deselect all |

## HP SmartTracker

---

HP SmartTracker has been designed to help you control your printing costs and accurately charge your customers for the prints you do for them.

### Notice:

HP SmartTracker software is compatible only with Original HP ink supplies.

## Connectivity

The first time that the HP SmartTracker application opens, the **Preferences** panel is automatically displayed. The **Connectivity** tab is selected by default.

The screenshot shows the 'Preferences' window with the 'Connectivity' tab selected. The window has a title bar with a close button. Below the title bar are tabs for 'Connectivity', 'Permissions', 'Options', 'Printers', 'Costs', and 'Prices'. The 'Connectivity' tab contains the following sections:

- Proxy Configuration:**
  - Automatic configuration script address:
  - Proxy server address:
- Email Configuration:**
  - Email address:
- Server address:**
  - Address:  Port:
- Active Directory configuration:**
  -
- Advanced network interface:**
  -

At the bottom right of the window are 'Close' and 'Next' buttons.

## Printers

## Permissions

In the **Permissions** tab you can assign permissions to administrators and bookkeepers. At this point there is a minimum requirement to configure at least one administrator.

The screenshot shows the 'Preferences' window with the 'Permissions' tab selected. The window has a title bar with a close button. Below the title bar are tabs for 'Connectivity', 'Permissions', 'Options', 'Printers', 'Costs', and 'Prices'. The 'Permissions' tab contains the following sections:

- Administrators:**

Can open HP SmartTracker and access the Configuration and Reports panels. They can set permissions, costs, printers, projects and users. They can also retrieve data and create reports.

| Username*                                                              | Password*                                                              | First name                                                             | Last name                                                              | Email address*                                                           |
|------------------------------------------------------------------------|------------------------------------------------------------------------|------------------------------------------------------------------------|------------------------------------------------------------------------|--------------------------------------------------------------------------|
| admin                                                                  | *****                                                                  | John                                                                   | Doe                                                                    | jdoe@hp.com                                                              |
| <input data-bbox="495 1392 560 1409" type="text" value="Add text..."/> | <input data-bbox="625 1392 690 1409" type="text" value="Add text..."/> | <input data-bbox="755 1392 820 1409" type="text" value="Add text..."/> | <input data-bbox="885 1392 950 1409" type="text" value="Add text..."/> | <input data-bbox="1015 1392 1079 1409" type="text" value="Add text..."/> |
- Bookkeepers:**

They can retrieve data, create new and review previous reports.

| Username*                                                              | Password*                                                              | First name                                                             | Last name                                                              | Email address*                                                           |
|------------------------------------------------------------------------|------------------------------------------------------------------------|------------------------------------------------------------------------|------------------------------------------------------------------------|--------------------------------------------------------------------------|
| book                                                                   | *****                                                                  | Jane                                                                   | Smith                                                                  | j.smith@hp.com                                                           |
| <input data-bbox="495 1560 560 1577" type="text" value="Add text..."/> | <input data-bbox="625 1560 690 1577" type="text" value="Add text..."/> | <input data-bbox="755 1560 820 1577" type="text" value="Add text..."/> | <input data-bbox="885 1560 950 1577" type="text" value="Add text..."/> | <input data-bbox="1015 1560 1079 1577" type="text" value="Add text..."/> |

At the bottom right of the window are 'Close' and 'Next' buttons.

In this screen you can configure two types of HP SmartTracker user: administrator and bookkeeper. Users of the printers will be configured later.

**Note:**

It is mandatory to enter an email address in the screen above. Provided that HP SmartTracker's email server is correctly configured, it is this address that will be used to receive notifications sent by HP SmartTracker.

Administrators can:

- Open the configuration panel and reports.
- Create new reports.
- Retrieve data.
- Set permissions, costs, prices, printers, projects, users, and groups.
- Set language, measurement units, and currency to be used by HP SmartTracker.
- View previous reports.

Bookkeepers can:

- Create new reports.
- Retrieve data.
- View previous reports.

The first time you configure permissions you must create at least one user who is an administrator.

To create an administrator user, enter data directly in the fields in the Administrators section of the **Permissions** tab illustrated below:

#### Administrators:

Can open HP SmartTracker and access the Configuration and Reports panels.

They can set permissions, costs, printers, projects and users. They can also retrieve data and create reports.

| Username*   | Password*   | First name  | Last name   | Email address* |
|-------------|-------------|-------------|-------------|----------------|
| admin       | *****       | John        | Doe         | jdoe@hp.com    |
| Add text... | Add text... | Add text... | Add text... | Add text...    |

Press the Enter key.

Once an administrator user has been created, the login screen, illustrated below, appears:

The above screen will become the initial screen for your HP SmartTracker application.

Enter your username and password and click the **Login** button to return to the **Preferences** panel.

Here you can add more administrators and/or create bookkeepers.

To create a bookkeeper, enter the data directly into the fields in the Bookkeepers section:

**Bookkeepers:**

They can retrieve data, create new and review previous reports.

| Username*   | Password*   | First name  | Last name   | Email address* |
|-------------|-------------|-------------|-------------|----------------|
| book        | *****       | Jane        | Smith       | jsmith@hp.com  |
| Add text... | Add text... | Add text... | Add text... | Add text...    |

Press the Enter key.

To edit a user, click the data, make the necessary changes, then press the Enter key.

To delete a user, right-click it.

**Note:**

There is no request for confirmation when you delete a user. If you delete a user by mistake, you will have to re-enter that user's data.

**Options**

In the **Options** tab you can configure a variety of settings for the HP SmartTracker application: application language, accounting units, accounting currency, logo to be included in reports, and touch points where authentication will be required.

**Setting the application language**

You can select the language to be used by the application from the ones available in the **Language** drop-down list.

**Setting the application units**

You can select which units are to be used for paper accounting purposes, either imperial (inches, square feet) or metric (millimeters, square meters).

**Setting the currency**

In this section you can select the currency to be used by typing its three character code (such as USD or EUR).

**Setting the costs and prices configuration**

You can choose to assign the cost or price value based on the ink or paper type used in print jobs.

Distribution of cost/price can be done by print category (**Mono lines**, **Color lines**, **Low density** and **High density** images) or by total coverage (**Color** and **Mono** percentage).

**Note:**

The selection you make here applies to all printers and will be effective for the **Costs** and **Prices** tabs. Changing this selection in one of these tabs will automatically change the selection used by the other tab.

**Setting a company logo for reports**

A company logo can be added to your custom\_reports by clicking the **Upload** button and navigating to the image (jpg or png format) of your choice; some restrictions exist.

Your current company logo can be removed by clicking the **Remove** button.

**Costs**

Click the **Costs** tab. This is where you can configure the units to be used for accounting and those that will also appear in the reports.

If, for example, you selected **Print categories** in the **Options** tab:

The screenshot shows the 'Preferences' window with the 'Costs' tab selected. The 'Tax cost configuration' section includes a 'Tax Rate' input field set to '1' with a '%' symbol, and two radio buttons: 'Costs excluding tax' (unselected) and 'Costs including tax' (selected). The 'Printer cost configuration' section features a 'Printer' dropdown menu showing 'HP PageWide XL Pro 8200 Series'. Below this, the 'Costs by print categories' section has a dropdown menu set to 'Per sq ft'. It displays six categories: Mono Lines, Color Lines, Low density, High density, Blueprint, and Premium quality. Each category has an input field set to '1' and a 'Tax Incl.' checkbox.

If, for example, you selected **Print Coverage** in the **Options** tab:

This screenshot shows the 'Preferences' window with the 'Costs' tab selected. The 'Tax cost configuration' and 'Printer cost configuration' sections are identical to the previous image. The 'Costs by print coverage' section has a dropdown menu set to 'Per sq ft'. It displays two columns: 'Supplies costs' and 'Service costs'. Each column has two rows: 'Color' and 'Mono'. Each row has an input field set to '1' and a 'Tax Incl.' checkbox.

You can introduce costs specific to each of the printer models installed.

You can assign the costs based on milliliter usage, area printed, area used, and linear meters. You can also select the **Hybrid** option which provides a combination of two metrics.

If you need to change the metrics, you can select an alternative unit of measurement from the drop-down menu.

By clicking the  icon a window opens showing the complete list of possible paper types and you can select which of them will be taken into account and the cost associated with each of them.

**Note:**

In **Costs** and **Prices** you can introduce the total price with or without taxes. Later in the reports, you can select whether to apply the tax or not.

## Prices

When you click the **Prices** tab, you will see the screen illustrated here:

The 'Prices' tab interface includes the following sections:

- Tax price configuration:**
  - Tax Rate: 1 %
  - Radio buttons: ☐ Prices excluding tax, ☒ Prices including tax
- Printer price configuration:**
  - Printer: HP PageWide 4000 Series
- Prices by print categories:**
  - Unit: Per sq ft
  - Categories and rates:
 

| Category        | Rate (€ per sq ft) | Tax Incl.                |
|-----------------|--------------------|--------------------------|
| Mono Lines      | 1                  | <input type="checkbox"/> |
| Color Lines     | 1                  | <input type="checkbox"/> |
| Low density     | 1                  | <input type="checkbox"/> |
| High density    | 1                  | <input type="checkbox"/> |
| Blueprint       | 1                  | <input type="checkbox"/> |
| Premium quality | 1                  | <input type="checkbox"/> |

In this tab you can include the prices to be charged to your customers. The introduction of prices works in exactly the same way as the introduction of costs.

## About the home screen

The home screen consists of a vertical bar on the left-hand side where all printers and printer groups that you configured are listed. There are three tabs, by default they are named: **Users**, **Projects**, and **Departments**. The **User** tab name is not editable, the remaining two can be renamed, but only by **Administrators**.


Each tab has a grid where you can enter data for each printer and printer group:

The 'Users' tab displays a table of users with the following columns:

| USER NAME*                            | PASSWORD | FIRST NAME | LAST NAME | EMAIL ADDRESS       | ADDRESS                     | USER STATUS |
|---------------------------------------|----------|------------|-----------|---------------------|-----------------------------|-------------|
| <input type="checkbox"/> BarbaraSmith | *****    | Barbara    | Smith     | bsmith@mail.com     | 1501 Page Mill Rd, Palo ... | Enabled     |
| <input type="checkbox"/> JamesWhite   | *****    | James      | White     | jameswhite@mail.com | 1501 Page Mill Rd, Palo ... | Enabled     |
| <input type="checkbox"/> JackBlack    | *****    | Jack       | Black     | jackblack@mail.com  | 1501 Page Mill Rd, Palo ... | Enabled     |
| <input type="checkbox"/> LindaDavis   | *****    | Linda      | Davis     | ldavis@mail.com     | 1501 Page Mill Rd, Palo ... | Enabled     |
| <input type="checkbox"/> JaneBrown    | *****    | Jane       | Brown     | janebrown@mail.com  | 1501 Page Mill Rd, Palo ... | Enabled     |
| <input type="checkbox"/> SophiaMoore  | *****    | Sophia     | Moore     | smoore@mail.com     | 1501 Page Mill Rd, Palo ... | Enabled     |

### Note:

The information displayed in the grid depends on the printer group you currently have selected on the left-hand side.

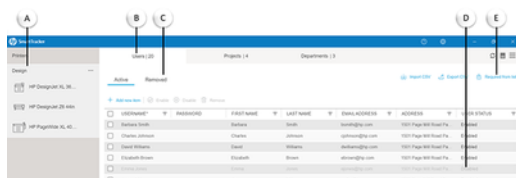

Below are brief explanations of the various parts of the screen.

**Table 8: Parts of the screen**

| Part | Description of the screen                                                                                                              |
|------|----------------------------------------------------------------------------------------------------------------------------------------|
| A    | Example of a printer group.                                                                                                            |
| B    | <b>Users</b> tab containing grid with data for the selected printer group.                                                             |
| C    | <b>Removed</b> items view with the <b>Users</b> , <b>Projects</b> and <b>Departments</b> already removed.                              |
| D    | <b>Users</b> , <b>Projects</b> or <b>Departments</b> in <b>Disabled</b> status are not available from the agents' authentication form. |
| E    | Authentication mode.                                                                                                                   |

You can edit the home screen tabs and customize the data to suit your needs.

| USERNAME*    | PASSWORD | FIRST NAME | LAST NAME | EMAIL ADDRESS       | ADDRESS                     | USER STATUS |
|--------------|----------|------------|-----------|---------------------|-----------------------------|-------------|
| BarbaraSmith | *****    | Barbara    | Smith     | bsmith@mail.com     | 1501 Page Mill Rd, Palo ... | Enabled     |
| JamesWhite   | *****    | James      | White     | jameswhite@mail.com | 1501 Page Mill Rd, Palo ... | Enabled     |
| JackBlack    | *****    | Jack       | Black     | jackblack@mail.com  | 1501 Page Mill Rd, Palo ... | Enabled     |
| LindaDavis   | *****    | Linda      | Davis     | ldavis@mail.com     | 1501 Page Mill Rd, Palo ... | Enabled     |
| JaneBrown    | *****    | Jane       | Brown     | janebrown@mail.com  | 1501 Page Mill Rd, Palo ... | Enabled     |
| SophiaMoore  | *****    | Sophia     | Moore     | smoore@mail.com     | 1501 Page Mill Rd, Palo ... | Enabled     |

**Note:**

FOR ADMINISTRATORS ONLY: To edit the name of one of the **Projects** or **Departments** tabs, double-click the tab name.

**Note:**

The **Projects** and **Departments** tabs cannot both have the same name.

The number that appears in each tab corresponds to the number of active rows in the grid.

**Marking a job as billable**

You can decide, on a job-by-job basis, which particular jobs are billable or non-billable.

In the same illustration you can see a setting where, like the setting discussed above, you can choose to provide users with the option to add a comment to a job.

To do so, click the icon next to the printer group.


**Note:**

In the illustration above you will see the “Allow users to decide if a job is billable” field, it can be enabled or disabled. Your choice for this setting is independent of, and should not be confused with, the decision regarding whether, or not, all jobs for the printer are billable. To modify this setting you must select each printer group, one by one, and make the appropriate selection. If this setting is enabled, HP SmartTracker will ask you to make this decision every time you send a job to the printer.

Select the options you want and click out of the box.

## Filtering

You can filter by clicking the  icon and choosing an option from the drop-down list:

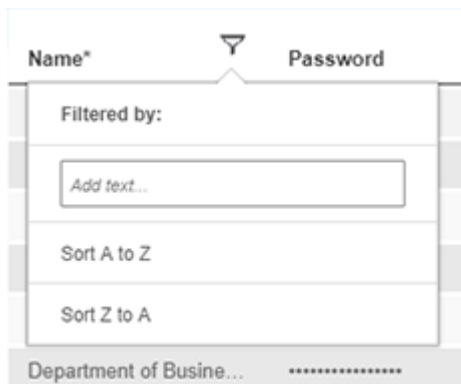

Below are brief descriptions of the options in the menu.

**Table 9: Options in the menu**

| Option              | Description                                                                        |
|---------------------|------------------------------------------------------------------------------------|
| <b>Text box:</b>    | you can type directly in the field to filter the content of the table dynamically. |
| <b>Sort Z to A:</b> | organizes users in reverse alphabetical order.                                     |
| <b>Sort A to Z:</b> | organizes users in alphabetical order.                                             |

You can also filter by enabled and/or disabled users by clicking the User status column filter.

Once a filter is selected, the icon turns blue.

## Removing a filter


To remove the dynamic filter, click the  icon to open the filter and then delete the text from the box. Click out of the filter.

Other filters are only removed once you exit the current view. To exit the current view, click a different printer group.



## Projects


Click the **Projects** tab. This is where you can configure data for the projects using the selected printer group.

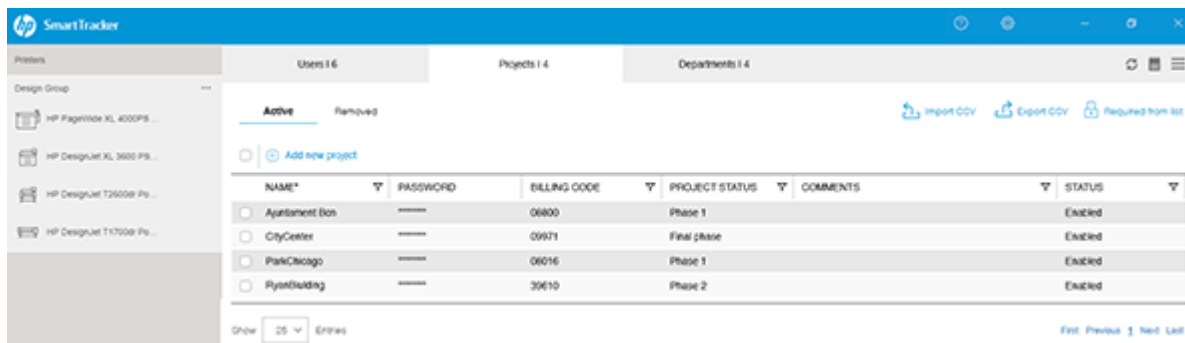

To create project data, click **Add new item** to enter the data directly in the fields where it says **Enter...** and click **Enter** after you have filled in the last field.

## Departments

Click the **Departments** tab. This is where you can configure data about the departments included in this printer group.

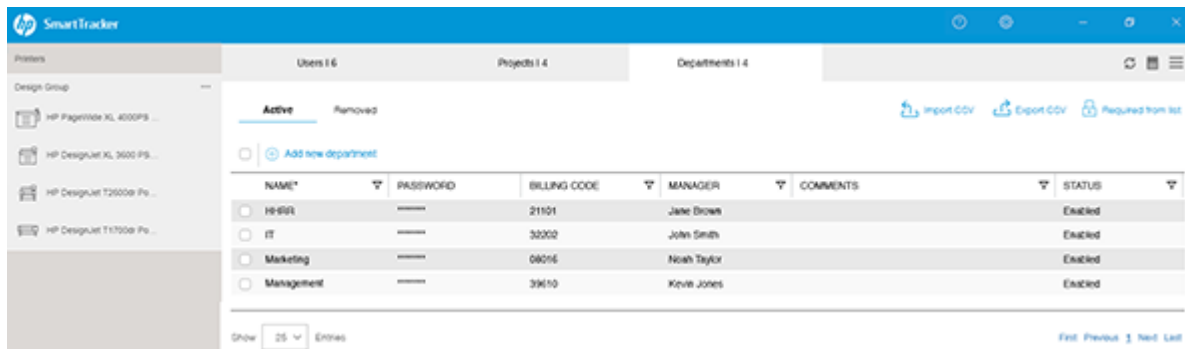

To add data for different departments, click **Add new item** to enter data directly in the fields where it says **Enter...** and click **Enter** after you have filled in the last field.

### Note:

In the three tabs you will find here, you can edit:

- The name of the tab (**Departments** and **Projects**)—administrators only
- The names of several of the columns

## Import/export CSV

## Generating reports

For bookkeeper users, the Reports screen is the home screen.

However, administrator users will have to click the  icon to open the Reports screen.

This screen provides three options: **Summary**, **Reports**, and **Custom**.

The **Summary** report can provide an overview of: all printers; a specific printer group or; a specific printer.

The **Custom** report lets you customize the content of your report to contain the tables and charts you choose.

The **Reports** option is a standard report that provides a detailed analysis of either a particular user, a department, a project, or individual jobs.

Default reports can be created per printer and per printer group.


**Note:**

Cumulative cost/price data are updated once a day based on the costs/prices configured. If changes are made to the configured cost/price data, these changes will be immediately effective, however the changes will not have any effect on the cumulative data from previous days.

## Summary


The information presented in the summary screens reflect how the costs/prices have been entered: Print categories or Printing supplies. The graphics here are illustrations of one possible configuration.

Here are examples of Summary reports:

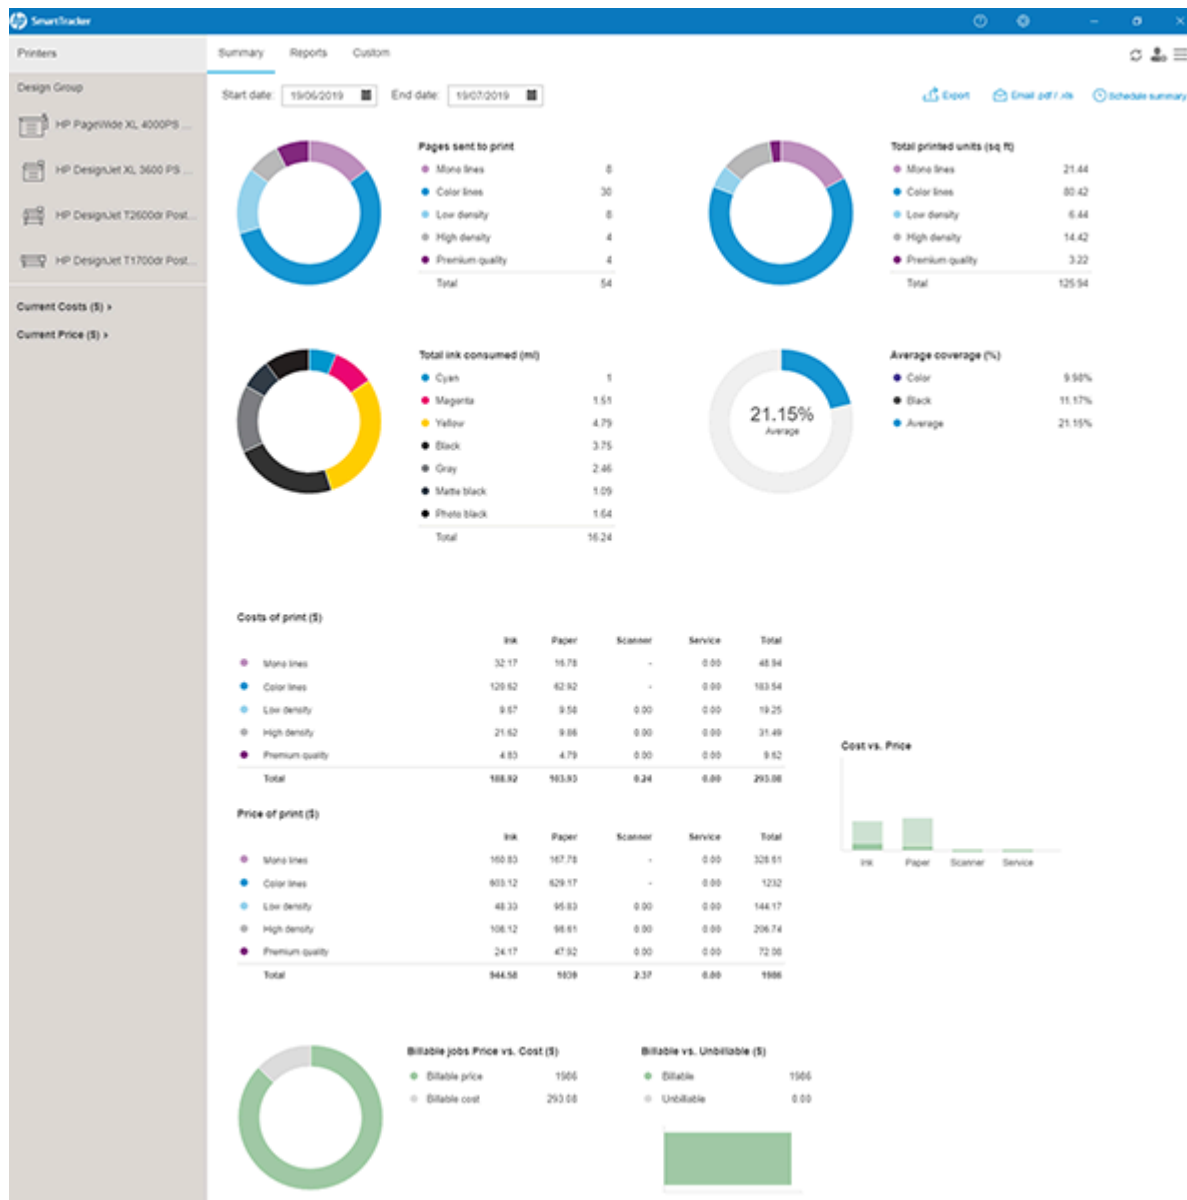

You can view a global summary for all printers, a specific printer group or a specific printer.

You can choose the time frame of when the data is collected.

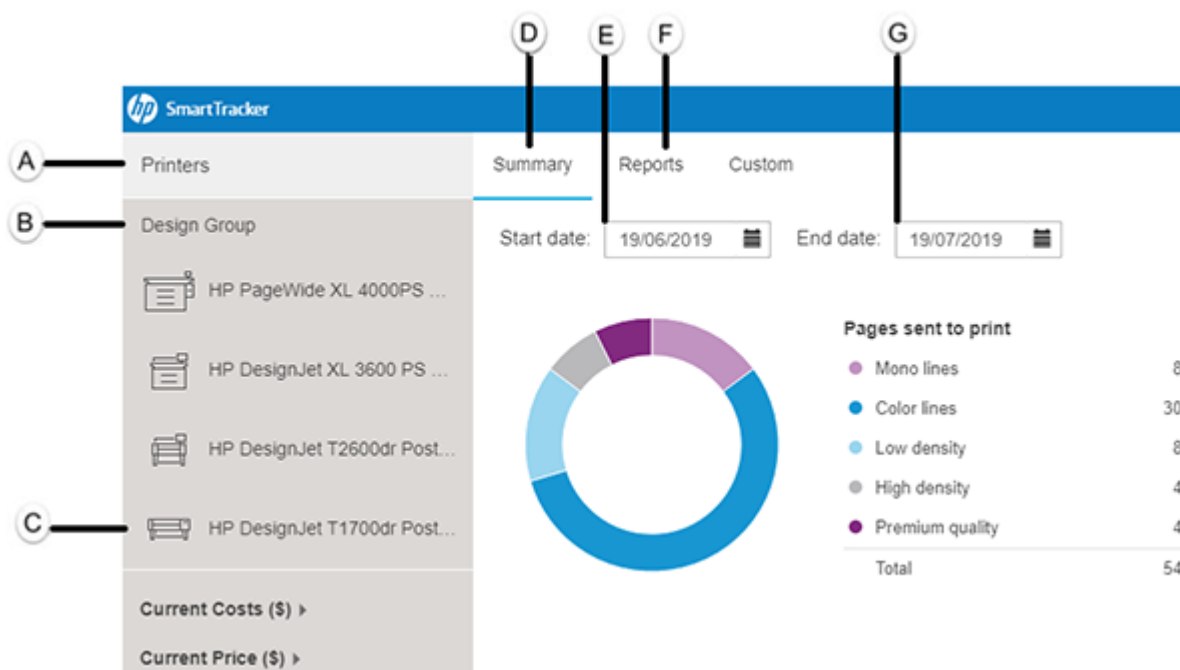


Below are brief descriptions of the various parts of the screen:

**Table 10: Parts of the screen**

| Part | Description                                         |
|------|-----------------------------------------------------|
| A    | View global summary for all printers.               |
| B    | View global summary for selected printer group.     |
| C    | View global summary for selected printer.           |
| D    | Summary: Totals of cost and usage for the period.   |
| E    | Set the date that the data started being collected. |
| F    | Report: totals by users, projects or departments.   |
| G    | Set the date that the data stopped being collected. |

You can export the data in different file formats.

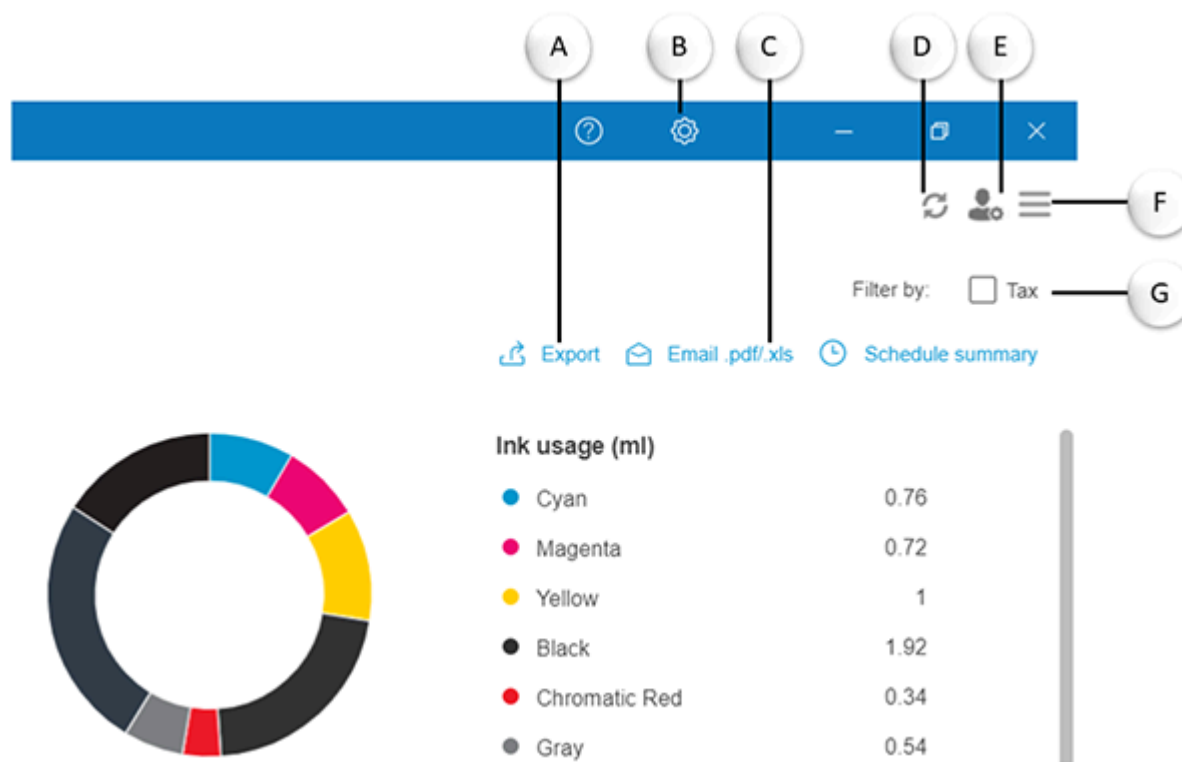

Below are brief descriptions of the various parts of the screen:

**Table 11: Parts of the screen**

| Part | Description                                                                                                                                                                   |
|------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| A    | Export data as PDF or Excel file.                                                                                                                                             |
| B    | Open the <b>Preferences</b> panel*.                                                                                                                                           |
| C    | Send data in an email as a PDF or Excel file. (This option is active only if the <b>HP SmartTracker Email Server</b> was properly configured in the <b>Connectivity</b> tab.) |
| D    | Refresh current view.                                                                                                                                                         |
| E    | Open the <b>Administrator</b> panel*.                                                                                                                                         |
| F    | Open the menu.                                                                                                                                                                |
| G    | Include/exclude taxes.                                                                                                                                                        |

\* These icons are visible to administrator users only.

There are pie charts displaying the total number of pages and printed units according to the settings you configured in the **Preferences** panel. There is another pie chart with the total ink consumed by color and a wheel showing the percentage average coverage:



The summary provides a comparative overview of both costs and prices:



**Note:**

The graphics that appear in the **Summary** tab depend on the preferences you have selected. Any unselected features will appear in gray in the report. If you set any values to zero, the charts will appear as empty, even though the features were selected.


**Note:**

When you select the **Tax** checkbox, reports take into account the tax rate configured in the **Costs/Prices** tab.

## Reports

There are four types of standard reports: by Users, by Projects, by Departments, and Export All (raw data of all jobs in a CSV file format).

Here are examples of reports by Projects:

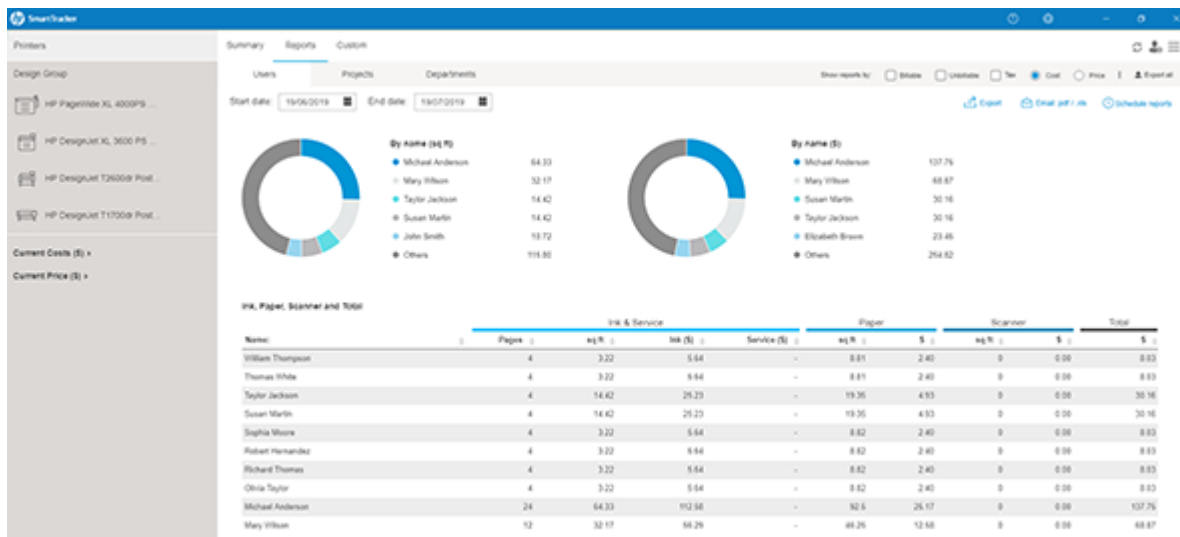


You can view the default report for all printers, a specific printer group or a specific printer.

You can choose the time frame of when the data is collected and the file format to be used when the data is exported.

**Note:**

The application uses the time recorded by the server at the moment the job is printed.

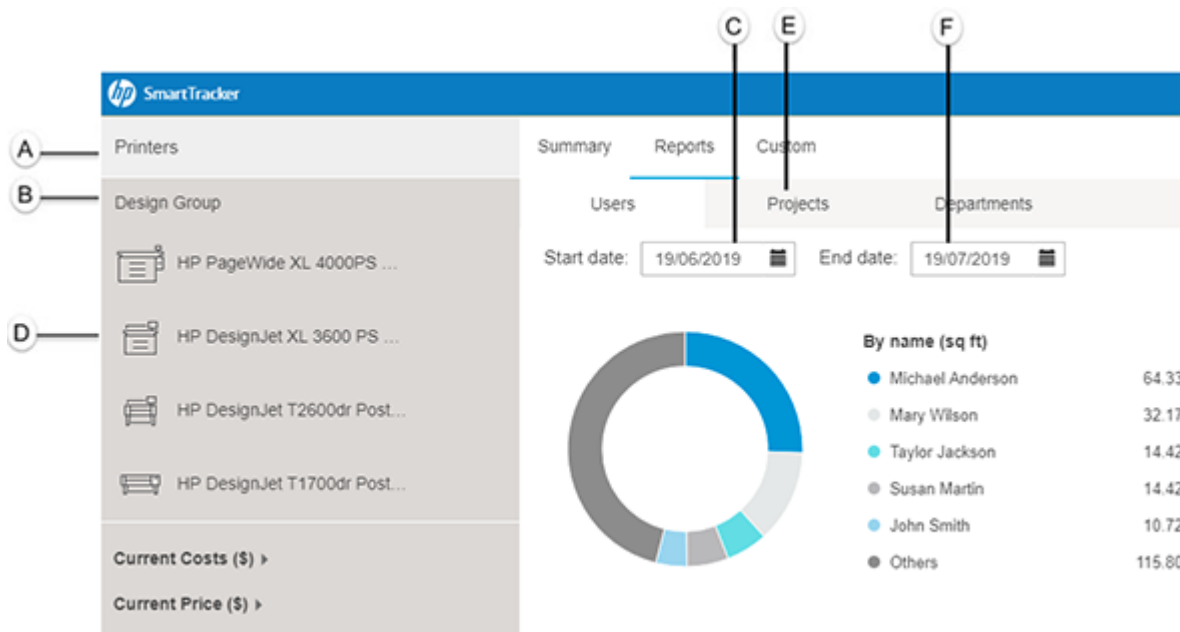

Below are brief descriptions of the various parts of the screen:



**Table 12: Various parts of the screen**

| Part | Description                                         |
|------|-----------------------------------------------------|
| A    | View report for all printers.                       |
| B    | View report for selected printer group.             |
| C    | Set the date that the data started being collected. |

| Part | Description                                                       |
|------|-------------------------------------------------------------------|
| D    | View report for selected printer.                                 |
| E    | View reports for projects included in the selected printer group. |
| F    | Set the date that the data stopped being collected.               |

In the example above, the **Projects** tab is selected. However, you can also view reports for users and departments by clicking the respective tabs.

You can view the data by billable jobs, non-billable jobs as well as jobs by price or by cost. At the top of the screen you can select the options that fit your needs. This is shown in the next image.

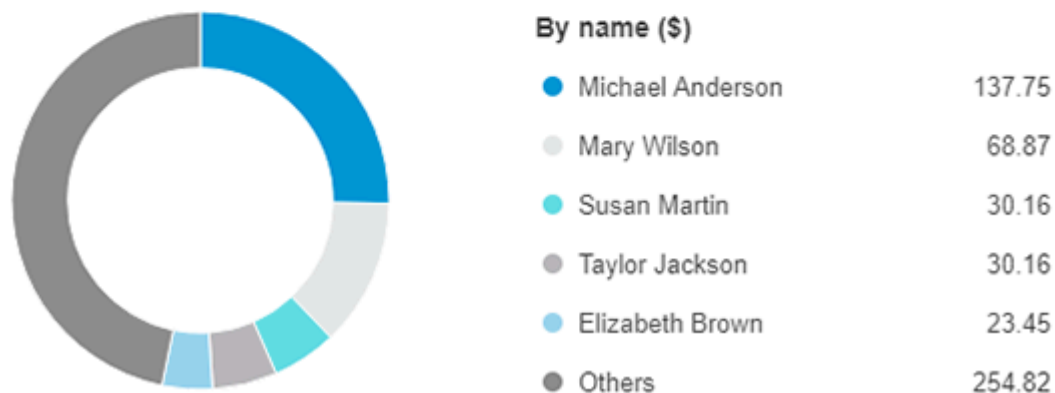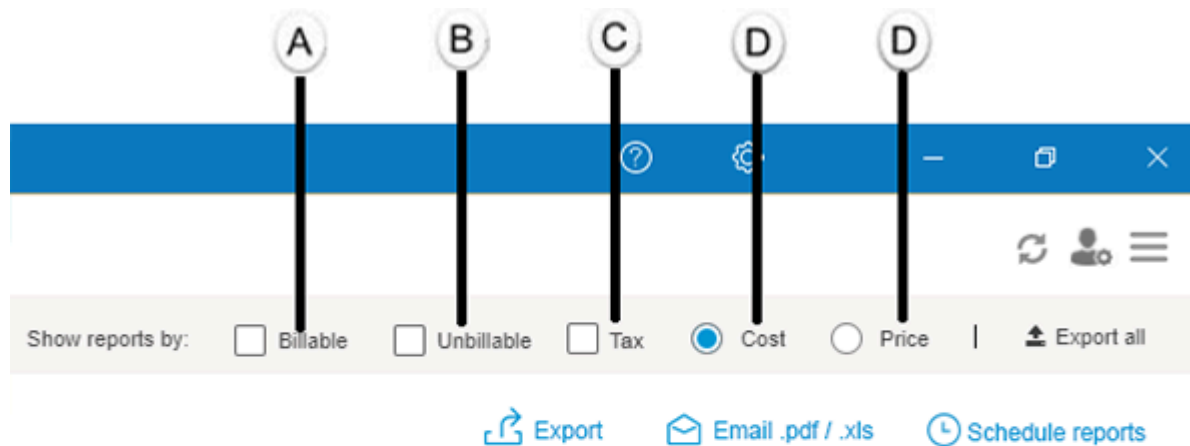

Below are brief descriptions of the various parts of the screen:

**Table 13: Various parts of the screen**

| Part | Description                                          |
|------|------------------------------------------------------|
| A    | Activate to view only billable jobs.                 |
| B    | Activate to view only non-billable jobs.             |
| C    | Activate to view quantities taking tax into account. |

| Part | Description                                                                                                                        |
|------|------------------------------------------------------------------------------------------------------------------------------------|
| D    | Select one of the following options:<br><br><b>Cost:</b> View report data by cost.<br><br><b>Price:</b> View report data by price. |

Data is organized by name in pie charts according to the units of measurement and currency selected when you configured the **Preferences** panel:



The doughnut charts make it easy to view the percentage of the categories being consumed.

There are tables listing the data by ink, paper, and scanner usage according to data recorded by the printers:

Totals by user

| Name: | Supplies & Service |       |          |              | Paper |      | Scanning |      | Total |      |
|-------|--------------------|-------|----------|--------------|-------|------|----------|------|-------|------|
|       | Pages              | sq ft | Ink (\$) | Service (\$) | sq ft | \$   | sq ft    | \$   |       | \$   |
| Name  | 0                  | 0.00  | 0.00     | 0.00         | 0.00  | 0.00 | 0.00     | 0.00 | 0.00  | 0.00 |
| Name  | 0                  | 0.00  | 0.00     | 0.00         | 0.00  | 0.00 | 0.00     | 0.00 | 0.00  | 0.00 |
| Name  | 0                  | 0.00  | 0.00     | 0.00         | 0.00  | 0.00 | 0.00     | 0.00 | 0.00  | 0.00 |
| Name  | 0                  | 0.00  | 0.00     | 0.00         | 0.00  | 0.00 | 0.00     | 0.00 | 0.00  | 0.00 |

[Load more](#)

The table makes it easy to view and compare data per project including the number of pages used, quantity of ink consumed, the total cost and the total price.

You can see specific data for the preferences you configured in the table:

Print by name


| Name      | Mono lines |        |       | Color lines |        |       | Low density |        |      | High density |        |      | Premium quality |        |     |
|-----------|------------|--------|-------|-------------|--------|-------|-------------|--------|------|--------------|--------|------|-----------------|--------|-----|
|           | Pages      | Sq. ft | USD   | Pages       | Sq. ft | USD   | Pages       | Sq. ft | USD  | Pages        | Sq. ft | USD  | Pages           | Sq. ft | USD |
| Project 1 | 0          | 0.00   | -     | 4           | 14.24  | 14.24 | 0           | 0.00   | -    | 0            | 0.00   | -    | 0               | 0.00   | -   |
| Project 2 | 2          | 13.33  | 13.33 | 7           | 22.28  | 22.28 | 1           | 2.68   | 2.68 | 1            | 5.37   | 5.37 | 0               | 0.00   | -   |
| Project 3 | 2          | 10.75  | 10.75 | 8           | 35.74  | 35.74 | 1           | 2.68   | 2.68 | 1            | 5.37   | 5.37 | 0               | 0.00   | -   |
| Project 6 | 1          | 5.37   | 5.37  | 3           | 13.43  | 13.43 | 1           | 2.68   | 2.68 | 0            | 0.00   | -    | 0               | 0.00   | -   |

## Custom

Choose the **Custom** tab to create your own report according to your needs.

Next, decide if you want to create a report based on users, projects or departments. Make your choice by clicking the corresponding sub-tab. In the example below, the Projects sub-tab is selected:



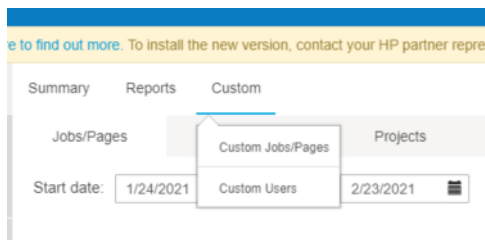

You can see the template of your custom report contains gray panels. The smaller panels are where the graphs you choose will be displayed. The larger panels are for displaying tables depending on the data you choose to show.

To create a panel, click the **New panel** button.

To configure a panel, click the  icon. The following window opens:

The type of image you want to display affects the options available later:

- **Graphic:** To add a graph
- **Table:** To add a table

If you selected **Graphic**, you can choose which values to compare:

- **Same values:** To add a pie chart
- **Different values:** To add a bar chart


You can then choose the units you want to display in your custom report:

- **Usage:** This will display the use of ink, paper, and scanner
- **Fees:** This will display data by cost/price, billable, non-billable, both billable and non-billable together.

Select the value you want to show based on the unit you chose above.

Finally, select the name of the project you are creating the report for. In this example, the report is for a project since the project sub-tab was selected at the beginning. However you also have the option to create reports for departments and users.

If on the other hand you selected **Table**, the window below is displayed:

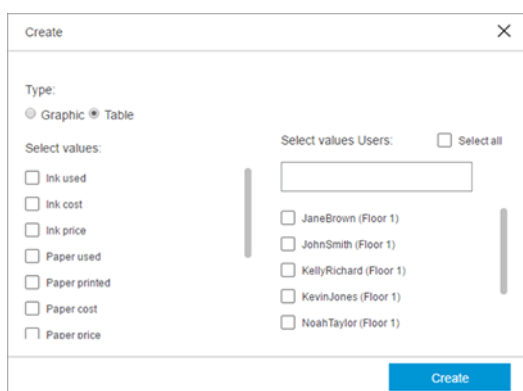


You can now choose all the values and projects (or users or departments, depending on the sub-tab selected) that you want to see in the report. Selected projects/users/departments move to the top of the list.

Click the **Create** button to save your choices and close the window.

Once you have created the panels you want, you can drag-and-drop them to the position you prefer.

To delete a panel, click the  icon.

To view previously created custom reports, hover over the **Custom** menu:

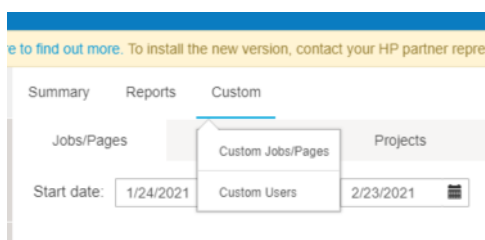

Click the report you want to open.

To delete a report, hover over the **Custom** menu and, when the menu appears, choose the report you want to delete. Once the report is displayed on-screen, click the **Delete** button. If you hover over the **Custom** tab again, you will see that the deleted report no longer appears in the list.

You can also create a customized raw data report with all the information related to the jobs and pages, and export it to a csv formatted file. First you must select the information per job to be exported, such as Username, Project, Department, Date, Ink cost by usage, Paper price, and so on. The end and start dates for the report must also be selected.

## Custom jobs/pages (raw data)

Custom jobs/pages reports are a special type of data table report in which the user can select the information to be shown for each job that has been printed during the selected time frame.

When viewing a report already created and clicking the  icon or the  icon, a new window will appear showing all the available values for a job. The user can select values to be used in the report, rename the column names, and change the order in which they should appear.

Once all the desired values have been selected and placed in the correct order, the user can click the **Save** button to close the window and confirm the selections made.

Once the values have been confirmed, the report is automatically populated with the values stored in the database for each job included in the time frame selected.


## Custom logo

This topic provides a full set of reference information for this subject.

### Note:

Administrators only

To configure or change a logo to be included in the reports, click the  icon to open the **Preferences** panel and by clicking the **Options** tab a screen, as shown below, will be displayed:

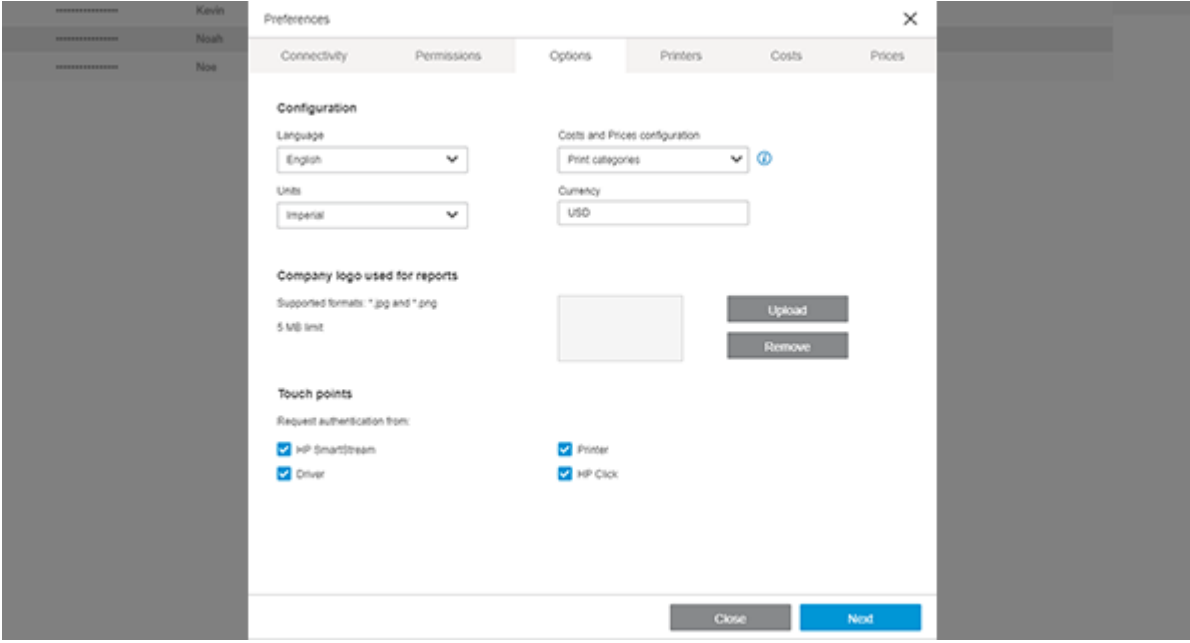

Preferences

Connectivity Permissions Options Printers Costs Prices

**Configuration**

Language: English

Units: Imperial

Costs and Prices configuration

Print categories: [dropdown]

Currency: USD

**Company logo used for reports**

Supported formats: \*.jpg and \*.png  
5 MB limit

Upload Remove

**Touch points**

Request authentication from:

☒ HP SmartStream ☒ Printer

☒ Driver ☒ HP Click


Close Next

To upload a logo image file click the **Upload** button and a window will open so you can browse for the image to be used. The uploaded image must adhere to the characteristics mentioned in this screen.

If a logo has already been uploaded, click the **Remove** button to remove it.


Once a logo is uploaded, it is immediately available to an administrator or bookkeeper for use in a report to be exported.

By default the option to **Include company logo** is checked.

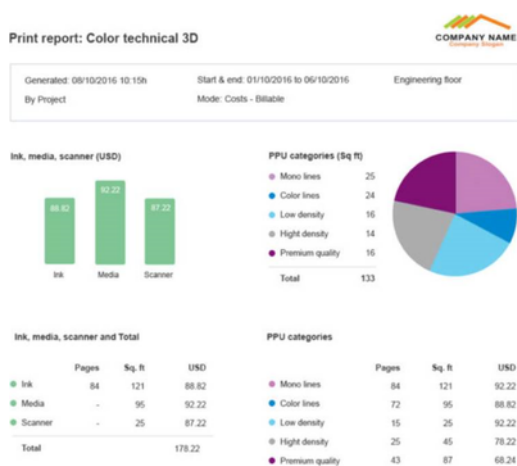

## Database management

**Database management** is available inside the  menu.

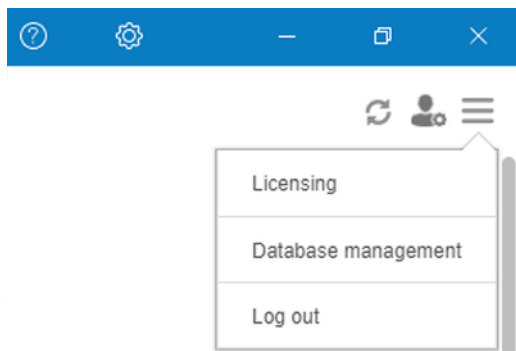


If the SmartTracker client is installed in a different PC than the server, the **Database management** option is unavailable (the option is only for administrator roles).

### Restore

To restore the database from a previous backup, select the **Database management** option and, under **Restore backup**, click the **Restore now** button. This opens the File Explorer, where you can select the required backup to restore (backups are stored with a **.bk** file extension).

## Support tool

For troubleshooting, an integrated support tool has been added to the  menu.

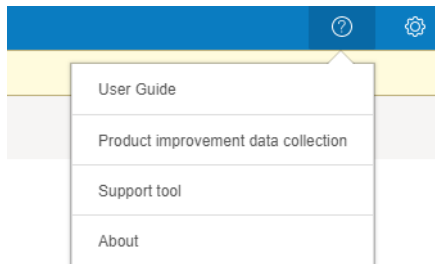

It gathers information about the computer running it, and the server and client versions.

It also includes the following options to help test the printer and SmartTracker software recover from a problem. Fill in the printer IP address or hostname.

Support tool

Information Printer tester Log collector

IP address/hostname:

Check

|                                 |                                            |
|---------------------------------|--------------------------------------------|
| Printer model: -                | Firmware version: -                        |
| License: not available          | Type of license: -                         |
| Printer in SmartTracker mode: - | Server IP address registered in printer: - |
| Graceful Fallback: -            | Open accounting response: -                |
| Printer timestamp: -            | ST Server timestamp: -                     |
| Proxy configured: -             | Proxy server name: -                       |
| Proxy server port: -            |                                            |

Save results

Close

Click the **Check** button, and a set of checks run automatically.

Support tool

Information Printer tester Log collector

IP address/hostname:

Check

|                                              |                                                        |
|----------------------------------------------|--------------------------------------------------------|
| ✓ Printer model: HP PageWide XL 3900PS MFP   | ✓ Firmware version: NGR_13_02_01.1                     |
| ✓ License: Available                         | ✓ Type of license: Trial (111 Days)                    |
| ✓ Printer in SmartTracker mode: Yes          | i Server IP address registered in printer: 15.93.4.174 |
| i Graceful Fallback: Active                  | ✓ Open accounting response: Success                    |
| ✓ Printer timestamp: 2019-07-19 14:45:32 UTC | ✓ ST Server timestamp: 2019-07-19 14:45:13 UTC         |
| ✓ Proxy configured: No                       | i Proxy server name: -                                 |
| i Proxy server port: -                       |                                                        |

Save results

Close

You can save the client and server logs.

Support tool

Information Printer tester Log collector

① Create a log package of application to get better technical support.

Client logs package

Get logs

Server logs package

Get logs

Close

**Note:**

Server-logs package generation is unavailable when the HP SmartTracker Client is installed on a PC other than the Server.

## Manual update

Whenever a new version of the application is available, the SmartTracker client notifies you. You can download the client and the server from [hp.com](http://hp.com).


If you prefer not to update at that time, just discard the message and check for updates whenever you like from the **About** menu in the client application.

If the outgoing email has been properly configured, an email is sent to the administrator.

Make sure to update the server, plus any client that is installed, with exactly the same version number. Other versions may not be compatible.

## Logging out

To log out of HP SmartTracker, click the  icon and choose **Log out** from the menu.

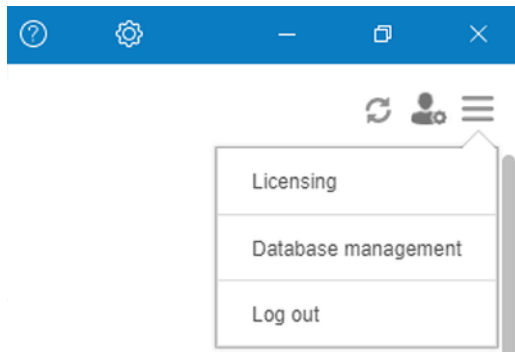

You are successfully logged out of the application. To log in again, you will need to enter your username and password.

# Index

## A

about the home screen [38](#)  
 accounting [28](#)  
 add files [20](#)  
 application error [31](#)

## B

billable, marking a job as [39](#)

## C

cancel jobs [24](#)  
 color management [24](#)  
 connectivity [34](#)  
 copy job/pages [21](#)  
 costs [36](#)  
 costs, setting [36](#)  
 create a job [20](#)  
 csv, import/export [41](#)  
 currency, setting [36](#)  
 custom [48](#)  
 custom jobs and pages [50](#)  
 custom logo [51](#)

## D

database management [52](#)  
 departments [41](#)  
 driver  
     installation [5](#)

## E

excluded pages [23](#)  
 export csv [41](#)

## F

filter, remove [40](#)  
 filtered pages [23](#)  
 filtering [40](#)

## G

generating reports [41](#)  
 getting started  
     HP SmartStream [18](#)  
 gloss enhancer [20](#)

## H

history [25](#)  
 hot folders [27](#)

HP Click  
     job preparation [14](#)  
     nesting [14](#)  
     preferences [14](#)  
     printing [15](#)  
     troubleshooting [15](#)  
 HP Click application [13](#)  
 HP SmartStream  
     getting started [18](#)  
     shortcut keys [33](#)  
 HP Support [8](#)

## I

image [23](#)  
 import csv [41](#)  
 installation [13](#)  
 introduction [13](#)

## J

job preparation [20](#)  
     HP Click [14](#)

## L

language, setting [36](#)  
 languages, supported [13](#)  
 licensing [13](#)  
 logging out [54](#)  
 logo, setting [36](#)

## M

manual update [54](#)  
 mirror [23](#)  
 move job/pages [21](#)

## N

N-up printing [21](#)  
 nesting [21](#)  
     HP Click [14](#)

## O

options [36](#)

## P

page [23](#)  
 permissions [34](#)  
 preferences  
     HP Click [14](#)  
 presets [19](#)  
 preview [22](#)

- prices [38](#)
- prices, setting [36](#)
- printer
  - change address [18](#)
- printers [34](#)
- printers pane [18](#)
- printing [23](#)
  - HP Click [15](#)
- printing queue [23](#), [23](#)
- projects [41](#)

## Q

- queue [23](#)

## R

- raw data [50](#)
- reports [45](#)
- requirements [13](#)
- restore [52](#)
- roll [23](#)

## S

- scanning [27](#)
- shortcut keys
  - HP SmartStream [33](#)
- stamps [20](#)
- submission driver [31](#)
- summary [42](#)
- support tool [52](#)

## T

- troubleshooting
  - HP Click [15](#)

## U

- units, setting [36](#)
- updates, automatic [13](#)

## W

- workflow management module [32](#)