


AMPEX D-175 CRT BOARD – PHOTO TRACE BLOCK MAP

This first KiCad sheet intentionally uses blocks rather than final symbols. Replace each block with symbols as pads/nets are confirmed.

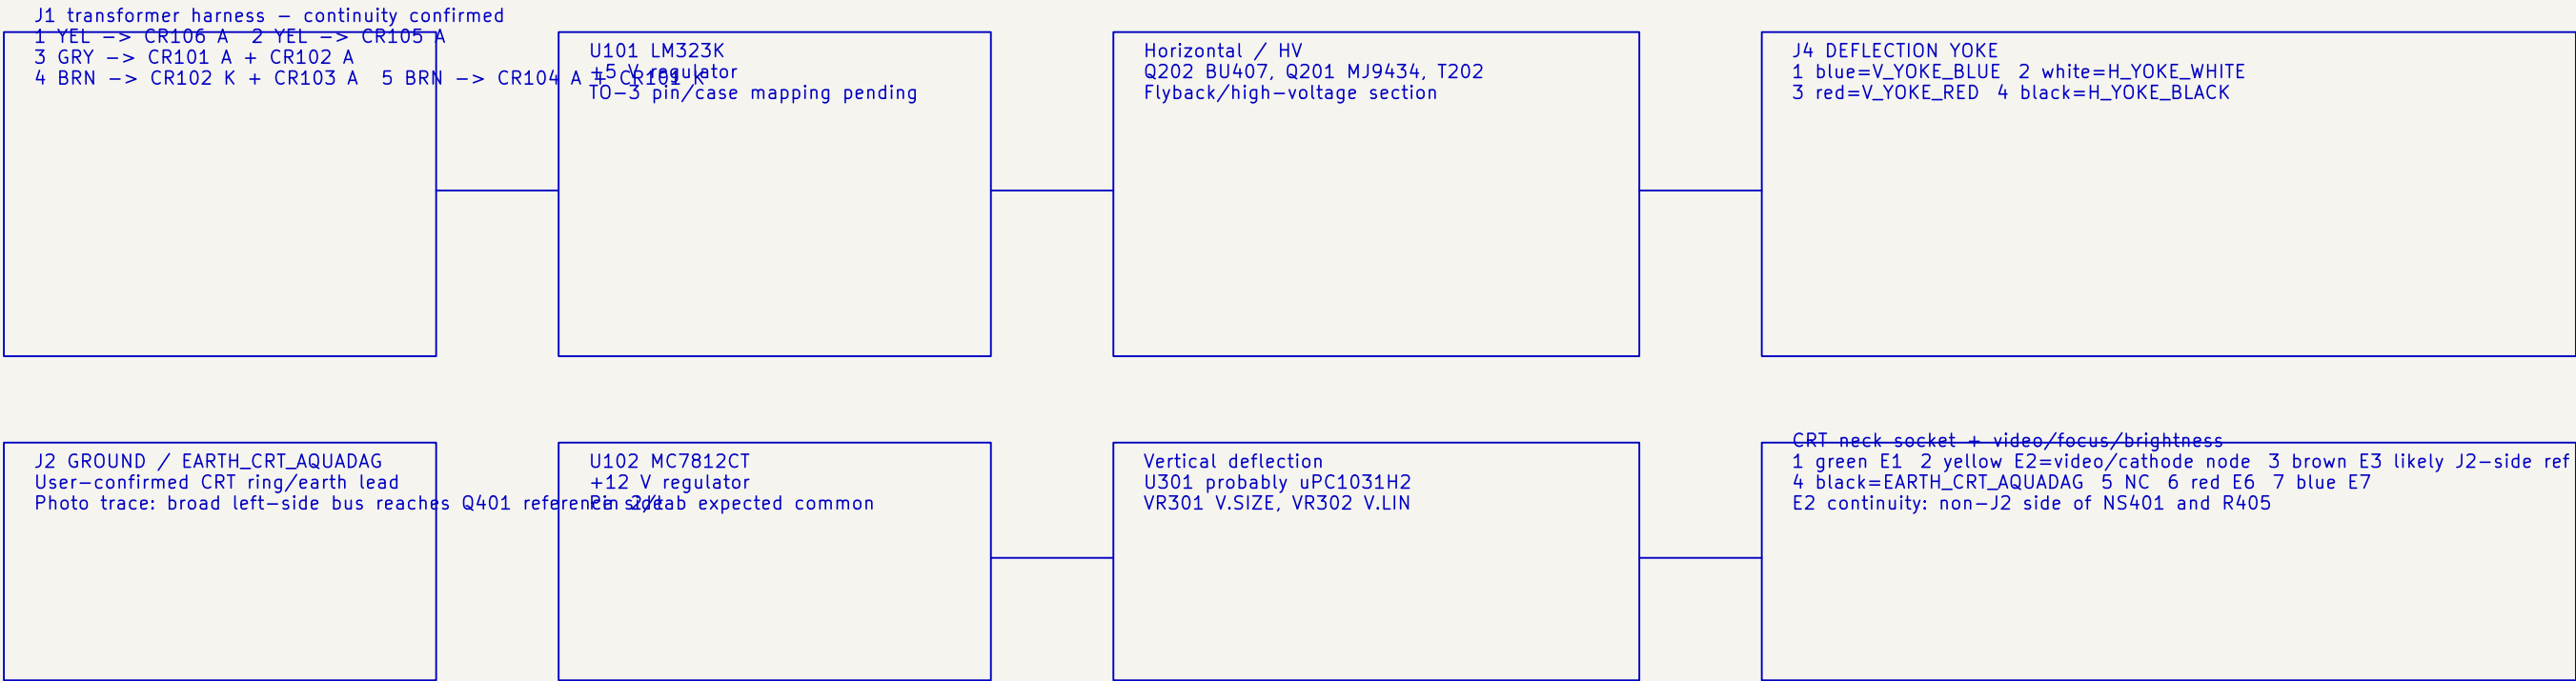

Next schematic milestone: use board-rectified front/back overlays to replace blocks with component symbols; use continuity only as targeted tie-breakers.