




Manual

for

Lynx 2 Slackline Anchor

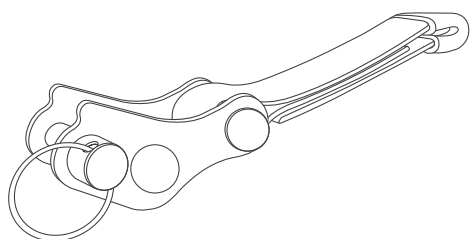

Rev. 2.1



! Caution !

Activities under the use of the Lynx are potentially dangerous.

You are responsible for your own actions and decisions.

Note the following before you use the Lynx:

- Read this manual completely
- Get familiar with the behaviour and limitations of the Lynx
- Step up carefully to higher pretensions and longer slackline lengths
- Understand the risks involved in the use of the Lynx, especially while longlining

! Load Limit (WLL) !

The Lynx should be used up to a **maximum pretension of 12 kN**

Breaking Strength of Lynx metal body > 36 kN
Effective webbing breaking strength
(e.g. new White Magic approx. 27,5 kN)

1. Intended use

The Landcruising Lynx is a slackline anchor tool for webbings of 25 mm (1 inch) width and 3.5 mm max. thickness. Any other use is prohibited.

No use of Dyneema, Dyneema-Hybrid and rubber-printed webbings with the Lynx danger of slipping and pin failure beyond 8kN!!


The Lynx may not be used in the setup of highlines. The maximum height of a slackline anchored with the Lynx is 2 meter.

The maximum tension in the slackline of 12 kN may not exceeded during setup and slacklining. The user is responsible for the control of the tension (simple middle sag - check as minimum)


The use of the Lynx and the thread of the webbing strictly following the method described in section 3 of this manual. Other webbing threading methods are prohibited.

2. Naming of parts

1. Side Plate, 2. Deviator, 3. Sling (alternative centrifrication sheath), 4. Screw Bolt, 5. Quickpin

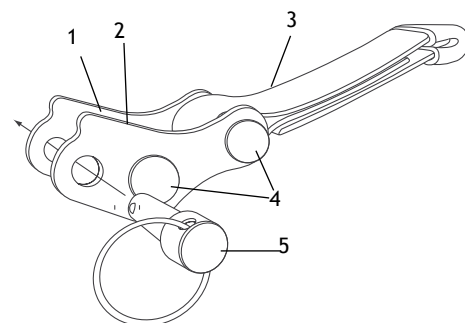

3. Threading the webbing

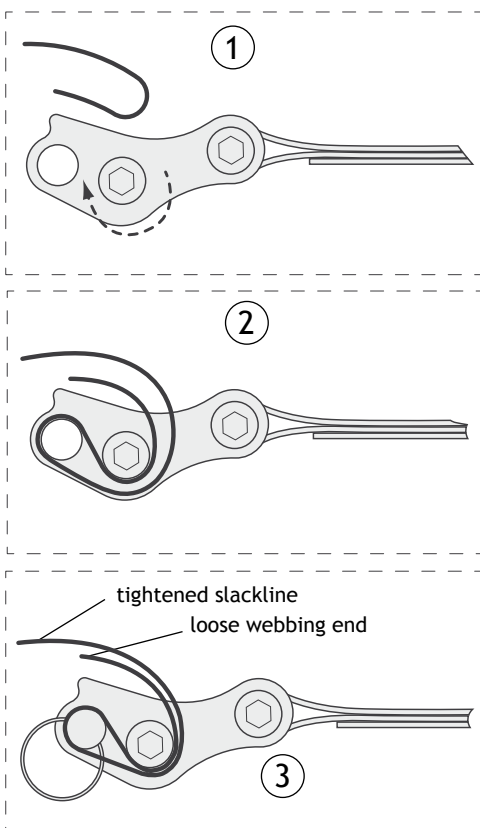


Pretightening - after locking the Quickpin, the loose webbing end can be pulled by hand while feeding the slackline with the other hand.

Take care of proper slackline centering!

4. Locking the Quickpin

The Quickpin must be securely locked after threading the slackline and before tightening!

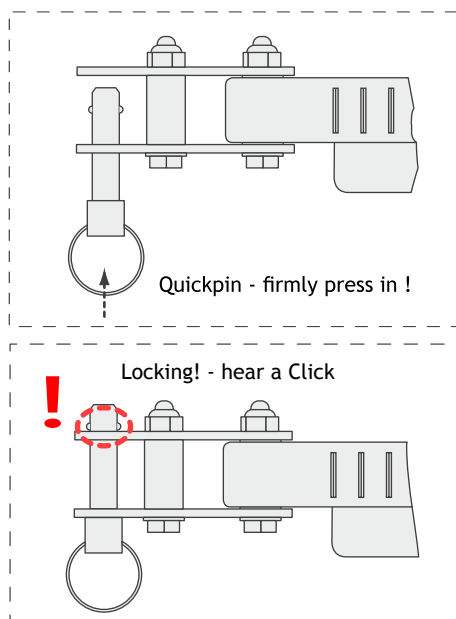

5. Note on setup options

The Lynx is delivered in 2 assembly options:

1. Variant with express sling for direct assembly to shackles - be aware of secure closure of the shackle pin.
2. Pulley variant with centering sheath instead of sling - the sheath centers the pulley - fasten the nut with 20 Nm.

6. Storage and removal

The Lynx needs dry storage - all parts bolts are made of corrosion resistant materials.

The screws are threaded with thread adhesive.

The screwing of the middle bolt with the deviator is prohibited.

Tighten the rear bolt to 20 Nm while assembling the Lynx to a double pulley. Center the inner thread bushing properly!

Caution! - loose screw or over tightening of the screw is prohibited

7. Disclaimer

Warranty:

The legal warranty is valid. Excluded are normal wear/tear, modifications/changes and damages caused by improper use.

We, as manufacturer and seller, are not responsible for injuries, consequential or/and incidental damages resulting from the use of the Lynx.

You assume full responsibility to all risks and property damage, personal injury or death which may arise in combination with improper use of the Lynx.

If you want not take this responsibility and risk, or if you not allowed to take full responsibility - don't use this product.