Vassole Smart Player IPTV

UX Scenario for LG App QA · App ID **com.vassole.smartplayer** · version 1.1.0 · webOS 4.0+ (2018 and later)

1. What the app is

A media player for the user's own IPTV sources: M3U/M3U8 playlist links and Xtream Codes accounts supplied by the user's provider. **The app contains no channels or content of its own** and does not sell or recommend any source. On first launch it is empty and asks the user to add a playlist.

Login / account	None. The app has no user accounts and no sign-in.
In-app purchase	None. The app is free.
In-app ads	None.
Data collection	None. Playlists, favorites, history and settings are stored only on the TV. Privacy policy: `https://github.com/IsaacEduardo/Vassole-Smart-Player-IPTV/blob/main/store/politica-de-privacidade.md`
Languages	UI in Portuguese (Brazil). Store texts in English and Portuguese.

2. Test playlist for QA

Use this public M3U playlist. It contains only free demo streams (Apple HLS examples, Mux test streams, Blender open movies):

`https://raw.githubusercontent.com/IsaacEduardo/Vassole-Smart-Player-IPTV/main/store/lista-teste.m3u`

Live TV (4 HLS channels)	Apple BipBop (with audio and subtitle tracks), Apple BipBop 16x9, Big Buck Bunny (HLS), Tears of Steel (HLS with subtitles)
Movies (3 MP4)	Sintel (trailer), Big Buck Bunny (trailer), Big Buck Bunny (10 s, 1080p)

3. Test steps

1. **Launch** the app. The splash screen appears, then the welcome screen ("Bem-vindo") with the button **Adicionar playlist** (Add playlist).
2. Press **OK** on **Adicionar playlist**. In the form, choose the tab **Link M3U**.
3. Enter any name in **Nome** (e.g. "Test") and the test playlist URL above in **Link da playlist M3U**. The on-screen keyboard or the Magic Remote can be used.
4. Press **Adicionar e carregar** (Add and load). A message shows "4 canais, 3 filmes" and the Home screen (**Início**) opens.
5. Open **TV ao vivo** (Live TV) in the left menu. Select a channel: it plays in the preview on the right. Press **OK** again (or **Tela cheia**) for full screen.


6. In full screen: **Up/Down** or **CH+/CH-** change channel; **OK** shows the control bar (play/pause, audio, subtitles, aspect ratio, favorite, close).
7. With **Apple BipBop (audio and subtitle tracks)**: open **Audio** and **Legendas** (subtitles) in the control bar to switch tracks.
8. Press **Back** to leave full screen and return to the list.
9. Open **Filmes** (Movies), choose a movie and press **Assistir** (Watch). **Left/Right** seek 10 s; the media keys **Fast-forward/Rewind** seek 30 s; **Play/Pause** pauses; **Stop** closes the player.
10. Close the movie halfway: it appears in **Continuar assistindo** (Continue watching) on the Home screen.
11. **Ajustes** (Settings) › **Controle parental**: create a PIN (4 to 8 digits). Categories can then be locked with the PIN.
12. On the Home screen press **Back**: the dialog "Sair do app?" (Exit app?) appears; choose **Sair** to exit.

4. Remote control keys


Arrows / OK	Navigate and select (Magic Remote pointer also works)
Back (461)	Go back; on Home, asks to exit the app
CH+ / CH-, 0-9	Change channel / type a channel number in full screen
Play/Pause (415/19), Stop (413)	Pause or resume; Stop closes the player
Fast-forward / Rewind (417/412)	Seek +30 s / -30 s in movies

> When the app goes to the background (Home key or input change), playback pauses. On return, a movie continues where it was and a live channel reloads.


5. Screens

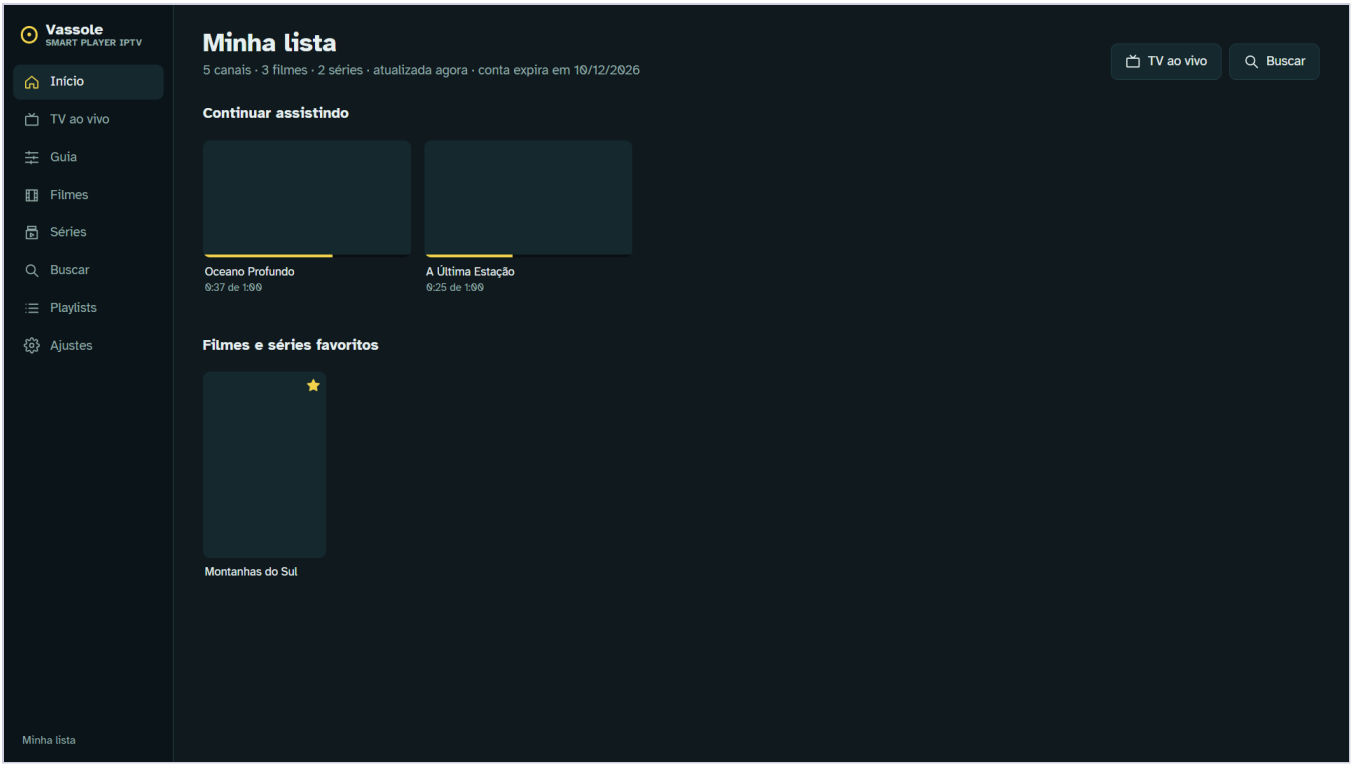


Home (Início): continue watching and favorites.

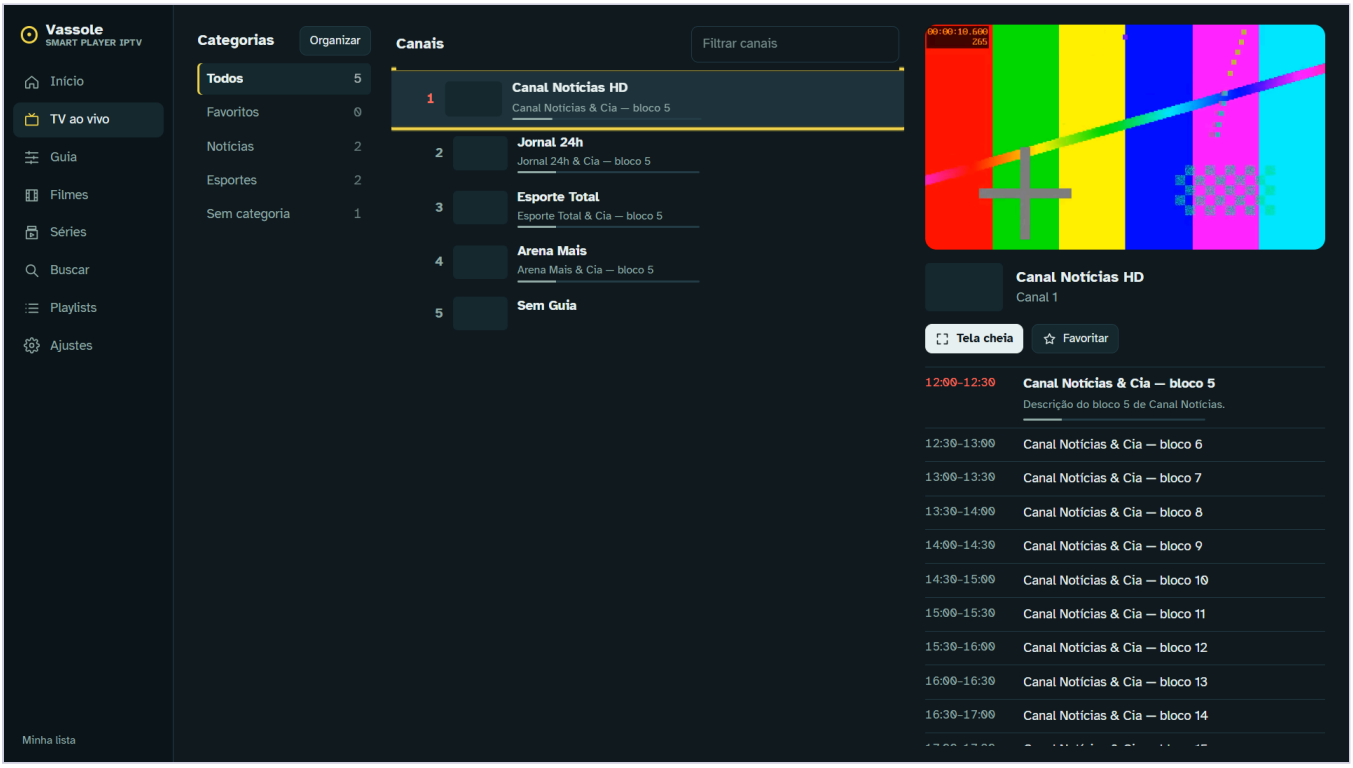


Live TV: categories, channel list, preview and program guide.

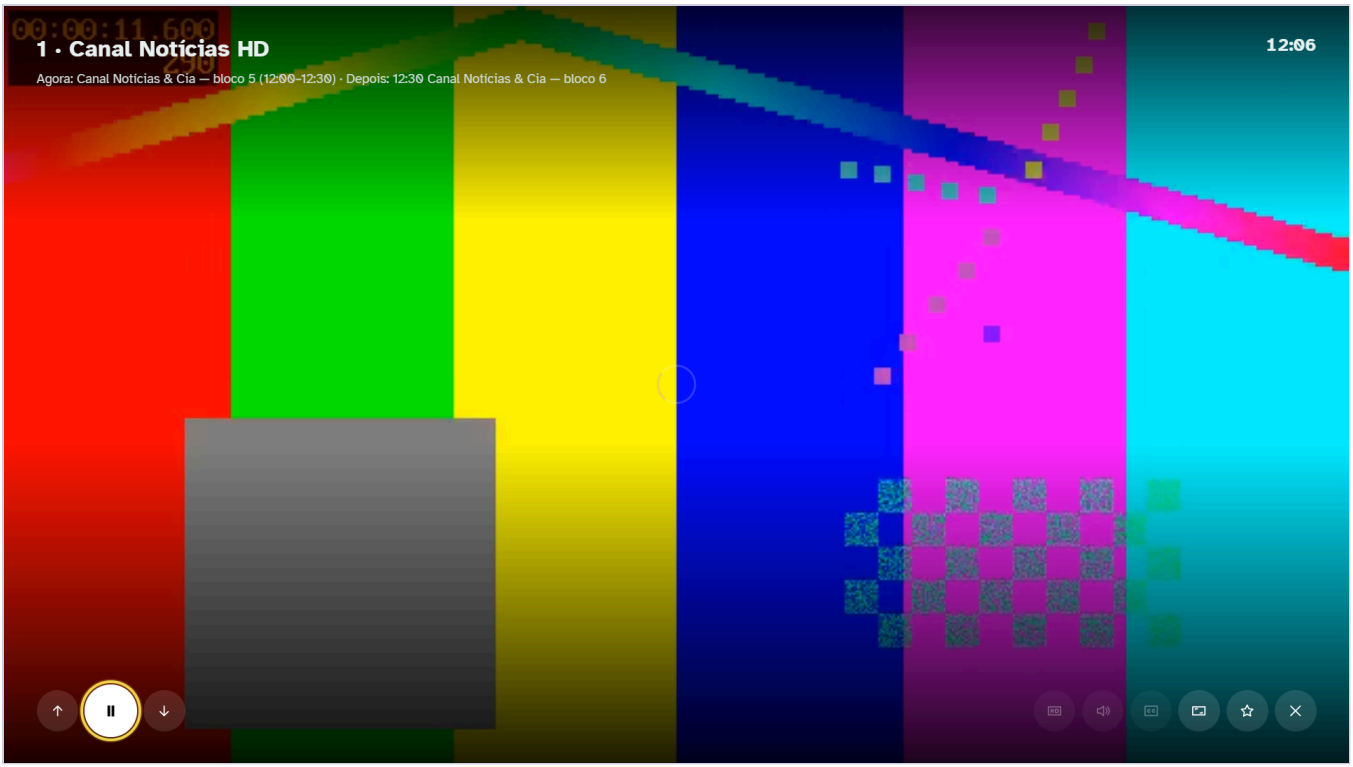


Full screen player with the control bar.

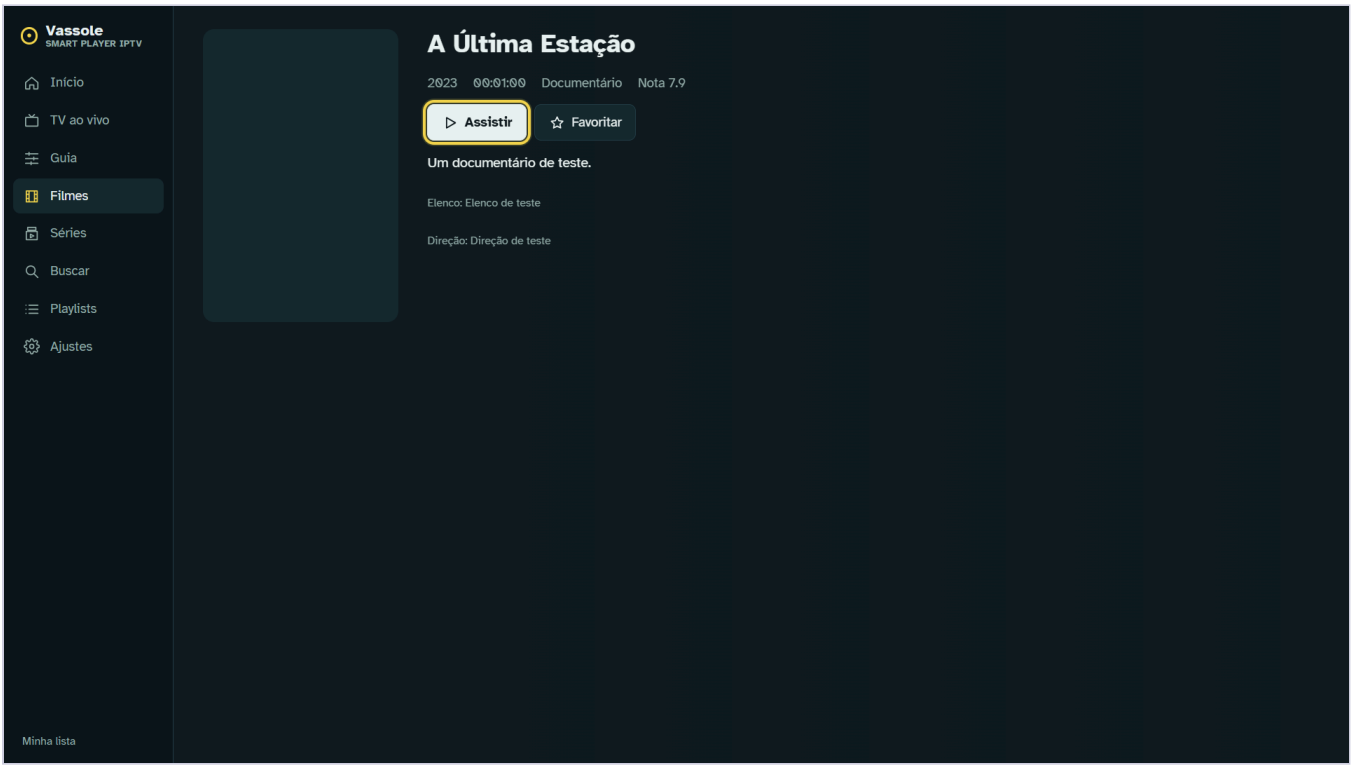

Movie details with Watch and Favorite.

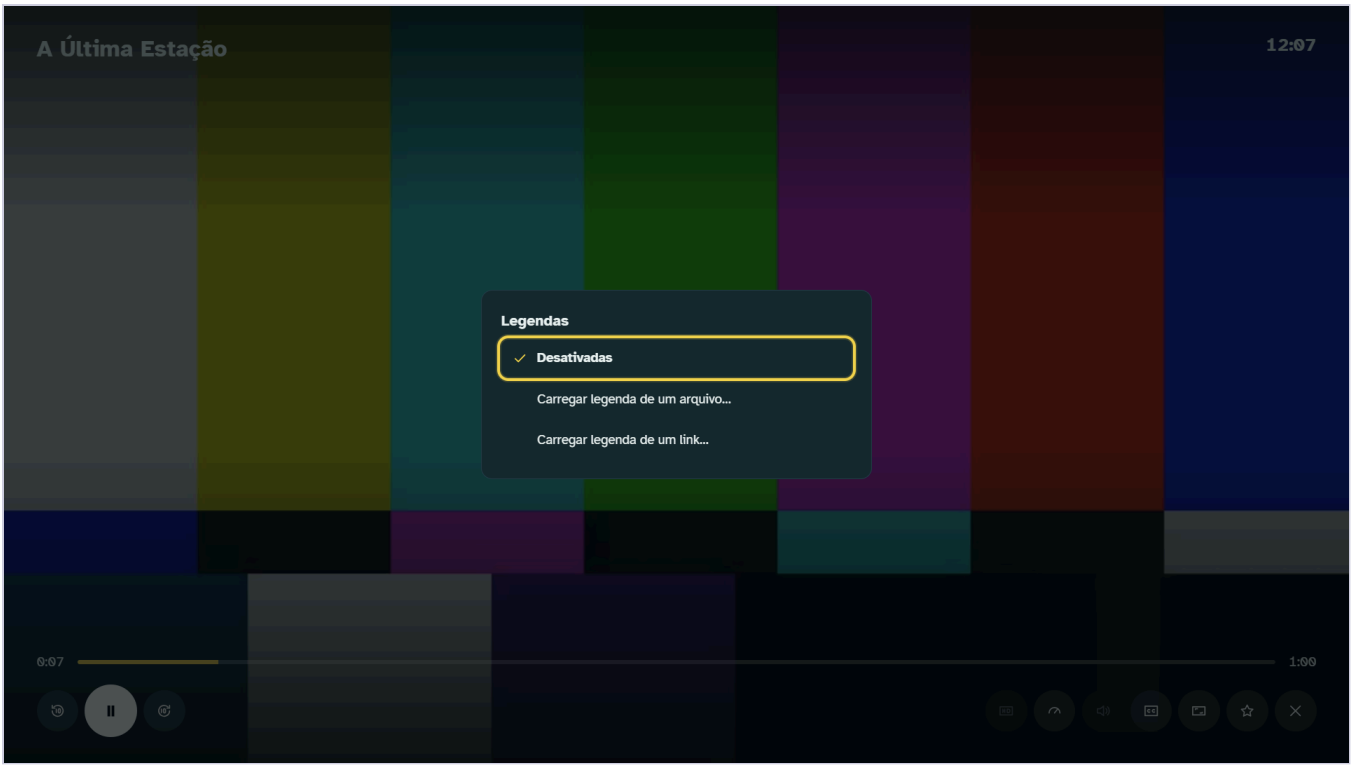

Subtitles menu in the player.

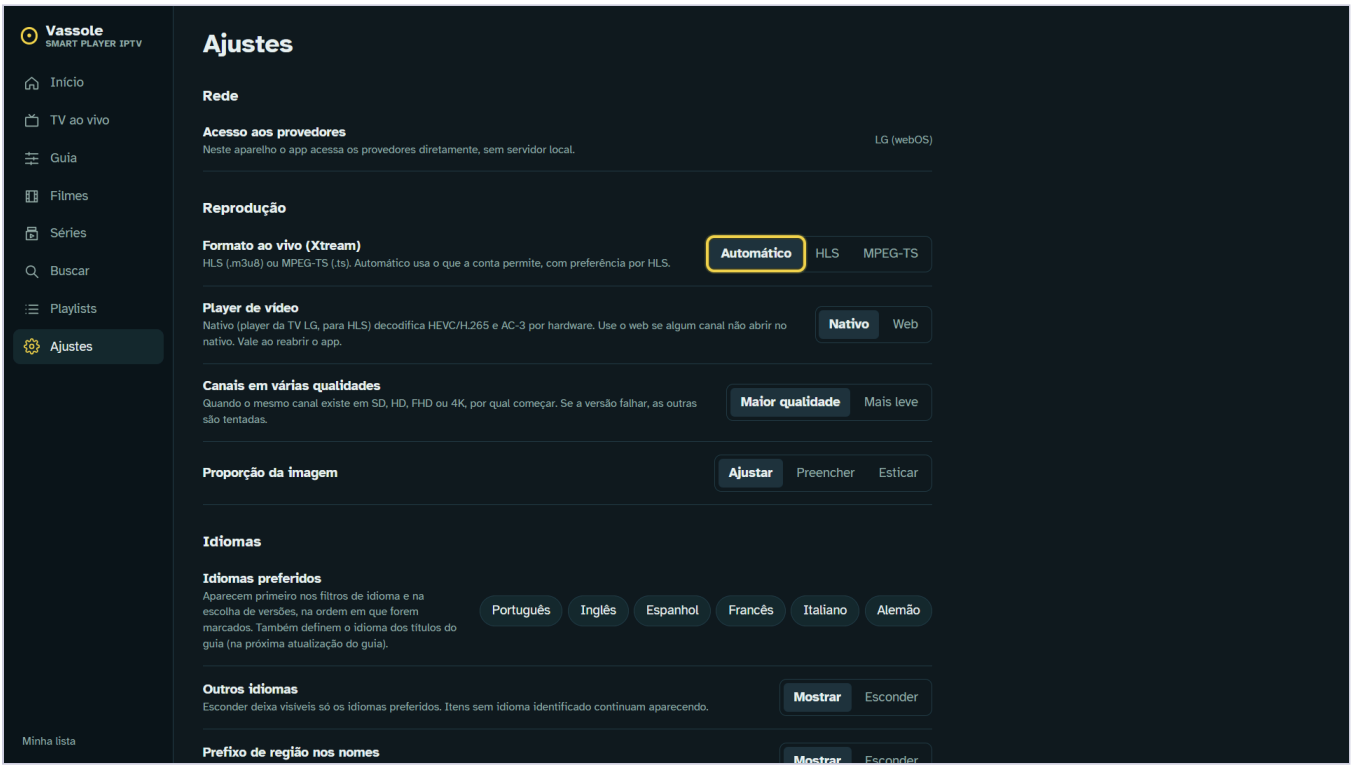

Settings (playback, parental control, subtitles, data).

Screenshots were taken with a local test provider containing fictitious names and test-pattern videos.