INSTRUCTIONS FOR USE

FLAT-JACK CAMPER 2.0

for campers and caravans



Congratulations on the purchase of your flat-jack

Thank you for your trust in our product. In these user instructions document we show you step by step how you can use your flat-jack camper 2.0 for campers and caravans. For caravan owners there is a special user instruction (page 8) which is a little different from campers. Please read these user instructions in detail and fully before you start using your flat-jack. We advise you to print these user instructions and store them in your caravan or camper as a reminder when putting up your caravan or camper. We wish you lots of holiday pleasure. If you have any questions, mail us at info@flat-jack.nl

www.flat-jack.nl
(part of the Only Cabrios group)
Oosteinde 25
8351 HA Wapserveen
The Netherlands (HOLLAND)

info@flat-jack.nl
Phone: 0031-620739724
VAT No.: NL002013623B73
Chamber of Commerce: 50126237

IBAN: NL68INGB0005291213
Bic/Swift code: INGBNL2A

TABLE OF CONTENTS

CAUTION 2

QUICK START 4

GENERAL INSTRUCTIONS FOR USE OF FLAT-JACK CAMPER 2.0 FOR CAMPERS AND OTHER VEHICLES 5

1. **PREPARATION CAMPING GROUND PLACE FOR FLAT-JACK**
2. **PLACEMENT OF FLAT-JACKS**
3. **INFLATION OF FLAT-JACKS**
4. **STANDING ON THE FLAT-JACKS**
5. **DEFLATION OF FLAT-JACKS**

INSTRUCTIONS FOR USE FLAT-JACK CAMPER 2.0, SPECIFICALLY FOR CARAVANS 9

TERMS OF GUARANTEE 13

www.flat-jack.nl
(onderdeel van de Only Cabrios groep)
Oosteinde 25
8351 HA Wapserveen
HOLLAND

info@flat-jack.nl
telefoon 0031-620739724
BTWnr.: NL002013623B73
KvKnr.: 50126237 KvK Tiel (NL)

IBAN: NL68INGB0005291213
Bic/Swift code: INGBNL2A

flat-jack®

camper / caravan edition

Achtung!

Bitte die Anweisungen in der Bedienungsanleitung beachten.

- /// Vor Benutzung Untergrund von scharfen Gegenständen oder Steinen befreien und/oder eine geeignete Unterlage verwenden
- /// Nur belastet (mit Fahrzeug) aufpumpen
- /// Nicht über die Ventile fahren
- /// Handbremse anziehen
- /// Gang einlegen oder Automatikhebel auf (P)
- /// Anschließend am Füllventil (IN) aufpumpen. Nicht weiter befüllen, wenn Höhenbewegung des Fahrzeugs stoppt
- /// Vor dem Abfahren flat-jack® am Ablassventil (OUT) entleeren
- /// Bei starker Sonneneinstrahlung abdecken

flat-jack®

camper / caravan edition

Caution!

Please carefully read the owner's manual.

- /// Before use please clear space from sharp objects or stones and/or place protection underneath
- /// Only inflate loaded (with vehicle on top)
- /// Do not roll over valves
- /// Apply parking brake
- /// Manual transmission: engage first gear
  Automatic transmission: select (P) - park gear
- /// Fill flat-jack® at the inflation valve (IN).
  Stop inflating when vehicle stops lifting
- /// Before driving off deflate flat-jack® at the drain valve (OUT)
- /// Protect from extreme exposure to sunshine

Flat-jack.nl / Camping-jack.eu
Oosteinde 25, 8351HA Wapserveen
The Netherlands / Holland
Tel. +31 (0) 620739724
info@flat-jack.nl

Flat-jack.nl / Camping-jack.eu
Oosteinde 25, 8351HA Wapserveen
The Netherlands / Holland
Tel. +31 (0) 620739724
info@flat-jack.nl

flat-jack®


Flat-jack.nl / Camping-jack.eu


Oosteinde 25
8351 HA Wapserveen
The Netherlands / Holland

Tel: +31 (0) 620739724
E-Mail: info@flat-jack.nl

NL versie

EN version

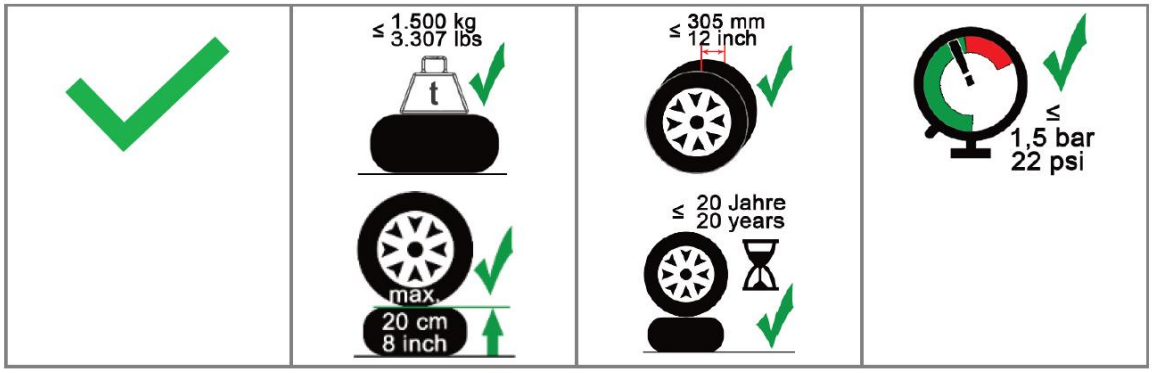

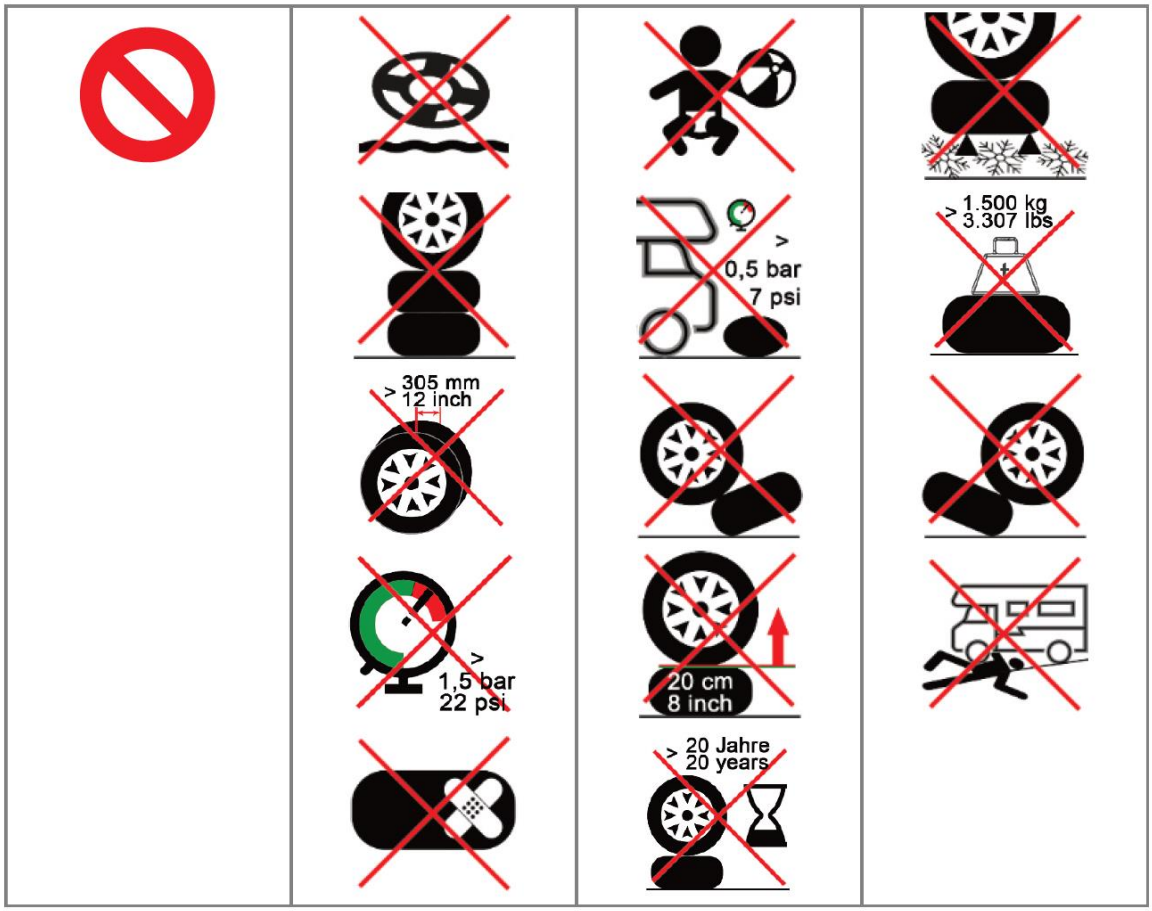


Flat-jack.nl / Camping-jack.eu

Oosteinde 25
8351 HA Wapserveen
The Netherlands / Holland

Tel: +31 (0) 620739724
E-Mail: info@flat-jack.nl

QUICK START

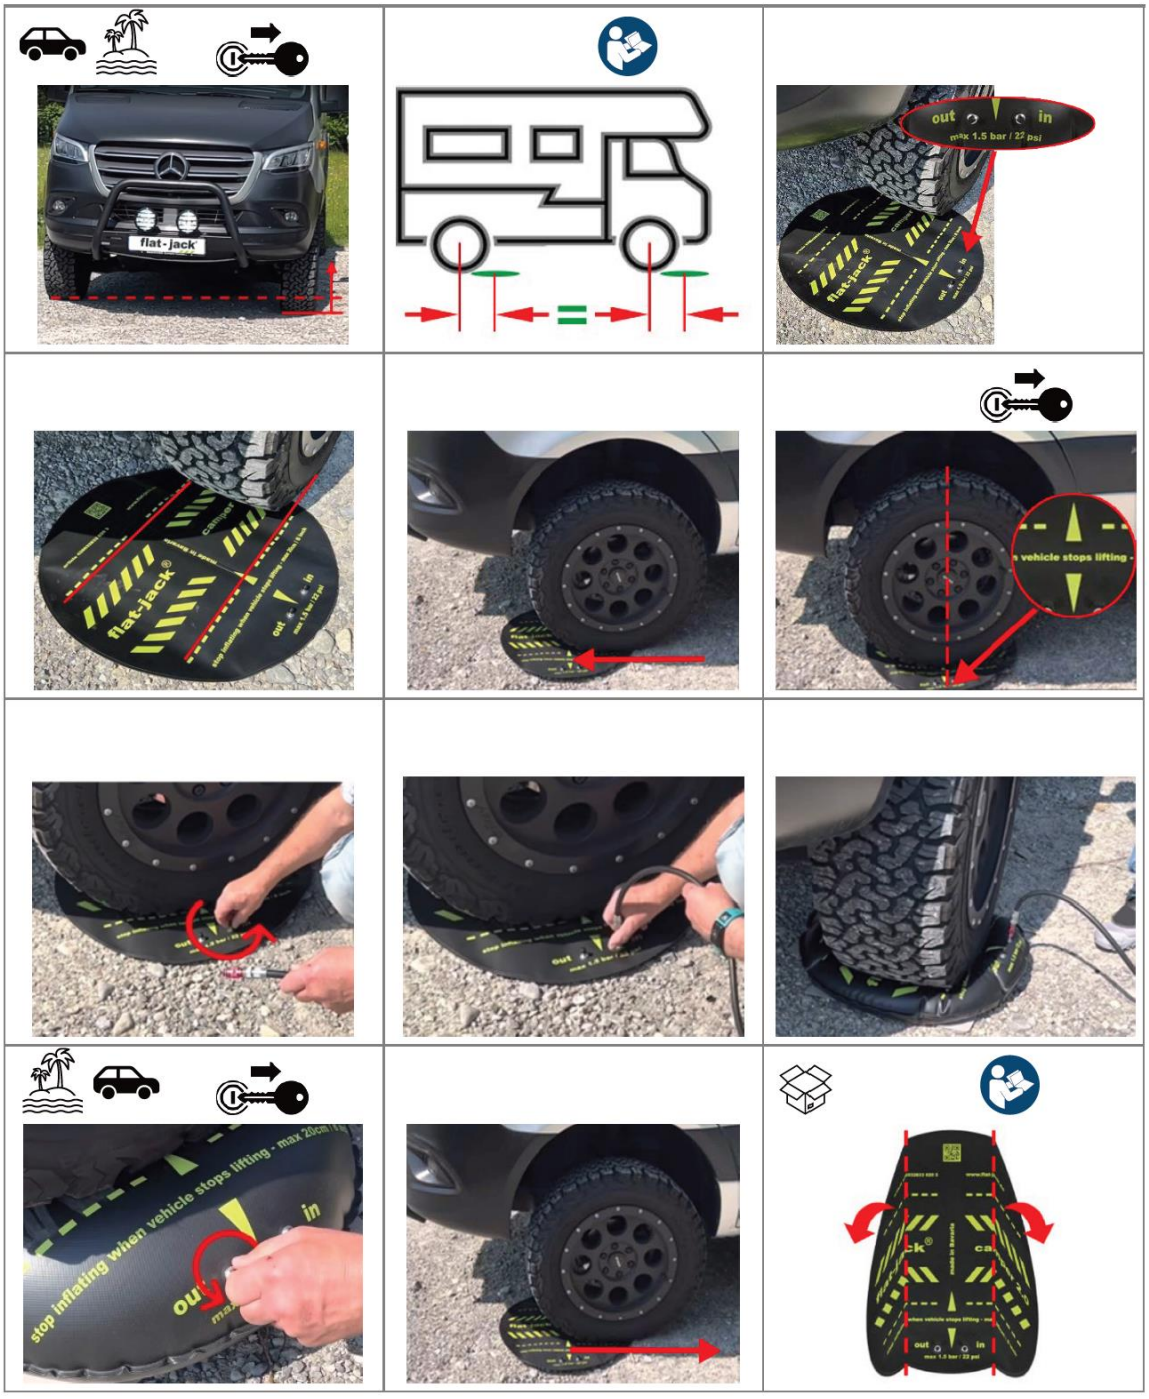

GENERAL USER INSTRUCTIONS FLAT-JACK CAMPER 2.0 FOR CAMPERS AND OTHER VEHICLES (NOT FOR CARAVANS, FOR WHICH WE HAVE A SPECIAL INSTRUCTION ON PAGE 8)

In these user instructions we explain to you in detail how to use the flat-jack camper 2.0 in case of campers/mobile homes. We explain this with some pictures.

PREPARATION OF YOUR CAMPING GROUND SPACE FOR USE OF THE FLAT-JACK:

1. Search for a flat and clean spot and calculate with the fact you still have to drive onto the flat-jacks.
2. Always remove sharp objects from the place you want to put your flat-jacks. Think of left herrings or tent pegs, glass or very sharp stones.
3. Use an anti-slip mat in winter conditions, so you do not slide with your camper on the flat-jack camper 2.0.
4. Put the flat-jack in length direction before (or behind) the wheels you want to lift to be horizontal. Check carefully that the camper tyre will be between the “two lines with A” texts which you will find on the flat-jack (see picture).

1. PLACING OF THE FLAT-JACK:

- Put a flat-jack in length direction before (or behind) the middle of each tyre you want to lift, so the tyre is between the driveway (A) which you will find on your flat-jack. For most normal campers with 4 wheels in total, you need 2 flat-jacks for leveling your camper. You put the flat-jacks before (or behind) the 2 lowest wheels on the slope of the camping. For a normal caravan with 2 wheels you need only 1 flat-jack to level the caravan: see instructions for use on page 8, for caravans only).




- Be aware that your flat-jack must be placed with the valves on the outside of the wheel, so you can inflate them easily (otherwise the valves are under the vehicle and cannot be inflated).
- Shift each flat-jack onto each tyre, until the flat-jack touches the tyre. In this way you will always be exactly right on each individual flat-jack, if one tyre is in the middle of one flat-jack. Then automatically the other tyre is also in the mddle of the other flat-jack.

- Drive your camper onto the flat flat-jacks, until the middle of the wheel is exactly at the yellow arrow which you will find at each long side halfway of the flat-jack (B).



2. INFLATION OF FLAT-JACK:

A. Inflate your flat-jack through the IN-valve. This is the valve on the right-hand side.
B. This IN-valve is the same valve as a standard car tyre valve, so you need a pump which fits this valve (same valve as the one that fits your car or camper tyre).
C. Inflation can be done with a bike pump, foot pump or a (mini-) compressor which is often standard in your car to fit the spare tyre.
D. Be aware that in case of a bike pump you purchase a modern bike pump which fits both bikes and cars (double head), because a classic bike pump only fits bike valves and not car valves.
E. If you inflate the flat-jack by the right-hand side IN-valve, be careful that you always close the other (OUT-)valve shaft with the valve cap, otherwise the inflated air into the IN-valve escapes from the OUT-valve! The OUT-valve is an open valve shaft (no valve inside), and therefore comes in very handy when deflating a little to level your vehicle in detail.

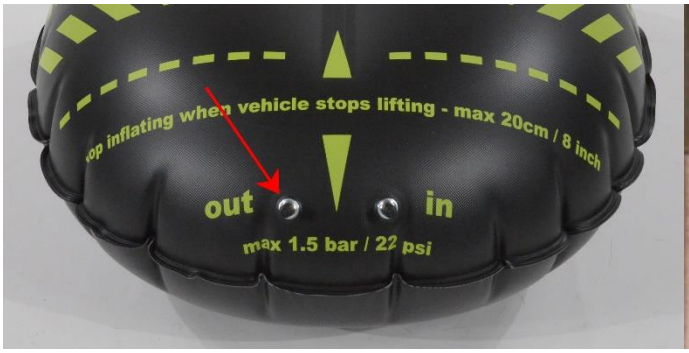



F. You can inflate the flat-jack **until 1.5 bar maximum**. More is absolutely not allowed. A pump with manometer is the best one to use, so you can check how much bar is inflated into the flat-jack. If you pump more then 1.5 bar in your flat-jack, then your guarantee is cancelled.

G. Always stop inflating also as soon as the camper does not rise any further! More inflation makes no sense and forces the seals of the flat-jack: you loose guarantee in that case. We can control this by checking where and how the flat-jack is burst on the seal, so always stop inflation as soon as the camper does not rise anymore.



3. STANDING ON THE FLAT-JACK:



A. **In extreme sun:** we always advise to protect the flat-jack in extremely sunny conditions. This is easily done by a tyre cover which also protects your tyres from drying), or by a door mat or old towel. You prevent the flat-jacks from warming extremely by long direct extreme sunshine.

B. **In rainy conditions:** campers on the old-fashioned wedges often sink deep into the mud on a wet camping. On a flat-jack you will sink also in the mud, by the weight of your camper, but mostly far less deep, because the flat-jack has a big surface. You can easily level your camper again by just inflating the flat-jack a little (remembering the maximum 1.5 bar), and you do not have to dig your wedges out of the ground or pull out your camper with a tractor, as is often the case with wedges. Air is a nice product and a fast solution together with a flat-jack in the mud!

C. **On slippery ground, for example in the Alps during winter sports:** always place an anti-slip mat under each flat-jack before driving on the flat-jacks. The use of snow chains on your vehicle when using the flat-jacks is not allowed. Also the use of flat-jacks on a hill or slope is not advisable, unless you fix your vehicle with stoppers before and behind your wheels. So be extra careful on slippery grounds!

4. DEFLATING THE FLAT-JACK:

A. Driving off the flat-jacks after your holiday is over, you always do from a deflated, so flat, flat-jack. This means you always should deflate your flat-jacks completely before driving off the flat-jacks. If you try to drive from an inflated flat-jack, this flat-jack will not survive because of the weight and driving force of the wheel of your camper. Damage that occurs because of this behaviour is not covered by guarantee.

B. At deflation 1 thing is very important: always deflate the flat-jack very slowly. So do not unscrew the valve cap completely of the OUT-valve shaft and do not lower the vehicle with a big bang in a few seconds, but always turn the valve cap a little so the air escapes gradually from the flat-jack in about 1 minute. In this way the panels inside the flat-jack will be completely flat again, so you can store the flat-jack flat. Always keep the OUT-valve cap well in your fingers when lowering the flat-jacks, so this cap does not fly from the OUT-valve shaft by the weight of the camper.

USER INSTRUCTIONS FLAT-JACK CAMPER 2.0 SPECIFICALLY FOR CARAVANS

Here we tell you in detail how you can use your flat-jack camper 2.0 for a caravan. This is slightly different from the use in case of a camper, so we clarify this with some pictures.

1. Drive on the camping to the place where you want to stand and calculate with the fact that you still have to drive onto the flat-jack camper 2.0.
2. Always remove sharp objects (like herrings/tent pegs, glass or very sharp stones) from the place where you want to put your flat-jacks.
3. Put the flat-jack centered in the length direction before (or behind) your caravan wheel that you want to lift to be horizontal. Check that the tyre will be between the “camper plus” texts on the flat-jack and shift the flat-jack onto the tyre until the flat-jack touches the tyre.



4. Drive the caravan on the flat-jack by using your car, your caravan mover or your hands, until the middle of your caravan wheel (the heart) is exactly above the yellow arrow on the long side of your flat-jack., so you are exactly on the middle of the flat-jack.



www.flat-jack.nl
(part of the Only Cabrios group)
Oosteinde 25
8351 HA Wapserveen
The Netherlands (HOLLAND)

info@flat-jack.nl
Phone: 0031-620739724
VAT No.: NL002013623B73
Chamber of Commerce: 50126237

IBAN: NL68INGB0005291213
Bic/Swift code: INGBNL2A

5. Now put the caravan horizontal in length direction with help of your own water level.







6. Then fix the caravan by turning out the 2 caravan supports on the other side (opposite the flat-jack side). Turn these supports out until the ground, and then an extra half turn, which is sufficient. By doing so the caravan cannot roll off the flat-jack anymore.




7. Now inflate the flat-jack until the caravan is horizontal in width direction also.
    a. Attention:
        I. The pressure in the flat-jack should not be higher than 1.5 bar.
        II. The caravan cannot be higher than 20 cms.
        III. When the caravan starts moving, lower the flat-jack immediately in a controlled way by turning the OUT-valve cap a little. Most probably you did not do the fixation well, mentioned in point 6.
    b. If you pumped the caravan a little too high, then you can easily correct this by turning the OUT-valve shaft cap a little and let some air out, so the caravan will be exactly horizontal.



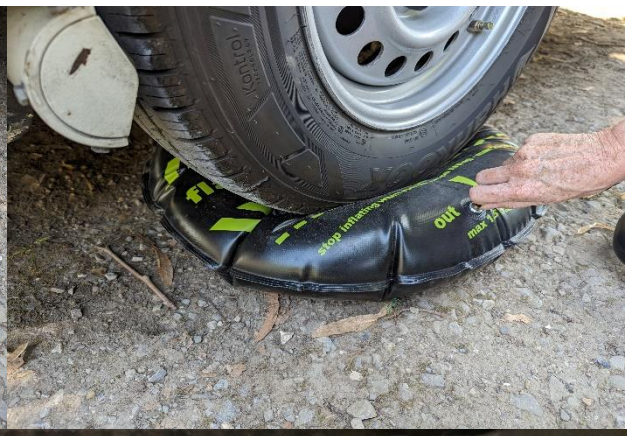

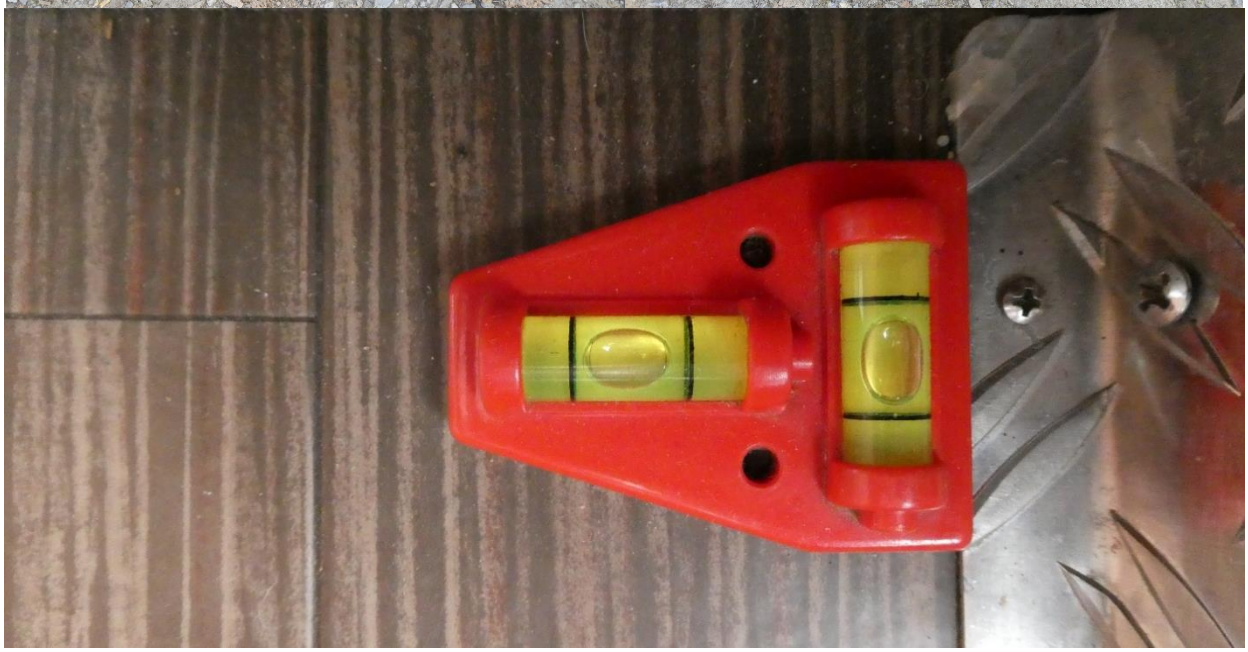

8. Now turn out the 2 other caravan supports on the flat-jack side, until they touch the ground, and then a half turn extra is sufficient.





GUARANTEE RULES

If you bought your flat-jacks directly at flat-jack Holland and you received a flat-jack invoice directly from us, then you enjoy a 2 year flat-jack works guarantee (starting from invoice date) if you can show your invoice from us. Your invoice is your proof of guarantee. A guarantee claim can be made only through the digital guarantee form on our website www.flat-jack.nl

There are several important guarantee rules which we present to you here:

- Damage which results from not following the flat-jack user instructions means you have no guarantee.
- Guarantee can only be claimed if you received an official invoice from us at delivery of the flat-jack, and if you can show this invoice to us at your guarantee claim.
- For flat-jacks that are bought elsewhere (for example in a foreign country of at other parties which import flat-jacks on an unofficial grey import basis) ou cannot claim guarantee at us. You will have to claim your guarantee at the company where you bought your flat-jack.
- Attention: the guarantee is personal on the first buyer and cannot be handed to another user. This means that if you bought the flat-jack second-hand from another person, that the guarantee is ended, even if you can show an original flat-jack invoice from us to the first owner.
- If you want to do a guarantee claim, you will have to use the digital guarantee form on our website www.flat-jack.nl, mentioning the reason of defect of your flat-jack and the circumstances in which the flat-jack got defect. For a fast treatment of your guarantee claim, we ask you to answer the questions in this digital guarantee form as detailed as possible. Guarantee forms that are not complete will not be treated.
- After reception of your digital guarantee form, you will get a message from us with next steps, which can be guarantee claim not accepted or research of the product.
- In case we decide to research the product, we will give you a return address. You pay for the return transport costs of your flat-jack plus the invoice copy to the return address.
- Return flat-jacks which are returned to us without communication with us, are not treated and not returned to you.

It can always be that the flat-jack got a defect by bad luck, like standing with the flat-jack on a piece of glass or a lost herring or tent peg. This is logically not covered by our guarantee. We always regret that you cannot enjoy the flat-jack for this unfortunate outside reason. In those cases we always want to do an appropriate offer to you as flat-jack importer, if you show us our flat-jack invoice to you and defective flat-jack as described above.