DENVER RTD EAGLE P3
COMMUNICATION SYSTEM

FIELD MODIFICATION INSTRUCTIONS
FMI #7: HARDWARE MODIFICATION

CONTRACT NO.	**P110701149**
CDRL NO.	**N/A**
WIS DOC. NO.	**42A-2016-0027**
REVISION:	**1.0**
DESIGNED:	**J. S. JEONG**
REVIEWED:	**J. Y. LEE**
APPROVED:	**B. J. JONE**
DATE:	**6/29/2016**

WOOJIN
Industrial Systems Co., Ltd.

Record of Revisions

Rev.	Date	Description	Entered By
1.0	6/29/2016	Initial release	J. S. Jeong

© Copyright Woojin Industrial Systems Co., Ltd.

Table of Contents

1. INTRODUCTION 4
2. SUMMARY 4
3. INSTRUCTIONS 4
4. TESTING 7

© Copyright Woojin Industrial Systems Co., Ltd.

1. INTRODUCTION

This FMI provides instructions to install the Audio Filter board to CRA

2. SUMMARY

This modification intends to implement the engineering change proposed as RNE1002-U518-11. The modification applies to CRA units installed on the whole fleet.

3. INSTRUCTIONS

1) Place the COMCB to OFF position
2) Unscrew 2 mounting bolts on the SP panel
3) Remove the SP panel from CRA
4) Plug in the Audio Filter (AF) board to the slot where the SP panel was removed from
5) Fasten 2 mounting bolts on the AF front panel
6) Place the COMCB to ON position

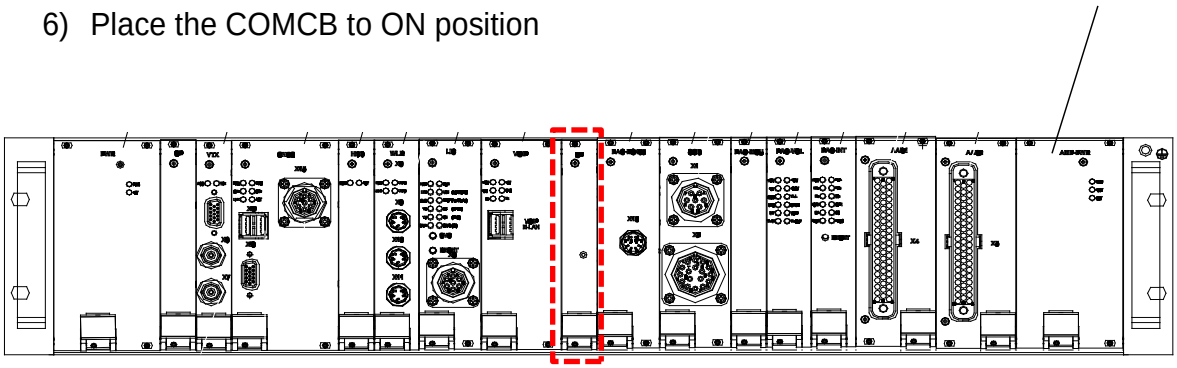

Figure 1 – AF Board Location

© Copyright Woojin Industrial Systems Co., Ltd.

Figure 2 – AF Board PCB

© Copyright Woojin Industrial Systems Co., Ltd.

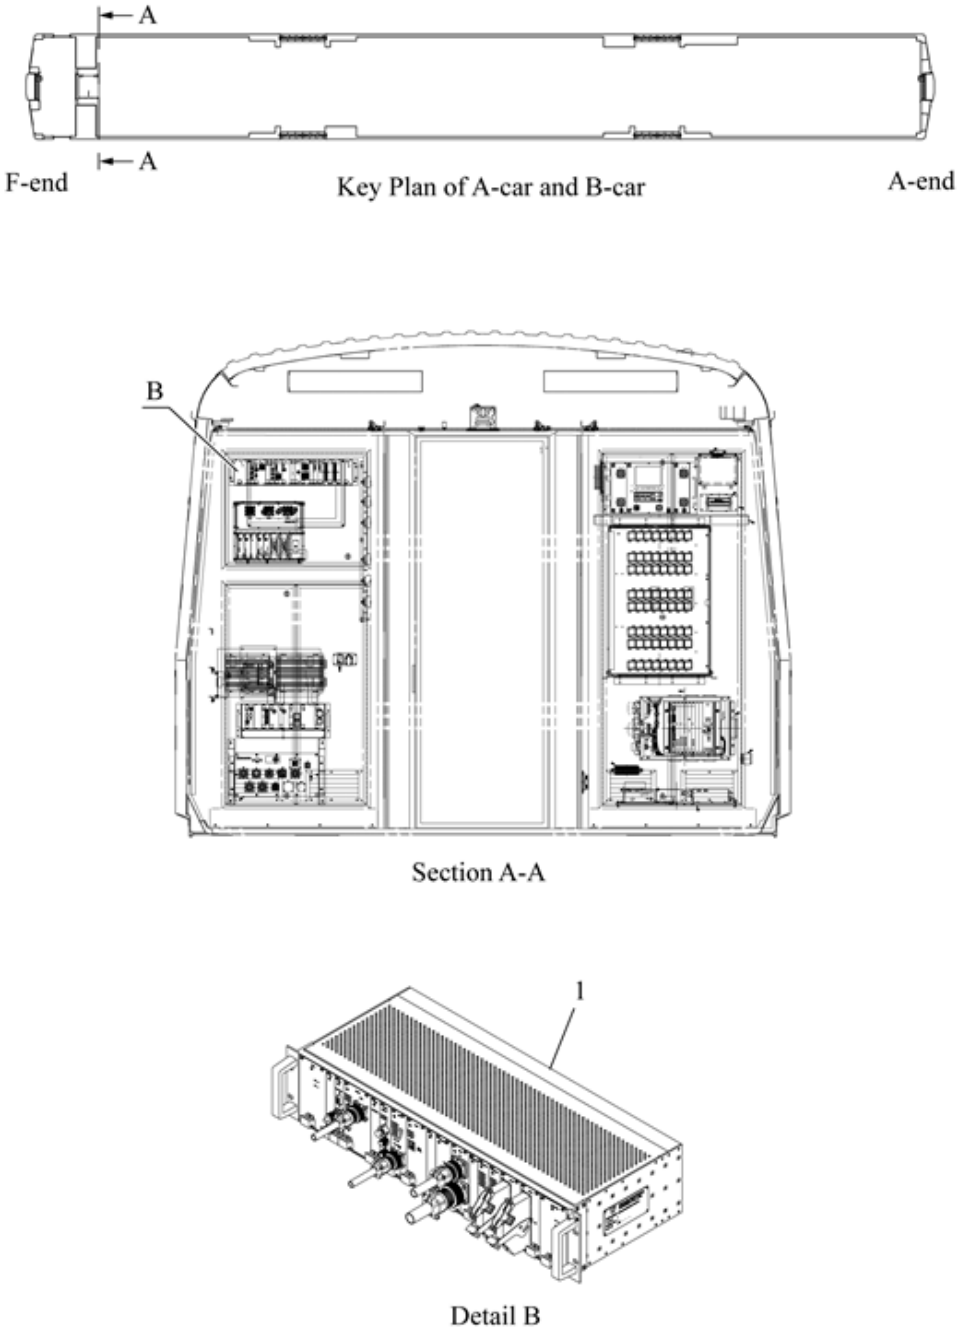

Figure 3 – CRA Location

© Copyright Woojin Industrial Systems Co., Ltd.

4. TESTING

1) Observe the LED indicators on the AF front panel
2) Verify that all LED indicators are lit

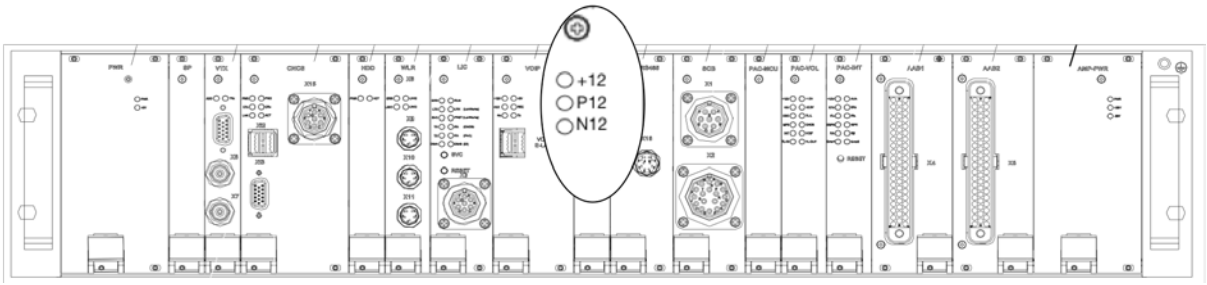

. Figure 4 – AF PCB LED.

© Copyright Woojin Industrial Systems Co., Ltd.