
Under-Hood Fuse/Relay Holder A | Engine Compartment Wire Harness | +B_H/L_LO_MAIN

Below is the terminal side of the connector(s).

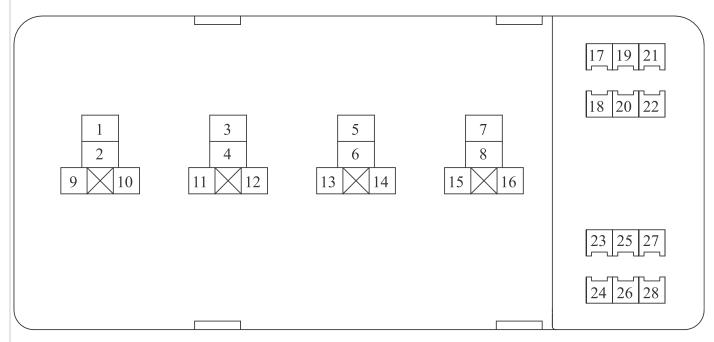

No.	Color	Name
1	GRN	+B_H/L_LO_MAIN
2	PUR	H/L_LO_RLY_OUT
3	YEL	PARKING_LT_RLY_OUT
4	GRY	ILLUMI+
5	WHT	+B_DRL
6	PUR	DRL_RLY_OUT
7	BLU	+B_FR_FOG
8	LT_BLU	FR_FOG_LT_RLY_OUT
9	GRN	+B_H/L_LO_MAIN
10	BRN	H/L_LO_RLY_CL-
11	YEL	PARKING_LT_RLY_OUT
12	LT_GRN	PARKING_LT_RLY_CL-
13	WHT	+B_DRL
14	PNK	DRL_RLY_CL-
15	BLU	+B_FR_FOG
16	PUR	FR_FOG_LT_RLY_CL-
17	PNK	R_H/L_LO
18	PUR	H/L_LO_RLY_OUT
19	GRN	L_H/L_LO
24	GRN	+B_R_H/L_HI
25	BLU	+B_H/L_HI_MAIN
26	BLU	+B_L_H/L_HI