
Under-Hood Fuse/Relay Box | Engine Compartment Wire Harness | +B_F/BOX_MAIN



Below is the terminal side of the connector(s).

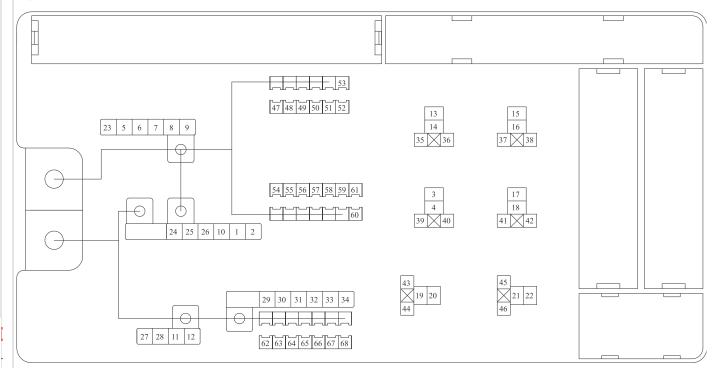

No.	Color	Name
2	GRN	+B_DC/DC1
3	BLU	IG1_FUEL_PUMP
4	GRN	FUEL_PUMP_RLY_OUT
5	BLU	+B_WIPER
6	RED	+B_F/BOX_MAIN
7	PNK	(NOT USED)
8	GRN	+B_IG_MAIN
9	WHT	+B_EPS
10	YEL	+B_MAIN_FAN
13	WHT	+B_HORN
14	LT_GRN	HORN_RLY_OUT
15	LT_BLU	+B_RR_DEF
16	RED	RR_DEF_RLY_OUT
19	WHT	BLOWER_MTR
20	BLU	+B_HTR_MTR
21	BLU	A/C_MG_CLUTCH
22	GRN	+B_MG_CLUTCH
23	GRN	+B_H/L_LO_MAIN
24	BLU	+B_H/L_HI_MAIN
25	RED	+B IG MAIN2
26	RED	+B_AUDIO_AMP
29	BLU	+B_HTR_MTR
30	WHT	+B_ABS/VSA_FSR
31	RED	+B_ABS/VSA_MTR
32	BLU	+B_F/BOX_MAIN2
33	WHT	+B_ST_MAGNETIC_SW
34	LT_BLU	+B_RR_DEF
35	WHT	+B_HORN