




DIGI-CREASER

INSTRUCTION GUIDE

THE PACKAGE CONTAINS:

- | | |
|----------------------|---|
| 1 x MALE COMPONENT | A |
| 1 x FEMALE COMPONENT | B |
| 1 x SCRIBER | C |
| 5 x INSERTS | D |

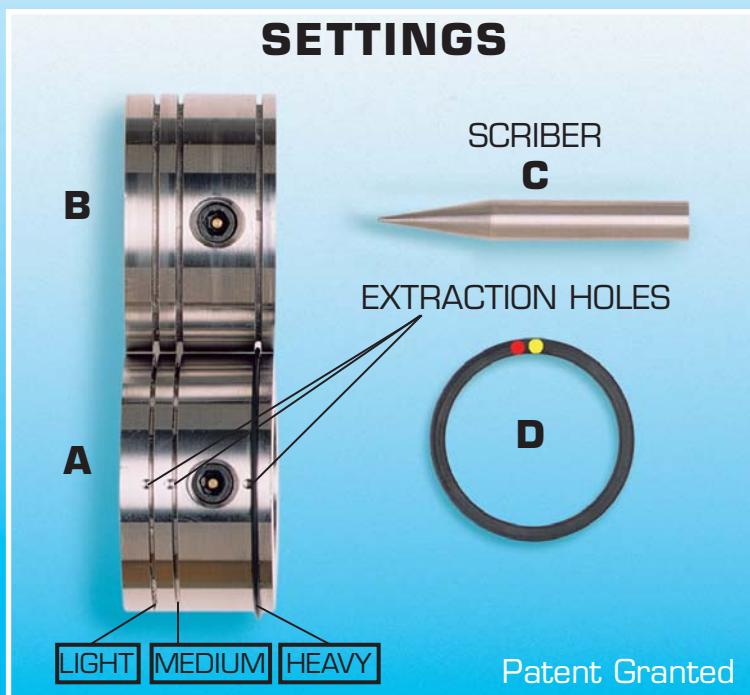



INSTRUCTION GUIDE

1. Place INSERT "D" in to MALE COMPONENT "A"
Choosing light/medium/or heavy setting.
2. Attach to shaft of folding machine.
3. Attach FEMALE COMPONENT "B" to second shaft.
4. ALIGN both components.
5. Set for average and even pressure.

*Do not over stretch INSERT when moving.

Locate extraction hole on MALE COMPONENT and gently prise
INSERT from groove by using the scriber tool "C".

FOR BEST RESULTS CREESE ON TOP OF FOLD



Tech-ni-fold Ltd, Unit 2, St John's Business Park,
Lutterworth, Leicester, LE17 4JL, United Kingdom.
Tel:+44 (0) 1455 554491 Fax: +44 (0) 1455 554526
Email: info@technifold.co.uk **Website:** www.technifold.com