



# Wohlenberg 10mm hinge spacer set

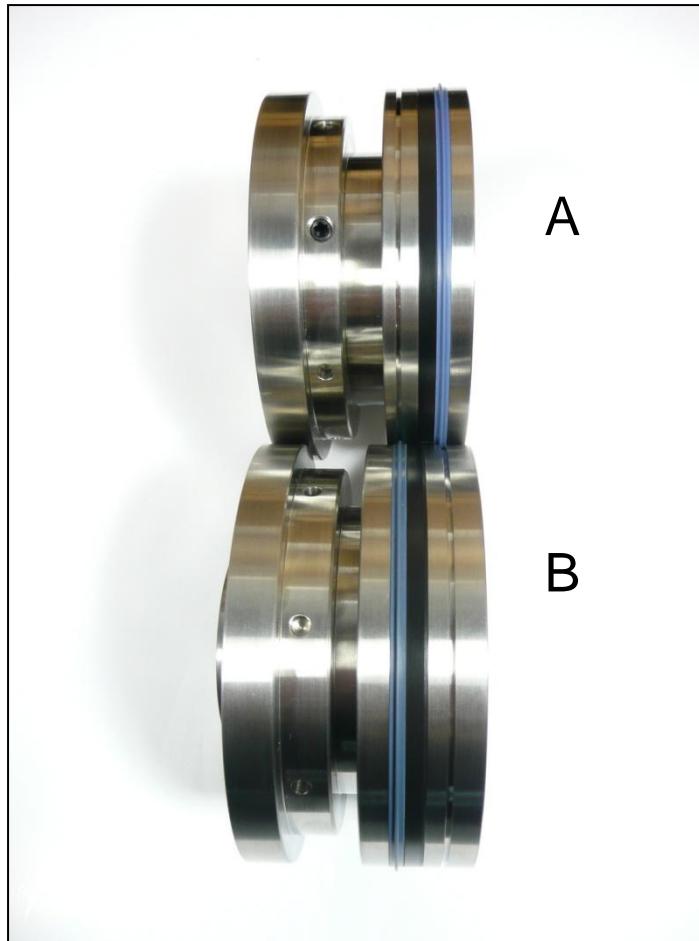

**A** The **top** shaft crease unit

**B** The **bottom** shaft crease unit

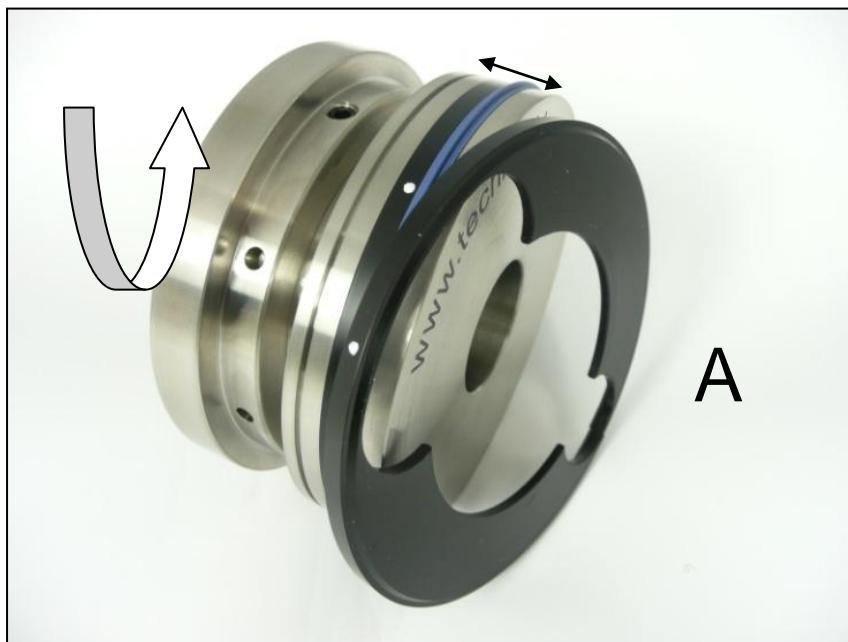

## TOP SHAFT A

Unscrew the crease rib holder as far as possible and Insert the black spacer into the gap.

Place the spacer with the ends facing the correct way as the shaped metalwork on the holder




The 10mm hinge  
spacer fitted into the  
rib holder.



The spacer and crease rib in  
the correct position

## Bottom Shaft B

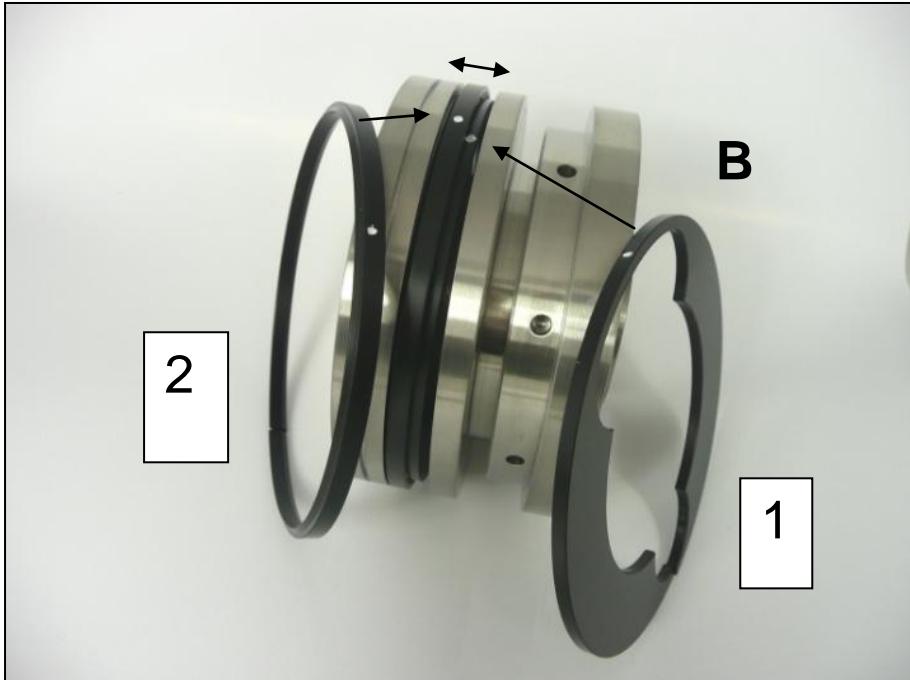


**Bottom Shaft B**

2 x spacers are required on the bottom shaft.




Place No 1 spacer onto the screw thread in the opening

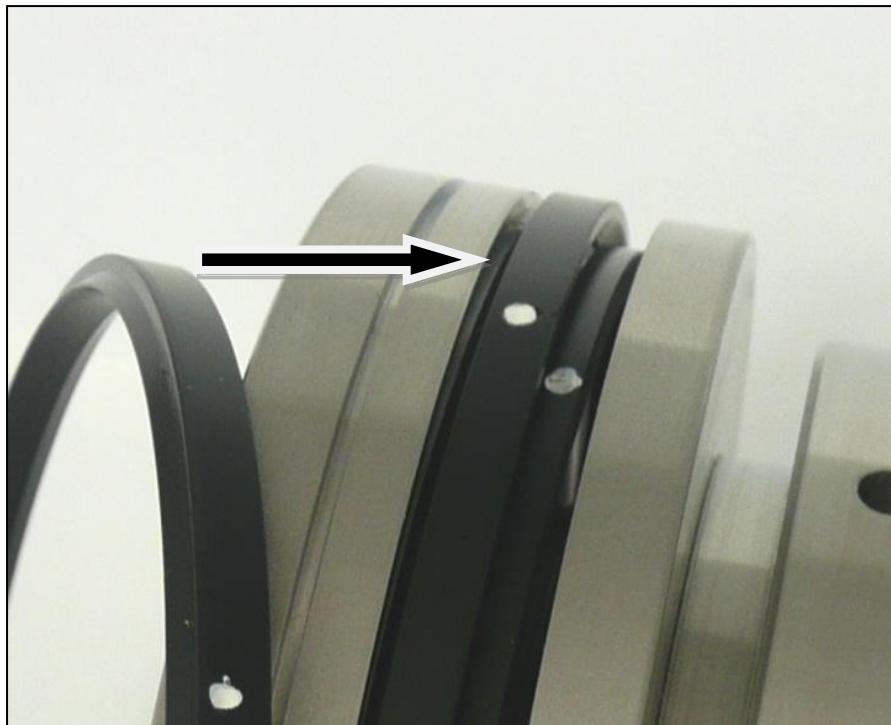

Make sure the shape on the black nylon insert matches the shape in the holder.



The 2 spacers and the  
crease rib ready to be screw  
tightened together

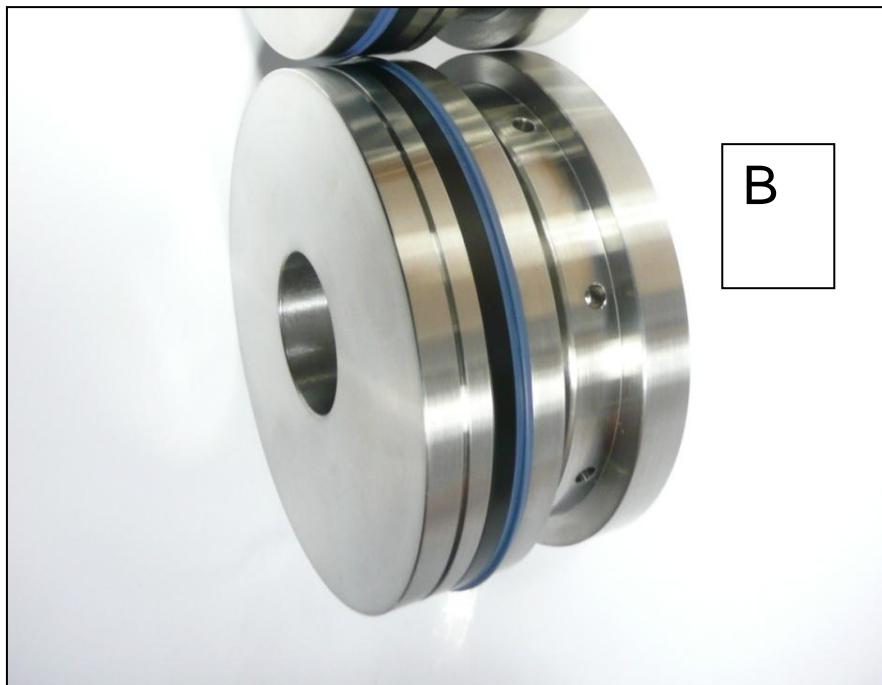

B

Bottom shaft holder with  
the spacers and rubber  
crease ribs ready to use.

## Removing the black nylon spacers



The white dot indicates  
the correct removal  
position to the pull out  
the black inserts.

Use the small plier tool  
that comes with the  
spacer pack to grip and  
remove the black nylon  
spacers.