

Tech ni Fold


TRI-CREASER

SRA1/B1 FOLDER

INSTRUCTION GUIDE

THE PACKAGE CONTAINS:

- | | |
|-----------------------------------|---|
| 1 x MALE COMPONENT | A |
| 1 x FEMALE COMPONENT | B |
| 1 x SCRIBER | C |
| 5 x INSERTS (Orange) Narrow Width | D |
| 5 x INSERTS (White) Middle Width | E |
| 5 x INSERTS (Yellow) Wide Width | F |

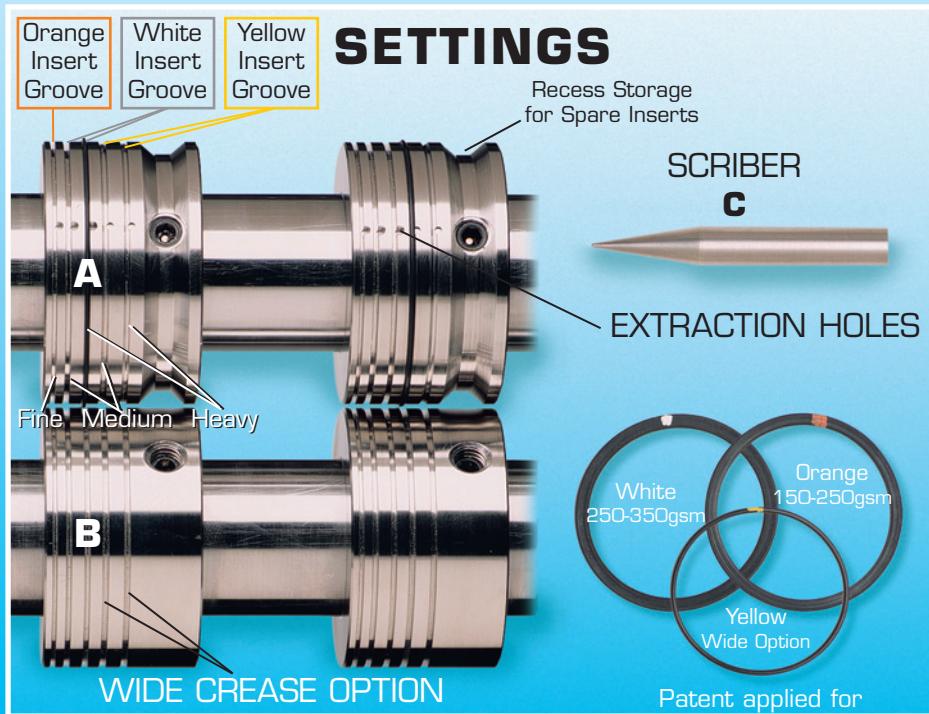



INSTRUCTION GUIDE

1. Place INSERT "D" "E" or "F" in to MALE COMPONENT "A"
Choosing fine/medium/or heavy setting.
2. Attach to shaft of folding machine
3. Attach FEMALE COMPONENT "B" to second shaft.
4. ALIGN both components
5. Set for average and even pressure
*Do not over stretch INSERT when moving

Locate extraction hole on MALE COMPONENT and gently prise
INSERT from groove by using the scriber tool "C"

FOR BEST RESULTS CREASE ON TOP OF FOLD



2 HODSON CLOSE WHETSTONE
LEICESTERSHIRE LE8 6EU UNITED KINGDOM
TEL:+44 (0)116 275 1440 MOBILE: 07703 597365
FAX: +44 (0)116 286 3353
EMAIL: info@technifold.co.uk www.technifold.co.uk