





# Morgana UFO1 & 2 Installation

## Removing the 2 cover guards

Each cover guard is fixed with 4 screws which are accessible behind the frame



the handle and roller turning knob also requires removing



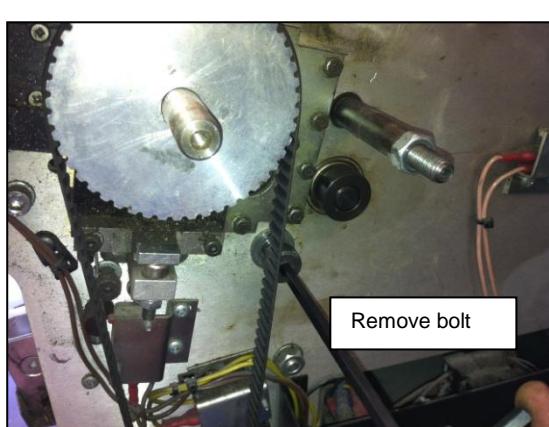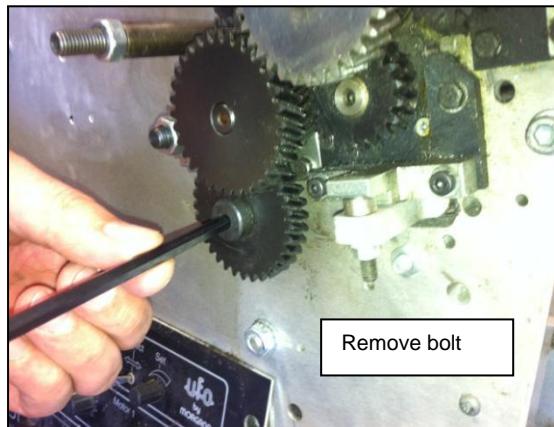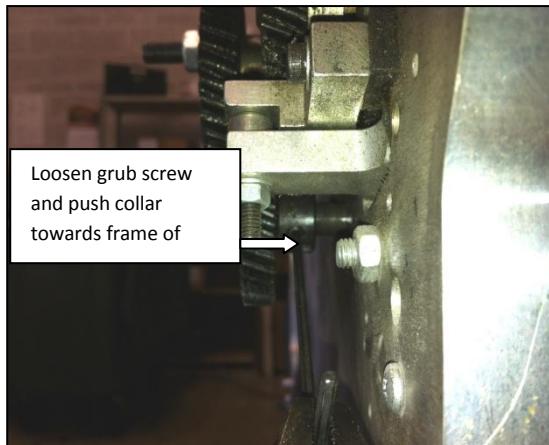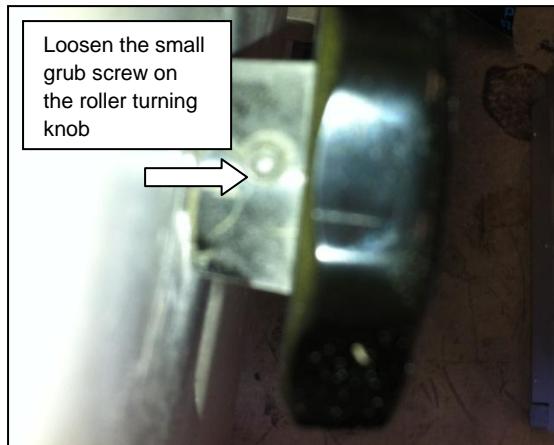


## Remove the creasing cassette



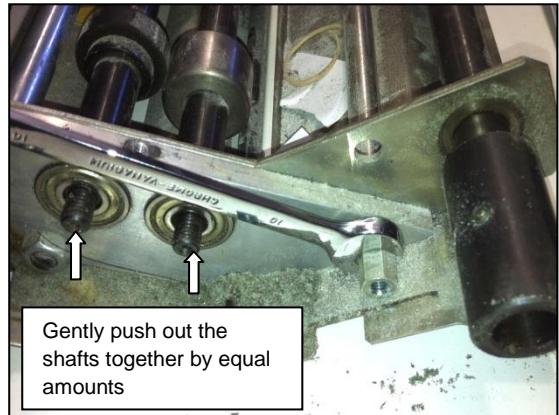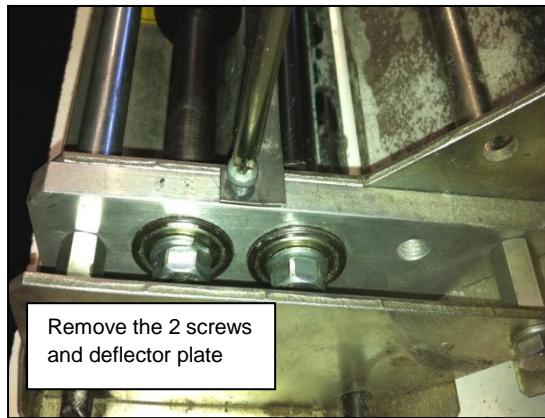

# Morgana Fast Fit Creasing unit

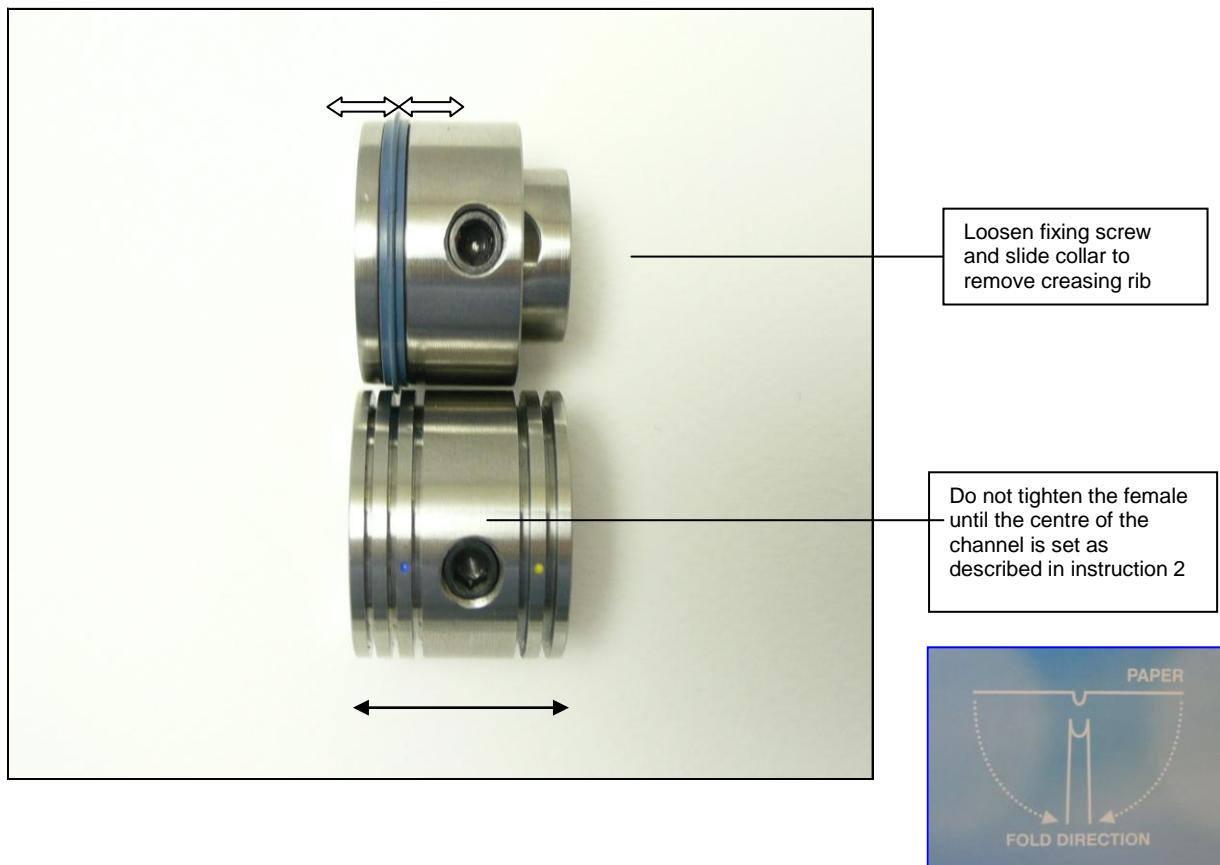

- 1) To lock the crease rib and position the male please squeeze the 2 male parts together and tighten onto the shaft.
- 2) With the female still loose on the shaft hand turn a sheet a heavy stock between the male and female. This will automatically move the female into the centre of the creasing rib. When the female fixing screws become visible tighten onto the shaft.
- 3) The crease rib and the female will now be in the optimum creasing position.
- 4) It is important to place the coloured crease insert into the correct female channel.
- 5) It is possible to use the yellow crease rib in the widest blue channel. This method will make the crease sheet appear deeper and narrower.
- 6) If tearing on the front edge is visible place the crease rib into a NARROWER channel.
- 7) The outer diameter on the original rubber support collars become smaller with wear. This allows the 2 exit shafts to come closer together than they should. If the support collars become too small, the Technifold creasing unit will cut the sheets on the crease.