


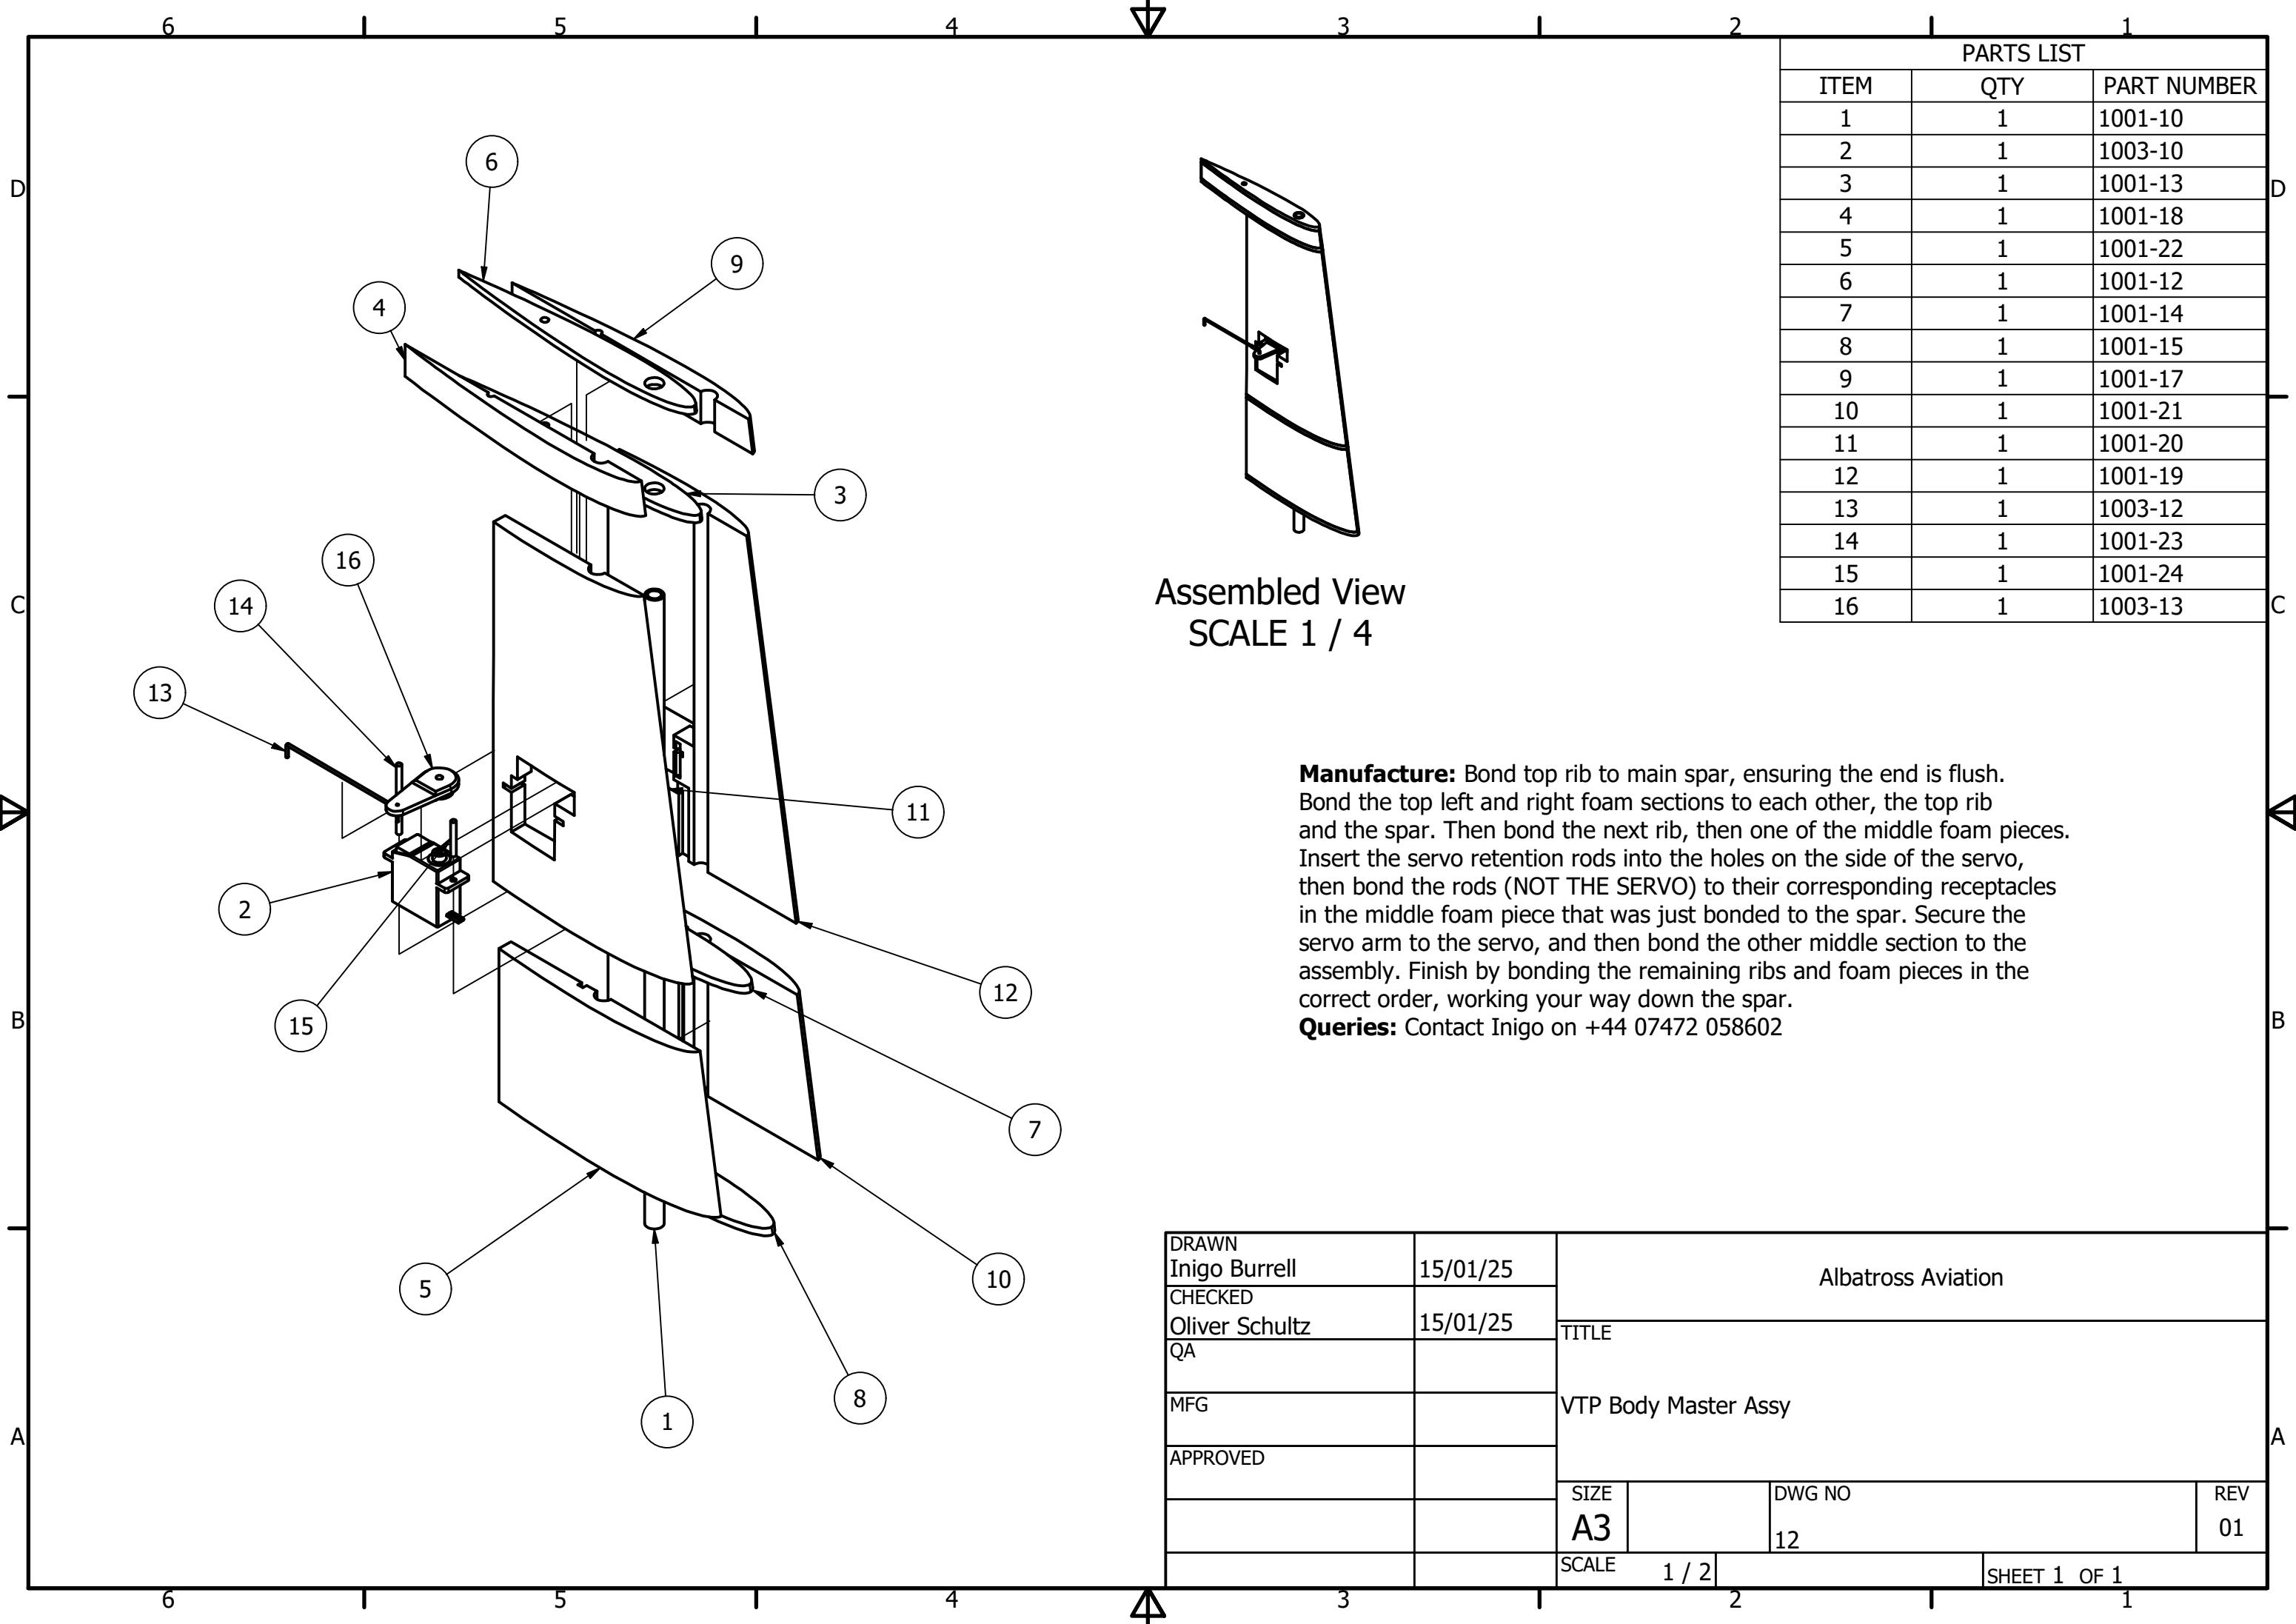

PARTS LIST		
ITEM	QTY	PART NUMBER
1	1	1001-10
2	1	1003-10
3	1	1001-13
4	1	1001-18
5	1	1001-22
6	1	1001-12
7	1	1001-14
8	1	1001-15
9	1	1001-17
10	1	1001-21
11	1	1001-20
12	1	1001-19
13	1	1003-12
14	1	1001-23
15	1	1001-24
16	1	1003-13

Assembled View
SCALE 1 / 4

Manufacture: Bond top rib to main spar, ensuring the end is flush. Bond the top left and right foam sections to each other, the top rib and the spar. Then bond the next rib, then one of the middle foam pieces. Insert the servo retention rods into the holes on the side of the servo, then bond the rods (NOT THE SERVO) to their corresponding receptacles in the middle foam piece that was just bonded to the spar. Secure the servo arm to the servo, and then bond the other middle section to the assembly. Finish by bonding the remaining ribs and foam pieces in the correct order, working your way down the spar.

Queries: Contact Inigo on +44 07472 058602

DRAWN Inigo Burrell	15/01/25	Albatross Aviation		
CHECKED Oliver Schultz	15/01/25			
QA		VTP Body Master Assy		
MFG				
APPROVED		TITLE		
		SIZE A3	DWG NO 12	REV 01
		SCALE 1 / 2	SHEET 1 OF 1	