

THE TARDIS


Assembly Instructions




PVA Glue will be needed for
assembly of this kit.

made at
makerspace
adelaide.org


01

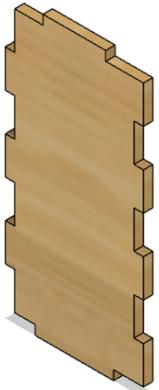


02

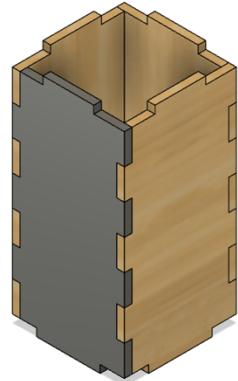


03

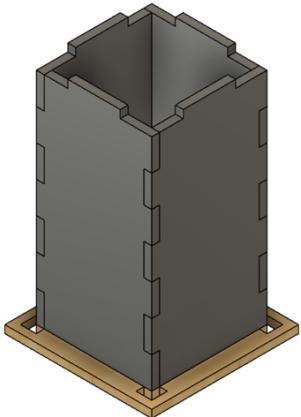


04

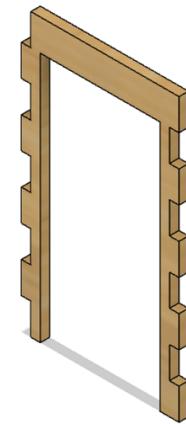


05

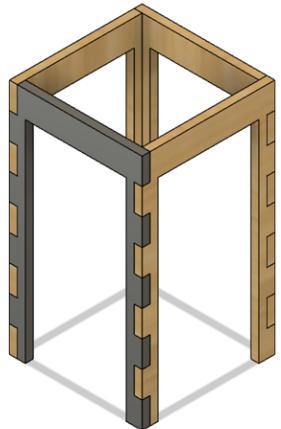


06

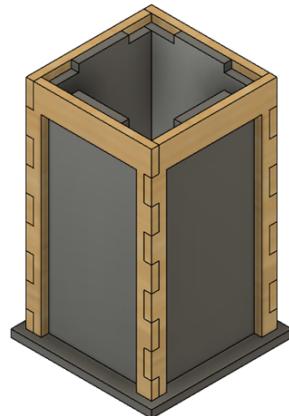


07

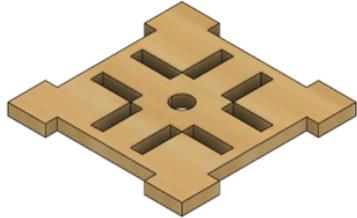


08

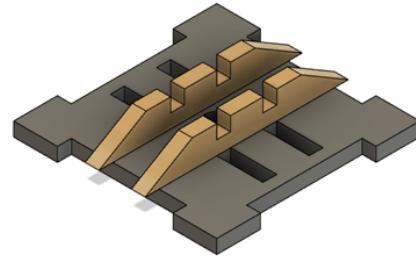


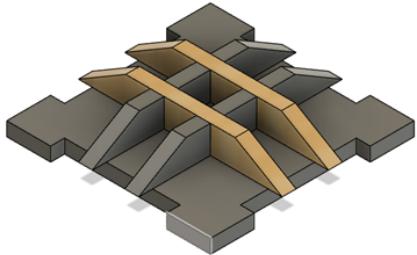


09

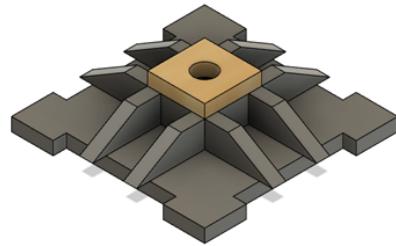

10

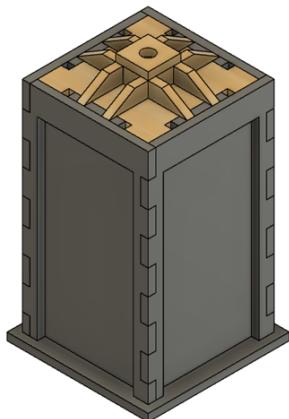

11

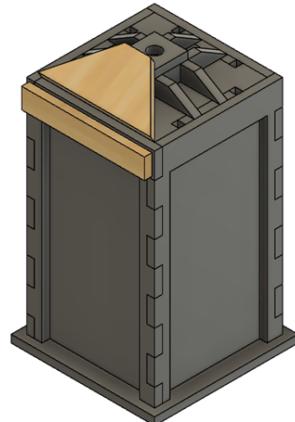


12


13



14

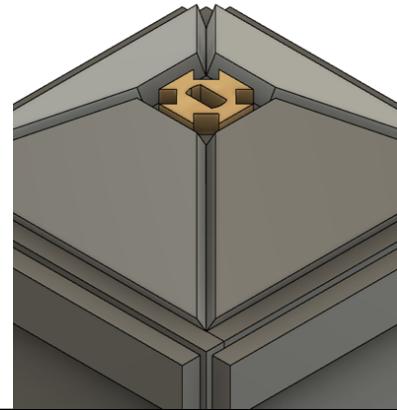

15

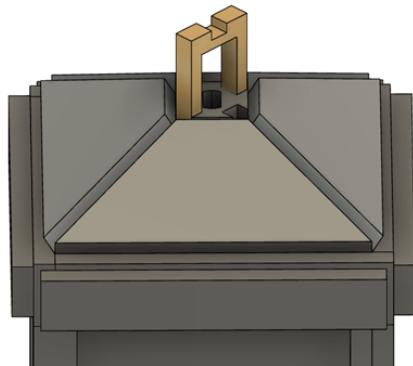

16

