

# SUNFLOWER


Assembly Instructions




PVA Glue will be needed for  
assembly of this kit.

made at  
**makerspace**  
adelaide.org


01

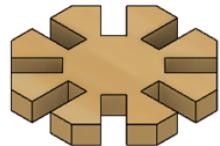


02

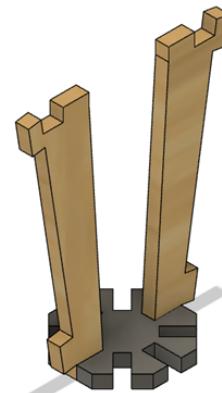


03

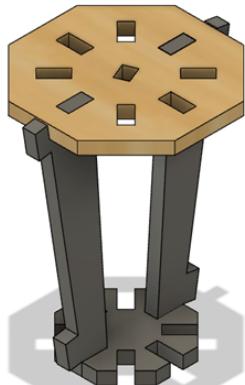


04

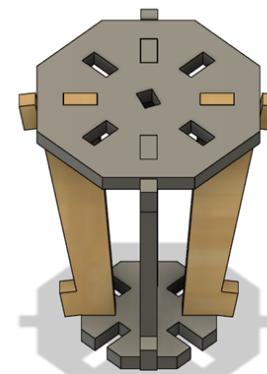


05

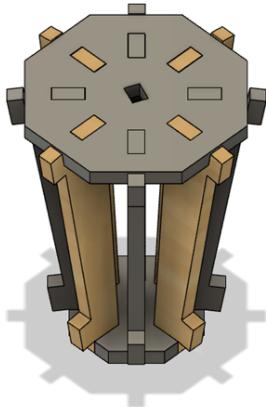

06

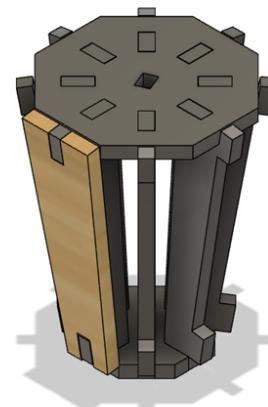

07

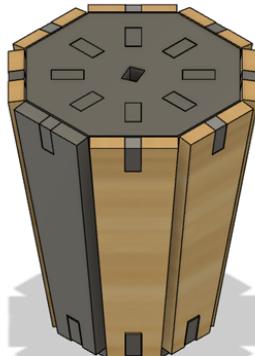


08





09

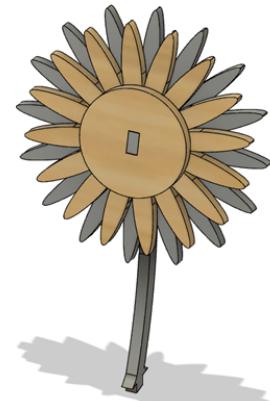

10



11