ST MODULAR

# SUM „Headphone Hum“ Workaround

**IC8 - LM386**

Solder a 100n capacitor between pin 7 and pin 4

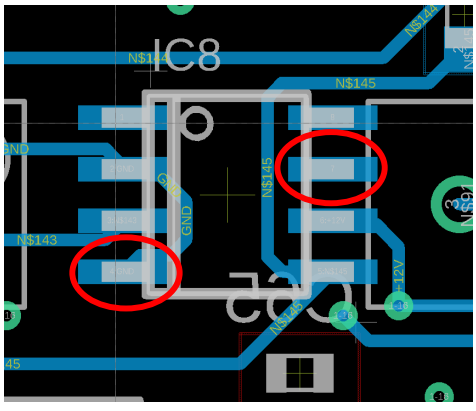


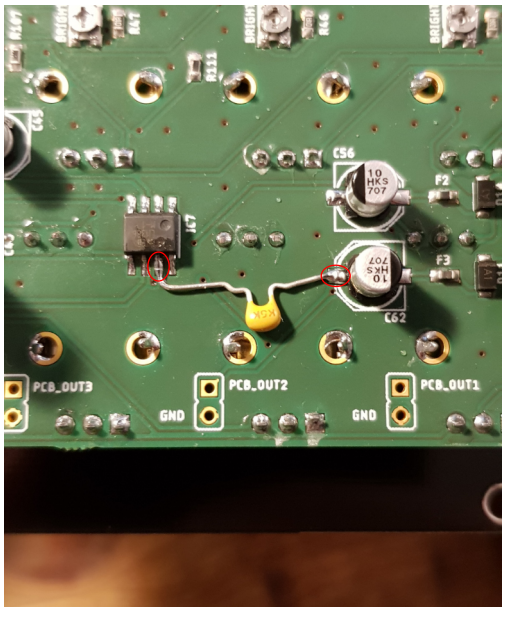


**IC7 - LM386**
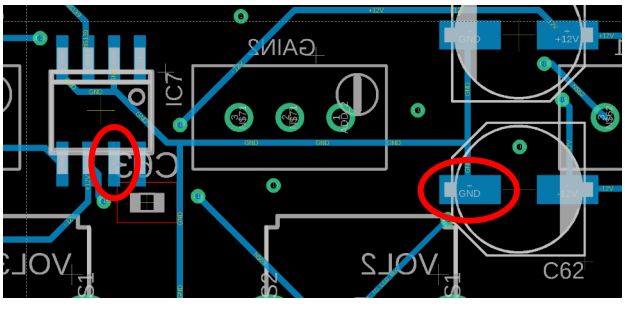
Solder a 100n capacitor between pin 7 and the positive side of C62.