



SUM "Headphone Hum" Workaround



<u> IC8 - LM386</u>


Solder a capacitor between pin 7 and pin 4. Anything between 100nF and 1uF is fine.

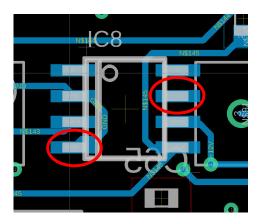

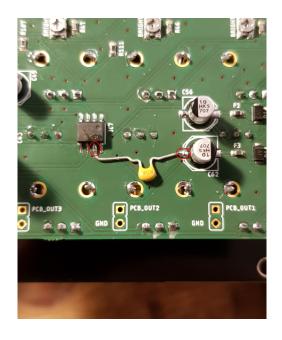

IC7 - LM386

Solder a capacitor between pin 7 and the positive side of C62. Anything between 100nF and 1uF is fine.

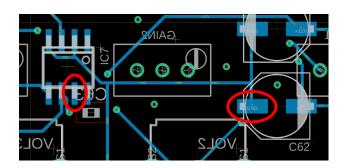

* The use of tantalum caps achieved good results.