


General Recommendations

- Super Lube or another inert lubricant can be used on the post prior to insertion, and in the dovetail slot to allow for easy installation. Be sure to clean up any excess to prevent it from getting on your fingers during use.
- Not all printers are equal. If parts need to be scaled, I recommend leaving the frame as-is, and reducing the scale of other wall pieces/post as necessary. That said, a hammer and some lubricant can help the pieces work together with some careful force, even when it seems like things may not be fitting together.
- Once parts are together, they're difficult to get back apart without marring their surfaces. Plan each step ahead to make sure you don't need to backtrack!
- Printing:
    - 35% infill or higher
    - Print all the walls on their sides. I've ensured they do not need supports.
    - Print the rollers on their sides.
    - Print the pins horizontally.
    - Print the post on one of its fillet edges


Prometheus Assembly

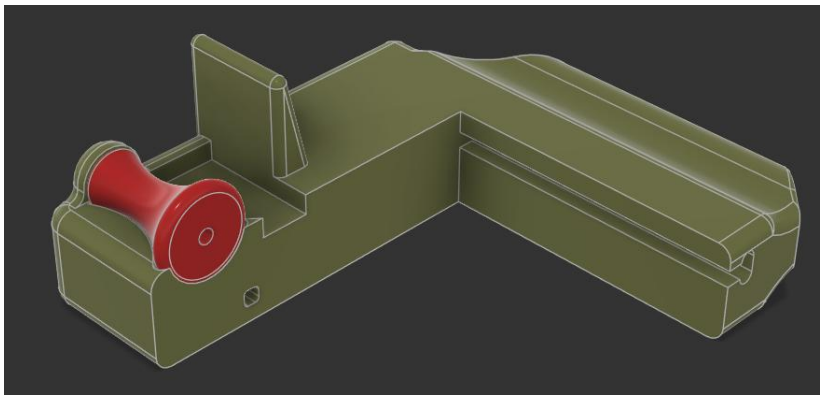

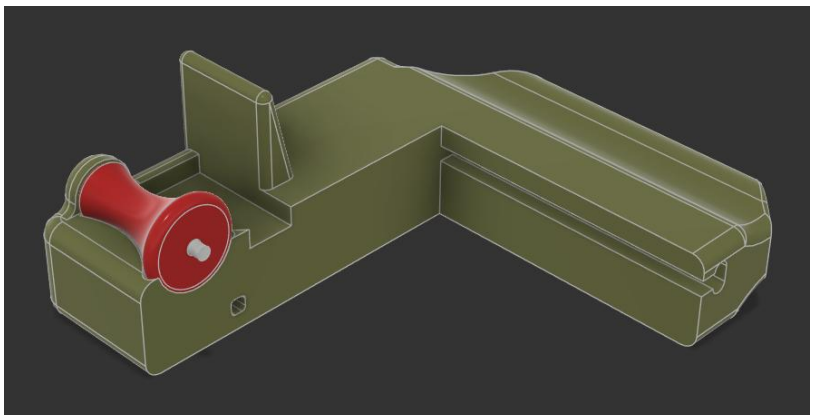


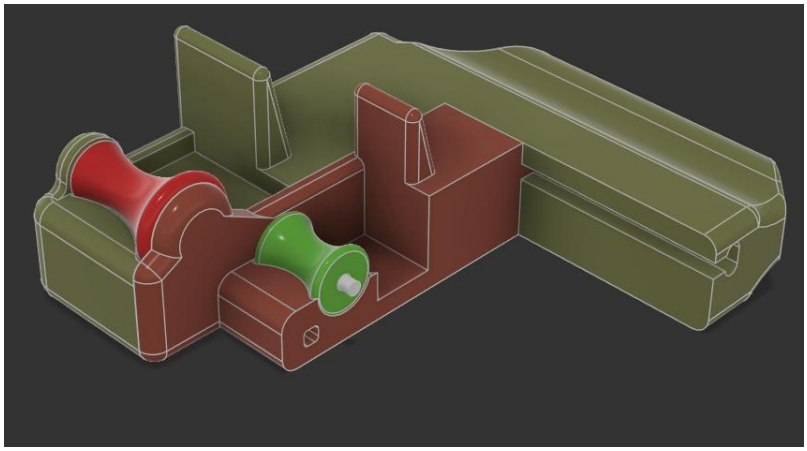


Important: Install the post now! If you do this later, it is nearly impossible to get it in without it breaking.

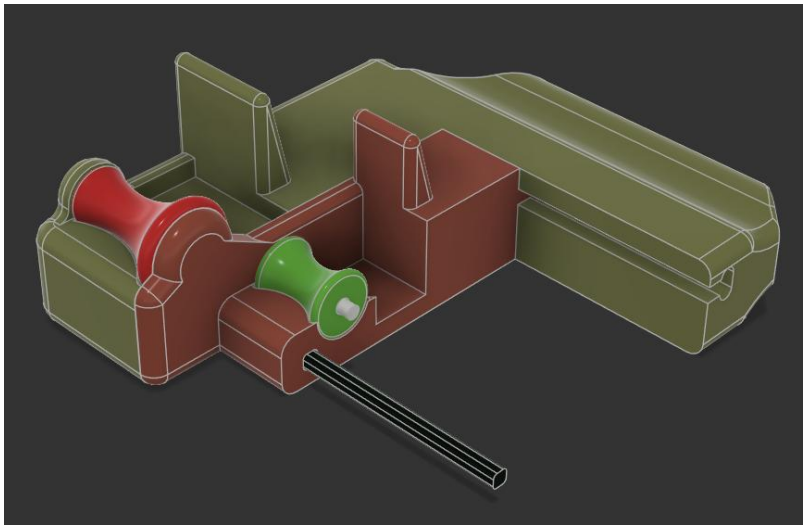


From here forward, use a hammer to lightly tap back and forth between the frame and the post, on the wall pieces when installing them

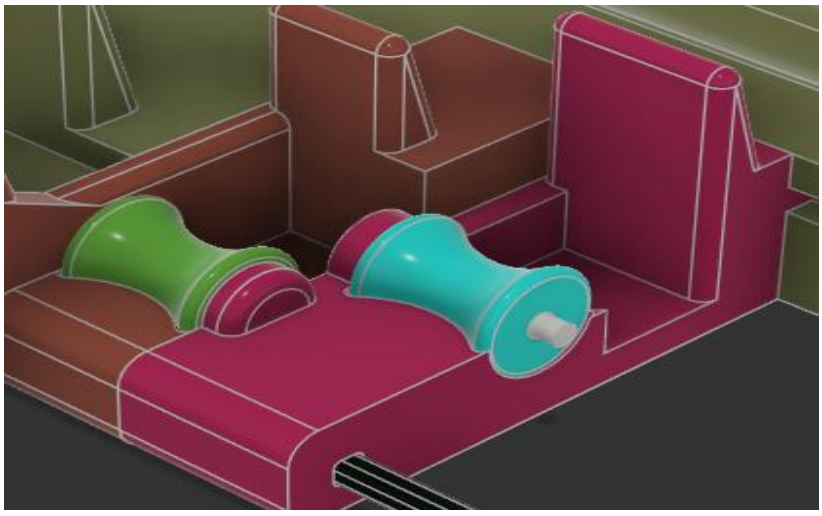


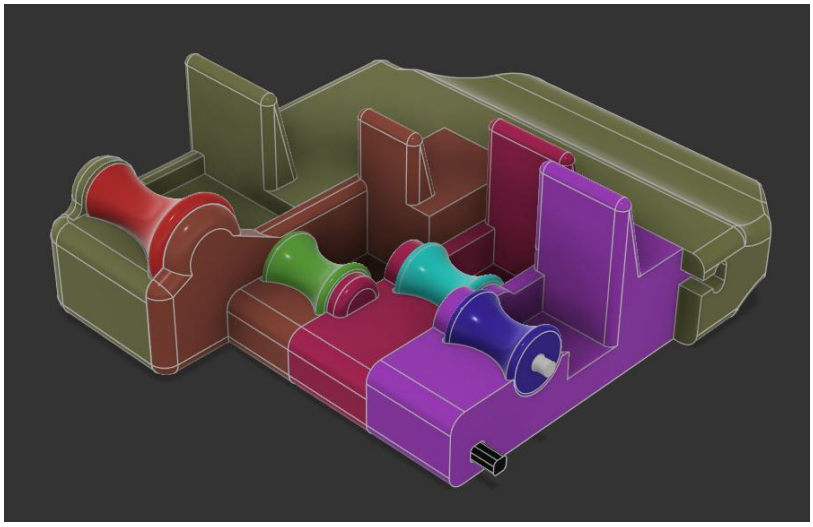




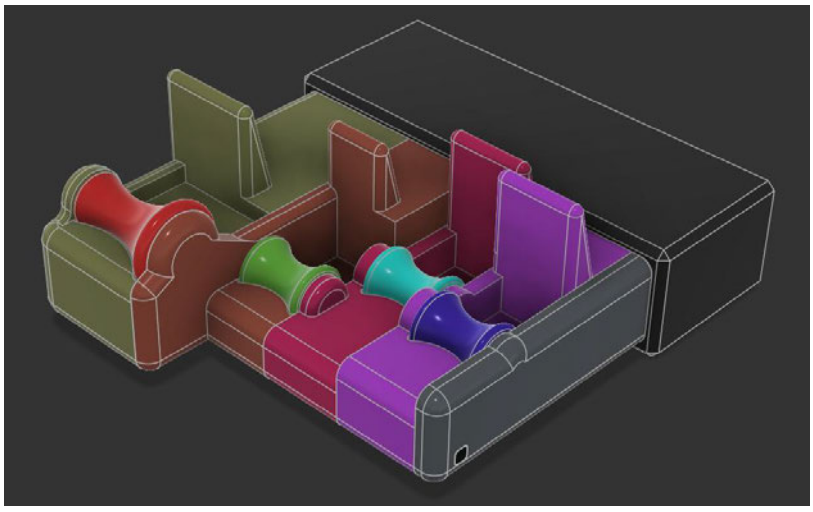


Sisyphus Assembly

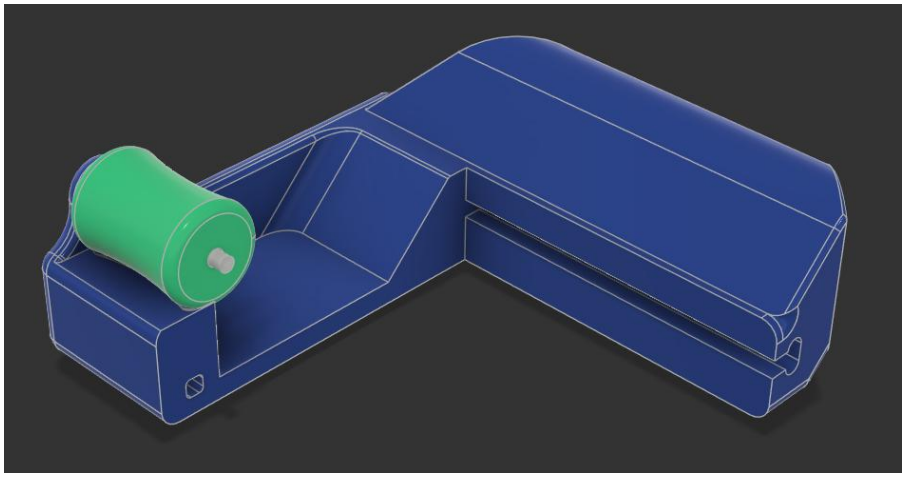

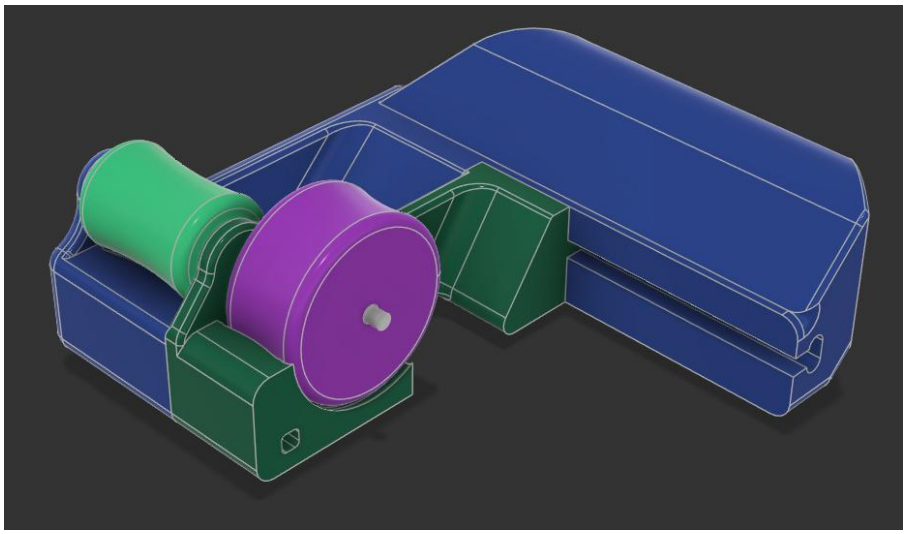

Important: Install the post now! If you do this later, it is nearly impossible to get it in without it breaking.

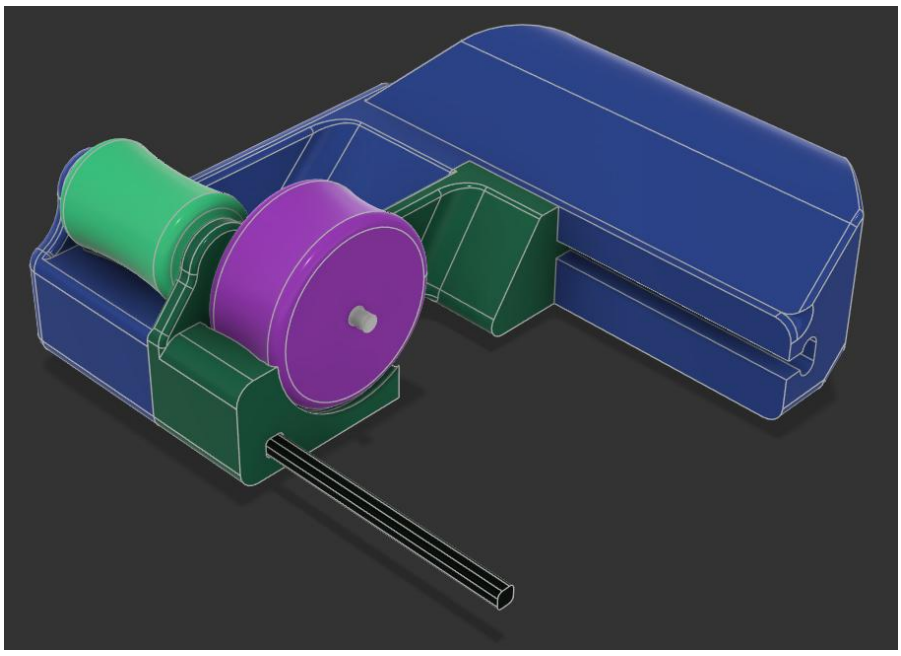

From here forward, use a hammer to lightly tap back and forth between the frame and the post, on the wall pieces when installing them

