
This purchased holder will not clear the Open filed door opening so the bent top need to be cut off and new hole drilled to assemble new mod to 3D printed bracket (#23) (picture might vary) pictures of purchased objects are linked




## C2 modifications need to be performed

1. Cut the adapter to length of 9.4"

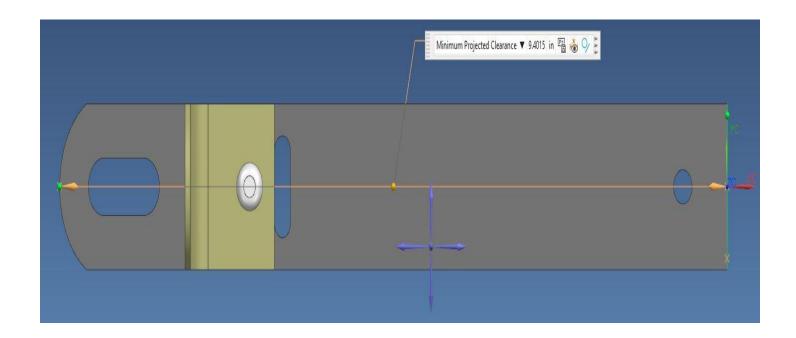

2. Drill new hole of dia .26" at plate center and .625" from cut edge

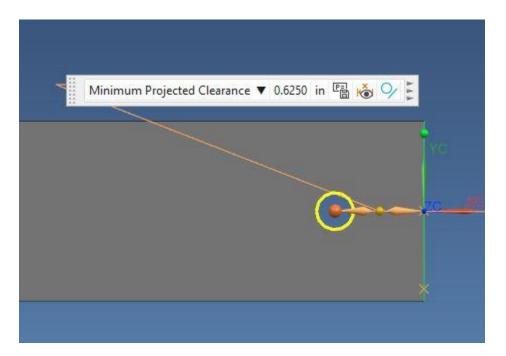

Assemble together with 3D bracket (#23) using 1/4-20 screw (#24) as shown below

