

Preconditioning kit install guide: Ioniq 6

Ioniq Guy and Electroniq Buttons Boutique*
(Dated: June 24, 2026)

This guide walks you through the steps needed to install the head unit preconditioning kit in your 2023-2025 Ioniq 6.

Step 1: Disconnect 12V:

Step 2: Trim:

Step 3: Harness Connection:

Step 4: OBD Mount:

Step 4.5: WiCAN Plug-In:



(a)

Figure 1. (a) Man-in-the-middle harness.

I. INTRODUCTION

The purpose of this guide is to illustrate step-by-step instructions for installing the head unit preconditioning kit, or just the head unit man-in-the-middle (MITM) harness, shown in Figure 1a. In section III, we describe the trim removal process to access the head unit. In section IV, we describe the process of plugging in the harness. In section V, we show attachment of the OBD port and how to plug in the microcontroller.

II. STEP 1: REMOVE 12V NEGATIVE TERMINAL

First, always disconnect the 12V battery before removing any electrical connectors! Removing a live electrical connector could cause a discharge and destroy a connector or ECU in your car.

Step-by-step instructions:

1. Open hood
2. Open frunk (Figure 2a)
3. Remove panel covering 12V
4. Loosen nut on negative side with a 10mm socket
5. Remove negative terminal

* support@electroniqbuttons.com



(a)

Figure 2. (a) Open frunk.

III. STEP 2: TRIM

The goal here is to get to the treasure chest: the head unit. It's behind a single trim panel called the Crash Pad Under Cover, marked with an X in Figure 3.



(a)

Figure 3. X marks the head unit.

Step-by-step instructions:

1. Remove crash crash pad under cover (Figure 4a):
 - (a) Use a trim removal tool to gently pry to expose one of the three clips (Figure 4b)
 - (b) Press on the tab on the clip, indicated by Corbin's thumb in Figure 4b, to release the clip
2. Remove screws holding head unit in place (Figure 4d)

IV. STEP 3: HARNESS CONNECTION

This step covers the installation of the harness into the head unit.

Step-by-step instructions:

1. Identify original grey female head unit connector (Figure 5c)

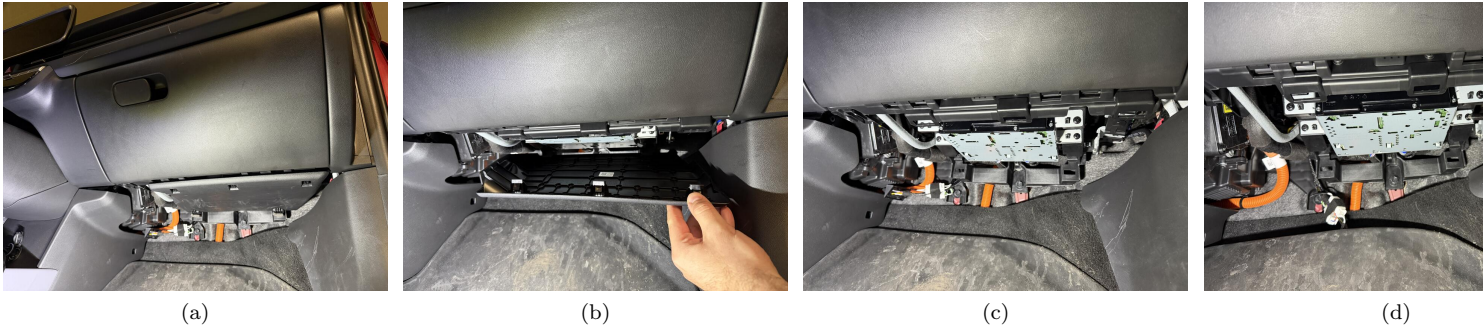


Figure 4. (a) Crash pad under cover. (b) Removing crash pad under cover. (c) Head unit exposed. (d) Removing screws holding head unit in place.

2. Remove it by squeezing the clip and pulling down
3. Insert the female connector you removed into the harness male side (Figure 5d)
4. Insert the harness female side into the head unit (Figure 5e)

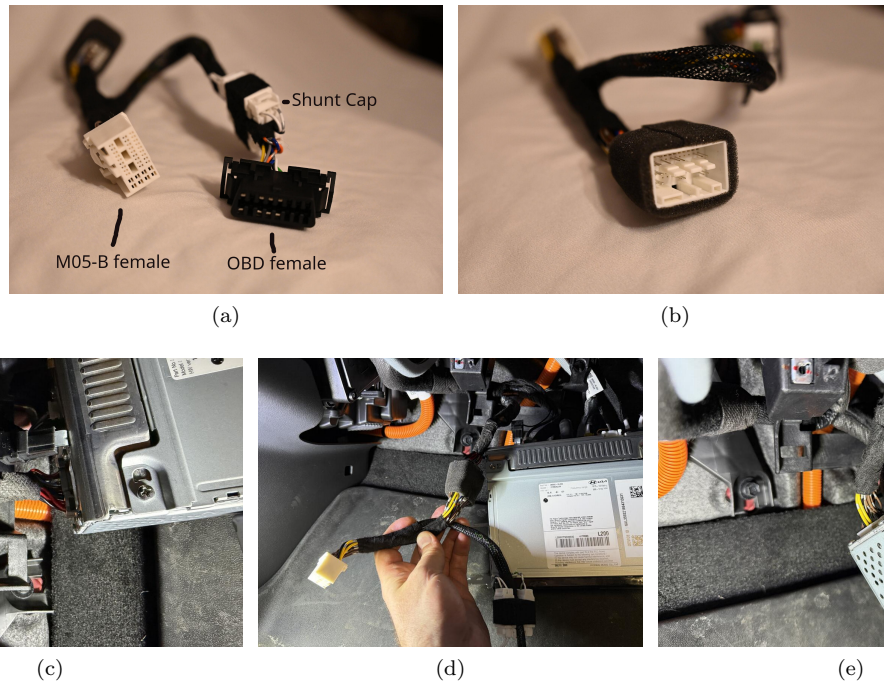


Figure 5. (a) Labeled photo showing female harness connector. (b) Male harness connector. (c) Head unit with original connectors plugged in. (d) Female connector (grey) removed from head unit. (e) Harness installed in head unit.

V. STEP 4: OBD MOUNT

In this step, we mount the OBD end of the harness securely and plug in the WiCAN. Step-by-step instructions:

1. Thread OBD end over head unit mount bracket (Figure 6a)
2. Re-mount head unit. (Figure 4d)

3. Plug OBD female into provided bracket, if not already mounted
4. Use double-sided tape to mount bracket to a flat trim surface
5. Use zip ties to attach harness to other wires and mount points
6. While holding bracket, plug in WiCAN (Figure 6c)

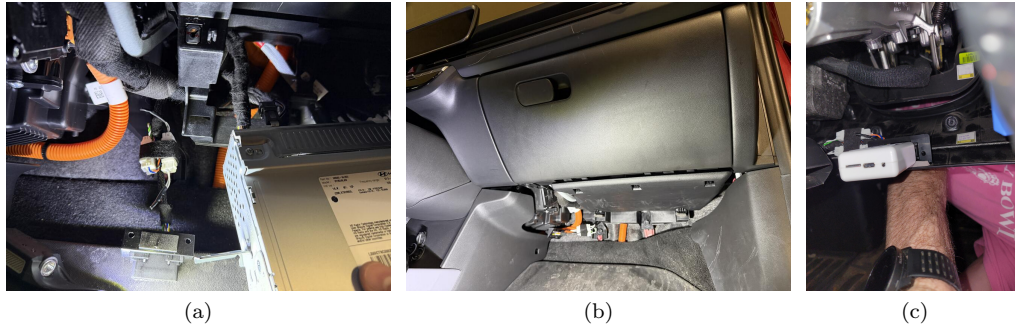


Figure 6. (a) OBD threaded over head unit mount bracket. (b) Harness zip-tied to existing wire. (c) WiCAN inserted into OBD.

VI. STEP 5: CLEAN UP

Reverse the trim removal steps. Make sure trim clips are aligned, and then firmly pop the trim panels back into place. Reconnect 12V battery negative terminal. The WiCAN should immediately show a blue light. Change your WiCAN password!. You can connect you your WiCAN directly by finding a WiFi network named 'WiCAN_xxxxxxx' and going to <http://192.168.80.1/> in your browser.