

Selectable CAN install guide

Electroniq Buttons Boutique*
(Dated: June 30, 2026)

This guide walks you through the steps needed to install the Selectable CAN harness in your 2021-2024 Ioniq 5. See also the video guides:

Step 1: Disconnect 12V: video guide

Step 2: Install Harness: harness intall guide

I. INTRODUCTION

This is a placeholder. Watch the video for now!

Necessary tools:

1. 10mm socket or adjustable wrench for 12V battery
2. Scissors

Kit components:

1. Selectable CAN harness
2. WiCAN
3. 60mm OBD mount bracket
4. 70mm double-sided tape (two pieces included for redundancy)
5. 4 zip ties

II. STEP 1: REMOVE 12V NEGATIVE TERMINAL

First, always disconnect the 12V battery before removing any electrical connectors! Removing a live electrical connector could cause a discharge and destroy a connector or ECU in your car.

Step-by-step instructions:

1. Open hood (Figure 1a)
2. Open frunk
3. Remove panel covering 12V (Figure 1b)
4. Loosen nut on negative side with a 10mm socket (Figure 1c)
5. Remove negative terminal (Figure 1d)

III. STEP 2: HARNESS INSTALL

This step will cover the installation of the harness into the ICU.

IV. STEP 3: CLEAN UP

Reconnect 12V battery negative terminal. The WiCAN should immediately show a blue light. Change your WiCAN password!. You can connect you your WiCAN directly by finding a WiFi network named 'WiCAN_xxxxxxx' and going to <http://192.168.80.1/> in your browser.

* support@electroniqbuttons.com

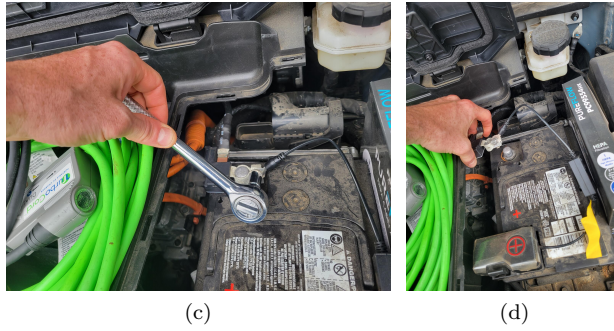
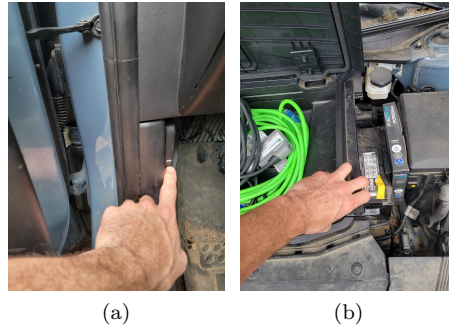


Figure 1. (a) Open the hood. (b) Remove panel covering 12V. (c) Loosen nut on negative terminal. (d) Remove negative terminal.