

Selectable CAN install guide

Electroniq Buttons Boutique*
(Dated: July 29, 2026)

This guide walks you through the steps needed to install the Selectable CAN harness in your 2021-2024 EV6. See also the video guides:

Step 1: Disconnect 12V: video guide

Step 2: Install Harness: harness intall guide

I. INTRODUCTION

This guide describes the steps to install the selectable CAN harness into an EV6 ICU. See also these instructions on identifying and accessing the ICU-H connector. The install is very similar to the Ioniq 5 install, and photos of an Ioniq 5 are used for now.

Necessary tools:

1. 10mm socket or adjustable wrench for 12V battery
2. Scissors

Kit components:

1. Selectable CAN harness
2. WiCAN
3. 60mm OBD mount bracket
4. 70mm double-sided tape (two pieces included for redundancy)
5. 4 zip ties

II. STEP 1: REMOVE 12V NEGATIVE TERMINAL

First, always disconnect the 12V battery before removing any electrical connectors! Removing a live electrical connector could cause a discharge and destroy a connector or ECU in your car.

Step-by-step instructions:

1. Open hood (Figure 1a)
2. Open frunk
3. Remove panel covering 12V (Figure 1b)
4. Loosen nut on negative side with a 10mm socket (Figure 1c)
5. Remove negative terminal (Figure 1d)

* support@electroniqbuttons.com

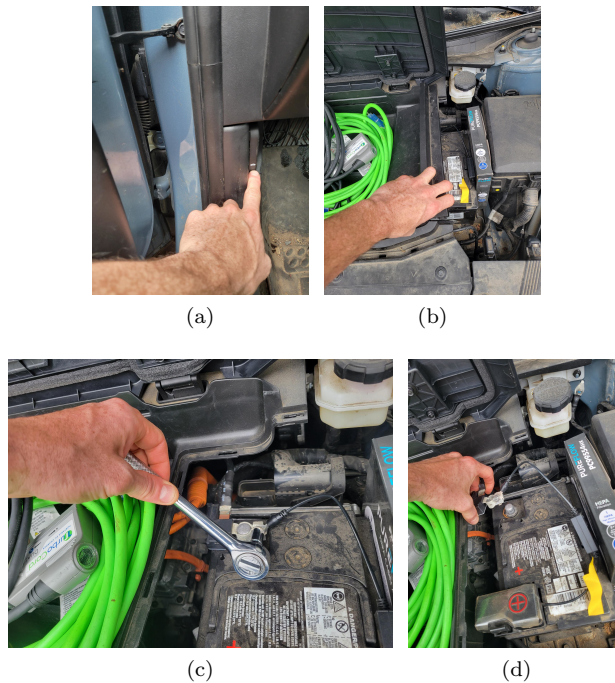


Figure 1. (a) Open the hood. (b) Remove panel covering 12V. (c) Loosen nut on negative terminal. (d) Remove negative terminal.

III. STEP 2: HARNESS INSTALL

This step will cover the installation of the harness into the ICU.

Step-by-step instructions:

1. (Optional) Remove ICU-H following these instructions
2. Install the fuse tap into spare 2 for always-on operation, or spare 1 for on-with-car-on operation (Figure 2a)
3. Remove ICU-H connector (Figure 2b)
4. Insert the harness female side into the ICU
5. Insert the female connector you removed into the harness male side
6. Mount bracket on the side of the blue connector, so that the OBD face will point down (Figure 2c)
7. Insert the OBD port into the bracket
8. Insert WiCAN into OBD port

IV. STEP 3: CLEAN UP

Reconnect 12V battery negative terminal. The WiCAN should immediately show a blue light. Change your WiCAN password!. You can connect you your WiCAN directly by finding a WiFi network named 'WiCAN_xxxxxxx' and going to <http://192.168.80.1/> in your browser.

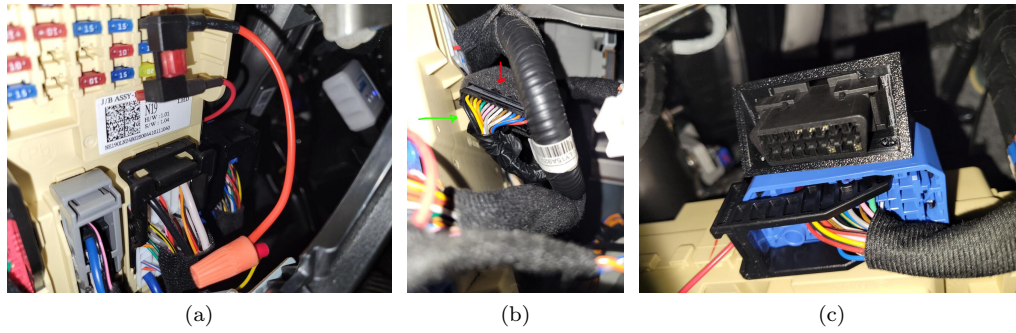


Figure 2. (a) Fuse tap doubled with dashcam fuse tap on spare 2. Note that this will not work as depicted and requires a second fuse on the lower fuse tap. (b) ICU-H (green arrow) with harness installed; male harness connector (red arrow) mated with original female connector. (c) OBD port mounted on bracket.