

Kia EV6 - Head Unit Harness Installation Guide

Written by Tichael - June 23, 2026

Edited by Tyler - July 1, 2026

This guide follows the service manual and is very thorough. This is a first version and a shorter guide may be available later.

Necessary tools:

1. 10mm socket or adjustable wrench for 12V battery (not included)
2. Trim removal tools (included if selected)
3. Phillips #2 allen key (included if selected) or similar

Kit components:

1. Head unit harness
2. WiCAN
3. 70mm OBD mount bracket
4. 70mm double-sided tape (two pieces included for redundancy)
5. 4 zip ties

Auxiliary 12 V Battery

1. Open the front trunk.



2. Open the service cover.



3. Disconnect the 12 V battery negative terminal.
4. Disconnect the service interlock connector.




Crash Pad Side Cover

1. Remove the crash pad side cover.
Left side



Here's a picture of the back to see the clips position.

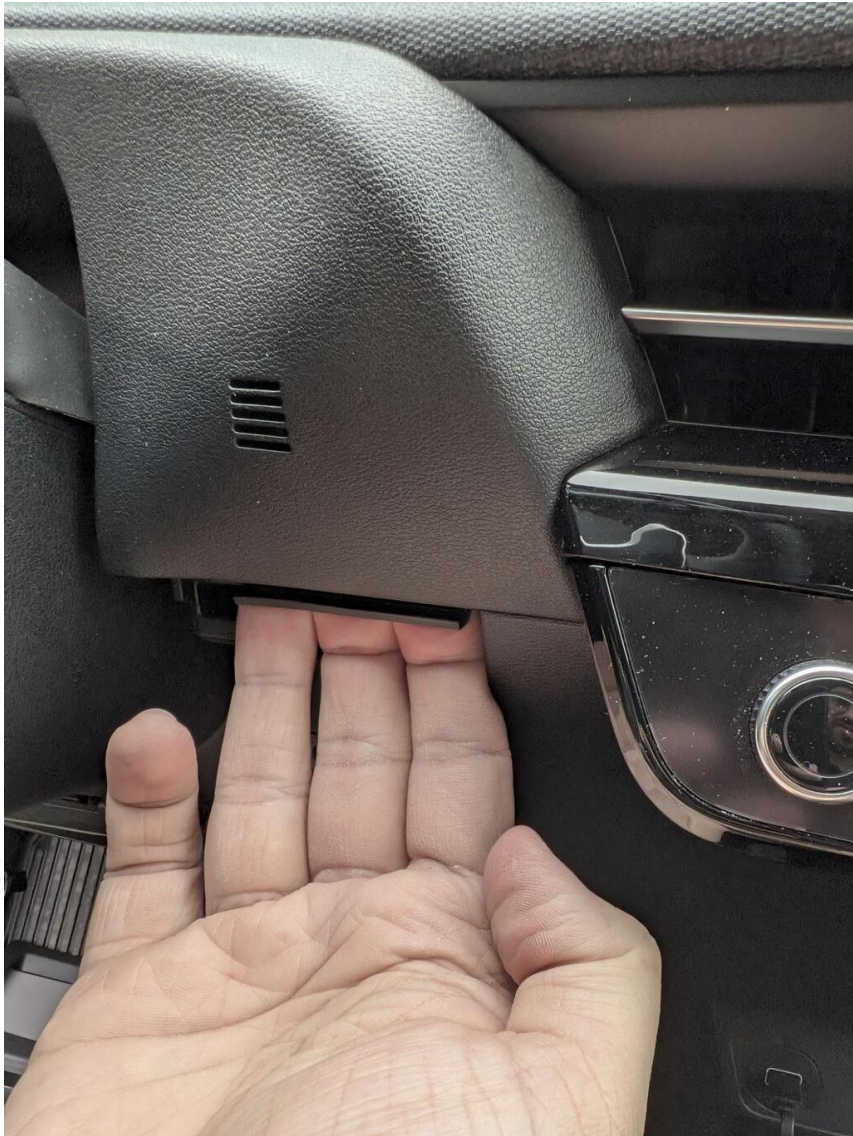



Right side





Here's a picture of the back to see the clips position.





Crash Pad Lower Panel

1. Remove the crash pad lower panel after removing the screws.




Here's a picture of the back to see the clips position.



2. Disconnect the crash pad side switch connector.



3. Disconnect the diagnostic connector.

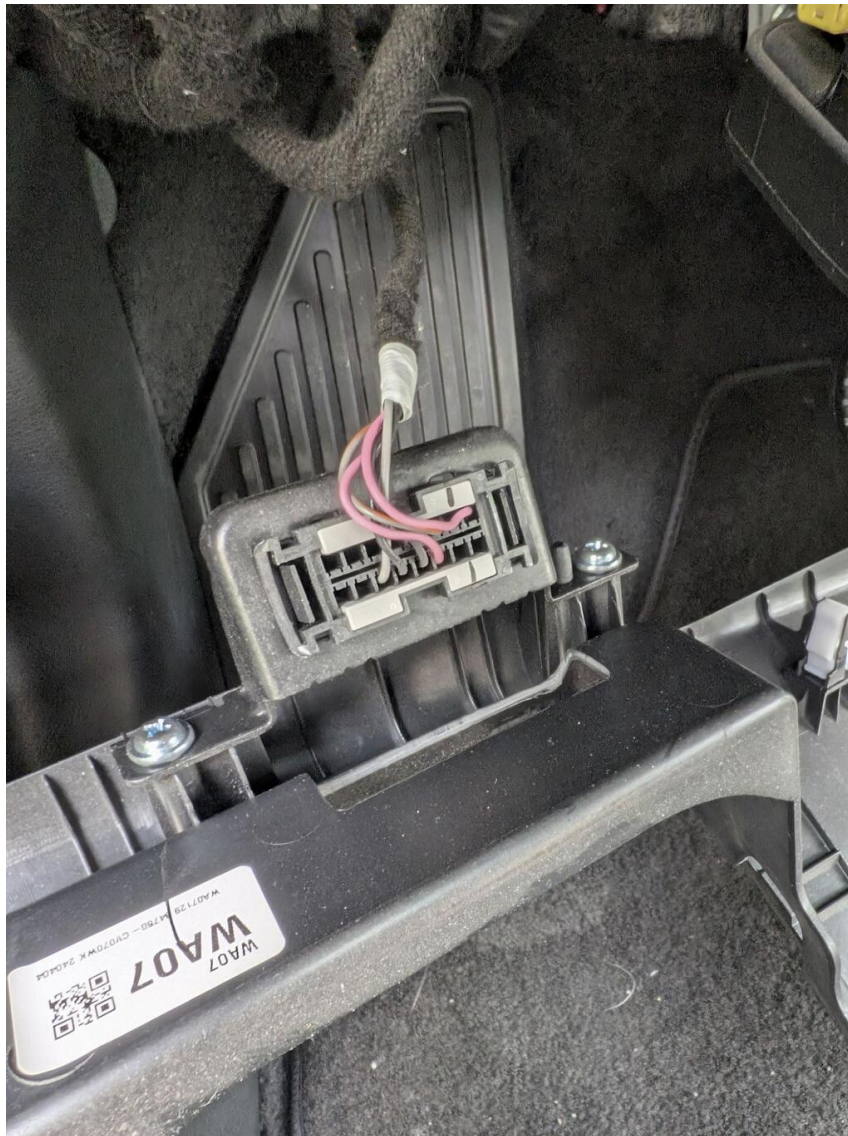

Glove Box

1. Open the glove box.




2. Separate the glove box air damper (on the right side) in the direction of the arrow.



3. Remove glove box knobs after pulling it in the direction of the arrow. The knobs are under the glove box and serve as its hinges.



4. Remove the glove box by pulling downward.

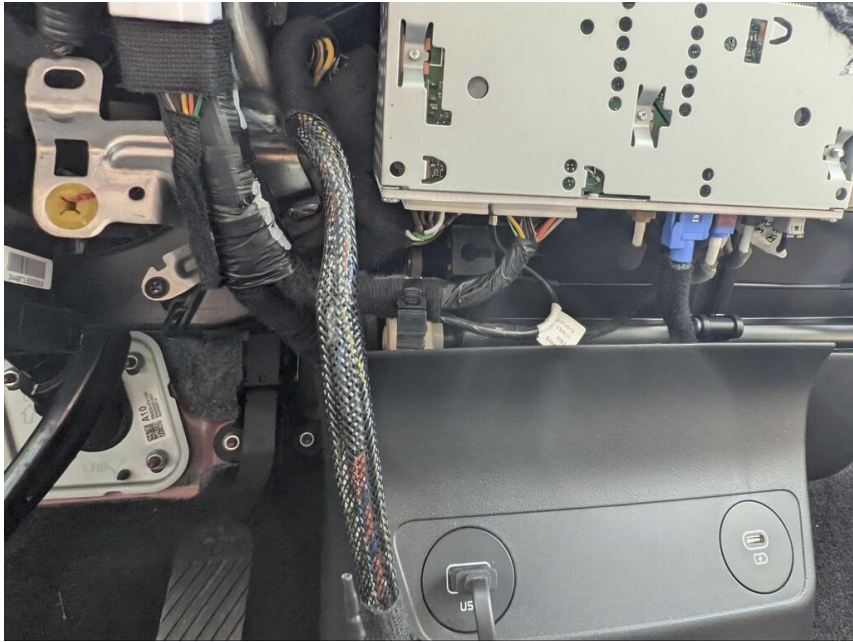

Crash Pad Center Garnish

1. Remove the crash pad center garnish.





2. Disconnect the in-car sensor connector.




Crash Pad Center Garnish (under vent part)

1. Remove the crash pad center garnish (under the vent).





Here's pictures of the back to see the clips position.

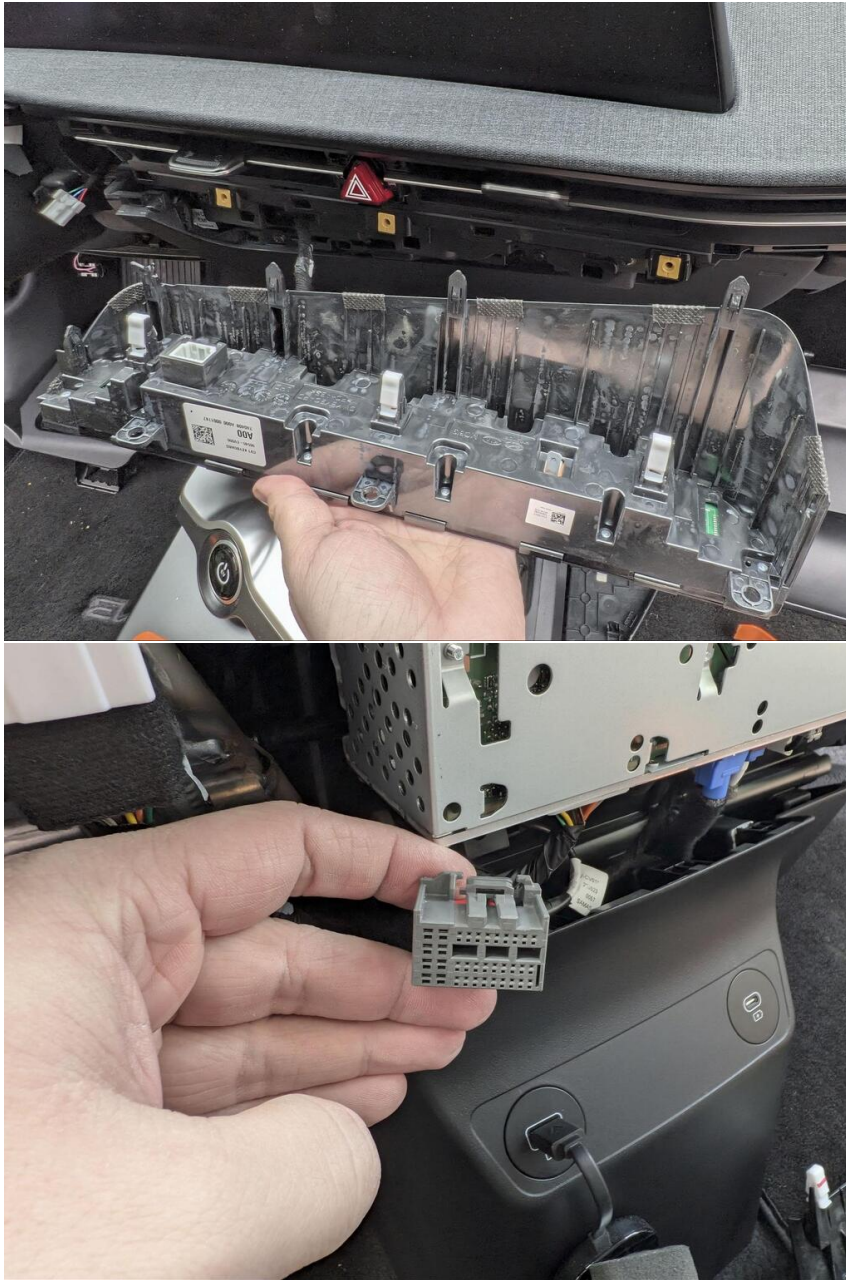

2. If your car has that option, disconnect the mood lamp connector.

Audio/AVNT Keyboard

1. Remove the Audio/AVNT keyboard after removing the three screws.



Here's a picture of the back to see the clips position.





2. Disconnect the Audio/AVNT keyboard connectors.



Crash Pad Center Air Vent Duct

1. Remove the center air vent duct (A) after removing the screws.

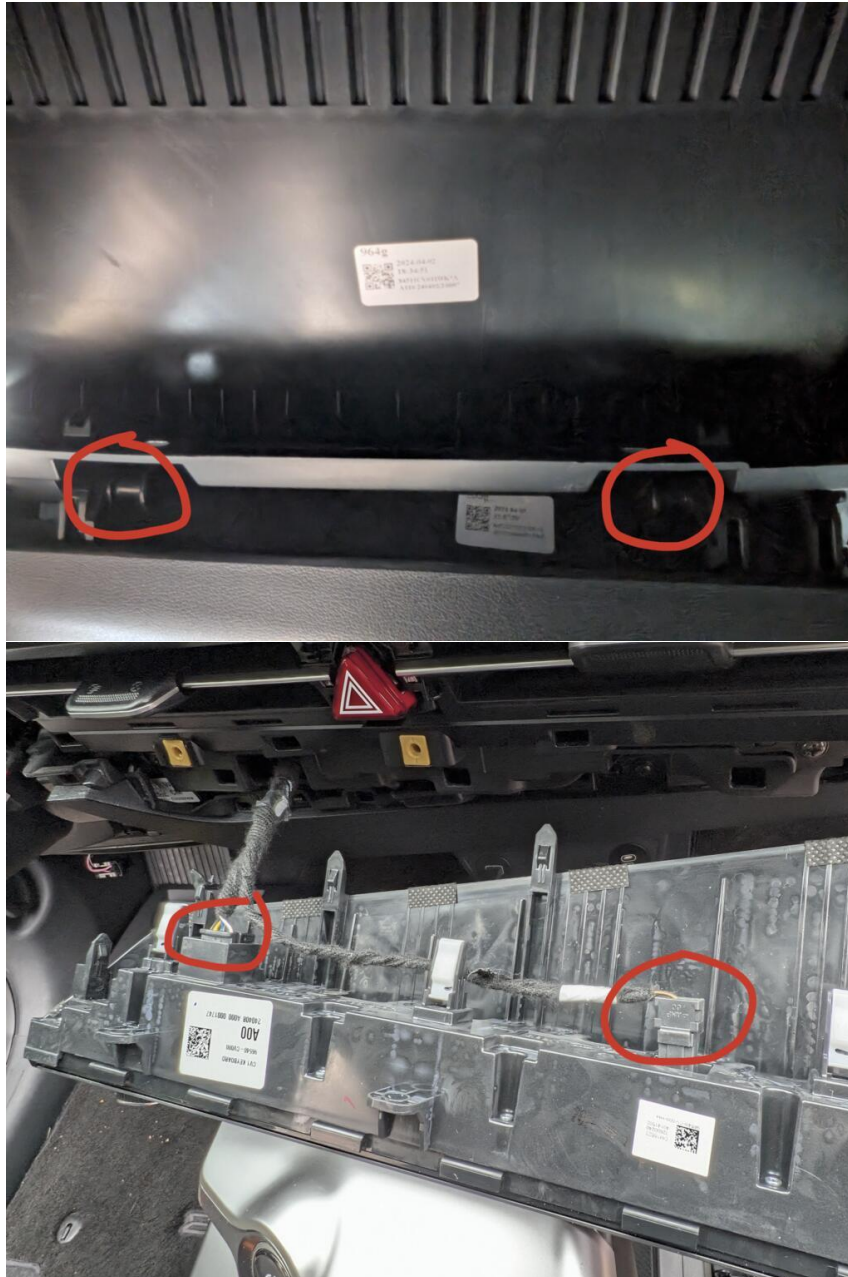

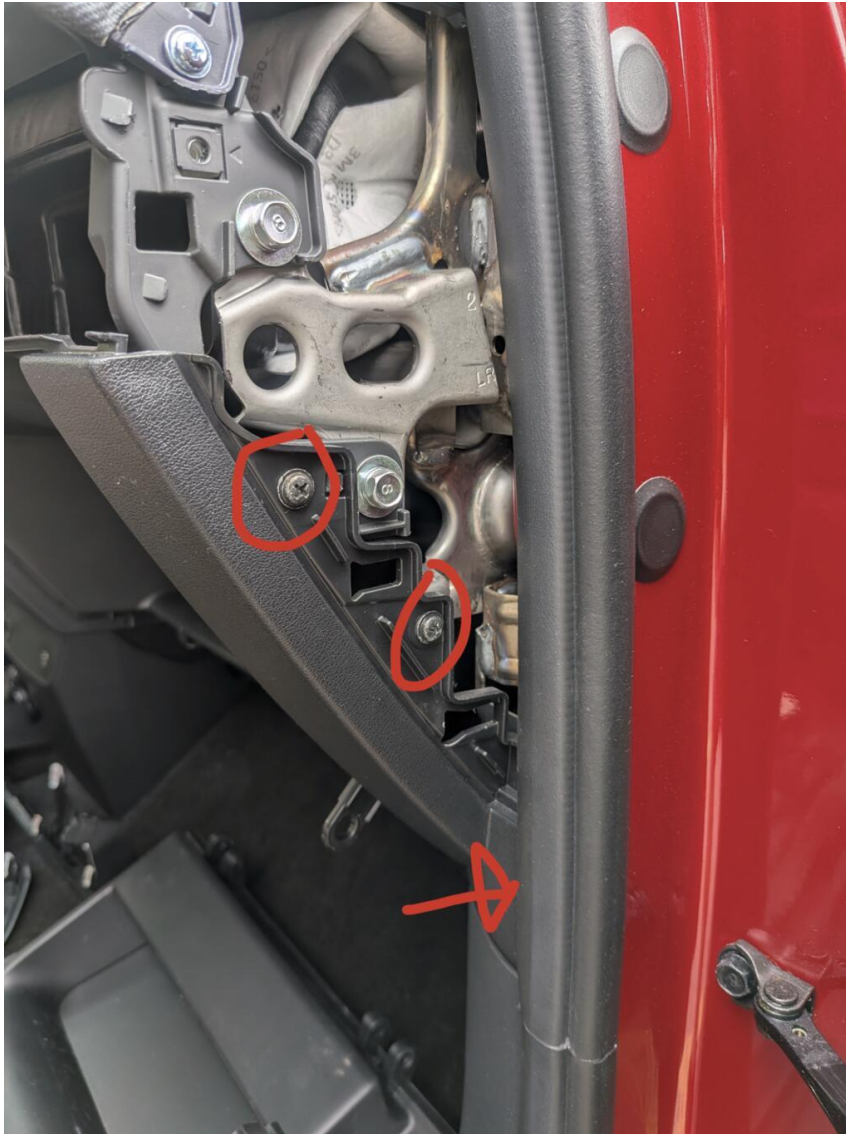

2. Disconnect the hazard switch connector.



Glove Box Housing

1. Remove the glove box housing after removing the screws.





2. Disconnect the glove box lamp connector.



Crash Pad Center Panel

1. Remove the crash pad center panel (A) after removing the screws.





Connecting the harness to the Audio/AVNT Head Unit

1.

The harness is connected to the dark gray connector on the left and the head unit. The male side of the harness (the side with visible pins) goes into the female original grey connector, and the female side (no visible pins) goes into the head unit. You should hear clicks in both cases.





Mount the OBD bracket

Apply the included tape to the OBD bracket. There is no current best recommended place, as there is an airbag near where we recommend mounting for the Ioniq 5. The picture below shows one option, but a) it is very obvious, and b) the tape may sag in heat due to the torque from the WiCAN.



Rebates are available for the first person to document a location that works well. New tape is available for retries for free until we have this part documented! Email us if you need more.

Reassembly

Follow the instructions in reverse to reassemble everything.